



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM DTR 6400T. You'll find the answers to all your questions on the SAGEM DTR 6400T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM DTR 6400T
User guide SAGEM DTR 6400T
Operating instructions SAGEM DTR 6400T
Instructions for use SAGEM DTR 6400T
Instruction manual SAGEM DTR 6400T



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)
<http://yourpdfguides.com/dref/1301369>

Manual abstract:

book Page 1 Jeudi, 10. @@@@avril 2008 2:38 14 CONTENTS 1. @@@@2 2-1. WHERE TO PUT YOUR TERMINAL?

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 2 2-2. WARNINGS AND SAFETY INSTRUCTIONS

.....
.....
.....

.....
.....
.....

.....
.....

*.... 2 2-3.
BATTERIES*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 3 2-4. INTERFERENCE .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

..... 9 6-4. FIRST INSTALLATION ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 10 7. INSTALLATION MENUS...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....11 7-1. ACCESSING INSTALLATION MENUS .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 11 7-2. USER SETTINGS

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.... 11 7-3.

INSTALLING FAVOURITE LISTS

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 13 7-4. *RECEIVER SETTINGS*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
14 8. INFORMATION...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....*16 8-1. ANTENNA SIGNAL ..*

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

17 9-1. SELECTING A TELEVISION CHANNEL

.....
.....
.....
.....

.....
.....
.....
.....

..... 17 9-2. SELECTING A RADIO CHANNEL .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 18 9-3. ADJUSTING THE AUDIO VOLUME ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 18 9-4. CHANGING THE FAVOURITES LIST ...

.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

..... 18 9-5. TEMPORARY SELECTING AUDIO LANGUAGES AND SUBTITLES .

.....
.....
.....

.....
.....

. 19 9-6. TELETEXT ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 19 9-7. TV/VCR SWITCH

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 19 9-8. ELECTRONIC PROGRAMME GUIDE

.....
.....
.....

.....
.....
.....

.....
.....

.... 20 9-9.

PICTURE IN PICTURE MODE

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 21 9-10. LIVE MODE/DEFERRED MODE ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

22 10. VIDEO RECORDING.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.24 10-1. SIMPLE RECORDING (LIVE OR DEFERRED PROGRAMME) ...

.....

.....
.....
.....
.....

. 24 10-2. RECORDING PROGRAMMES USING THE MENU

.....
.....
.....

.....
.....
.....
.....

.....34 11-1. ACCESSING THE MEDIA LIST MANAGER .

.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 34 11-2. NAVIGATING IN THE MEDIA LIST MANAGER ..

.....
.....
.....
.....
.....
.....
.....
.....

.. 35 11-3. MANAGING CONTENTS

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 36 11-4. VIEWING AND MANAGING PHOTO FILES ..

.....
.....
.....
.....
.....
.....
.....
.....

.. 37 11-5. PLAYING AND MANAGING AUDIO FILES

.....
.....
.....
.....
.....
.....
.....
.....

..... 38 11-6.

PLAYLISTS

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

40 11-7. ADVANCED OPTIONS

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 41 12. UPDATING THE SOFTWARE

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 42 13. TROUBLESHOOTING

.....

.....

.....

.....

.....

.....

.....

.....

each side and 20 cm on the front and back of the receiver, connect it directly to the mains with the provided cords, the socket must be near the receiver and easy to access. The use of an extension cable (with multi-points) is not recommended. · 2-2 WARNINGS AND SAFETY INSTRUCTIONS NEVER OPEN THE RECEIVER OR THE POWER SUPPLY UNIT! YOU RISK GETTING AN ELECTRIC SHOCK. Use only the power supply unit supplied with the receiver to connect it to the mains.

Other practice may be dangerous. · As a precaution, in case of danger, the power supply unit act as a disconnecting mechanism for the 230V power supply. That is why it is imperative that you connect the receiver to a power outlet located nearby and easily accessible. You must imperatively connect the power supply unit to the receiver before connecting the power supply unit to the power socket. To avoid short-circuits (fire or electrocution hazard), do not expose your receiver to dampness.

Do not place any object containing liquid (vase for example) on the appliance. The receiver must not be splashed with liquid. If liquid is upset onto the receiver, unplug it immediately from the mains and consult your supplier. Take care not to allow liquids or metal objects to enter the receiver through the ventilation slots. Avoid reconnecting the receiver after it will be taken back free of charge and recycled by the distributor of the EEE within the limits of the quantity and types of equipment bought from them.

These appliances which contain substances potentially dangerous to human health and the environment will be recycled. 3-4 DIRECTIVE ON THE RESTRICTION OF USE OF CERTAIN HAZARDOUS SUBSTANCES IN ELECTRONIC EQUIPMENT (ROHS) Your receiver along with the batteries supplied comply with the directive relating to the RoHS dangerous materials such as lead, mercury or cadmium are not used.



[You're reading an excerpt. Click here to read official SAGEM DTR](#)

[6400T user guide](#)

<http://yourpdfguides.com/dref/1301369>

This avoids environmental hazards and any risks to the health of personnel at the recycling centres. The batteries of the remote control can be removed simply. Note: When the batteries of the remote control are worn out, please dispose of them at a collection point and not with household waste. 3-5 ELECTRICAL CONSUMPTION OF THE RECEIVER To reduce the consumption of your receiver, you are recommended to place it in standby mode when not in use. We recommend you to turn off the receiver or unplug it from the mains if you will not be using it for a prolonged period of time. -5- DTR6400T_6700T_9 avril 07 EN.book Page 6 Jeudi, 10. avril 2008 2:38 14 4.

PREPARATION 4-1 ACCESSORIES PROVIDED Your receiver is supplied with the following parts: 1 remote control 2 batteries (AAA) for the remote control 1 AC/DC adapter and power cable 1 user manual 1 Scart lead for connection to the television set 1 HDMI lead for connection to the television set (depending on model) 4-2 TERRESTRIAL ANTENNA Very often to get the best reception, you may simply need to adjust your antenna. Alternatively, you can connect an indoor antenna to your system. For more information, please contact your specialised distributor. 4-2-1 Standard outdoor antenna Preferably use an outside roof antenna that is designed to receive VHF channels (6 to 11) and UHF channels (21 to 69). However: if your building is equipped with an old antenna model, digital channels may be difficult or even impossible to receive. The problem can only be resolved by changing the antenna. if your building is equipped with a common antenna which contains selective filters devised for analogue channels, reception will most probably not work correctly. In this case, you will have to contact the administrator of the building. some antennas directed towards an analogue TV transmitter must be re-adjusted towards a digital TV transmitter. If you encounter reception problems, you can also try placing the antenna at different heights.

- 4-2-2 Indoor antenna In ideal reception conditions, this type of antenna is sufficient. Here, however, are some useful tips: use an antenna designed to receive channels 6 to 11 and 21 to 69. install the antenna close to the window and direct it towards the digital TV transmitter. if possible, use an antenna with an amplifier. The receiver can provide remote power supply to your indoor antenna (see "Antenna signal", page 16).

-6- DTR6400T_6700T_9 avril 07 EN.book Page 7 Jeudi, 10. avril 2008 2:38 14 5. REMOTE CONTROL Keys Functions Switch on the receiver or put it in standby mode Manage the TV and AUX modes for the TV Scart output 0-9 Access channels and various on-screen options Display programme information and options Display the programme guide (EPG) and a Help screen Increase or decrease the audio volume Turn the sound off/on Access menus Change channel Move in a page, a menu..

. Display the channel list, validate a function or an option Go back to the previous channel, screen or mode Exit a screen, a mode Previous or next index, rewind of fast forward, change day in the programme guide (EPG) Rewind of fast forward, increase or reduce the duration scale in the programme guide (EPG) Record Stop Play Pause On-screen options Display the recording list Display the multimedia application screen Access MP3 files Switch from TV mode to Radio mode Select audio tracks Select subtitles Display Teletext Mode picture in picture (PIP) . Batteries: the remote control needs two batteries (AAA) to operate. The drawing in the battery compartment indicates how to install them. The batteries provided are not rechargeable. -7-

DTR6400T_6700T_9 avril 07 EN.book Page 8 Jeudi, 10. avril 2008 2:38 14 6. QUICK INSTALLATION Before connecting your device, please ensure that Digital Terrestrial Television (DTT) is available in your area. 6-1 FRONT PANEL OF THE RECEIVER USB Channel selection buttons On/Standby button 6-2 CONNECTION OF THE RECEIVER TO THE TV SET Before installing your receiver, please check that the delivery is complete: instructions, remote control, batteries (X2), Scart lead and AC/DC adapter.

Please ensure that the appliances to be connected together (receiver, TV, VCR...) are unplugged before making any connections. Connect the appliances together as shown in the diagrams and plug them back into the power socket. For optimal quality, preferably connect the Scart lead to the TV Scart socket that is marked with 3 dots (RGB). Television set YPrPb Audio R/L OR OR FAN (depending on model) DTR6700T series -8- DTR6400T_6700T_9 avril 07 EN.book Page 9 Jeudi, 10. avril 2008 2:38 14 6-3 PERIPHERAL CONNECTIONS 6-3-1 Connection to an amplifier and/or a video recorder and/or an analogue decoder Decoder Video recorder Television set YPrPb Audio R/L Amplifier FAN (depending on model) DTR6700T series Connecting auxiliary equipment (e.g.

a video recorder) for a television set with a Scart socket. Connecting an audio amplifier, using a lead (RCA) or using a fibre optic lead (IEC958). This connection is mandatory to benefit from a "Home Cinema" system. Connecting an analogue decoder with a Scart socket. To use an analogue decoder (Canal+ type) with a Scart socket, the receiver must be in standby mode.

-9- DTR6400T_6700T_9 avril 07 EN.book Page 10 Jeudi, 10. avril 2008 2:38 14 6-4 FIRST INSTALLATION After connecting the receiver correctly, a first time installation must be carried out. Switch on your receiver (do not forget to switch on your television set also). A welcome screen is displayed. When the receiver is ready, press to launch the installation. , keys and confirm by pressing . Select the language and the country (UK) using the The receiver automatically searches for the available channels. If no channels are found, the receiver proposes that you adjust the antenna. Enter a channel number (consult the list of channels that transmit in your area). Adjust the antenna until the level and quality signals become green. Press to go back to the channel search. UK Hotline: 0871 07 50 710* If problems persist, please contact your specialised distributor or the Sagem Communications Hotline. *0.10 £/min, tariff cost effective from 27/06/2005 If you use an indoor antenna with an amplifier, it is possible to power the antenna from the receiver (+5VDC, 50mA).

In the Technical Information menu, set Antenna Power supply to Yes (see "Antenna signal", page 16). - 10 - DTR6400T_6700T_9 avril 07 EN.book Page 11 Jeudi, 10. avril 2008 2:38 14 7. INSTALLATION MENUS To move in the screens and change the various settings, simply use the keys to indicate your selections, to confirm, and to quit the screens. , , and 7-1 ACCESSING INSTALLATION MENUS Recording timers Recording list Favourite lists Electronic programme guide User settings Receiver settings Media Technical information Radio channels list 7-2 USER SETTINGS To access the user settings screen, press .



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)

<http://yourpdfguides.com/dref/1301369>

In the main menu, select **USER SETTINGS**. 7-2-1 Language selection In the **USER SETTINGS** menu, select **LANGUAGE SETTINGS**. Select the desired language for the menus, the audio (main and alternative) and the subtitles (main and alternative). - 11 - DTR6400T_6700T_9 avril 07 EN. book Page 12 Jeudi, 10. avril 2008 2:38 14 7-2-2 User preferences In the **USER SETTINGS** menu, select **USER PREFERENCES**. Banner time-out: you can set the display time of the information banner. Network monitoring: you can activate network monitoring. If activated, you will be informed of any new channel or service when it is available.

Volume bar time-out: you can set the display time of the volume indicator. User country: displays your geographical location. If you want to change country, please perform a reset to default settings (see "Return to default factory settings", page 15). If you make a wrong selection, some services or channels may become unavailable. Recording Type (depending on software version): you can specify the mode to be applied by default for recordings that you programme via the electronic programme guide: Programme or Timer mode.

If the recording type choice does not appear among the user preferences, it means that this mode is not available for your country. Only the fixed Timer recording mode is available to you (see "Recording modes: Timer or Programme", page 27). EPG record margin settings (Timer mode): you can programme recording margins which will be automatically added to the recordings carried out via the electronic programme guide, in Timer mode. You can thus programme the receiver so that it starts to record a programme before its announced start time, and stops after its announced end time. Sleep Timer: you can set the receiver to automatically switch to standby mode at a specific time. When this is set, the receiver will be put automatically into standby mode at the specified time (24H format). - 12 - DTR6400T_6700T_9 avril 07 EN. book Page 13 Jeudi, 10. avril 2008 2:38 14 7-2-3 Locking and parental control In the **USER SETTING** menu, select **LOCKING**. Receiver locking: completely locks access to the receiver with an access code.

If you select YES, you will be asked to enter your access code (by default 0000) each time you switch your receiver on. Channel locking: enables you to lock channels. You will be asked to enter your access code each time you want to watch a locked channel. Select YES to activate the lock and select the programme to be locked in the Channels to lock screen. Channels to lock: displays the list of programmes to be locked. Select the desired channels and press to lock them or unlock them. You will be asked to enter your access code each time you want to watch a locked channel. Level: locks the programmes whose level is not authorised. For example, enter 03 for maximum control (all programmes rated will be blocked) or 18 (all programs will be accessible). If you have programmed the recording of a programme with a level higher than your selected level, this recording will be automatically locked and will appear only in the full list of recordings.

- 7-2-4 Changing the receiver code (access code) In the **USER SETTING** menu, select **CHANGE RECEIVER CODE**. This code is used and requested to lock the installation, the receiver, the channels and the recordings. By default, the access code is initialized to 0000. 7-3 INSTALLING FAVOURITE LISTS To access the favourite lists creation and modification screen, press **FAVOURITE LISTS**.

In the main menu, select **Selected list**: by default, all channels found during the installation are on list A. You can create two distinct types of lists: TV lists and RADIO lists. To create a new list, select an empty list (list B to H) then press . Select the desired type of list. You can then make your favourites list by adding channels of your choice.

To modify or remove a list of favourite channels, select it in the list and carry out the desired modifications. - 13 - DTR6400T_6700T_9 avril 07 EN. book Page 14 Jeudi, 10. avril 2008 2:38 14 7-4 RECEIVER SETTINGS To access the receiver configuration screen, press **SETTINGS**. In the main menu, select **RECEIVER** If you have changed the default access code, you will be asked for your access code (to modify this code, see "Changing the receiver code (access code)", page 13). 7-4-1 Automatic channel search In the **RECEIVER SETTINGS** menu, select **CHANNEL SEARCH**. Press to start a new channel search. A bar indicates the search progress. If channels are found, a window is displayed at the end of the search prompting you to confirm them.

If no channel is found, please refer to the Antenna signal section to adjust the antenna (see "Antenna signal", page 16). The number of channels in the list may be lower than the number displayed during the channel search, as duplicate channels are deleted at the end of the search process. 7-4-2 Manual channel search In the **RECEIVER SETTINGS** menu, select **MANUAL CHANNEL SEARCH**. You can enter a channel number (6 to 11 and 21 to 69) or a frequency. The channel list is modified in the following way: · new channels found are added to the list of existing channels, already existing channels are retained but the old transmitter is replaced by the new one. 7-4-3 Video settings In the **RECEIVER SETTINGS** menu, select **VIDEO SETTINGS**. Navigate using the arrows then confirm your choices with . Refer to the instructions manual of your video equipment for more details about the video configuration of the equipment. TV SCREEN FORMAT: select the display format for your television set: 16/9, 4/3 Pan & Scan or 4/3 Letter Box. TV SCART: select the video signal type (RGB or PAL) for the TV scart output.

AUX SCART: select the video signal type (PAL or S-VIDEO) for the AUX scart output. YPrPb: select YES to active the output (when this output is activated, no RGB signal available on TV scart output). - 14 - DTR6400T_6700T_9 avril 07 EN. book Page 15 Jeudi, 10. avril 2008 2:38 14 - HDMI OUTPUT*:select YES to active the output.

HDMI RESOLUTION*: select the resolution (576i, 576p, 720p 720p or 1080i depending on the resolutions offer on your television set) for the HDMI output. At the first installation, the receiver offers by default the best resolution to obtain the best video quality on HDMI output. 7-4-4 Audio settings In the **RECEIVER SETTINGS** menu, select **AUDIO SETTINGS**. Navigate using the arrows then confirm your choices with . Refer to the instruction manual of your audio equipment for more details about the audio configuration of the equipment.

DIGITAL AUDIO OUTPUT: select the type of audio data for the DIGITAL AUDIO digital output: Stereo or Home Cinema. Select "HOME CINEMA" mode only if you have connected an amplifier supporting this mode. If you choose "HOME CINEMA", when a programme with audio signal of type AC3 is broadcasted, the signal is directly transmitted to your amplifier. Otherwise, it is the main audio signal that is transmitted to the amplifier.



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)
<http://yourpdfguides.com/dref/1301369>

Because the audio volume may vary from one programme/channel to another (due to the type of signal received, PCM or AC3), you can adjust the audio volume output on the home cinema to reduce volume differences between programmes/channels: to do so, select the adjustment setting then use the keys to increase or decrease the volume. and 7-4-5 Return to default factory settings In the RECEIVER SETTINGS menu, select RESET FACTORY DEFAULT. This function enables you to restore the default settings of the receiver. All the channels and parameters will be lost if you confirm this choice, but the recordings will not be erased. To cancel the operation, press or . .

If you wish to reinitialise the receiver, press Once the initial configuration is restored, the installation screen of the receiver is displayed. You can then reconfigure your receiver (see "First installation", page 10). * Model DTR6700T only. - 15 - DTR6400T_6700T_9 avril 07 EN.book Page 16 Jeudi, 10. avril 2008 2:38 14 8. INFORMATION The information contained in this menu may be requested if you contact your supplier or another service (Maintenance for example). You will thus find here information about the receiver, the embedded software, the capacity of the hard disk, as well as a utility that lets you to diagnose the signal reception of the antenna. To access the receiver technical information, press INFORMATION .

. In the main menu, select TECHNICAL 8-1 ANTENNA SIGNAL In TECHNICAL INFORMATION, select ANTENNA SIGNAL INFORMATION. Enter a value in the CHANNEL line then press to find out the signal level and quality of this channel. If the level and quality of reception are insufficient, adjust your antenna to obtain a better signal. If you use an active indoor antenna (with an amplifier), activate via the receiver the power supply of the antenna if it requires a 5V power voltage (50mA max).

). 8-2 RECEIVER In TECHNICAL INFORMATION, select PRODUCT DATA. This menu provides information on the receiver software. 8-3 HARD DISK In TECHNICAL INFORMATION, select HDD INFORMATION. The estimated remaining time for recording on the hard disk is given for information only, as the capacity depends on the sound and video quality of the recorded programme (the quality of sound and image varies depending on the programmes). - 16 - DTR6400T_6700T_9 avril 07 EN.book Page 17 Jeudi, 10. avril 2008 2:38 14 9. EVERYDAY USE 9-1 SELECTING A TELEVISION CHANNEL 9-1-1 Using the keys and , or keys 0-9 Press the or keys to change channel or enter the number on the numeric keypad of the remote control to access the desired channel directly. You can go back to the channel previously viewed by pressing the key. 9-1-2 Using the channel list Press the key to display the channel list, select a channel then press again to confirm. 9-1-3 Channel information banner Each time you select a new channel, an information banner is displayed on the screen. You can adjust the display time of the information banner in the User preferences (see page 12). A B C D E F G H I J K Number and name of channel Name of programme Favourite list Number of audio tracks and subtitles AC3 audio Start time of programme Time elapsed since the start of the programme End time of programme Current time Maturity level Programme being recorded Availability and accuracy of programme information do not depend on your receiver but on the broadcasters. - 17 - DTR6400T_6700T_9 avril 07 EN.

book Page 18 Jeudi, 10. avril 2008 2:38 14 9-1-4 Detailed programme information If you want more information on the current and following programme, press the control. Press to view information on the following to hide the extended L M key of your remote programme. Press again or information banner. An upper banner also appears if a recording is in progress, and displays: · the channel(s) being recorded (M) · the status of the programme you are viewing: live or in differed mode (L) 9-2 SELECTING A RADIO CHANNEL You can select a radio channel if this service is provided by your operator. Press the key to switch to RADIO mode. The list of radio channels is displayed. , then by selecting RADIO CHANNELS LIST You can also access this list by pressing . . Select the radio station of your choice and press to listen to it.

To exit the radio mode, press 9-3 ADJUSTING THE AUDIO VOLUME Volume: you can adjust the volume using the and keys. The sound on the AUX Scart socket and on the digital audio outputs is not affected by this operation. Mute mode: the sound is cut if you press the key. The sound is restored if you press the same key. 9-4 CHANGING THE FAVOURITES LIST Press to display the screen.

Press the key to change list. You can create and manage the list of favourite channels in the FAVOURITE LISTS menu (see page 13). - 18 - DTR6400T_6700T_9 avril 07 EN.book Page 19 Jeudi, 10. avril 2008 2:38 14 9-5 TEMPORARY SELECTING AUDIO LANGUAGES AND SUBTITLES All modifications take place immediately.

However, temporary adjustments are not retained when you change channel. 9-5-1 Using the extended information banner Press to display the extended information banner. Press , , or to display the options banner. Using the keys , select the audio languages and the subtitles in the lists displayed then press . 9-5-2 Selection of the audio languages and audio tracks using the remote control Press the key to directly access the selection of audio tracks. . Select the language or the type of audio track in the list displayed, then press 9-5-3 Selection of subtitle language using the remote control Press the key to directly access the selection of subtitles. . Select the language of the subtitles in the list displayed, then press 9-6 TELETEXT You can work with Teletext options if this service is provided by your operator. Press the key of your remote control to access Teletext mode.

To view Teletext pages on a transparent background, press the same key again. To access the Teletext pages, use the numeric keys or press or . 9-7 TV/VCR SWITCH Press the key of your remote control to switch the signals to the TV scart output. This function is only possible when the devices are connected together via a Scart lead. . . First press: the TV set displays the signals received on the AUX scart (e.g. DVD player, etc.). Second press: the TV set is selected, and does not display the receiver signals. Third press: back to standard mode; the TV set displays the signals received from the receiver.

- 19 - DTR6400T_6700T_9 avril 07 EN.book Page 20 Jeudi, 10. avril 2008 2:38 14 9-8 ELECTRONIC PROGRAMME GUIDE The electronic programme guide displays information on programmes for all the channels. This service depends on the information broadcasted by the operators. Press the key to access the electronic programme guide.

, then selecting ELECTRONIC PROGRAMME You can also access the guide by pressing GUIDE . By default, the electronic programme guide is displayed in Grid mode with Video of current channel.



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)
<http://yourpdfguides.com/dref/1301369>

To display the List mode, press key. @@@@ or keys. Press sevekey, use the .
@@@@ Repeat this key. @@@@ Press the If you press key to display the PIP window. Use or or the numeric keys to select a channel. @@, the PIP channel remains displayed in its window. @@@@ You can select another channel using the or keys or the numeric keys. @@@@ The deferred mode is available only in the main screen. @@@@ Press the , , and within the sliding recording. @@ Press the programme, press the key. key.

To resume the current 9-10-2 Rewind You can rewind by pressing the key. On the banner, the Deferred/Live delay increases. By pressing several times this key, you can increase the rewind speed (up to 600 times the normal speed). You can thus rewind up to 2 hours, provided that the current programme has been watched for at least 2 hours. - 22 - DTR6400T_6700T_9 avril 07 EN.book Page 23 Jeudi, 10. avril 2008 2:38 14 9-10-3 Fast forward You can fast forward by pressing the key. On the banner, the Deferred/Live delay decreases. By pressing several times this key, you can increase the fast forward speed (up to 600 times the normal speed). If you remain in fast forward, you will eventually reach the live programme.

9-10-4 Stop You can at any time exit the Deferred mode and go back to the live programme. To do so, press the key. - 23 - DTR6400T_6700T_9 avril 07 EN.book Page 24 Jeudi, 10. avril 2008 2:38 14 10.

VIDEO RECORDING The recording capacity of your receiver depends on the capacity of the hard disk and the selected programme (on average, one hour of recording requires from 2 to 2.5 GB of hard disk space). It is possible for you to simultaneously: record a programme and watch another programme, record two programmes and watch any one of them. In the same way, you can simultaneously: watch a programme in deferred mode while recording another programme, watch a recorded programme and record one or two programmes. or) are not recorded.

Take care that MHEG services (available with key 10-1 SIMPLE RECORDING (LIVE OR DEFERRED PROGRAMME) To record a live programme, access the desired channel and press . In the same way, if you decide to record a programme that you have watched for a certain duration (2 hours maximum), access the point where you wish to begin recording by using the , press , , keys, and to begin recording The name of the channel being recorded is displayed in the upper banner. You can then change channel without affecting the recording in progress. If you wish to restrict access to your recording by locking it, just after pressing press the key, then press the key. In the options banner, select YES for locking. The locked recording will then be hidden in the Recording list, its access will require the receiver access code (see "Accessing the complete list", page 30). - 24 - DTR6400T_6700T_9 avril 07 EN.book Page 25 Jeudi, 10. avril 2008 2:38 14 To stop a recording, return to the channel being recorded, and press the key.

By pressing several times the key, you can select a recording time in 30-minute steps with a maximum duration of 4 hours (depending on software version). You can then switch off the receiver: the recording will stop automatically at the end of the programmed time. When you record in deferred mode, the receiver can add a few seconds of video at the beginning of the recording. Once a recording is launched, you can no longer rewind before the start time of the recording. 10-2 RECORDING PROGRAMMES USING THE MENU The Recording timers menu enables you to programme your recordings with 2 methods: manually programming, with the options and the frequency of your choice; by automatic search of the recording programme, with the category or the title of the programme. 10-2-1 Manually programming Press the key to access the main menu. Select RECORDING TIMERS then press or keys then press . . Select a blank line by using the A screen is displayed in which you can programme your recordings. Enter the channel number which you wish to record. Select the frequency of recording: - SINGLE: only once at the scheduled time. - WEEKLY: once a week at the scheduled time. - DAILY (MON-FRI): at the scheduled time, every day from Monday to Friday and every week. - DAILY (MON-SAT): at the scheduled time, every day from Monday to Saturday and every week. - DAILY (MON-SUN): at the scheduled time, every day and every week.

Enter the recording start date. Enter the time to start and end the recording. If you wish to limit the access to this recording, activate locking (see "Recording list", page 28). Confirm the programming by pressing . - To modify a recording, see "Managing the recording programmes", page 26.

- 25 - DTR6400T_6700T_9 avril 07 EN.book Page 26 Jeudi, 10. avril 2008 2:38 14 10-2-2 Recording programme search This method allows to find a programme by the category or by the title. Press the Press key. key to access the main menu. Select RECORDING TIMERS then press . A screen is displayed in which you can choose the search options. Choose the search type (by Theme/Genre or Title) using the or keys then press . Select the category of the programme for the Theme/Genre search then press . or Enter the title or one part of the title using the remote control for Title search then press .

The search is launched. A screen is displayed in which the result of the search appears. For each found programme an information is displayed, to display more information, press key. To record the desired programme on the list, use the or keys to select it and press key. The icon appears to indicate that the recording is programmed. To modify a recording, see "Managing the recording programmes", page 26. Information on the selected programme Search parameters 10-2-3 Managing the recording programmes Press the key to access the main menu. Select RECORDING TIMERS then press . To delete a recording programming, select it using the or keys and press . The deletion is impossible when a recording is in progress.

In the last case, return to the channel being recorded, and press the key. - 26 - DTR6400T_6700T_9 avril 07 EN.book Page 27 Jeudi, 10. avril 2008 2:38 14 To modify a recording programming, select it using the recording is locked, enter the access code and press and press to confirm the new settings. or keys and press .

If the to confirm. Carry out the desired modifications 10-3 RECORDING PROGRAMMES USING THE PROGRAMME GUIDE The advantage of programming a recording using the electronic programme guide is that you can record specific programmes rather than time slots on channels. You will be able to use this function only if the broadcaster provides information on the forthcoming programmes. 10-3-1 Recording modes: Timer or Programme The receiver can handle two programme recording modes using the electronic programme guide: recording at a fixed time (Timer mode) or by event (Programme mode). Timer mode By programming a recording using the electronic programme guide, the receiver memorises the channel, the date and the announced start and end time of the programme to record.



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)
<http://yourpdfguides.com/dref/1301369>

The receiver then records the specified channel at the day and time specified. To avoid possible shifts between the announced schedules and the actual schedules of broadcast, you can specify safety margins in your user preferences. The receiver will then begin and stop recording from 1 to 15 minutes before and after the announced time. Programme mode (depending on country) By programming a recording using the electronic programme guide, the receiver memorises information of the programme to record, provided by the broadcaster: name, summary, date, channel and time of broadcast. As the beginning of recording approaches (10 minutes before the announced time), the receiver monitors the channel and awaits the broadcast signal marking the beginning of the programme. The receiver begins recording only when the programme starts. When the signal marking the end of the programme is received, the receiver stops recording. The availability of the Programme recording mode depends on each country. To know if this mode is available in your country, access the User Preferences menu: if the selection of the recording type does not appear among the preferences, it means that it is not available for your country. Only the Timer recording mode is then available to you (see "User preferences", page 12).

You can customise in your User Preferences the recording mode to be applied by default and the safety margins to be applied in the Timer mode (see "User preferences", page 12). - 27 - DTR6400T_6700T_9 avril 07 EN.book Page 28 Jeudi, 10. avril 2008 2:38 14 10-3-2 Programming a recording using the programme guide Press the key to access the electronic programme guide. Select the channel and the programme to record (to know how to navigate in the guide, see "Electronic programme guide", page 20). Once the programme is selected, press the The programme then appears framed in red. To cancel the programming, press the key. You can view and modify the recording settings in the Recording timers menu (see "Recording programmes using the menu", page 25). key. 10-4 RECORDING LIST To access the recordings list, press the You can also access it by pressing key.

, then by selecting RECORDING LIST . Your receiver is equipped with a hard disk (identified as HDD-V). You will be able to create folders to organise your recordings, and control the disk space available. The window on the left displays the existing folders and recorded programmes. To scroll over the list of folders and recordings from one page to another, use the keys.

Use the and folder or a recording. keys to select a and To open a selected folder and access the recordings that it contains, press the To play the selected recording, press the key. key. In reading mode, the following actions are available: use press , , and to move within the recorded programme. to stop and return to the recording list.

key. To close the recording list and exit this menu, press the - 28 - DTR6400T_6700T_9 avril 07 EN.book Page 29 Jeudi, 10. avril 2008 2:38 14 10-5 MANAGING THE RECORDING LIST The coloured keys actions: let you manage the recording list, and offer you the following : access the menu "Select the operation". : select the highlighted recording. : display the complete or restricted recording list. : sort the recordings by date or name. 10-5-1 Selecting recorded programmes You can work with several recordings at the same time. To handle several files simultaneously, it is preferable to select them beforehand. Selecting several recordings To select several recordings which are not continuous: Go to the desired recording.

Press the key, the icon the left of the recording. appears on Proceed in an identical way for the other recordings which you wish to select. Press the key to access the recordings management window. To select several recordings which are continuous: Go to the first desired recording. Press the Press the key and keep it pressed until the icon key, the icon appears on the left of the recording. Go to the last desired recording. appears on the left of the selected recordings. key to access the recording management window. Folders can be selected in the same way as recordings. - 29 - DTR6400T_6700T_9 avril 07 EN.

book Page 30 Jeudi, 10. avril 2008 2:38 14 10-5-2 Accessing the complete list To display the complete list of recordings and hence access the locked recordings, press the You will be requested the access code to access the locked recordings. Enter the receiver access code then press the receiver code (access code)", page 13). key. key (to modify the access code, see "Changing the key.

Locked recordings are indicated by a key. To return to the restricted list, press again the 10-5-3 Sorting your recordings The key enables you to sort your recordings by date or name. 10-5-4 Creating a new folder You can create a new folder to organise your recordings. Select a folder and press the Press the "New folder" key. key, then enter the name of your folder using the numeric key.

. Select the action "Move/New folder" then press Delete the name displayed by pressing the keypad on the remote control. For example: press the 2 key to obtain "a", press the 2 key twice quickly to obtain "b", and so on. Always use alphanumeric (numbers and letters) characters when you name folders. Do not use special characters. The accepted signs are ".", "_" and "-". Press the key to confirm the creation of your new folder. 10-5-5 Erasing a recording Select the recording or folder that you want to erase or select several recordings or folders (refer to the paragraph "Selecting several recordings", page 29). Press the key.

Select the action "Delete" then press . A warning message appears. Press the key to confirm the deletion. The deletion of the complete list is impossible when a recording is in progress. - 30 - DTR6400T_6700T_9 avril 07 EN.book Page 31 Jeudi, 10. avril 2008 2:38 14 10-5-6 Moving recordings Select the recording or the folder that you want to move or select several recordings or folders (refer to the paragraph "Selecting several recordings", page 29). Press the Select with the key. Select the "Move/New folder" action then press and . key.

keys the desired location and press the Once the operation is finalised, the recording(s) appear at the new location. 10-5-7 Renaming a recording Select the recording or the folder that you want to rename and press the Select the action "Rename" then press Delete the name displayed by pressing the . key, then enter the name of your folder with the numeric key. keypad on the remote control. For example: press the 2 key to obtain "a", press the 2 key twice quickly to obtain "b", and so on.

Always use alphanumeric (numbers and letters) characters when you rename files.



[You're reading an excerpt. Click here to read official SAGEM DTR](http://yourpdfguides.com/dref/1301369)

[6400T user guide](http://yourpdfguides.com/dref/1301369)

<http://yourpdfguides.com/dref/1301369>

Do not use special characters. The accepted signs are ".", "_", and "-". Press the key to confirm.

10-5-8 Merging recordings To merge two recordings, go to the first recording and press the and press Press the . The selected recordings appear preceded by the key, select the "Merge 2 records" action and press the key. Then go to the second recording icon. key. A confirmation screen appears, with the titles of the two recordings. To confirm merging, select "YES" with or , then press the key. The merged recording will carry the title of the second selected recording. - 31 - DTR6400T_6700T_9 avril 07 EN.book Page 32 Jeudi, 10. avril 2008 2:38 14 10-5-9 Exporting a recording to external storage devices Attention: Such copying is legal only if it is intended for strictly private use.

The size of the exported files is limited to 4 Gb on mass storage devices formatted in FAT32. Cut your recording in two parts if the size of your file exceeds 4 Gb (refer to the paragraph "Erasing a portion of a recording", page 33). To know the compatible devices, refer to "USB Connection" in section "Specifications", page 45. Connect your external storage device to the USB port of the receiver. Take care to insert the device in the correct direction and do not force your device in the receiver port. Select the file to export then press the key. . Select the "Video exportation" action then press Using the keys the and , choose the desired location on the external storage device and press key to confirm the export. If you do not have enough space on the external storage device, the "Disk full" message appears and no file will be copied to the device. 10-5-10 Importing a recording from an external storage device Only the recordings previously exported can be imported on your receiver.

To know the compatible storage devices, refer to "USB Connection" in section "Specifications", page 45. Connect your external storage device to the USB port of the receiver. Take care to insert the device in the correct direction and do not force your device in the receiver port. If necessary, press the Press the key to go to the list of recordings. .

key to confirm key, select the "Video importation" action then press and Using the keys the import. , choose the recording to import then press the By default, recordings are imported in the root folder of the hard disk. You will thus find them directly in HDD-V. - 32 - DTR6400T_6700T_9 avril 07 EN.book Page 33 Jeudi, 10.

avril 2008 2:38 14 10-5-11 Erasing a portion of a recording The receiver comprises an advanced editing function that enables you to: erase a portion of a recording from the beginning to a point that you specify manually, erase the portion of a recording between two points that you specify, erase the portion of a recording between the current playing position to the end of the recording, cut a recording into two parts. to commence playing. key to pause. key to access the cutting options. : Select, in the recording list, the recording to edit and press At the desired position, press the Press the key then press the Select the desired cut option then press at the beginning: the recorded portion between the beginning and the selected point will be erased (2 minutes minimum). in the middle: the part of the recording between the selected point (index) and the next selected position will be erased. To choose the next position: confirm the "in the middle" option by pressing within the recording with the keys and press position. , move and to mark the second - Press then and again confirm the cut option "in the middle" to cut the selected portion. at the end: the part of the recording between the selected point and the end will be erased. in two parts: the selected recording is cut into two parts called "1 recording name" and "2 recording name".

10-6 SAVE A RECORDING ON ANOTHER EQUIPMENT Attention, such copying is legal only if it is intended for a strictly private use. Connect your video recorder on the AUX Scart socket of the receiver (see "Peripheral connections", page 9). Select this input on your video recorder. Select play mode on the receiver and record mode on the video recorder. Refer to the video recorder instruction manual for details on the procedure to follow. - 33 - DTR6400T_6700T_9 avril 07 EN.book Page 34 Jeudi, 10. avril 2008 2:38 14 11. MULTIMEDIA The receiver allows you to view, play and manage media

files stored on the hard disk of the receiver or on compatible mass storage devices (see "USB Connection" in "Specifications", page 45). The Media list manager (multimedia application of the receiver) enables you to: . . . view and manage your photo files (see "Specifications", page 45 page for compatible formats), play and manage your audio files (see "Specifications", page 45 page for compatible formats), create and manage photo slideshows, audio playlists and mixed playlists, customise the display and playback options of the media files.

11-1 ACCESSING THE MEDIA LIST MANAGER You can access the media list manager in one of the following ways: . . . Insert a USB storage device in the USB port of the receiver when you are watching the television (see "Connection of the receiver to the TV set", page 8), Press the Press the key of the remote control, key, select the MEDIA menu and press the key. The receiver then displays the selection window of the devices available. Press the or keys to select the device of your choice (hard disk of the receiver or to confirm. connected device), then press You can at any time exit the selection window of the media list and return to the channel viewed earlier by pressing the key. - 34 - DTR6400T_6700T_9 avril 07 EN.

book Page 35 Jeudi, 10. avril 2008 2:38 14 11-2 NAVIGATING IN THE MEDIA LIST MANAGER The media list manager displays the contents of the selected device, as well as information concerning the use of the storage space. Use the keys , to browse the files and folders in the device. If you have more than twelve files or folders use the keys pages. A preview and information relating to the file are displayed in the right-hand side window when a media file or a folder is selected and highlighted.

Press the or key to display information on the actions available, to return to the previous screen , to navigate within the to exit the media list manager and return to the channel being viewed earlier. When, in a folder, you have several file formats (photo, audio), you can select a display mode for the contents.

Press the . . . key and select with the keys or the desired display mode: Audio player: display audio files (mp3), Media List: display all files in the folder, Photo player: display image files (jpg), Play List Editor: display the files of an existing playlist.



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)
<http://yourpdfguides.com/dref/1301369>

key to confirm the desired view. Press the - 35 - DTR6400T_6700T_9 avril 07 EN.book Page 36 Jeudi, 10. avril 2008 2:38 14 11-3 MANAGING CONTENTS
Press the key to confirm the selection of a highlighted media file or folder. To select several files and/or folders which are not continuous, select them and press the key for each selected element. Selected elements appear with a check-mark. To unselect an element, press again the key.

To select a series of files and/or folders which are continuous, select the first element of the series then press the key and hold for more than two seconds. Select the last element of the series then press key; all the elements located between the first and the last of the series are selected. You can then carry out the following operations: · to copy, delete or move the selected elements, press the key and follow the instructions displayed on the screen. This command enables you to copy or move files to another location within the same device, or from one device to another (for example: external USB device to the hard disk of the receiver). It also enables you to create new destination folders. Do ensure that the destination device has sufficient disk space before transferring your data.

to rename a selected element, press the Select using the or key. The "Select the operation" window appears. · Use the key keys the "Rename" action and confirm with to erase the name of the element then use the keys of the numeric keypad of the remote control to enter the name.

For example, to enter the letter "a", press once the key, and so on. Always use alphanumeric (numbers and letters) characters when you rename files and/or folders. Do not use special characters. The accepted signs are ".", "-" and "-".

key, to enter the letter "b", press twice quick - 36 - DTR6400T_6700T_9 avril 07 EN.book Page 37 Jeudi, 10. avril 2008 2:38 14 11-4 VIEWING AND MANAGING PHOTO FILES 11-4-1 Viewing photo files From the explorer, use the or the connected device. or keys to browse the contents of the hard disk of the receiver key. To display a photo in full screen mode, select the photo file and press the To display the photo files in thumbnail mode, press the and confirm with .

key, select the "Photo player" display mode In thumbnail and mode, use the keys , , to browse through the photo files, to move from one page to another. To display a photo file in full screen mode, select it and press the key. To launch a slideshow of the displayed photo files, press the key. key. You can stop the slideshow by pressing the To customise the slideshow options, see "Advanced options", page 41. You can play your slideshow and at the same time listen to some background music, from a radio channel or an audio file (mp3) present on the hard disk of the receiver or the media. Press the key to listen to a radio channel or a customised audio playlist (see "Playlists", page 40) key to display help. while viewing or managing your photo files. Press the 11-4-2 Managing photo files Select the photo files which you wish to manage. To delete, copy or move the photo file selected, press the on the screen (see "Managing contents", page 36).

key and follow the displayed instructions - 37 - DTR6400T_6700T_9 avril 07 EN.book Page 38 Jeudi, 10. avril 2008 2:38 14 11-4-3 Editing photo files Select a photo file and press the Using this screen, you can: · · · /: display the "Help" window : browse through the image files, move the focus of an image after a zoom : display the name of the file, the date when the photo was shot, the format and the location in the folder : start the slideshow : choose a radio station for accompaniment : zoom on the photo displayed on the screen : turn the photo 90° in an anti clockwise direction : turn the photo 90° in a clock wise direction : return to the previous screen key to display it in full screen mode. · · · · · 11-5 PLAYING AND MANAGING AUDIO FILES 11-5-1 Playing audio files From the Media list manager, use the and keys to browse through the contents of the hard disk of the receiver or connected USB device. If you only wish to display the audio files (mp3), press the key and select the "Audio player" display mode. If you wish to display all the audio files (mp3) present on the hard disk, press the key. The receiver will search and then display all the audio files found, sorted by artist. - 38 - DTR6400T_6700T_9 avril 07 EN.book Page 39 Jeudi, 10. avril 2008 2:38 14 To play an audio file, select it and press the key.

When the audio file reaches its end, the Media list manager automatically plays the next available audio file located in the same folder. You can customise the order in which audio files are played (see "Advanced options", page 41). Press the key to pause the audio file that is playing, press playing the audio file. Press the keys and to play the previous or next audio file. to resume.

Press the key to stop 11-5-2 Managing audio files You can manage your audio files using the Media list manager. To return to this screen, press the key and select the "Media List" view. Select the audio file(s) which you wish to manage. To delete, copy or move the selected audio file(s), press the displayed on the screen (see "Managing contents", page 36). key and follow the instructions 11-5-3 Editing audio files You can edit your audio files and add/modify the following properties: · · · · artist album title genre Select the audio file which you want to edit.

Press the key to display the dialog box indicating the file information. Use the keys and to select the properties which you wish to modify. Press the and enter your modifications using the numeric keypad of the remote control. Press the key to confirm the changes "Edit" - 39 - DTR6400T_6700T_9 avril 07 EN.book Page 40 Jeudi, 10. avril 2008 2:38 14 11-6 PLAYLISTS The media list manager allows you to create and manage customised photo slideshows, audio playlists and photo-audio playlists. 11-6-1 Creating and modifying a playlist In the Media list manager, select the folder where you wish to create your playlist. Press the "Mode" key and select the view mode "Play list Editor". The playlist edit screen is displayed. To add a media file, select it in the left panel and press the key.

The file then appears in the playlist, displayed in the right panel. Press the "Save" key to save your playlist once it key to erase the default name, enter the name of your choice using the numeric . is composed. Use the keypad of the remote control then confirm with Always use alphanumeric (numbers and letters) characters when you name playlists.



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)
<http://yourpdfguides.com/dref/1301369>

Do not use special characters. The accepted signs are ".", "-" and "-". The playlist that you have just created appears in the left panel, with the extension .m3u. To delete a media file from the playlist, select it in the right panel and press the key.

To insert a media file into a particular location in the playlist, select the desired file then press the key. Select the desired position in the right panel then press the key. "Save" key to save any modification made to a playlist. To edit a playlist, go to the "Play list Editor" display mode, and select the list to be edited in the right panel. The files which it contains are displayed in the left panel.

- 40 - DTR6400T_6700T_9 avril 07 EN.book Page 41 Jeudi, 10. avril 2008 2:38 14 11-6-2 Launching a playlist Select the playlist from the media list manager and press the key. Depending on the composition of the playlist, the media list manager launches: . . . an audio playback if the playlist contains only audio files, a slideshow if the playlist contains only photo files, a slideshow with audio playback as musical background if the playlist has mixed content. 11-7

ADVANCED OPTIONS In the Media list manager, press the the key to access the options menu.

To return to this screen, press key and select the "Media List" display mode. The media list manager allows you to customise the following options: Audio Play mode: set the manner in which the media list manager plays audio files, track by track or in random mode. Slide Show Loop: set the manner in which the media list manager displays the slideshows. Display time: set the display time of the photos in a slideshow. Help banner: display or hide the help banner which appears by default while viewing a photo in full screen mode. Use the , , and keys to select and set the desired options. Press the key to confirm changes. - 41 - DTR6400T_6700T_9 avril 07 EN.book Page 42 Jeudi, 10. avril 2008 2:38 14 12.

UPDATING THE SOFTWARE Software updates of the receiver are regularly available for download to provide you with new features. The software can be updated using the network when a new version is available. In this case, the new version will be broadcasted in the channel data. The receiver automatically checks if an update is available and then asks you to accept, to postpone until the next wake up or to refuse the download. . If you accept, the receiver starts the update procedure, which can take from 5 to 30 minutes. During this time the receiver is not available: - the screen becomes black, - the display indicates the download phases (0 to 4), - you cannot carry out any operation during the process (for 5 to 30 minutes). Once the process is complete, the receiver switches on automatically. After the automatic restarting of the receiver, press the key to exit the welcome screen and to return to the last programme watched. If you refuse, the receiver will propose again the download at next wake up. . Please check on www.

sagem.com if a new user manual is available online. - 42 - DTR6400T_6700T_9 avril 07 EN.book Page 43 Jeudi, 10. avril 2008 2:38 14 13.

TROUBLESHOOTING The remote control has no effect on the receiver. The receiver displays - -: - -. The receiver cannot find any channel. Point the remote control towards the receiver. Check the condition and the orientation of the batteries.

Take the receiver out of standby by pressing . Check that you are in a broadcast area. Readjust your antenna (see "Antenna signal", page 16). Check all connections, check the antenna and start a Motionless image or reception problem. programme search again (see "Automatic channel search", page 14).

Scart socket (see "Connection of the receiver to the TV set", page 8). If required, select the Scart input directly on your television set. Check that your television set is correctly connected to the TV The television set does not switch to the receiver when it leaves standby mode. No sound in "HOME CINEMA" mode on some channels. Black and white image on AUX output (during VCR recording).

Check that you are correctly connected to a "HOME CINEMA" amplifier via a digital link (see "Peripheral connections", page 9). Check that the signal type chosen for AUX Scart output is compatible with your VCR (select PAL on AUX SCART in the Video Settings menu (see "Video settings", page 14). appear only in the full list (see "Accessing the complete list", page 30). Some recordings are not listed in the recording list. Check that the records are not locked. In this case they will I can only zap between 2 channels during a double In the case of a double simultaneous recording, you can only recording. zap between the 2 channels being recorded. The receiver exits automatically the PIP mode If a programmed recording is about to start in the next minute, (Picture in Picture). the receiver automatically exits the PIP mode in order to prepare the recording. When switching to standby mode, the receiver If a programmed recording is about to start in the next minute, stops the video, but the receiver display shows a the receiver holds so as to be ready for the beginning of channel number instead of the current time.

recording. - 43 - DTR6400T_6700T_9 avril 07 EN.book Page 44 Jeudi, 10. @@@@ (see "Specifications", page 45). The receiver displays an error message when I try Check that the total size of the multimedia files stored on the to copy or move multimedia file(s) from a USB hard disk of the receiver, including the files being copied, device to the hard disk of the receiver.

does not exceed 1/16 of the total hard disk capacity. The hard disk space allocated to multimedia files is limited to 15GB for a 250 GB hard disk, 10 GB for a 160 GB hard disk, etc. For any other problem. Perform a default factory reset (see "Return to default factory settings", page 15). - 44 - DTR6400T_6700T_9 avril 07 EN.

book Page 45 Jeudi, 10. avril 2008 2:38 14 14. SPECIFICATIONS Transmission Standards DVB-T, MPEG 2, OFDM Tuner (2 with internal splitter) RF Input Input Connector: IEC 169-2 female RF input frequency range: UHF 470-862 MHz (8 MHz BW) VHF 174-222 MHz (7 and 8 MHz BW) RF input level: -90 to -20 dBm Input impedance: 75 Ohms COFDM bandwidth: 8 MHz Tuning step: 166.66 Khz RF output Video receiver MPEG-2 SD(ISO/IEC 13818-2) Profile and level supported: MP@ ML Input rates: 1.5 to 15 Mbit/s Aspect ratios: 4:3 and 16:9 Video resolutions: 720x576, 704x576, 544x576, 480x576, 352x576, 352x288 Conversions: Pan and Scan, Letterbox Audio receiver ISO/IEC13818-3 standard compliant. MPEG-Layer I and II (Musicam Audio) Mode: Mono, Stereo Sampling frequencies: 32/44, 1/48 Khz A/V Input/Output TV SCART Supported multimedia files Audio files: mp3, Mp3, MP3 (in CBR and VBR encoding).



[You're reading an excerpt. Click here to read official SAGEM DTR 6400T user guide](http://yourpdfguides.com/dref/1301369)

<http://yourpdfguides.com/dref/1301369>