



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM FAST 1201 V2. You'll find the answers to all your questions on the SAGEM FAST 1201 V2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM FAST 1201 V2
User guide SAGEM FAST 1201 V2
Operating instructions SAGEM FAST 1201 V2
Instructions for use SAGEM FAST 1201 V2
Instruction manual SAGEM FAST 1201 V2



[You're reading an excerpt. Click here to read official SAGEM FAST 1201 V2 user guide](http://yourpdfguides.com/dref/3872575)
<http://yourpdfguides.com/dref/3872575>

Manual abstract:

i1 1 14/10/2008 16:59:35 Contents 1 2 ConTEnTS oF ThE pACk.....

.....
.....
.....

....2 ConnECTInG YoUR MoDEM .

.....
.....
.....
.....

..3 2.1 ConneCtingyourrouter

.....
.....
.....
.....
.....

.... 3 . 2.2 ConneCtingadditionaltelephones

.....
.....
.....
.....

.. 3 . 3 InSTALLATIOn FRoM ThE CD-RoM ..

.....
.....
.....

4 3.1 installationontheethernetport.....

.....
.....
.....

... 6 . @@7 3.3 reinstallingoruninstallingyourmodem....

.....
.....
.....

... @@@@sagemf@stm1201v2andsagemf@stm1241v2equipmentincludeanethernet interface(eth)andanusbinterface.
sagemf@stm1201v2andsagemf@stm1241v2productscanbeprovidedin «bridged»or«Routed»versionaccordingtotheisp.

inaddition,thismodemwillprovideyouwithaccesstoalltheservicesprovidedbyyour isp(InternetServiceprovider),asshowninthediagrambelow. List of symbols used
in this guide Warnyouaboutanactionoraseriousomission. providesyouwithimportantinformationyoumusttakeintoaccount. 1 253156400-A_GIR 1201 V2 STD-
gb.i3 3 presentation 14/10/2008 16:59:45 SAGEM F@stTM 1201/1241 V2 1 ConTEnTS oF ThE pACk

Beforeyoustarttheinstallationmakesurethatthepackcontainsthefollowingitems: note: The modem can be either in white or black colour.

Contents of the pack 253156400-A_GIR 1201 V2 STD-gb.i4 4 2 14/10/2008 16:59:47 SAGEM F@stTM 1201/1241 V2 2 ConnECTInG YoUR MoDEM 2.1

ConnECTInG YoUR RoUTER makesurethatthemodemisnotconnectedtoyourcomputerbeforeyoustart theinstallationfromtheCd-rom.

followtheprocedureaccordingtothestagesdescribedintheCd-rominstallationand connectyourtelephoneinaccordancewiththedrawingbelow: 2.2 ConnECTInG
ADDITIonAL TELEphonES maketheconnectionsaccordingtothediagramopposite.

3 253156400-A_GIR 1201 V2 STD-gb.i5 5 Connection 14/10/2008 16:59:48 SAGEM F@stTM 1201/1241 V2 3 InSTALLATIOn FRoM ThE CD-RoM

makesurethatthemodemisnotconnectedtoyourcomputerbeforeyoustart theinstallationfromtheCd-rom.

theinstallationproceduredescribedbelowwasundertakeninWindowsvistatm. installationinotherWindows®(98,me,2000andXp)canbeslightlydifferent.

inserttheCd-romintothe relevantdrive;thescreenoppositewillappear: clickonnext.

thescreenoppositedescribes theprecautionstobetaken duringtheinstallation. clickonnext. Installation from the CD-RoM 253156400-A_GIR 1201 V2 STD-gb.i6

6 4 14/10/2008 16:59:51 SAGEM F@stTM 1201/1241 V2 thescreenoppositewillappear. selectthemodeofconnection thatyouwish(ethernetorusB) toconnectyourmodemtoyour computer. 5 253156400-A_GIR 1201 V2 STD-gb.i7 7 Installation from the CD-RoM 14/10/2008 16:59:52 SAGEM F@stTM 1201/1241 V2 3.1 InSTALLATIOn on ThE EthERNET poRT ifyouselected«Use the Ethernet cable»,clickonnext. @@@@ Clickonfinish. youmaynowuseyourinternetaccess.

@@@@ Clickonfinish. youmaynowuseyourinternetaccess. @@@ enteradmininthe«username»field(seenote). enteradmininthe«password»field(seenote). note:thisvalueisspecifictotheisp. You may now access your router's HTTP configuration tool. @@@@ @theroomtemperatureshouldnotexceed45°C. The modem can be placed on a desktop or fixed vertically in its wall mounting. themodemshouldnotbeexposedtostrongsunlightorplacednearasubstantial sourceofheat. themodemshouldnotbeplacedinanenvironmentwhereitwouldbesubjectedto considerablesteamcondensation. themodemshouldnotbeexposedtosplashesofwater. themodem'scasingshouldnotbecovered.

themodemanditsperipheralsshouldnotbeusedforoutdoortransmissions. power supply source themodem'smainsadaptershouldnotbecovered. themodemcomeswithitsownmainsadapter.

itshouldnotbeusedwithanother adapter. thisclassiiadapterdoesnotneedtobegrounded(earthed).theconnectiontothe electricalnetworkshouldcomplywiththeindicationsgivenonthe label. useareadilyaccessiblemainsoutletlocatednearth modem.the powersupplycord is2mlong. arrange the powersupplycords in such a way as to avoid any accidental power cut to the modem.

@@@@@themodemshouldbeconnectedtothemainsviaareadilyaccessiblewallsocket ensuringtheelectriccutting. Maintenance It is prohibited to open the casing. This must be done only by qualified personnel approvedbyyoursupplier. donotuseliquidoraerosolcleaningagents. 13 253156400-A_GIR 1201 V2 STD-gb.i15 15 Safety instructions 14/10/2008 17:00:08 SAGEM F@stTM 1201/1241 V2 5 SAFETY InSTRUCTIoNS (ConTD.) Safety level primarypowersourceaccess BipolarACmainssocket dCpowersupplyaccess Miniature fixed connector (Power) typeBusBaccess(usB) rJ45ethernetaccess(ethernet) rJ11lineaccess(line) hpv(hazardousprimaryVoltagecircuit) selv(SafetyExtraLowVoltage) selv selv tnv3(TelecommunicationnetworkVoltagelevel3 circuit) productsbearingthissymbolcomplywithemCregulationsaswellasthelowvoltage directivepublishedbytheCommissionoftheEuropeanCommunity(CeC). EC Declaration EC compliance declaration Sagem Communicationsdeclaresthattheproductnamedsagemf@stTM1201v2or

sagemf@stTM1241v2complieswiththedemandsoftheEuropeanCommunitydirectives1995/5/eCaswellaswiththeessentialdemandsofthedirectives89/336/eeCdated 03/05/1989and73/23/eeCdated19/02/1973. theeCcompliance declarationforthesagemf@stTM1201v2andsagemf@stTM 1241v2isimplementedwithintheframeworkofther&a.



[You're reading an excerpt. Click here to read official SAGEM FAST 1201 V2 user guide](http://yourpdfguides.com/dref/3872575)
<http://yourpdfguides.com/dref/3872575>