



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM HM40. You'll find the answers to all your questions on the SAGEM HM40 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM HM40
User guide SAGEM HM40
Operating instructions SAGEM HM40
Instructions for use SAGEM HM40
Instruction manual SAGEM HM40

Dear Customer,

Thank you for purchasing a new generation Sagemcom radio.

This product has been manufactured with the greatest care. It undergoes continuous development. We thus reserve the right to make modifications and improvements to the product described in this user manual without notice.

For your comfort and safety, please read the "Safety recommendations and instructions", page 2 paragraph carefully



The CE mark certifies the conformity of the products to the essential requirements of the 2006/95/CE directives on safety, 2004/108/EC governing electromagnetic compatibility and EUP 2009/125/EC regarding ecodesign requirements defined by the European Parliament and Council in order to minimise electromagnetic interference, to ensure the safety of users and their property and to protect their health and reduce the impact of products on the environment.

The declaration of conformity may be consulted on the website www.sagemcom.com in the "support" section or you may request it from :

Sagemcom Broadband SAS
250, route de l'Empereur
92848 Rueil-Malmaison Cedex - France

Copyright © Sagemcom Broadband SAS

All rights reserved

Sagemcom is a registered trade mark.

EN

1



[You're reading an excerpt. Click here to read official SAGEM HM40 user guide](http://yourpdfguides.com/dref/3978615)
<http://yourpdfguides.com/dref/3978615>

Manual abstract:

This product has been manufactured with the greatest care. It undergoes continuous development. We thus reserve the right to make modifications and improvements to the product described in this user manual without notice. For your comfort and safety, please read the "Safety recommendations and instructions", page 2 paragraph carefully. The CE mark certifies the conformity of the products to the essential requirements of the 2006/95/CE directives on safety, 2004/108/EC governing electromagnetic compatibility and ErP 2009/125/EC regarding ecodesign requirements defined by the European Parliament and Council in order to minimise electromagnetic interference, to ensure the safety of users and their property and to protect their health and reduce the impact of products on the environment. The declaration of conformity may be consulted on the website www.sagemcom.com in the "support" section or you may request it from : Sagemcom Broadband SAS 250, route de l'Empereur 92848 Rueil-Malmaison Cedex - France Copyright © Sagemcom Broadband SAS All rights reserved Sagemcom is a registered trade mark. 1 EN SAFETY RECOMMENDATIONS AND INSTRUCTIONS In general, switch off your radio wherever its use is prohibited. Do not leave your radio within reach of small children (some mobile parts may be accidentally swallowed). NEVER OPEN THE RADIO! YOU MAY RUN THE RISK OF AN ELECTRIC SHOCK For your safety, never use your radio without the battery flap or you risk an electrical shock.

For optimal audio quality, your radio should be used at an ambient temperature of between + 5 °C and + 45 °C (temperate climates). Keep the radio away from heat sources such as radiators, candles, lamps, etc. Do not place anything on your radio (this may hinder correct ventilation): the air vents on the casing protect your device from overheating. If you place your radio in a compartment, leave at least 10 cm on either side and 20 cm at the front and rear. @@Never use rechargeable batteries.

@@@Do not use your radio outdoors, or in a damp room (shower, bathroom, washroom, kitchen, etc.) less than 1.50 m from a water point. Never place an object containing liquid (a vase for example) on the device. Any contact with liquid may damage your radio and cause a failure (dripping or splashing).

If liquid enters the radio, immediately disconnect it from the mains and contact your dealer. Do not attempt to remove the screws or open the equipment. It contains no parts that can be replaced by the user. The use of headphones at high volume can cause hearing damage. Sound perception can be misleading. Over time, your hearing "comfort level" gets used to higher and higher volumes. After prolonged listening, what may seem a "normal" volume to you, may in fact be too high and harmful to your hearing. To protect yourself from this risk, set the volume to a safe level and do not increase it subsequently. The radio is equipped with non-slip feet to ensure stability and leave no trace on furniture surfaces. However, given the wide variety of lacquers and varnishes used by furniture manufacturers, we cannot guarantee that no traces will be left on furniture surfaces.

Sagemcom Broadband SAS shall bear no liability in the event of such damage. Worn-out batteries should be disposed of in accordance with the instructions in chapter "Environment" of this manual. 2 PRESENTATION RADIO MODES FM MODE AND DAB MODE With your radio, you can listen to stations on the FM bandwidth (FM mode) or digital audio broadcasts (DAB mode). WHAT'S THE DIFFERENCE? The controls for your radio are identical for FM mode and DAB mode. DAB mode scans the frequency and offers the memorized stations. YOUR PACK Check that the following components are in the packing: 1 2 3 HM40 4 1. the radio, 2. the power transformer, 3. the UK adapter, 5 4. the battery (model HM40), 5.

this user manual. DISCOVERING YOUR RADIO GENERAL VIEW The following table shows the keys to the drawings on the inner cover of the manual. No. 1 2 Keys Loud speaker Screen Used to... . Display the status of the radio. See...

P. 4 3 EN No. 3* 4 5 6 7 8 9* 10 11 12 13 14 *. Keys Deferred Listen key Menu Key Stations key Volume key Knob Lock button FM/DAB mode key Headset jack. FM/DAB aerial On/Off switch Preselection keys 1 - 5 Power outlet Used to... Defer listening to a radio programme. To access the menu. To look for station(s).

To display the list of saved station. To adjust the volume. To tune the radio. To lock the radio buttons. Select a mode. To connect headphones. Note: maximum power 150 mV. To switch the radio on / off. To memorize your favourite stations. To connect the power transformer. See... P. 10 P.

6 P. 7 P. 8 P. 8 P. 5 P.

7 P. 7 P. 5 P. 8 P. @@@@Keys 1 2* 3 4 5* 6 *. FM or DAB mode activated. DAB reception quality. Alarm activated. Lock activated. Deferred listening recording in progress.

No. 7 8 9* 10 11 Keys Eco mode activated. Mains connected. Battery level. Time. @@Message display zone. Number of favourite FM station broadcast. @@The screen lights up. key. @@@@ Define a value (for example to set the time). Select a menu. Confirm a setting. Look for a station. Turn the knob to the Increase or reduce the right or left to...

. volume. Activating / Deactivating Press the knob to...

silent mode BROWSING THE MENUS 1. Press the key. Scroll through the menus by turning the knob. 2. @@key several times. 3. @@Example To access the Parameters > Language menu: 1. Press the key. 2. Turn the knob and find Parameters.

Press the centre of the knob to confirm. 3. Turn the knob and find Language. Press the centre of the knob to confirm. @@Eco Mode On/Off Light * Vol. Limit Disp. @@@@1. @@Connect the power transformer supplied with your radio. 2. Connect the power plug to the mains.

For the model HM40, the icon indicates that your radio is charging. @@The battery will operate best after 3 to 4 charge cycles. @@The control buttons are inactive. @@If necessary, move it to adjust the position. @@@@ Press the key.

The station search screen appears. 2. Turn the knob to the right or left to scan the FM band. The progression is displayed on the screen. 3.

@@@To fine tune your scan, you can manually scan the FM band. @@1. When you use your radio the first time, it scans the DAB band. Do not interrupt this scan. 2. @@You can now pass from one station to another. DIGITAL Recherche 12:03 MEMORIZING YOUR FAVOURITE RADIO STATIONS You can avail of 5 slots to memorize the frequencies of your favourite stations, in FM and DAB mode. When the station is broadcasting, hold down one of the preselection keys on the top of the radio. The number now associated with the radio station is displayed on the screen when it is broadcast. For example for the preselection key 1 : 1 .

To memorize a new radio station and associate it with a preselection key already in use, hold down the required key. LISTENING TO YOUR PRESET RADIO STATIONS IN FM AND DAB MODES To listen to your preset radio stations, press the associated preselection key.



[You're reading an excerpt. Click here to read official SAGEM HM40 user guide](http://yourpdfguides.com/dref/3978615)
<http://yourpdfguides.com/dref/3978615>

If you have not yet preset a radio station and you press the preselection key, the screen displays the message Empty. IN DAB MODE 1. Press the key. The list of preset DAB radio stations is displayed. 2. Select the station and confirm. ADJUSTING VOLUME RAISING / LOWERING THE VOLUME Turn the knob to the right to increase the volume, and to the left to reduce it. To display the volume control menu at any time, press the key.

ACTIVATING / DEACTIVATING SILENT MODE To cut off radio sound, press the centre of the knob. The screen displays <Silent>. To restore radio sound, press the centre of the knob. 8 THE FUNCTIONS You radio has additional functions for greater listening and user comfort. See section "Browsing the menus", page 5.

ENERGY SAVING OPTIONS You can set your radio to manage energy consumption optimally, by deactivating one of the options offered in the Eco Mode menu: The option... On/Off Light * Vol. Limit Disp.

Time Deferred mode ** . Used to... Deactive / Restore all energy saving options. Switch off screen backlighting. Prevent the volume from exceeding a certain limit. Remove the time display on the screen. Activate / Deactivate deferred listening. Only for model HM40.

DEACTIVATING / RESTORING ONE OR MORE OPTIONS In the Eco Mode menu, scroll through the list and select the desired option. To deactivate all options, select the Eco Mode > Off menu and confirm. To restore all options, select the Eco Mode > On menu and confirm. PROGRAMMING AN ALARM There are 3 programmable alarms. 1. In the Alarm menu, select Alarm1, Alarm2 or Alarm3 and confirm. 2. Select On and confirm. 3. Define the alarm start time: turn the knob to reach the desired time, press the knob to confirm.

Thus, first define the hours, then the minutes. 4. The screen disproducts may damage the plastic. Do not use spray products, certain special cleaning products, corrosive products, solvents, alcohols or detergents, etc. Battery (model HM40), After a prolonged period without use (several months), during the charging phase, the device will not start immediately.

Some time may elapse before the battery is once again operational. TROUBLESHOOTING Problem Causes Solutions Check that the radio's power plug is connected and that the mains plug is powered. Check the battery and the charger. Check the charger connections. @@@@Find a place where the signal Signal too weak is stronger.

@@Lower the HOLD button. @@Sagemcom wishes to operate environmentally-friendly installations and has decided to include environmental performance in the entire life-cycle of its products, from manufacturing to installation, usage and disposal. Packing The presence of the logo (green point) means that a contribution is paid to an approved national body, in order to improve packing recovery and recycling infrastructures. To facilitate recycling, please comply with local sorting rules for this type of waste. Batteries If your product contains batteries, they should be disposed of in designated collection points. The product The crossed-out bin label on the product or its accessories means that it belongs to the family of electrical and electronic equipment. As such, European regulations require that it be selectively collected: In distribution points if an equivalent item of equipment is purchased. In locally available collection points (civic amenity, separate collection, etc.). In this way, you participate in the reuse and recovery of WEEE (Waste Electrical and Electronic Equipment) which may have harmful effects on the environment and on human health.



[You're reading an excerpt. Click here to read official SAGEM HM40 user guide](http://yourpdfguides.com/dref/3978615)
<http://yourpdfguides.com/dref/3978615>