



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM PHILIPS HFC 242. You'll find the answers to all your questions on the SAGEM PHILIPS HFC 242 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM PHILIPS HFC 242
User guide SAGEM PHILIPS HFC 242
Operating instructions SAGEM PHILIPS HFC 242
Instructions for use SAGEM PHILIPS HFC 242
Instruction manual SAGEM PHILIPS HFC 242

HFC 242

User Manual



PHILIPS



[You're reading an excerpt. Click here to read official SAGEM PHILIPS HFC 242 user guide](http://yourpdfguides.com/dref/3872280)
<http://yourpdfguides.com/dref/3872280>

Manual abstract:

We hope you enjoy your machine and its many functions! 6 Speed Dial Buttons About this User Manual With the installation guide on the following pages, you can start using your machine quickly and easily. Detailed descriptions can be found in the following sections of this user manual. Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of your machine. The manufacturer accepts no liability if these instructions are not followed. Symbols Used Dangers Warns about dangers for people, damage to the machine or other objects as well as possible loss of data. Injuries or damage can result from improper handling. Tips This symbol designates tips that will help you to use your machine more effectively and easily. 2 Installation Guide Package Contents Packing content PSE 2 Place the front edge of the paper into the paper guide. Pull the paper forwards, until the panel is covered.

, Device Handset , , Spiral cable for handset ... Power cord with plug (country-specific) Telephone cord with plug (country-specific) Paper roll User manual with installation guide (not depicted) User Manual Verpackungsinhalt 3 Close the paper tray, and cut off the paper over the panel. Red Line If a red line appears on the printout, the paper supply is almost over.

Insert a new paper roll into the device. Connecting the Handset Connecting the Handset Missing Package Contents If one of the parts is missing or damaged, please contact your retailer or our customer service. Plug one end of the spiral cable into the socket on the telephone handset. Insert the other end into the socket designated with the H/S symbol. Connecting the Telephone Cable Connecting the Telephone Cable Inserting Paper 1 Open the paper tray, and insert the paper roll.

Connect the telephone cord to the device by inserting it in the socket designated with LINE (RJ-11-Connector). Insert the telephone plug into your telephone connection socket. Telefonkabel anschliessen Connecting the Power Cable Power Type at Setup Location Check whether the power type of your machine (indicated on the type plate) matches the power type available at the setup location. Connecting the Power Cable Insert the power cable into the connection located on the rear side of the machine. Connect the power cable to the electrical socket. 3 Overview Overview of the menu functions Direct Loading Machine

Overview Overview HFC 242 Calling functions directly: You can call a menu function directly using the function number. Press MENU and enter the appropriate function number using the numeric keypad. Confirm using o/OK. You will find the function number in the following list. , Handset Display , Paper tray cover .

.. Document guide Panel Handset cable Front view 1 Installation Speed dialling 11 Speed dialling

.....
.....
.....

.....
.....

...page 8 12 Editing the Telephone Book entry..

.....

...page 8 13 Your Number

.....
.....
.....

.....
.....

..page 11 14 Your name...

.....
.....
.....
.....
.....

.....page 11 15 Time/Date....

.....
.....
.....

.....
.....
.....

.....page 11 Telephone Book Number Name Date and time , , ... 2 General settings Key tones 22 Key tones..

.....
.....
.....
.....

.....
.....

....page 11 222 Ring Tones .

.....

.....

.....

.....

.....

..page 11 223 Number of rings.....

.....

.....

.....

.....page 12 224 Printing lists automatically ..

.....

.....

.....page 12 225 Easylink ..

.....

.....

.....

.....

.....

.....

.page 13 226 Calling Line Identification

.....

.....page 8 227 Language selection ..

.....

.....

.....

.....

page 11 Ring tone volume Number of rings for fax switch Auto printout Easylink CLIP on off Language , LINE-Socket connection socket for telephone cord
H/S-Socket connection socket for the telephone handset Seitenansicht 3 Special settings Transmission speed 33 Transmission speed.....

.....

.....

.....

.....

.page 11 332 Reception speed

.....

.....

.....

.....

..page 11 333 Transmission report

.....

.....

.....

..page 12 334 Reception report

.....

.....

.....

.....page 12 335 Dialling process...

.....

.....

.....

.....

....page 11 Reception speed Transmission report Reception report Dialling mode 4 Printing lists Fax journal 44 Fax journal

.....

.....

.....

Position all cables in such a way that no one will stumble on them, thus avoiding possible injuries to persons or damage to the machine itself.

Lock the cover of the machine completely into place when opening the machine. You could be injured if the cover falls while you are working on the machine.

Protect the machine against direct sunlight, heat, large temperature fluctuations and moisture. Do not place the machine in the vicinity of heaters or air conditioners. Observe the information on temperature and humidity in the technical data. The machine must have sufficient ventilation and may not be covered. Do not put your machine in closed cabinets or boxes. Do not place the machine on soft surfaces such as tablecloths or carpets and do not cover the ventilation slits. Otherwise, the machine can overheat and catch on fire. In the event that the machine becomes too hot, or if you see smoke coming from the device, you must immediately pull the power cable out of the power socket.

Have your machine examined by trained professionals at a technical service location. To prevent the spread of fire, open flames should be kept away from the machine. Do not plug in the machine in moist rooms. Never touch the power plug, power connection or the telephone socket with wet hands. Do not allow liquids to enter into the machine.

Disconnect the machine from the power socket if liquids or foreign objects have entered the machine and have your machine examined by trained professionals at a technical service location. Do not allow children to handle the machine without supervision. The packing materials should be kept out of the hands of children. Caution, metallic objects may be retained if placed near or on the handset receiver. Repairs Should disruptions occur, follow the instructions on the display and on the error report.

Do not make any repairs to the machine yourself. Improper maintenance can result in injuries or damage to the machine. Only have your device repaired by an authorised service centre. Do not remove the type plate from your machine; this would void the warranty. 6 Table of Contents Dear Customer,

.....

.....

.....

.....

.....

.....

.....

. 2 About this User Manual

.....

.....

.....

.....

..... 2 7 Appendix

.....

.....

.....

.....

.....

.. 16 Technical Data ...

.....

.....

.....

.....

.....

.....

... Guarantee ..

.....

.....

.....

.....

.....

.....

.....

.....

.. Declaration of Conformity (DoC) ...

.....

.....

.... Customer Information .

.....

.....

.....
.....
.....
..... 16 17 18 20 Installation Guide .

.....
.....
.....
.....
.....
..... 3 Package Contents

.....
.....
.....
.....
..... Inserting Paper ..

.....
.....
.....
.....
.....
.....
..... Connecting the Handset

.....
.....
.....
.....
.....
.....
..... Connecting the Telephone Cable

.....
.....
.....
.....
.....
.....
..... Connecting the Power Cable

.....
.....
.....
.....
.....
.....
..... 3 3 3 3 3 Overview ...

.....
.....
.....
.....
.....
.....
..... 4 Overview of the menu functions

.....
.....
.....
.....
.....
.....
..... 4 Machine Overview ..

.....
.....
.....

. 4 Panel

.....
.....
.....

.....
.....
.....
.....

.... 5 General Safety Information.

.....
.....

... 6 1 Telephone functions

.....
.....

..... 8 Making Telephone Calls on the Machine .

.....
.....

.. Inserting a Dialling Pause ...

.....

.....
.....
.....

..... Telephone Book of the Machine .

.....
.....
.....
.....

. Speed dialling

.....
.....
.....

.....
.....
.....
.....

. Calling Line Identification (CLIP)

.....
.....
.....

Switching caller line identification on and off

.. Sending fax ...

.....
.....

.....
.....
.....
.....

.....
.....

. Manually Sending a Fax

.....

.....

.....

.....

.....

. Fax Reception

.....

.....

.....

.....

.....

.....

.....

. Receiving faxes manually

.....

.....

.....

.....

.... 8 8 8 8 8 8 9 9 9 9 2 Fax .

.....

.....

.....

.....

.....

.....

..... 9 3 Copier .

.....

.....

.....

.....

.....

.....

..... 10 Inserting the document

.....

.....

.....

.....

.....

10 Creating a Copy

.....

.....

.....

.....

.....

.....

.....

.... 10 4 Settings

.....

.....

.....

.....

.....

.... 11 Selecting the Language .

.....

.....
.....
.....
.....

... *Entering Your Number*

.....
.....

.. *Entering Your Name* ...

.....

.....tification (CLIP) CLIP Definition The number of an incoming call appears on the display. For this function to work, the caller line identification (CLIP Caller Line Identification Presentation) must be activated for your telephone connection. Enquire with your telephone company. Caller identification may be associated with a fee.

Editing an Entry 1 Press MENU, 12 and o/OK. 2 Using [select OLD and confirm with o/OK. 3 Use the keypad to enter the initial alphabets of the entry, which you would like to edit. 8 Switching caller line identification on and off 1 Press MENU, 226 and o/OK. 2 Use [to select whether you would like to turn the function on or off.

3 Confirm using o/OK. 2 Fax Loading Documents Do not insert any documents into the machine that

.. are wet, have been edited with correction fluid, are soiled or have a coated surface. ... are written on with a soft pencil, with paint, chalk or charcoal. ...

originate from newspapers or magazines (printing ink). ... are held together with office or notebook staples or with tape or glue. ... are pasted with note papers. .

.. are creased, crumpled or torn. 12 A5/A4 documents Manual dialling: Dial the desired telephone number with the number pad. Telephone book: 1 Press ma 2 Enter the the initial alphabets using the numeric keypad.

3 Confirm using o/OK. 4 Select an entry using [. 5 Confirm using o/OK. Speed dialling: Press the desired speed dial button (oe). Redialling: Press REDIAL. Telephone book PSE Redialling PSE Use documents with sizes A5 or A4 with 60 to 100 g/m2 weight. You can insert up to 12 documents at a time. Sending more pages manually Manually Sending a Fax 1 Insert the document. 2 Press β. 3 Enter the desired telephone number with the number pad or select a saved entry. 4 Press o. You can insert several pages without using the automatic paper feeder. When INSERT DOCUMENT! appears on the display, the next document must be inserted within four seconds. Press j to eject the documents. Sending fax 1 Insert the documents face down into the document feeder.

The top most document will be fed in first. Fax Reception Received faxes are printed out immediately. Receiving faxes manually Selecting reception mode PSE

2 Shift the document guide inward, until it rests against the edge of the document. 3 Set the desired resolution using FINE f. STANDARD Standard (for documents without special features) FINE Fine (for finely printed texts and/or drawings) PHOTO for photos 4 Dial the desired number. There are several ways to do this: 5 Press o. If the subscriber is busy, the device dials the number again after some time. Press j, in order to cancel the transmission process.

After the transmission, the machine prints out a transmission report depending on the settings. 1 Using MODE, select the reception mode.

TEL MODE Manual fax reception. @@@@FAX MODE After two rings the fax switch switches on. Faxes are received automatically. If it is a voice call, the device goes back to the starting mode. @@If it is a voice call, the device continues to ring (also see Chapter Setting the fax switch Page 12).

9 3 Copier Inserting the document 1 Insert the documents face down into the document feeder. The top most document will be fed in first. 2 Shift the document guide inward, until it rests against the edge of the document. 3 Set the desired resolution using FINE f. STANDARD Standard (for documents without special features) FINE Fine (for finely printed texts and/or drawings) PHOTO for photos 4 Press o.

Creating a Copy Press o/COPY briefly. The copy is created. 10 4 Settings Cursor left, STOP and output mode Setting automatic redial If the called subscriber is busy, the number is automatically redialled after an adjustable time (factory setting 44 seconds). 1 Press MENU. 2 Press REDIAL several times until ENTRY: appears on the display. 3 Press 7793. 4 Press 4. 5 Confirm 4 EXTENDED OPT. using o/OK. 6 .

SELECT SVC: appears on the display.



[You're reading an excerpt. Click here to read official SAGEM](http://yourpdfguides.com/dref/3872280)

[PHILIPS HFC 242 user guide](http://yourpdfguides.com/dref/3872280)

<http://yourpdfguides.com/dref/3872280>

7 Press 05. 8 Confirm using o/OK. 9 Using the numeric keypad enter the desired time after which to redial (60 means 120 seconds and 99 means 198 seconds). 10 Confirm using o/OK. Use < to delete individual characters. Press j to return to the previous menu level. Press j several times to return to the starting mode. Selecting the Language 1 Press MENU, 227 and o/OK. 2 Use [to select the desired display language.

3 Confirm with o/OK. Entering Your Number Entering number PSE 1 Press MENU, 13 and o/OK. 2 Enter your number. 3 Confirm using o/OK. Entering Your Name Entering names without special characters using 0 1 Press MENU, 14 and o/OK.

2 Enter your name. @@3 Confirm using o/OK. @@This may take some time, especially for overseas connections. @@@@2 Select the desired speed using [. @@Enter the year (four characters). Confirm using o/OK. Enter the month (two characters). Confirm using o/OK. Enter the day (two characters). Confirm using o/OK. Enter the time, e.g. 1400 for 2 pm. @@2 Select the desired speed using [. @@1 Press MENU, 222 and o/OK.

2 Using [select the volume, or switch the ring tone off. @@1 Press MENU, 335 and o/OK. 2 Use [to select the desired dialling process. @@1 Press MENU, 22 and o/OK. @@@@OFF Printing of the transmission report is switched off. @@If a transmission error occurs, an error report is printed. You can switch the printing of the transmission report off. 1 Press MENU, 334 and o/OK. @@@@OFF Printing of the reception report is switched off. @@@@Faxes are received automatically.

1 Using MODE, select the reception mode. TEL MODE Manual fax reception. @@@@FAX MODE After two rings the fax switch switches on. Faxes are received automatically. If it is a voice call, the device goes back to the starting mode. @@@@1 Press MENU, 44. 2 Confirm 41 CALL LOG LIST using o/OK. The fax journal is printed. Changing the number of rings For the reception mode AUTO MODE you can set how many times the device should ring before the fax switch switches on. 1 Press MENU, 223 and o/OK.

2 Select the desired number of rings using [. 3 Confirm using o/OK. Printing the speed dial list 1 Press MENU, 442. 2 Confirm 42 ONETOUCH LIST using o/OK. The speed dial list is printed. Printing the telephone book 1 Press MENU, 443. 2 Confirm 43 ALPHA LIST using o/OK. The telephone book is printed. Printing lists Printing lists automatically You can switch the automatic printing of the dialled number list (CALL LOG LIST) and the caller list (CALLER ID LIST) on or off. If the function is switched on, the lists are printed after 20 calls.

1 Press MENU, 224 and o/OK. 2 Using [select CALL LOG LIST or CALLER ID LIST. 3 Confirm using o/OK. 4 Using [select whether the list should be automatically printed or not. 5 Confirm using o/OK. Printing the settings 1 Press MENU, 444. 2 Confirm 44 OPTION LIST using o/OK. The device prints a list of all settings. Printing the caller list (CLIP list) The caller list contains the last 20 calls received. CLIP-list only when CLIP is available The caller list can be printed, only if CLIP is available for your connection.

1 Press MENU, 445. 2 Confirm 45 CID LIST using o/OK. The caller list (CLIP list) is printed. Printing transmission report Printing a Transmission Report After every transmission, the machine prints out a transmission report. If a transmission error occurs, an error report is printed out. You can switch off printing of the transmission report. 1 Press MENU, 333 and o/OK. 2 Using [select: ON Transmission report is printed after each transmis12 5 Telephone Lines and Additional Devices Configuring Telephone Lines and Services DSL Connection In the event that you use a DSL modem: Connect the machine after the modem. For additional information, please consult the operating manual of your DSL system. Changing code Easylink Code only when necessary Change the code only if it is absolutely necessary.

1 2 3 4 5 Press MENU, 225 and o/OK. Using [select ON. Confirm using o/OK. Using [select the new code for starting fax reception. Confirm using o/OK. You can switch this function off, if you select OFF in step 2. ISDN Connection Details for ISDN connections can be found in the instructions provided with the terminal adapter or the dial-up router. Voice Mailbox You cannot simultaneously use the answering machine facility of your telephone service provider (= voice-mail box) and receive faxes on your devices. Get the mail-box function for your telephone connection deactivated or set the number of rings for the fax switch to lower than 5 on your device (also see Chapter Setting the Fax Switch, Page 12). When the fax switch accepts the call, the mail-box of the service provider does not step in.

Enquire with your telephone company. Connecting Additional Devices Additional Devices You can operate additional devices on a telephone line, such as cordless telephones, answering machines, modems or charge counters. Connection to the Telephone Line Order of Connections In order for the fax switch to function, the machine must be first in the series if multiple devices are connected to the same telephone socket. Follow the correct order. Multiple Telephone Sockets If you have multiple telephone sockets for the same telephone line, the machine must be connected to the first telephone socket. Using additional telephones (Easylink) Easylink With the Easylink function, you can control your machine with additional telephones. To use this function, additional telephones must be set to tone dialling (DTMF tones); see here the user manual of your additional telephone. Starting Fax Reception If you pick up at an additional device and hear that you are receiving a fax (whistling tone or silence), you can start the fax reception by pressing *#0 on the additional telephone or pressing o on the device. 13 6 Service Fixing a paper jam 1 Open the paper tray and remove the jammed paper. 3 Bring the two white side supports of the roller in vertical position, and remove the roller.

4 Clean the surface of the scanner and the roller with a soft, lint-free cloth. Cleaning of the thermal print head We recommend the cleaning of the thermal print head every six months, so that the printing quality is maintained. 1 Open the cover for the paper tray. 2 Clean the surface of the thermal print head and the roller with a soft, lint-free cloth. 3 Close the paper tray.

2 Insert the paper roller back again. Power Cycling If a problem occurs that cannot be corrected with the instructions in this user manual (see also the help below), follow the steps given here. 1 Pull out the power plug. 2 Wait at least ten seconds, then plug the power plug back into the socket. 3 If the error occurs again, please contact our technical customer service or your retailer.

Follow the instructions on the display and on the error report. Fixing a document jam 1 Should CHECK DOCUMENT!! appear on the display, open the paper tray as well as the panel. 2 Remove the jammed document.



[You're reading an excerpt. Click here to read official SAGEM PHILIPS HFC 242 user guide](http://yourpdfguides.com/dref/3872280)
<http://yourpdfguides.com/dref/3872280>

3 Close the panel and the paper tray. Cleaning of the roller and the scanner We recommend the cleaning of the roller and the scanner every six months. 1 Open the paper tray. 2 Open the panel. Problems when faxing or printing Faxes sent are of poor quality. Change the resolution from STANDARD to FINE or PHOTO. Clean the scanner and the document feed slot.

Test the device by making a copy of the document. If the device is in order, the fax machine of the recipient is defective. The device produces black lines when sending or printing. Clean the scanner and the document feed slot. Copy is blank. Printing is interrupted. Documents are not properly fed. Insert the documents face down into the document feeder. Paper or document jam, no paper. Follow the instructions on the display and in the error report.

Clean the scanner and the document feed slot. 14 Problems with the connection The device rings once, remains silent for a short while and This is absolutely normal. The fax switch checks the call afstarts ringing again. ter the first ring. If it is a voice call, the device continues to ring.

No dial tone Check the installation of the device. Connect the telephone cable to the socket marked LINE. Insert the telephone plug into your telephone connection socket. Try to send the fax manually: Press β and dial the number. If the recipient is using an answering machine, wait until you hear a whistling tone.

Press o. It is possible that the recipient's machine is not ready to receive. The call is a fax: Press o on the device In addition, press *#0 on the telephone. Hang up. Fax transmissions are constantly interrupted. You hear a whistling tone or silence in the handset. 15 7 Appendix Technical Data Dimensions (L x H x W)

....

.....

. 360 x 250 x 100 mm Weight

.....

.....

.....

.....

.....

.....

.....

.....

.. 2.5 kg Power supply ..

..... 220 240 V~ / 50 60 Hz / 3,15A Power consumption.

.....

.....

.....

Stand-by mode: < 7 W

.....

.....

.....

.....

.... Transmission: < 27 Watt Recommended Ambient Temperature

.....

.. 5 35 °C Relative humidity 15 85 % (non-condensing) Philips Dimensions Weight Power Supply Power Consumption Ambient Conditions Standards Safety...

.....

.....

.....

.....

.....

.....

.....

.. EN60950-1 Emissions ...

.....

.....

.....

.....

.....

. EN55022 Class B Immunity to electrical noise

.....

.....

..... EN55024 Paper Paper type.

.....
.....
.....
.....

.....
.....
..Thermal paper roll Document Feeder Capacity ...
.....
.....

.....
.....
.....
.....

.....
..12 sheets Width...
.....
.....

.....
.....
.....
.....

.....
..... 148 212 mm Length
.....
.....
.....

.....
.....
.....
.....

.....
..... 100 600 mm Thickness .
.....
.....

.....
.....
.....
.....

.....
.....
0.06 0.15 mm Telephone Type of connection...
.....
.....

.....
.....
.....
.....

.. PSTN · PABX Dialling mode.Tone / pulse dialling (country dependent) Telephone Book

.....
.....
.....
.....

.....
..... 99 entries Speed dialling .
.....
.....

.....
.....
.....
.....

.....
..... 5 keys Calling Line Identification.....
.....

... V.23 or DTMF, both Connection Type Fax Type .

.....

.....

.....

.....

.....

.....

.....

.....

..... Group 3 Compatibility

.....

.....

.....

.....

. ITU-T T.30 Data compression ...

.....

.....

.....

.....

.....

.....MH · MR Modulation

.....

.....

.....

.....

. V.29 · V.27ter · V.21 Transmission speed.....

.....

.....

.....

... 14,400 bps Transmission time ..

.....

.....

.....

.....

.. 25 seconds max Fax in General Scanner Scanning method...

.....

.....

.....

.....

.....

.. CIS Scan width...

.....

.....

.....

.....

.....

.....

..... 212 mm Resolution .

.....

.....

..... STANDARD: 8x7.

7 points/mm

.....

.....

.....

.....

..FINE: 8x15.4 points/mm) Printer Printing method ..

.....

.....

.....

.....

...Thermal printing Gray scale ..

.....

.....

.....

.....

.....

.....

.....

..64 levels Printing paper...

.....

.....

.....

.....

....Thermal paper roll Technical specifications subject to change without notice. 16 Guarantee (UK Terms and Conditions) At the beginning of April 2002, SAGEM SA bought the PHILIPS fax business unit. SAGEM SA is now the European Number 1 in fax and offers a complete range of fax terminals with Internet access and SMS function, multifunctional terminals and servers covering the needs of all its customers--from home-users to multinational organisations. In order to apply the guarantee, you should contact your dealer. Proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do.

If you bought your equipment from SAGEM directly, the following shall apply: A SAGEM undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the Equipment, where those defects are a result of faulty workmanship. During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however first contact the SAGEM After Sales Department, the phone number of which can be found on the delivery slip or in the user manual. Unless the customer has concluded with SAGEM a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer's premises. The following sentence applies to purchases of equipment for the customer's trade, business or profession. Except as otherwise expressly provided in this Document and to the extent permitted by law, SAGEM makes no representations or warranties, express or implied, statutory or otherwise, and to such extent, all terms and conditions implied by law are hereby excluded. This guarantee does not affect the Customer's statutory rights. B Exclusions From Guarantee SAGEM shall have no liability under the guarantee in respect of: · damage, defects breakdown or malfunction due to: - failure to properly follow the installation process and instructions for use; or - an external cause to the equipment (including but not limited to, lightening, fire, shock or water damage of any nature); or - modifications made without the written approval of SAGEM SA; or - a failure or neglect to maintain the equipment or inappropriate maintenance; or - unsuitable operating conditions, particularly of temperature and humidity; or - repair or maintenance of the equipment by persons not authorised by SAGEM; or · wear and tear from normal daily use of the equipment and its accessories · damage due to insufficient or bad packaging of equipment when returned to SAGEM · supply of new versions of software · work on any equipment or software modified or added without the prior written consent of SAGEM · malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment · communication problems related to an unsuitable environment, including: - problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent - transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality) - the local network fault (wiring, servers, workstations) or the failure of the transmission network · the normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out, servicing costs are in any event always borne by the customer. C In the cases set forth in § B as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM. The repair and delivery costs will be invoiced to the customer.



[You're reading an excerpt. Click here to read official SAGEM PHILIPS HFC 242 user guide](http://yourpdfguides.com/dref/3872280)
<http://yourpdfguides.com/dref/3872280>

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK.

If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee. The CE symbol confirms conformity with the EU directives that apply to the device. 17 Declaration of Conformity (DoC) Hereby, Sagem Communication Austria GmbH declares that this HFC 242 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the complete Declaration of Conformity on our website www.sagem.com.

Environment: Respect of environment is a key objective of Sagem. Sagem uses environmentally friendly processes to run its operations and has chosen to integrate strong environmental constraints in the full lifecycle of its products including manufacturing, product use and end of life. Environment Recycling

Packaging: To facilitate packaging recycling, please conform to your local selective recycling rules. Batteries: Old batteries have to be deposited in designated collection areas. WEEE Product: The crossed out dustbin logo on your product signifies it is classified as Electrical and Electronic Equipment covered by special disposal regulations.

To enforce recycling, recovery of The Waste Electrical and Electronic Equipment (WEEE) and to protect the environment and human health, European regulations requires that you selectively collect waste equipment using one of the following options: · Your retailer will take your equipment back if you are buying a replacement product. · Waste equipment can also be deposited in designated collection areas. This user manual was printed on recycled paper bleached without chlorine. This satisfies the highest standards for low environmental impact. The cardboard packaging used and the packaging inserts of paper and cardboard can be disposed of as waste paper. The plastic foil may be submitted for recycling or disposed of with waste not intended for recycling, depending on the requirements in your country. Trademarks: The references mentioned in this manual are trademarks of the respective companies.

@@@Sagem disclaims any and all rights in those marks. The reproduction of certain documents (e.g.

by scanning, printing, copying) is prohibited in many countries. @@In case of doubt, consult your legal advisor. @@Take care to maintain the statutory regulations of your country regarding telecommunications secrecy and data privacy. This product is intended for use on an analogue public telecommunications network (PSTN) and in the country specified on the packaging. Use in other countries can result in faulty functioning. For more information, please contact the technical service centre for your country. Should problems arise during use of your machine, please contact your retailer first.

Neither Sagem nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or failure to strictly comply with Sagem operating and maintenance instructions. Sagem shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original Sagem products or Sagem approved products. Sagem shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Sagem products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Sagem. The information contained herein is designed only for use with this product. Sagem is not responsible, if this information is applied to other devices. This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved. Copyright © 2006 Sagem Communication Austria GmbH 19 Customer Information Hotline Introduction We constantly strive to develop our products according to the highest quality standards and with the greatest possible user-friendliness. In your user manual you will find all the information required to use your machine. If you nevertheless require assistance in addition to the user manual, our call centre is available. Our employees are trained experts who would be happy to answer your questions.

We can assist your more quickly if you do not call us from the machine, rather an external telephone. Keep a printout of the settings as well as the serial number of the machine handy. The serial number can be found on the type plate. United Kingdom Call-Center Philips United Kingdom Telephone: 08 71 - 075 07 11 (0,15 €/minute) Fax: 08 70 - 124 02 02 Use only PHILIPS accessories. The warranty does not cover damages to the machine resulting from the use of other consumable materials. In United Kingdom, you can order PHILIPS accessories by telephone via our toll-free telephone number. Direct-Sales Philips Allgemein Direct-Sales Philips GB · INT Direct-Sales Philips/Sagem United Kingdom United Kingdom Telephone: 08 00 - 358 08 07 E-mail: dti.faxinfo@sagem.com Internet: www.sagem.com.

com We hope that you will enjoy using your new product! SAGEM COMMUNICATION (SAFRAN Group) Broadband Business Group Printing Terminals Headquarters : Le Ponant de Paris 27, rue Leblanc · 75015 Paris · FRANCE Tél. : +33 1 58 11 77 00 · Fax : +33 1 58 11 77 50 · www.sagem.com Limited company · Capital 300.272.000 Euros · 480 108 158 RCS PARIS Sagem is a registered brand of SAFRAN Group HFC 242 GB · INT 252145648-C .



[You're reading an excerpt. Click here to read official SAGEM](http://yourpdfguides.com/dref/3872280)

[PHILIPS HFC 242 user guide](http://yourpdfguides.com/dref/3872280)

<http://yourpdfguides.com/dref/3872280>