



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM PHILIPS MAGIC 3-2 COLOR DECT. You'll find the answers to all your questions on the SAGEM PHILIPS MAGIC 3-2 COLOR DECT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SAGEM PHILIPS MAGIC 3-2 COLOR DECT**  
**User guide SAGEM PHILIPS MAGIC 3-2 COLOR DECT**  
**Operating instructions SAGEM PHILIPS MAGIC 3-2 COLOR DECT**  
**Instructions for use SAGEM PHILIPS MAGIC 3-2 COLOR DECT**  
**Instruction manual SAGEM PHILIPS MAGIC 3-2 COLOR DECT**

**magic3<sup>-2</sup>**  
COLOUR DECT SMS

**Easy Install**  
User Manual



**PHILIPS**



[You're reading an excerpt. Click here to read official SAGEM PHILIPS MAGIC 3-2 COLOR DECT user guide](http://yourpdfguides.com/dref/3872266)  
<http://yourpdfguides.com/dref/3872266>

### Manual abstract:

For Great Britain For all other countries Cordless telephone 1 Insert the three batteries as indicated in the battery compartment. Place the cover on the battery compartment, and slide it upward until it snaps into place. 2 Easy Install 2 Place the cordless handset on the rest provided. Before first use, the batteries must be charged for at least 12 hours. 3 Close the paper feed flap. Power supply v Never put the cordless telephone without batteries on the rest! Loading paper 1 Insert the paper tray in the slots provided behind the paper feed mechanism. Starting up To finish the installation process you have to go through some main settings (e.g. adaption of your fax to the telephone line). Using EASY INSTALL your fax machine will be configured according to your local conditions.

1 Press HELP/w for at least two seconds. Your fax machine will print one page. Follow the instructions on it. 2 Your fax machine will then guide you on the display through the first settings, such as your telephone number and your name. 3 After that it will prompt you to enter the current time and date.

Use the dial pad to enter the correct time (e.g. 09 15 for 9:15). 4 Enter the day, month and year (e. g.

15 05 05 for May 15, 2005). 5 Press OK. 2 Pull the paper feed flap fully forward until it stops. Insert several sheets of A4 paper (80 g/m<sup>2</sup>) up to the endstop in the paper feed mechanism (max. 50 sheets). 3 Easy Install Ink film Your fax machine is supplied complete with a free ink film for a few trial pages. A new Plug'n'Print card has to be inserted with each new ink film (only the first free ink film will work without a Plug'n'Print card). 1 Open the fax machine by lifting the operating panel in the middle until it clicks in place. 5 Close the machine by swinging the operation panel forward, until it snaps in. Additional devices 2 Lay the large roll in the grooves in the rear ink film compartment.

You can connect additional devices (telephones, cordless telephones, answering device, PC modem) to your telephone line (see user manual, chapter Installation / Additional devices). SMS W (for device with SMS functionality) 3 Now take the small roll and lay it in the front ink film compartment. Make sure that the blue toothed wheel is on the right and the pin on the left is inserted in the depressions. Reading SMS messages When you receive an SMS message you will hear a beep. The message will be stored and automatically printed out. Sending SMS messages 1 Press the SMS key, then u to select SEND SMS and OK. 2 The display shows TEXT. Enter your text message (maximum of 160 characters) and press OK. 4 Break out the new Plug'n'Print card and insert it in the slot to the left of the ink film compartments. 3 Enter the recipient's number.

Confirm with OK and press the SMS key. Your SMS message will be sent. 4 Easy Install Answering machine b Your answering machine is factory-programmed with a recorded outgoing message. Activate or deactivate your answering machine with b ON/OFF. If you have activated the answering machine, you will see the symbol b on the display and a symbol in the display of the cordless telephone.

Listening to messages 1 If PLAY flashes, messages have been recorded for you. 2 Press PLAY to listen to the first message After listening to your messages PLAY will stay on until all messages have been erased. Deleting messages 1 Press C after having listened to all messages. 2 If you actually want to delete all messages, press C again. Sending faxes 1 Insert your documents (max.

10 sheets) loosely with the printed side to the front into the document feed slot. 2 Dial the number you require. 3 Press START. Transmission now begins. Copy 1 Insert your documents (max. 10 sheets) loosely with the printed side to the front into the document feed slot (see above). 2 Briefly press COPY. The copying process starts immediately. 5 User Manual Description of the machine 1 Power supply cable with power plug 2 Paper feed flap 3 Document guide 4 Paper tray 5 Cordless telephone 6 Document feeder 7 Operation panel 8 Printer roller 9 Scanner lid 10 Holder for Plug'n'Print card 11 Front ink film compartment 12 Rear ink film compartment Display symbols \* f / F indicates whether you are sending or copying with a higher picture quality or with grey tones. If neither of the two symbols is visible, the standard resolution is selected.

h appears when faxes are stored in memory. áéíó indicates ink film consumption. I appears when you receive another call whilst using the device or you receive a call in your absence (not available in all countries). W appears only if there are new SMS messages in the memory (for device with SMS functionality). b shows that the built-in answering machine is switched on. \$ indicates silent mode selected. Faxes as well as phone calls are received completely silent. S/M/U three symbols on the display indicate the current operating mode. \* two lines for device with SMS functionality 6 User Manual Key assignment on the fax machine bON/OFF to activate / deactivate the answering machine REC press briefly: to record an internal memo; press and hold (two seconds): to record a new outgoing message PLAY to play back messages. The key flashes when new messages and memos have been recorded. After playback the key stays lit until messages have been deleted HELP/w press twice briefly: to print operating instructions for the most important functions (with references to additional help pages); press and hold (for two seconds): to start the automatic installation of your fax machine / printout of Easy Install u to select options / to adjust the volume / to move the cursor on the display MENU/OK to call up functions / to confirm entries U to select different operation modes. Press briefly: choose between S and M; press and hold (two seconds): operating mode U on/off v if the red lamp flashes, please read the message on the display a press briefly: to call up a name entry; press and hold (two seconds): to store a telephone number { press twice briefly: to forward a call from the fax machine to all cordless telephones; press once briefly and digit a key: to forward a call from the fax machine to a particular cordless telephone for device with SMS-functionality W flashes if there are new SMS messages in the memory. For reading, printing and sending SMS messages PP press briefly: to repeat the last five numbers you have dialled; press and hold (two seconds): to browse the list of callers R press briefly: for special functions, e. g. for the use with a private branch exchange and for using various functions provided by your service provider (call waiting, toggling calls, etc. ); press and hold (two seconds): to insert a dialling pause between two figures z for dialling without lifting the handset / for hands-free operation COPY press briefly: copy a document; press and hold (two seconds): multiple copies START press briefly: to start the fax transmission; press and hold (two seconds): polling FINE f / PHOTO F to select a higher resolution when copying or sending (for text and graphics--f, for photographs--F) STOP to stop procedures / to eject documents C delete while in edit mode / press briefly: move back one menu level; hold pressed (two seconds): leave menu 7 User Manual Key assignment on the cordless telephone Colour display Battery charge indicator Number with which the cordless telephone is registered with the base station N1 Speaker Display background, can be selected from various colour themes 01/07 TAM 20:00 Mute Programmed functions for the buttons -R and ô Navigation buttons / Navigate within the menu / select options C Cancel / delete / return to previous menu level OK Confirm a selection / call up a submenu / display the number of the cordless telephone and the registered base station.



[You're reading an excerpt. Click here to read official SAGEM PHILIPS MAGIC 3-2 COLOR DECT user guide](http://yourpdfguides.com/dref/3872266)  
<http://yourpdfguides.com/dref/3872266>

Function buttons ·R Programmable button, the selected function appears on the display / switch between two calls / change settings ô Programmable button, the selected function appears on the display / load options / confirm options W Access SMS functions ) End call / switch off cordless telephone (hold pressed for at least two seconds) (/L Place call / accept call / hands-free / redial (press for at least two seconds) / switch on cordless telephone (press for at least two seconds) m Access telephone book functions Brief press of the button: Telephone book of the fax machine Long press of the button: Telephone book of the cordless telephone Number and letter keypad \* Switch the keypad lock on/off (press for at least two seconds) Microphone 8 User Manual Menu functions on the cordless telephone Your cordless telephone is equipped with the following menu functions. You can access these functions with the / buttons and confirm with OK. Use the C button to clear the input or exit the menu. If no button is pressed for some time, the cordless telephone returns to its base state.

PHONEBOOK: Management of the telephone book SMS: Sending, reading, managing SMS messages CALLS: Call log of the incoming calls, outgoing calls, events. ACCESSORIES: You can use the cordless telephone as: an alarm (ALARM), timer to inform you when a specific amount of time has passed (Timer), to remind you of birthdays (BIRTHDAY) or for monitoring a room in combination with another cordless telephone (ROOM MONITOR.). PERSONALIS.: This menu allows you to configure the cordless telephone according to your personal needs. This includes: Ring tone, background, menu colour (AMBIANCE). SECURITY: Keypad lock, emergency call SETTINGS: Programming of the two programmable buttons ·R, ô below the display, automatic accepting / ending of a call, individual language setting. ADVANCED SET./ SET HANDSET: Configure special settings for the cordless telephone, such as: registration with the fax machine, de-registration from the fax machine, setting the preferred fax machine (base station) ANS.MACH: Activate/deactivate answering machine, play/delete saved messages 9 User Manual Contents Packaging .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....2 Telephone connection .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

..2 Cordless telephone .....

.....  
.....  
.....  
.....  
.....

....2 Loading paper .

.....  
.....  
.....  
.....  
.....  
.....  
.....

*...3 Power supply .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*....3 Starting up .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*...3 Ink film ..*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*..4 Additional devices ...*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*4 SMS W\* .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
...4 Answering machine b .....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....5 Sending faxes ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

...5 Copy ..

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.5 Description of the machine .....

.....  
.....  
.....  
.....

.....  
.....  
.....

6 Key assignment on the fax machine .....

.....  
.....  
.....  
.....

.....7 Key assignment on the cordless telephone ...

.....  
.....  
.....

.....

...8 Transmission speed .

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....29 Size compression .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....29 Fax journal .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..29 Polled reception.....

.....  
.....  
.....

.....20 Ringer volume .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

...20 Cordless telephone .....

.....  
.....  
.....  
.....

.... 38 Registering and de-registering the cordless telephone with the fax machine .....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

*.38 Placing calls .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...39 Redialling .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*...39 Call log ..*

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*39 Call functions .....*

.....

.....  
.....  
.....

.....  
.....  
.....

*....39 Forwarding .....*

.....  
.....





.....  
.....  
.....  
.....

.....40 Telephone book ...

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

..41 SMS\* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..42 Additional functions of the cordless telephone .....

.....  
.....  
.....

.44 Search function .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....45 Switching on and off ...

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

45 Changing batteries .....

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*23 Telephone book a on the fax machine .....*

.....  
.....

.....  
*...23 Group ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*...24 Hands-free operation z ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
*....25 Caller line identification .*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.25 Easylink .....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

...25 Hints and Tips ..

.....  
.....  
.....  
.....  
.....  
.....

... 46 Delivery service .....

.....  
.....  
.....  
.....  
.....  
.....

....46 Paper jam .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

....46 Document jam .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.46 Service code.....

.....  
.....  
.....  
.....  
.....  
.....

...47 Care .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....47 Troubleshooting .....

.....  
.....  
.....

.....  
.....  
.....

.....48 Fax & Copy.....

.....  
.....

.....  
.....  
.....

..... 27 Feeding documents in .....

.....  
.....

.....  
.....  
.....

.....27 Sending faxes ...

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....27 Fax reception .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
..27 Broadcast .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
..28 Image quality ...

.....  
.....  
.....  
.....

.....  
.....  
.....

.....28 Contrast ....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

...28 Transmission and error reports .....

.....  
.....

.....  
.....

.....28 Appendix ....

.....  
.....  
.....

.....  
.....

.... 50 Functions .....

.....  
.....

.....

.....

.....

.....

*...50 Technical data .*

.....

.....

.....

.....

*.....51 Warranty ...*

.....

.....

.....

.....

.....

*...52 Environment .....*

.....

.....

.....

.....

*...53 Index .....*

.....

.....

.....

.....

.....

.....

*fax machine must stand securely on a smooth, flat, horizontal surface (no soft surface such as carpets etc.). Any fall can cause severe damage to the fax machine and/ or injury to people, especially small children. Because the document exit is at the front of the machine, this area should be kept unobstructed.*

*Disconnect the fax machine from the mains and telephone line before cleaning the surface of the machine. Never use liquid or gaseous cleaning agents (sprays, scouring agents, polishes etc.). Do not allow any liquid to enter the fax machine, otherwise there is a risk of electric shock or other injury to people and severe damage to the fax machine. If any liquid does enter the fax machine, immediately remove the power plug and have the fax machine professionally inspected. If the display breaks, a mildly corrosive liquid may leak out. Avoid contact with skin and eyes. In case of any damage caused to the housing of your fax machine in particular to power cables please remove the mains plug and call your service repair centre. The housing of your fax machine may only be opened by authorised service personnel. Your fax machine has been tested in conformity with standards EN 60950 and IEC 60950 respectively, and may only be operated with telephone systems and power equipment which meet these standards.*

*Avoid exposure to direct sunlight (the cartridge is heatsensitive) and close proximity to heaters, radios and TV sets, air conditioning vents, dust, water and chemicals is not advised. Make sure that air circulates freely around the fax machine. Do not operate the fax machine in closed boxes, cupboards, cabinets etc. Never cover the fax machine (tablecloths, paper, folders etc.).*

*Do not place the fax machine on beds, tablecloths, cushions, sofas, carpets or other soft underlays due to the danger of overheating and subsequent fire. Never connect the telephone in damp rooms unless the wall sockets are specially designed for humid conditions. Never touch the power plug, connection to the mains or telephone socket with wet hands. Never touch uninsulated telephone or power cables with damaged insulation, unless the telephone cable is disconnected from the telephone line and/or the power cable is disconnected from the power line. Place the fax machine on a flat surface and ensure a minimum clearance of 10 cm between the fax machine and other machines and objects.*

*If you want to use another cordless phone, ensure that the fax machine and the base station of the other cordless phone are at least 15 cm apart otherwise you may get acoustic interference in your handset. Ensure safe cable laying (danger of stumbling, damage to the cable or the fax machine). Never expose your fax machine to rain or any other form of moisture, in order to prevent the risk of electric shock or fire. In a thunderstorm, disconnect the fax machine from both the mains and the telephone line. If you are unable to disconnect the fax machine, do not use it and do not telephone due to the danger of lightning strike and/or damage to the device. Neither telephone nor fax will operate during power failure. Your fax machine was built for exclusive use in the country of purchase. It complies with the local network specifications.*



**[You're reading an excerpt. Click here to read official SAGEM PHILIPS MAGIC 3-2 COLOR DECT user guide](http://yourpdfguides.com/dref/3872266)**  
**<http://yourpdfguides.com/dref/3872266>**



*For safety reasons, the cordless handset should never be placed on the cradles without its rechargeable batteries or battery cover. Explanation of the safety instructions on the cordless handset: v General warning ! Do not touch contacts ? Further information in the operating instructions 11 User Manual Installation Connection Telephone socket Connect the telephone cable to the fax machine by inserting it in the socket identified with LINE.*

*Next connect the telephone plug to the line socket on the wall. In the UK Putting the cordless telephone into operation 1 Insert the three batteries as indicated in the battery compartment. v Never use typical batteries. Never place the cordless telephone in the charging station without batteries. The manufacturer accepts no liability in the event this instruction is not heeded. For all other countries 2 Place the cover on the battery compartment, and slide it upward until it snaps into place. 3 Place the cordless telephone on the cradle provided on your fax machine with the buttons facing up (see image). The charge symbol on the display of the cordless telephone indicates the charging state. Power supply 12 User Manual v Charge the cordless telephone for at least 12 hours before its first use. The batteries will heat up slightly during the charging; this is not dangerous and does not represent a malfunction.*

*The cordless telephone is normally configured for your fax machine at the factory. If your cordless telephone is not registered with the multifunction machine, please perform the registration function on the cordless telephone and the fax machine (see section Cordless telephone / Registering and de-registering the cordless telephone with the fax machine). Charge state of the batteries The charge state of the batteries is shown on the display of the cordless telephone. If this is too low, the display lighting is switched off to save power. The volume of the hands-free function is also reduced.*

*Place the cordless telephone in the charging station on the fax machine. From time to time, discharge the batteries until your cordless telephone switches off. Then place the cordless telephone in the cradle provided on your fax machine with the buttons facing up (see image) and charge the batteries completely. This will help extend the service life of the batteries. v For use with PHILIPS ink films only! Removing the ink film 1 Lift the rear ink film roll holding both sides with your index fingers upwards, in order to remove it out of its seat and place it next to the front ink film roll.*

*1 Before loading a new ink film you must remove the paper from the paper feed mechanism! If necessary, also remove the cordless telephone. To insert the ink film follow the instructions on your ink film packaging! 2 Open the fax machine by lifting the operating panel in the middle until it clicks in place. Ink film You cannot receive or copy documents unless an ink film is loaded in the fax machine. The machine is therefore supplied complete with a free ink film for a few trial pages. The symbols áéíó indicate how much ink film has already been used. The consumption and print setting are stored on the supplied Plug'n'Print card. A new Plug'n'Print card therefore must be inserted with each new ink film. The settings were made at the factory for the initial free ink film. Therefore only this ink film will work without a Plug'n'Print card. If the Plug'n'Print card is missing or if it is not replaced the message CHANGE CARD appears on the display.*

*If the message INKFILM LOW appears on the display, there is not much ink film remaining. However, you can still print out a few more pages. If the ink film is finished or if there is no ink film in the fax machine, the red display lamp flashes, and the following message appears: REFILL INKFILM. 2 Remove both ink film rolls. They cannot be reused. 3 Remove the old Plug'n'Print card from the slot to the left of the ink film compartment (only the initial free ink film does not have a Plug'n'Print card). 13 User Manual Loading the ink film 1 Carefully remove the rubber rings from the new ink film. Take care not to damage the ink film. 6 Close the machine by swinging the operation panel forward, until it snaps in. 2 Lay the large roll in the grooves provided in the rear ink film compartment.*

*The blue toothed wheel must be on the right-hand side. Loading paper Before you can copy documents, paper must be loaded in your fax machine. Please use only the following paper format: standard A4 210 × 297 mm. The fax machine works with normal paper used for writing and copying and has been optimised for smooth 80 g/m<sup>2</sup> paper. The smoother the paper surface the better the print quality.*

*1 Insert the paper tray in the slots provided behind the paper feed mechanism. 3 Now take the small roll and lay it in the front ink film compartment. Make sure that the blue toothed wheel is on the right and the pin on the left is inserted in the depressions. 4 Turn small roll forward to tension the ink film. Make sure that the ink film is not creased.*

*2 To prevent several sheets being drawn into the machine at once, first fan out the paper to separate the sheets and then straighten the stack on a flat surface before inserting it into the paper feed. 5 Break out the new Plug'n'Print card and insert it in the slot to the left of the ink film compartments. 14 User Manual 3 Pull the paper feed flap fully forward until it stops. Insert several sheets of A4 paper (80 g/m<sup>2</sup>) up to the endstop in the paper feed mechanism (max. 50 sheets). Additional devices You can operate other equipment on a single telephone line in addition to your fax machine, and cordless handset, such as other telephones, cordless phones, answering machines, charge counters and modems. If you operate another SMS-compatible cordless phone on the same line there is no guarantee that a particular SMS will be received on your fax machine or on the other cordless handset. However, you can only receive SMS messages on one device at any one time. Try to disable SMS reception on the additional cordless phone. If you cannot do this, disable SMS reception on the fax machine (see SMS / Disable SMS reception).*

*If you intend using special auxiliary devices with your fax machine, please contact your dealer. If you wish to receive faxes via modem, you must set your fax machine to MANUAL RECEPTION. Same socket In the UK You can connect additional devices to the same telephone socket. Make sure the fax machine is the first device connected to the line. 4 Close the paper feed flap. Never load paper while the fax machine is printing! Removing paper To remove the paper, open the paper feed flap and carefully pull out the paper. Close the flap again. In the event of a paper jam see Hints and Tips / Paper jam. 15 User Manual For all other countries You can connect additional devices to the same telephone socket by using the socket labeled EXT on your machine.*



**[You're reading an excerpt. Click here to read official SAGEM PHILIPS MAGIC 3-2 COLOR DECT user guide](http://yourpdfguides.com/dref/3872266)**  
<http://yourpdfguides.com/dref/3872266>

For all other countries v Connecting additional devices to the same socket ensures you the optimal functioning of your fax switch (e. g. call transfer). Your fax machine can control the additional devices. Separate sockets You can connect additional devices to separate sockets on the same line even if they are in different rooms. In the UK v If you connect additional devices to separate sockets (e. g. in separate rooms) your fax switch cannot control them (which means that your machine behaves like any ordinary machine). For this reason e. g. call transfer is not possible.

Therefore we recommend you to connect your additional devices to the same socket. Easy Install Easy Install ensures that your fax machine will set itself up perfectly according to your own personal circumstances. 1 Press HELP/w for at least two seconds. Your fax machine will print one page. Pull out the page firmly and follow the instructions. 2 Your fax machine will then guide you on the machines display through the first settings such as your fax number and your name. 3 Afterwards you need to enter the current time and date. Use the dial pad to enter the correct time and date. Confirm with OK. 16 User Manual ISDN connection Your fax machine is not an ISDN fax (group 4), but an analogue fax machine (group 3).

Therefore it cannot be used directly on an ISDN connection. You will need an (analogue) adapter or an ISDN connection for analogue devices. For further information please refer to your ISDN instructions. If problems occur with fax reception over the ISDN line, please note that many ISDN systems must be specially configured for this (refer to the operating manual of your ISDN system). For device with SMS function: Analog terminals must be SMS-compatible.

In case your PABX requires R to obtain an outside line but it is still not possible to get through to the line, your system may not meet the most recent regulations. Therefore some technical settings have to be changed on your fax machine. Please refer to your Fax Call Centre (you will find the telephone number on the back cover). Private branch exchange Private branch exchange systems are very common in large companies. ISDN connections are private branch exchanges and are used very often in private households.

To get a connection from a private branch exchange to the public network you have to dial a key to obtain the outside line. 1 Select function 15 on your fax machine by pressing MENU and then entering the digits 15. Press OK. 2 You can switch on the PABX operation using u. PABX: YES PABX: NO 3 Then press OK.

4 Now enter the key that has to be pressed to obtain an outside line. This outside line access code must be obtained from the manufacturer. This is either 0 or R (in some systems also described as FLASH) or a number key. 5 Press OK. 6 Use u to select CHECK: YES and press OK.

Your machine will then check that the outside line can be obtained. If the check is successful, the following message appears briefly: check OK. If the check is successful, the following message appears briefly: check NOT OK. You will be asked to repeat the entry. Change the outside line access code. If you have entered the correct code but the display continues to read check NOT OK then delete the code by pressing C. 17 User Manual Basic settings If you want to keep a note of the factory settings on your machine for later, we recommend printing out a function list before you change any of the settings: Press MENU. three times. If you press a wrong key by mistake, press the STOP key as often as necessary to return to the original position. If you have entered a wrong digit or character, you can correct it with u and C.

If you want to delete your individual settings, you can do so in function 45 Service code (see Hints and Tips / Service code). Your name 1 Select function 14 by pressing MENU, 14 and OK on your fax machine. 2a For device with SMS functionality: Enter your name using the alphabetic keypad. To enter upper case letters, press + and the desired key at the same time. The available special characters (see below) are printed above and to the right of the keypad buttons and can be entered by pressing the CTRL button simultaneously with the corresponding letter button (for example, press the CTRL button and E at the same time to enter ). Press ½ to enter a space. If you have entered a wrong letter or number press C to delete the character. Press OK. Help function Press HELP/w twice. You will receive a printout explaining how to use the most important functions.

It also specifies how to obtain further HELP pages concerning other features of your fax machine. Time and date 1 Select function 12 by pressing MENU, 12 and OK on your fax machine. 2 Enter the correct time using the number keys (e. g. 09 15 for 9:15 a.

m.). Your fax machine will now ask you for the correct date (e. g. 15 05 05 for May 15th, 2005).

3 Press OK. Your number 1 Select function 13 by pressing MENU, 13 and OK on your fax machine. 2 Enter your telephone or fax number. (e. g. #44>6151... for +44 6151..

. use # or \* to enter the "+", that is often used in international fax numbers in front of the country code, and > to enter a space. You can enter a maximum of 20 characters). 3 Press OK. 18 User Manual 2b For device without SMS function: You can also enter letters using the number keys (a maximum of 32 characters). Press a number key as often as necessary to enter the desired letter, e. g. for C press 2 three times. After pressing > the cursor moves one place to the right. The following letters and special characters are available: key 0 1 2 3 4 5 6 7 8 9 character space .

- 0 + ? / : \* % ! ( ) [ ] , . 1 ABC 2 abc Ä Å Æ Ç ä å æ ç DEF 3 def GHI 4 ghi JKL 5 jkl MNO 6 mno Ñ Ö ñ ö PQRS 7 p q r s TUV 8 t u v Ü ü WXYZ 9 w x y z Display language for the fax machine 1 Select function 11 by pressing MENU, 11 and OK on your fax machine. 2 Select the desired language with u. 3 Press OK. The cordless telephone automatically takes over the setting you have configured on the fax machine. for the cordless telephone Upon the initial installation of the fax machine or use of function 11, the display language of the cordless telephone is taken from the fax machine.

This function only allows you to change the display language of the cordless telephone. 1 On the cordless telephone, use / and OK to select SETTINGS / LANGUAGE. and confirm with OK. 2 Press -R (Edit) and use / to select the desired language. 3 Confirm with OK.

If you change the language on the fax machine (function 11), the language on the cordless telephone will also be changed. 3 Press OK. "Your name" and "your telephone number" are transmitted at the top of each page together with the date, time and page number, if you store this data with function 13 and 14. Correction Pressing C briefly will return you to the previous menu level; holding C pressed (two seconds) will leave the menu.



**You're reading an excerpt. Click here to read official SAGEM  
PHILIPS MAGIC 3-2 COLOR DECT user guide**  
<http://yourpdfguides.com/dref/3872266>

If you have entered a wrong letter or number in function 13 or 14 you can correct the mistake during the entering as well as later. If you want to make your corrections later you have to select the functions for entering numbers or names once again. If you want to correct anything at a later stage you need to call up the function again on your fax machine to enter the number or name. Use *u* to select the character you want to change. Press *C* to delete the character. A long press on *C* (two seconds) will delete the whole line.

Press *OK*. Ring tone type for the fax machine You can choose from ten different types of tones. 1 Select function 35 by pressing *MENU*, 35 and *OK* on the fax machine. 2 Select the desired ring tone with 0 to 9. 3 Press *OK*. 19 User Manual Distinctive ringing 1 Select function 36 by pressing *MENU*, 36 and *OK* on your fax machine. 2 Use *</>* to select the category that you would like to assign a specific ring tone. 3 You can select from the following categories FAMILY FRIENDS SERVICE WORK 4 Confirm with *OK*. 5 Use the number buttons from 0 to 9 to select the desired ring type. 6 Confirm with *OK*.

Ringer volume for the fax machine You can adjust the volume of the ring tone if the fax machine is in stand-by mode or if it is just ringing. Please note that different volumes can be set for the modes *S* and *M* (see chapter Fax switch). 1 By pressing *u* on your fax machine the display shows the current setting for about three seconds. 2 Change the volume by pressing *u* until the desired volume is achieved. Speaker volume for the fax machine 1 Press *z*.

2 Change the volume by pressing *u* until the desired volume is achieved. 3 Finish your entry by pressing *STOP*. 20 User Manual Fax switch The built-in fax switch enables you to phone and fax from the same telephone connection and use additional devices. The fax switch separates fax and voice messages. For example, it can receive fax messages silently, i.

e. without ringing to avoid causing a disturbance. The operating modes *S* and *M* for day and night operation each allow you to decide on different modes during the day and at night, how often the machine should ring prior to receipt of faxes or before the answering machine is turned on. You may change-over the operating mode between *S* and *M* of your fax machine automatically, using the timer function *U*. Set *SM* mode Display *tAM* rings: fax rings: Ringer vol.: listen in: Possible settings 0, 1, 2, 3, 4, 5, 6, 7, 5/2 0, 1, 2, 3, 4, 5, manual reception low, med, high on, off 1 Select function 31 (day) by pressing *MENU*, 31 and *OK* on your fax machine. 2 Select number of rings with *u* before your answering device will be activated. *TAM RINGS*: 5/2 3 Confirm with *OK*. 4 Enter the number of rings after which the fax machine goes on-line and separates faxes from telephone calls. If the call is a fax call the fax machine switches to reception.

Telephone calls will continue to ring. *FAX RINGS*: 5 5 Confirm with *OK*. 6 Using *u*, determine the ringer volume when receiving a call. Confirm with *OK*. *RINGER VOL.:* HIGH 7 Select with *u* if the caller should be heard while listen in: on, off leaving a message. 8 Confirm with *OK*. 9 To activate mode *M* select *MENU* 32 (Night) *OK* and repeat steps 2 to 8. Timer *U* The built-in timer *U* distinguishes between day *S* and night *M*. With the default values the fax machine will ring during the day when it receives fax calls and telephone calls.

At night (10:00 p. m. to 6:00 a. m.), faxes will be received without ringing and telephone calls will be announced with a quieter ring.

If the *U* symbol is displayed the timer is activated. To switch the timer on or off hold down the *U* button for two seconds. You can change the times when the fax machine should switch between day *S* and night *M*: 1 Select function 33 by pressing *MENU*, 33 and *OK* on your fax machine. 2 Enter the time at which you want your fax machine to switch automatically to *S* (e. g.

08 00 for 8:00 a. m.) and confirm with *OK*. 3 Enter the time at which you want your fax machine to switch automatically to *M* (e. g. 23 30 for 11:30 p. m.) and confirm with *OK*. 21 User Manual Special settings Silent fax reception To receive faxes without any ring signals, set the amount of ring signals in *FAX RINGS* to 0. Completely silent operation \$ If, for example, you do not wish to be disturbed by calls or faxes arriving at night, you may set the number of ringing signals (tam rings and fax rings) to 0.

Faxes are then received silently and calls are immediately answered by the answering machine, provided you have switched the answering machine on.

Manual fax reception If you select *MANUAL RECEPTION* faxes will not be automatically received by your fax machine unless you activate fax reception yourself. Lift the handset and press *START*. This may be sensible for example, if you wish to receive your faxes by modem at your computer. Economy operating mode If you select option 5/2 at *TAM RINGS* your answering machine will answer the call after two ringing signals instead of after five, when you receive new messages. Using the remote access function (see page 31) you have the opportunity to check, whether your answering machine holds any messages without incurring telephone cost (if your answering machine turns itself on after only two ringing signals you will know, that new messages have been left). After listening to your new messages your answering machine will, at the next call, switch itself on again after five ringing signals. 22 User Manual Telephone Making a call 1 To place a call, enter the desired telephone number with the number buttons of the cordless telephone, then press the dial button (/L. You can delete an incorrect digit with *C*. During the call, you can increase or decrease the volume with *!*.

You can also select an entry from the telephone book (cordless telephone: long press of button *m* / fax machine: short press of button *m*) or the redial list (hold green button (/L pressed). 2 To accept a call, also press the dial button (/L. 3 To end the call, press *!*). Additional functions of the cordless telephone are described in the section Cordless telephone. You can also dial numbers on the fax machine.

Once you have done this, press the (/L button on your cordless telephone to establish the connection. You can make also telephone calls on the fax machine. To do this, press *z*. Pressing *R* on your fax machine gives you access to many of the new services (call waiting, toggling, etc.) Call list on the fax machine The list shows the last 50 telephone numbers you have dialled.

After 50 entries, the list is automatically printed out. 1 Press *MENU*, 41 and *OK*. 2 Use *</>* to select *CALL HISTORY?* *Y*. 3 You can now select between *PRINT: NOW* and *PRINT: EVERY 50*. The list is printed. Telephone book a on the fax machine The memory in your fax machine can store about 200 names and numbers. The precise number depends on the lengths of the entries. Saving entries For a machine with SMS function 1 Hold a pressed for two seconds. 2 Enter a last name using the keypad.



**You're reading an excerpt. Click here to read official SAGEM  
PHILIPS MAGIC 3-2 COLOR DECT user guide**  
<http://yourpdfguides.com/dref/3872266>

Then press OK.

3 Use the keypad to enter a first name and press OK. 4 For the subsequent entries, you will be asked for the numbers: HOME, WORK, CELL, FAX, EMAIL. 5 Enter the desired entry and confirm all your inputs with OK. You can also skip over entries with OK. 6 You can assign this entry to a category: DEFAULT, FAMILY, FRIENDS, SERVICE, WORK. 7 Confirm with OK. You can now assign a specific ring type to this category: 1 Select function 36 by pressing MENU, 36 and OK on your fax machine. 2 Use </> to select the category that you would like to assign a specific ring tone. 3 You can select from the following categories: FAMILY, FRIENDS, SERVICE, WORK. 4 Confirm with OK.

5 Use the number buttons from 0 to 9 to select the desired ring type. 6 Confirm with OK. For a machine without SMS function: Redial PP on the fax machine With PP you can recall the last ten numbers dialled. 1 Press PP. 2 Press u, until the desired number appears on the display. If you want to edit the number press OK and make the desired changes. 3 Press the (/L button on your cordless telephone to establish the connection. With PP, u and C you can delete the numbers you do not need any more from the redial memory. Confirm with OK. 1 Hold a pressed for two seconds.

23 User Manual 2 Enter a name using the keypad. Use > to move the cursor one position to the right. Then press OK. 3 Enter the number you would like to save, then press OK. 4 You can assign this entry to a category: DEFAULT, FAMILY, FRIENDS, SERVICE, WORK. 5 Confirm with OK. You can now assign a specific ring type to this category: 1 Select function 36 by pressing MENU, 36 and OK on your fax machine. 2 Use </> to select the category that you would like to assign a specific ring tone. 3 You can select from the following categories: FAMILY, FRIENDS, SERVICE, WORK. 4 Confirm with OK.

5 Use the number buttons from 0 to 9 to select the desired ring type. 6 Confirm with OK. Using the telephone book (for a machine with SMS function) 1 Press the initial letter of the entry you are looking for (e.g. M). Press the following letters of the name (e.g. I, C, H and MICHAEL appears on the display). 2 Press OK. 3 Press on the cordless telephone (/L or, if you would like to send a fax, press START.

Using the telephone book (for a machine without SMS function) 1 Press a. The first stored name or telephone number appears on the display. Press u until the desired number appears. If you want to edit the number, press OK and make the desired changes. Confirm with OK.

2 Press on the cordless telephone (/L or, if you would like to send a fax, press START. Correcting entries Press a and select the entry you want to correct with u then press a for two seconds. Select a character with u and press C to delete it. Confirm with OK. Deleting entries Press a and select the entry you want to delete with u and press C.

Choose with u whether you really want to delete the entry. Confirm with OK. List of numbers Choose function 44 to print a list of your stored telephone book numbers. Press MENU, 44 and OK. Group You can organise several entries in your telephone book on the fax machine into groups, e. g., to send one fax to several persons. Creating groups 1 Select Function 46 by pressing MENU, 46 and OK on your fax machine. 2 Select a group from 1 to 5 using u and then press OK. 3 Use u to select ADD MEMBER? and confirm with OK.

4 All numbers saved in the telephone book of your fax machine will be displayed. Select the entry you want to save using u and confirm with OK. 5 The saved entry will appear on the screen. Continue as described above until all desired numbers are saved to the group. When finished press STOP. Searching groups 1 To browse all entries in a group, call up function 46 and select the desired group from 1 to 5 using u. Press OK. 2 Select view members? using u and confirm with OK. 3 You can use u to look through all entries. You can exit the group by pressing STOP.

Deleting entries or entire groups 1 Call up function 46 and select the desired group from 1 to 5 using u. Press OK. 2 Using u select delete member? and confirm with OK. 3 Using u select an entry that you want to delete and press C. Select whether or not you actually want to delete the entry or the entire group using u.

Confirm with OK. To quit the function press STOP. 24 User Manual Hands-free operation z You can make a call without using the cordless telephone or let persons in the same room participate in the conversation. To do this, press the button z on the fax machine before dialling or when a call is forwarded from your cordless telephone to the fax machine. The microphone and the loudspeaker on the fax are now activated.

Easylink Using additional telephones Your fax machine is equipped with a cordless telephone. You can also connect further telephones to the same telephone line (see Installation / Additional devices). However, the additional phone must be set to dual-tone multi-frequency method. If your telephone connection requires the pulse dialling method, then you would need to briefly reset your additional device to use it. For more information about this, please see the user manual for your device. There are various codes that allow you to transfer calls or faxes between the cordless handset, fax machine and other phones. They are shown in the table below. To change codes \*5 and \*\* below, call up function 34 on the fax machine. v Only use this function when absolutely necessary! If you need to change the predefined codes, select function 34 on the fax machine by pressing MENU, 34 and OK. Enter two different codes and confirm each code with OK.

Each code should begin with \* or #. Please note that the Easylink codes must be different. Otherwise on the display appears: CODE not OK Caller line identification (not available in all countries) Calling line identification is a service that makes it possible to identify the caller based on the telephone number shown on the display even before the connection is established. If you receive a telephone call during your absence, the symbol I will appear on the display.

The telephone numbers of the last ten received calls are stored. 1 Press PP on your fax machine for two seconds. 2 Using u you can now step through the entries. The new entries are marked with an "\*". 3 To call back the displayed number just press (/L on the cordless telephone. To delete an entry press C. Choose with u and confirm deletion by pressing OK. If you set FAX RINGS with MENU 31 or 32 to 0, then the telephone number cannot be displayed on your external telephones. Activate call waiting If you would like to be informed of new calls during a telephone call (call waiting), press MENU 42 and OK. Use </> to select ACTIV. CW? YES and confirm with OK.

Deactivate call waiting If the call waiting function is activated and you hear disturbing sounds, you can deactivate the call waiting function: Press MENU 42 and OK. Use </> to select ACTIV. CW? NO and confirm with OK. 25 User Manual Incoming call You want to accept a call.



[You're reading an excerpt. Click here to read official SAGEM](#)

[PHILIPS MAGIC 3-2 COLOR DECT user guide](#)

<http://yourpdfguides.com/dref/3872266>

*Cordless handset Fax machine Press (/L both for an Press z.*

*external call and for a call that is forwarded by your fax machine or another cordless telephone. Other telephone Depending on the type of telephone. If you accept a call and hear the recorded announcement on your answering machine you can interrupt it by pressing \*\*. Press \*5 and hang up. You accept a call and it's an incoming fax (you hear a beep or nothing at all). You want to forward a call. Press \*5. Press START. To the fax machine: Press \*0 and ). To an additional cordless telephones that is also registered to the fax machine: To all cordless telNot possible! ephones registered to your fax machine: Press { twice.*

*To a particular cordless telephone that is registered to your fax machine: Press { and the number of the handset you want (e.g. 2). During the call, press ô, (Menu), use / to select CALL TRANSFER and confirm with OK. Use / to select the number of the desired cordless telephone (for example 2) and con. firm with OK. You can now make an internal call. The external call is put on hold. Press the red disconnect button ) to transfer the call. 26 User Manual Fax & Copy Write clearly and legibly.*

*Only use pens with dark ink (black or dark-blue, not yellow, orange or light green). The following points are the most common causes of errors when sending faxes: v Don't send ... .*

*.. wet pages or pages with corrections made with correction fluid; dirty pages or pages with a glossy or laminated surface ... pages written in faint pencil, crayon, chalk or artist's charcoal ... pages from newspapers (printer's ink) ... stapled pages or pages held together with paperclips. Remove all staples and clips before sending ...*

*creased or torn pages ... pages joined with sticky tape or glue, with adhesive stickers such as "post-it®" notes, or pages which are too thin or too thick Documents smaller than A5 risk getting stuck in the machine. 3 Move the document guide so that it rests on the document. In the event of a document jam see Hints and Tips / Document jam. Sending faxes 1 Dial the number you require on the fax machine. 2 If you want to select a higher resolution, press FINE/PHOTO. 3 Press START. Transmission now begins.*

*In case the connection is not successful your fax machine will redial later. After the transmission, a transmission report with a small copy of the first page is automatically printed out. If you want to interrupt transmission, press STOP. Feeding documents in 1 To avoid more than one page being fed at the same time, first fan out the stack and then straighten it on a smooth surface. Fax reception If you do not change the fax switch settings, faxes will be received automatically.*

*If you accept a call on the cordless telephone and hear that it is an incoming fax, press \*5 and OK (see Telephone / Easylink). When you answer a call on the fax machine by pressing z and realise that it is a fax (you hear a beep or no sound), press START to receive the fax. On an additional phone When you answer using an additional phone and it turns out to be a fax, you can start the fax reception by pressing \*5 and then hang up. The fax machine will receive the fax. 2 Insert your documents (max.*

*10 sheets) loosely with the printed side to the front into the document feed slot. 27 User Manual Fax reception without paper If there is no more paper in the feeder or if the ink film is empty, an incoming fax will be stored in memory (storage capacity approx. 50 pages of the Slerexe letter). If there are documents in memory the h symbol will appear on the display. When paper and/or an ink film is inserted the fax machine will automatically print out all the stored documents. When a fax message is completely printed out, it will be deleted from the memory. If the printing process was interrupted, all fax messages that have not been completely printed out will remain stored. If the memory is full, further pages can not be stored. The red indicator lamp v will flash and the display will show MEMORY FULL. If the fax can't be sent to one of the recipients, the fax machine will continue with the list and retry sending the fax again.*

*After the transmission, a transmission report with a small copy of the first page is automatically printed out. Image quality If you want to improve the image quality you can choose between the options FINE f (for small print or fine drawings) and PHOTO F (for photographs and pictures). Press FINE/PHOTO as often as needed until the pointer for the desired resolution lights up. After transmitting or, if there is no document in the feed slot, after 40 seconds the fax machine will automatically return to standard resolution. Document transmission takes longer in FINE mode and longer still in PHOTO mode. Broadcast This feature is very useful, and can be used when you want to send the same document to more than one party (Circular send). 1 Insert the document face to the front into the document feed slot. If you want to select a higher resolution, press FINE/PHOTO. 2 Select MENU, 25. Press OK.*

*The inserted document will be stored into the memory. 3 You now have the following options to enter numbers into the receiver list: Either enter the numbers using the number keypad or select a number/group from the telephone book by pressing a and u. 4 When you have entered the desired numbers, press OK.*

*The numbers are then entered in the receiver list. Repeat the procedure until you have entered data for max.*

*25 recipients. 5 To send the document press START. The document will be sent successively to every party entered. Broadcasting to a group Along with function 25 (see chapter Telephone / Group) you can also use Function 46 to send faxes to a group. However, the receiver list in Function 46 can no longer be changed! 1 Hold the document with the print side face up and insert it into the document feeder (max.*

*10 pages). 2 Press MENU, 46, OK on your fax machine and select the desired group from 1 to 5 using u. Press OK. 3 Use u to select SEND FAX? and press START. The document will be sent to all persons in the group. Contrast With function 47 you can adjust the contrast quality (brightness) for documents you want to copy or send as a fax message, e. g. dark photos or forms with coloured background. 1 Press MENU, 47 and OK on your fax machine. 2 With u you can choose between three different options: CONTRAST: LOW CONTRAST: medium CONTRAST: HIGH 3 Confirm your choice with OK.*

*Transmission and error reports Your fax machine can print a transmission report every time you have sent a document. This contains a small copy of the first page. This way you are given confirmation that your document has been received. If an error occurs during transmission you will be informed on the error report. The printing of a transmission report can be switched on and off while the error report is always printed. 1 Press MENU, 28 and OK on your fax machine. 2 Select with u and confirm with OK. 28 User Manual Transmission speed Your fax machine automatically adjusts its transmission speed to the quality of the telephone line.*



[You're reading an excerpt. Click here to read official SAGEM PHILIPS MAGIC 3-2 COLOR DECT user guide](http://yourpdfguides.com/dref/3872266)  
<http://yourpdfguides.com/dref/3872266>

*Epecially in case of overseas transmissions this process can take more time. If the poor line quality is already known it is useful to set the machine at a slower speed from the very beginning.*

*This will save time and charges the automatic adjustment would require. 1 Press MENU, 21 and OK on your fax machine. 2 Select a lower speed with u. 3 Confirm with OK. Polling send You can allow a document to be polled from your fax machine.*

*1 Insert the document in the document feed slot. Polling with code If your correspondent has entered a code to protect the document to be retrieved please follow this procedure: 1 Press MENU, 22 and OK on your fax machine. 2 Enter the code and confirm with OK. 3 Enter the telephone number and press START. In case it does not work try to poll manually: Lift the handset or press z, dial the required number and then press START.*

*Size compression To make sure that received faxes that are slightly longer than A4 size are printed on one page, these pages are slightly reduced vertically. If you do not wish to use this facility, you can switch off reduction using function 29: 1 Press MENU, 29 and OK on your fax machine. 2 Select with u and confirm with OK. Fax journal The fax journal is a list of the last ten received and transmitted faxes. 1 Press MENU, 27 and OK on your fax machine. 2 Select with u if, and when the fax journal will be printed out (immediately or after ten transmissions). 3 Confirm your choice with OK. 2 If you wish to protect the document from unauthorised access, enter a code with function 23. Press MENU, 23 and OK on your fax machine. Enter a code (maximum of 20 characters) and press OK to confirm.*

*The document can now be polled by a person in possession of this code. You can still make telephone calls while this function is activated. 3 The operation is interrupted as soon as you remove the document. Polling codes work in accordance with the ITU international standard. However, there are manufacturers who use other processes and whose machines are therefore not compatible. If you want to send faxes to fax databases or if you want to poll from these, some databases have a subaddress which you can add to the telephone number. This will save you money in telephone charges. First enter the telephone number of the database and then press R. Then enter the required sub-address. If you are not sure whether your fax polling service supports sub-addresses, please contact your polling service operator.*

*Polled reception By means of this function documents which have been prepared for collection from another fax machine can be retrieved. Quick polling 1 Dial the desired number with the handset replaced. 2 Press and hold START. 3 In case you want to enter a sub address or a code as well (see Polling with code) enter the telephone number first and close with R. Attach desired sub address or code, press and hold START (e.*

*g. 12345 R 17 R code or 12345 RR code). 29 User Manual Send later If you wish to make use of cheaper telephone rates, or if your fax correspondent is only available at particular times, you can program automatic transmission of a fax at a later time (within 24 hours). 1 Press MENU, 24 and OK on your fax machine. Enter the time when you wish the document to be sent.*

*2 Press OK and insert the document. 2 Select the desired resolution with FINE/PHOTO. a To make only one copy of the original, briefly press COPY. The copying process starts immediately. b In order to make more than one copy press COPY (for at least two seconds): The display will show the actual number of copies. If you want to change this figure, enter the desired number with the number keys (max. 15). Press COPY. @@@@4 The fax machine is now ready to send the inserted document. You can still make telephone calls while this function is activated.*

*5 If you remove the inserted document the stand-by mode is cancelled. 4 Select the desired option with u and confirm with OK. @@Automatic sorting is therefore not an option! To interrupt the copying process press STOP. @@@@Resolution f is set by default. In addition, you can also select resolution F (see Image quality). 1 Place your documents face to the front in the document feeder. @@@@Make sure that this feature is activated on your line. @@@@The message will be stored and automatically printed out. You can disable automatic printout (see Disable SMS printing). @@@1 Press W on the fax machine.*

*2 Press u to select READ SMS. 3 Press OK. 4 The number, date and time of the last message will be displayed. Unread messages are marked with an asterisk. Press u to select the SMS you want and press OK.*

*5 The SMS message will be displayed. Use u to move within the message. @@@@Press COPY and OK to print the message. 6 Select STOP to return to the list of received SMS messages. @@@@1 Press MENU, 64 and OK on your fax machine.*

*2 The current provider will be displayed. Use u to select either SMS CENTER 1 or 2. 3 Confirm with OK. 4 Enter the NO. for transm. Confirm with OK. 5 Enter the NO. for receipt. Press OK twice. The NO.*

*for transm. and the NO. for receipt. are needed in order to use SMS services. In some countries these numbers may be identical. @@@2 Press u to select SEND SMS. 3 Press OK. 4 The display shows TEXT:. @@@@Press PP until the message you want appears. v Press the HELP/w button to check how many characters you can still enter.*

*5 Press COPY to print the message and OK. 6 Enter the recipient's number. Confirm with OK. You can use the phone book a or the redial function PP to enter the number. 7 You can enter up to five recipients.*

*When you have entered each telephone number press OK. Finally, press W. 8 Your SMS message will be sent. Use u to move within the message or the number. If you hold down u the cursor will move to the start or end of the message or number.*

*To delete the character press C. To delete all the text hold down C (two seconds). You can also send SMS messages by pressing MENU, 61 and OK on your fax machine. Printing SMS messages 1 Press W on the fax machine.. 2 Press u to select PRINT SMS. 3 Press OK. 4 Use u to select which SMS messages you want to print: PRINT: ALL PRINT: inbox PRINT: NEW 5 Press OK. The messages will be printed out. You can also print SMS messages by pressing MENU, 63 and OK on your fax machine.*

*Deleting SMS messages To free up the memory so it can receive new messages you should delete any messages you have already read. 1 Press W on the fax machine. 2 Press u to select READ SMS. 3 Press OK. 4 The stored messages will be displayed. Use u to select the SMS message you want to delete. 5 Press C. 6 Use u to select one of the following: DELETE: YES DELETE: NO DELETE: ALL 7 Confirm with OK. v If the SMS memory is full (maximum of 30 messages) no new messages can be received. You should delete SMS messages you have already read.*

*32 User Manual Other SMS functions 1 If you press OK while you are reading an SMS message you can use u to select one of the following options: print SMS back forward sms reply sms delete read next read previous 2 Confirm with OK. print out the SMS message return to the SMS list send the SMS message to someone else answer the SMS message delete the SMS message display the next SMS message display the previous SMS message Disable SMS reception If you operate another SMS-compatible cordless phone on the same line there is no guarantee that a particular SMS will be received on your fax machine or on the other cordless telephone.*

**[You're reading an excerpt. Click here to read official SAGEM PHILIPS MAGIC 3-2 COLOR DECT user guide](#)**



<http://yourpdfguides.com/dref/3872266>

However, you can only receive SMS messages on one device at any one time. Try to disable SMS reception on the additional cordless phone. If you cannot do this, disable SMS reception on the fax machine.

1 Press MENU, 45 and OK on your fax machine. 2 Enter 51205 and press OK. 3 Use u to choose whether to enable or disable SMS reception. SURE: yes SURE: no 4 Press OK to complete your action. You can use the same procedure to enable SMS reception again.

You can still send SMS messages even if SMS reception is disabled. 33 User Manual Answering machine b The recording capacity is 30 minutes. Your answering machine is furnished with an outgoing message at the factory (anonymous outgoing message). If you want to record your own outgoing message, proceed as described under "Recording a message". v In case of a long term power failure recorded messages, etc. will be deleted! Duration of recording 1 Select MENU, 51 and OK. 2 Press u to choose between 30, 60, 120 seconds or the AUTO mode (unlimited recording time). Please note that AUTO mode is not available in all countries. 3 Confirm with OK. Listening to messages 1 If the PLAY button flashes on your fax machine, this means that messages have been recorded for you.

New messages are indicated on your cordless telephone by the b symbol. Press PLAY to listen to the first message. The date and time the message was received and the number of the caller will be displayed. 2 The next message will be replayed if you press PLAY while listening to any message. 3 You can switch between messages by entering the number of the message you want while the messages are being played. For example, enter 1 for the first message. 4 After listening to your messages PLAY will stay on until all messages have been erased. Switching on and off Activate or deactivate your answering machine with ON/OFF. If you have switched on the answering machine you will see the b symbol on the display of your fax machine. Recording a message 1 Press MENU, 56 and OK.

2 REC. OGM. appears on the display. 3 Confirm with OK and begin to speak after the confirmation tone. 4 A black bar indicates you how much memory is available for the outgoing message (max. 20 seconds). 5 Stop recording by pressing REC or STOP. 6 The new answering message is automatically replayed. By pressing u you can change the volume of the message. 7 To hear the message again, press REC for a while (two seconds) and then PLAY.

Play back volume 1 Press u on the fax machine while playing back messages. The current volume setting will be displayed. 2 Press u to obtain the desired volume. Deleting messages Single messages 1 If you want to delete the message which is currently being played, press C on the fax machine. 2 You will be asked on the display if you really want to delete this message. Press C or OK. All messages 1 Press C on the fax machine after having listened to all messages. 2 If you actually want to delete all messages, press C or OK. To interrupt the deleting process press STOP. Anonymous outgoing message You can replace your personal outgoing message with the anonymous message (recorded at the factory).

1 Press MENU, 57 and OK. 2 Use u to select ANONYM. OGM? YES. 3 Confirm with OK. The anonymous outgoing message is now activated. 34 User Manual Forwarding messages Your fax machine can automatically forward all incoming messages to another telephone number. Enter the telephone number to which you wish recorded calls to be forwarded. You can select the number of messages to be forwarded each time. Your fax machine will wait until the selected number of messages has been received and then calls the desired number automatically. A message announcing the call forwarding is transmitted when the connection is made.

Then the party to which the calls are being forwarded needs to enter the access code (see function 52). If you do not enter the right code within 40 seconds or if you enter the wrong code three times, the fax machine will hang up. 1 In case your answering machine is deactivated turn it on with ON/OFF. The symbol b appears on the display of the fax machine. 2 Select MENU, 55 and OK on your fax machine.

3 Choose with u forward call: on and confirm with OK. 4 Enter the telephone number your messages should be forwarded to and press OK. 5 Choose with u the number of messages you want to be forwarded each time. 6 To record a new forwarding message, press OK.\* 7 Press REC.

Wait for the confirmation tone and start speaking. An example of an announcement might be: "Hello, there are messages for Mr. Smith; please enter the access code." A black bar will indicate how much memory is available. 8 Press STOP when you have finished. The forwarding message will be played back. 9 The fax machine is now switched to stand-by mode. \* if a message has already been recorded a Press OK. b Select with u. If you wish to record a new forwarding message, select rec.

message: yes. If you want to use the existing message, select rec. message: nO. Press OK to confirm. c Follow the process described above from step 7.

Recording a conversation You can record a telephone conversation with your fax machine. 1 Press REC during a telephone conversation. 2 To stop recording, press STOP. 3 The recorded conversation can be played back and deleted like any recorded message. You can not record a telephone conversation while hands-free operation is activated.

VIP code Ringing despite answering machine Persons you had given this code, can make the telephone ring after the answering machine has taken the call. This is useful if both ring counts in function 31 and 32 have been set to 0. 1 To enter the code select MENU, 53 and press OK on your fax machine. Enter a four digit code. Confirm with OK.

2 This code must be different to the access code (function 52). Memo External memo You can record a message which the caller can hear without being able to leave a message in return. For this the answering machine must be switched on. 1 Select MENU, 54 and press OK on your fax machine. Choose the external memo mode by pressing u.

Confirm with OK (if you already have recorded a memo you want to use again, just press OK once more). 2 Press REC and wait for the confirmation tone. Start to speak. Press STOP when you are finished. The message will be played back. Internal memo You can record a personal message with this function. Messages can be heard on the fax machine itself or by remote control from a telephone. Briefly press REC twice and wait for the confirmation tone. Record the desired message. A black bar on the display indicates the remaining recording time.

To end recording press STOP. Internal memos can be played back and deleted like any other message. 35 User Manual Remote control on the fax machine You can also control the answering machine functions on your fax from any telephone using tone dialling. Before you can use remote control you have to enter an access code in function 52 (this code will also be used for function 55 Forwarding). Preparing your fax machine for remote access 1 Select MENU, 52 and OK.



[You're reading an excerpt. Click here to read official SAGEM](http://yourpdfguides.com/dref/3872266)

[PHILIPS MAGIC 3-2 COLOR DECT user guide](http://yourpdfguides.com/dref/3872266)

<http://yourpdfguides.com/dref/3872266>