




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM PHOTO EASY 155. You'll find the answers to all your questions on the SAGEM PHOTO EASY 155 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SAGEM PHOTO EASY 155**  
**User guide SAGEM PHOTO EASY 155**  
**Operating instructions SAGEM PHOTO EASY 155**  
**Instructions for use SAGEM PHOTO EASY 155**  
**Instruction manual SAGEM PHOTO EASY 155**

**SAGEM**  
**PHOTO EASY 155**

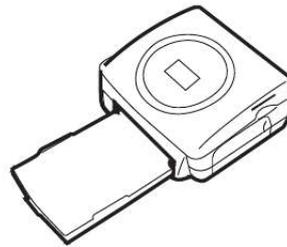

*User guide*  
*Livret d'utilisation*  
*Bedienungsanleitung*  
*Manual del usuario*  
*Manuale dell'utente*  
*Gebruiksaanwijzing*



[You're reading an excerpt. Click here to read official SAGEM PHOTO EASY 155 user guide](http://yourpdfguides.com/dref/2711101)  
<http://yourpdfguides.com/dref/2711101>

### Manual abstract:

With this high quality printer you can get the most out of your digital photos. In a few simple steps you can produce photo prints identical to those from a professional developer, for your personal use or to share with friends and family. The easy-to-follow steps in this user guide will walk you through: Printing photographs transferred from a camera in a GSM mobile phone 4. The CD-ROM included with your kit contains an additional guide with instructions for using the image processing software and printer driver on your PC. Do not install your PHOTO EASY 155 printer in a humid room (bathroom, laundry, kitchen, etc). The printer should be operated within an ambient temperature range of 10 °C to 35 °C. Do not install your printer in a location where there is a noticeable amount of dust floating in the air. Such dust can degrade the print quality of your photos. Only the power supply provided with the printer should be used. Connect this to the mains in accordance with the installation instructions in this user guide and the information on the identification label affixed to the power supply (voltage, current, mains frequency).

@@@This could break the film and cause printer malfunction. @@The CE marking certifies that the product meets the main requirements of the European Parliament and Council directive 1999/5/CE on telecommunications terminal equipment, regarding safety and health of users, and regarding electromagnetic interference. Com category "support", or can be requested at the following address: E - Customer relations department Place the box in front of you, open the packaging and check that you have received the items listed below: 1 2 3 4 5 6 7 8 9 PHOTO EASY 155 printer User manual CD-ROM with its applications Film cartridge \* Photo paper (2 packs of 20 sheets)\* USB cable Paper tray Power supply unit Mains cable Please refer to the safety instructions at the beginning of this user guide before making any connections. Insert one end of the mains lead into the corresponding socket of the power supply. Plug the other end of the power supply mains lead into a wall socket.

Your printer features a SCSI Mass storage master USB connector (A) and a slave USB connector (B). The latter is used for connection with a master terminal (PC, etc. ). Remarque : To obtain the list of devices compatible with this USB port (A), visit the site www. The green light comes on and three lines are displayed on the screen.

When installing your printer near a wall or some other object, keep an open space of at least 4 inches at the back of the printer, to make sure the movement of the sheet of paper being printed is not obstructed. These are specially designed to provide you with optimum print rendering. Wait 10 seconds for the printhead to lift, then: 1. Take the new ribbon out of its packaging and make sure that the film is stretched after removing the card (A). Lift the locking lever and push in the film cartridge until it touches the back of the compartment the locking lever must be locked after insertion. Warning - Never touch the film cartridge with your fingers. Make sure the cartridge is completely inserted into the printer. check that the green locking lever is correctly lowered. Remarque : In the event of any difficulty, check that there are no foreign objects in the film cartridge compartment. These are specially designed to provide you with optimum print rendering.

For this purpose, the printer must read the chip card delivered with each consumable kit after any new kit installation. If this last operation is not carried out, you will not be able to use the printer. Never touch the film cartridge with your fingers. Make sure the cartridge is completely inserted into the printer. check that the green locking lever is correctly lowered. In the event of any difficulty, check that there are no foreign objects in the film cartridge compartment. Take the SIM card delivered with the ribbon and the photo paper. insert it in the drive located on the front panel of the printer. The SIM card is identified and read by the printer. Take the new ribbon out of its packaging and make sure that the film is stretched after removing the card (A).

Lift the locking lever and push in the film cartridge until it touches the back of the compartment the locking lever must be locked after insertion. Wait 10 seconds for the printhead to lift, then: 1 - Pull the paper tray out of the printer. 2 - Open a pack of paper with the protection sheet on the top, insert it in the paper tray, making sure the rectangle reserved for postage stamps is on the outside of the tray, that is, towards you. 3 - Remove the protection sheet. 4 - Line up the tray with its compartment and push it in slowly until the locking system clicks.

Warning - handle paper sheets by their pre-cut edges, never allow your fingers to come into contact with the shiny surface before printing. Your SAGEM PHOTO EASY 155 printer is now ready to print your digital photographs. Warning - protect consumable items against prolonged exposure to light, humidity, heat and dust. respect the operation conditions set out (Refer to paragraph Technical data , page -29). Only use SAGEM brand consumable items designed for this printer.

Make sure that a previously printed photograph has not been slipped inadvertently into a packet of blank pages; this could damage the ribbon of your printer. Warning - Make sure that A previously printed photograph has not been slipped inadvertently into a packet of blank pages; this could damage the ribbon of your printer. Your SAGEM PHOTO EASY 155 printer is designed to be used with or without a computer. This chapter describes printer operation without a computer. Refer to the technical data table at the end of thi user manual to check whether your memory card is compatible with the printer. Warning - Small sized images, less than 80,000 pixels, cannot be printed from memory cards (for example: an image size 320 x 240, equivalent to 76,800 pixels, will not be included in the index). On the other hand, these photographs may be printed from a PC or by means of a wireless IR link (or Bluetooth optional equipment). Insert your memory card into the corresponding slot, as shown in the illustrations below. Into the case of a xD card, introduce initially the adapter provided into the left slit then insert the card in the adapter. Warning - The memory cards do not enter fully in the reader slot.

do NOT USE FORCE UNDER ANY CIRCUMSTANCES. If a card does not enter properly, remove it and check that you are introducing it in the correct slot and with the right orientation. Slot compatible with Smart Media (SM), Memory Stick (MS), Standard Digital (SD) Multi Media Card (MMC) formats or XD card with its adapter Warning - Printing of picture by ascending order relatively to the date of the pictures on the memory board will be achieved if parameters "dates and hour" have been set on your camera before the catch of pictures.



[You're reading an excerpt. Click here to read official SAGEM PHOTO EASY 155 user guide](http://yourpdfguides.com/dref/2711101)  
<http://yourpdfguides.com/dref/2711101>

Otherwise pictures will be read and printed in a random order. 1 2 3 4 5 6 7 A B C D E F G H I Add a selection to the shopping trolley I Select the number of copies per photograph (between 1 and 20) Go to the previous photograph number ( , 3, 2, 1) Start printing Go to the next photograph number (1, 2, 3. Your printer is switched on, and you have inserted a memory card, or you have transferred photographs from a GSM mobile phone camera using the IR (infrared) link (or Bluetooth optional equipment). The green light blinks while data are being transferred to the printer. After a few seconds, the number of photographs found on the memory card or in the digital camera, or transferred from the GSM mobile phone camera, is displayed on the screen. the light stops blinking. Your photos are printed in four stages. The printer first prints the three colours: yellow, magenta and cyan in that order, then deposits a protective film on the sheet of paper, and finally ejects the photo. @@@@ put the On/Off switch to " I ". Insert the memory card into the correct printer slot.

@@@@Key until the figure 4 is displayed (that is 4 copies).

@@@@@Idea - The contact plate is a simple way of displaying all the photographs on your memory card; choose those to be printed using the number assigned to each of them @@@@@@This cancels only the most recent selection. @@@@@@Selecting photos and printing them several times on the same paper. printing from a DPOF-standard file. @@@Also, error messages likely to occur (no paper, paper jam, no ink, cover not closed, no cartridge, fatal error). Your SAGEM PHOTO EASY-155 printer does not support the following functions: Image cropping.

After the analysis and recognition phase, the following screen appears This function lets you select the photographs to be printed on your camera, then print them on the SAGEM PHOTO EASY 155 printer from a memory card. Your camera must comply with the DPOF (Digital Print Order Format) standard. Refer to your camera documealled the software, a message will be displayed asking you to restart the PC. After restarting you can connect the printer to the PC. If the installation program does not start automatically, you can start it by double-clicking on the "setup. Refer to this manual for further information. Make sure that both the PC and the printer are switched on. Never apply force when plugging in connectors into the equipment as this could damage both the cable and the connector. Recognition between the two devices is automatic. The consumable items used with the SAGEM PHOTO EASY 155 printer (film cartridge, paper) are SAGEM (PLC) brand products.

Consumables may be purchased in all big stores in the photography or printer sections but also on our internet site [www.sagem.com](http://www.sagem.com) or by using the consumables order form supplied with your printer. Use of any consumable items other than SAGEM (PLC) brand products may result in the loss of the printer's guarantee. Continuous lines across the length of your photographs may be caused by dirt particles stuck to the printhead. You will need a methyated alcohol based cleaning product and some off-the-shelf cotton tips ("Q-tips"). Switch off your printer, disconnect the main cables and wait for five minutes; since the print head operates at a high temperature, there is a risk of burning if you touch it. 2 - Pull out the paper tray. 3 - Turn the printer upside down to remove the lower hatch. 4 - Clean the heating line of the print head carefully using a cotton bud.

5 - Replace the lower hatch, turn the printer right side up, connect the mains cable and switch on the printer. Warning - Never touch the print head with your fingers or any object that might scratch it. Take care that the film is taut before inserting the cartridge into its compartment. Check that the locking lever is pushed down correctly and close the flap. Push the paper tray back into place until the locking system clicks.

Do not use corrosive chemicals, they may damage your printer. Follow this procedure if a sheet becomes stuck in the printer and cannot simply be pulled out: Switch off your printer by pressing " O " on the switch behind the printer and disconnect the mains cable . Replace the lower cover and turn the printer right side up. Warning - Never use objects that could damage the printer (scissors, screwdriver, paper cutter, Remark: The printer is fitted with an automatic time-out to prevent overheating, this can be tripped when performing large print jobs. The printer automatically restarts the current print job as soon as the temperature drops back to normal.

Check that the power supply block is correctly plugged into the mains. â· Check that the power supply connector is correctly plugged into the printer. If a sheet of paper is jammed, carry out the procedure (Refer to paragraph Paper jam, page -25). Are you using sheets that meet the technical specifications (Refer to paragraph Technical data, page -29) Â· Clean the printhead (Refer to paragraph Cleaning the print head, page -24). You must set the date and time on your camera beforehand, and activate them before photographing. No photograph is printed on a sheet The photograph is marked with a continuous line or a lot of spots No PC printing Photo chronology not observed (the printed photo is not the one expected) After any intervention on your printer, do not forget to press the key to restart the current print job. Description No paper Paper jam No film cartridge Action Check that the paper has been correctly inserted in the loading tray. Remove any paper jammed in printer (do not reuse this sheet of paper) Insert a new film cartridge or replace the current one.

Replace the film cartridge with a new one. Memory card Memory card Memory card Memory card If error persists: check the file source, or try with a different source.

The card or file are illegible. Check the card source or try with another source Error during transfer of photographs from GSM mobile phone camera. restart transfer from the GSM phone. Check that both devices are facing each other. Photograph to be transferred too big or insufficient space to store photograph in printer. photograph to be transferred is not in JPEG format. The SIM card has already been used. Not enough space to store photograph File format not supported SIM card no longer valid The selected number of photos is greater than the remaining ribbon capacity to print all photos. Other error number Switch off printer, wait 30 seconds and restart. Storage of photographs transferred from a GSM phone camera Image resolution supported Consumable items SAGEM (PLC) reserves the right to make any changes without prior notice.

Less than 120 seconds per photo (not including data transfer) In order to apply the guarantee, you should contact your dealer. proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do. If you bought your equipment from SAGEM directly, the following shall apply : A SAGEM undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the Equipment, where those defects are a result of faulty workmanship.



[You're reading an excerpt. Click here to read official SAGEM PHOTO EASY 155 user guide](http://yourpdfguides.com/dref/2711101)  
<http://yourpdfguides.com/dref/2711101>

*During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however return the defective equipment at his/her own expense, to the address given by SAGEM After Sales Department, the phone number of which can be found on the delivery slip. @@@@This guarantee does not affect the Customer's statutory rights. @C In the cases set forth in A B) as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM. The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee. A ) Schade, defecten of storingen die het gevolg zijn van : het verzuim het installatieproces correct uit te voeren of de gebruiksinstructie's correct op te volgen, een externe oorzaak ( bliksem, brand, stoot .*

*Livret utilisateur - Document non contractuel User Guide - Data subject to change without notice Bedienungsanleitung - Dokument ohne vertragscharakter Manual del usuario - Documento no contractual Manuale dell'utente - Documento privo di valore contrattuale Gebruiksaanwijzing - Geen contractueel document .*



[You're reading an excerpt. Click here to read official SAGEM PHOTO EASY 155 user guide](http://yourpdfguides.com/dref/2711101)  
<http://yourpdfguides.com/dref/2711101>