



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM SIXTY. You'll find the answers to all your questions on the SAGEM SIXTY in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM SIXTY
User guide SAGEM SIXTY
Operating instructions SAGEM SIXTY
Instructions for use SAGEM SIXTY
Instruction manual SAGEM SIXTY

The image shows the cover of the 'USER GUIDE SIXTY' for the Sagem Sixty phone. The cover features a bright orange corded telephone handset with a digital display and buttons. To the right of the phone are three small icons: 'ECO', '@', and a hand cursor. The background has a decorative pattern of vertical stripes in shades of orange and yellow. At the bottom, the 'SAGEMCOM' logo is displayed in white on a dark background.



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)

<http://yourpdfguides.com/dref/3992466>

Manual abstract:

@@This product follows a strategy of continuous development. @@@@The declaration of compliance may be looked up on the www.sagemcom.com website section «Support», or can be obtained from the following address : Sagemcom Broadband SAS 250, route de l'Empereur - 92848 Rueil-Malmaison Cedex - France Copyright © Sagemcom Broadband SAS All rights reserved Sagemcom is a registered trademark 1 Contents Recommendations and safety instructions

.... 4 Unpacking...

.....

.....

.....

.....

.....

.....

.....

..... 5 Phone description

.....

.....

.....

.....

.....

.....

.....

.....5 Your base.....

.....

.....

.....

.....

.....

.....

.....

.. 5 Your handset...

.....

.....

.....

.....

.....

.....

.... 6 Control panel.

.....

.....

.....

.....

.....

.....

.....

.....

. 7 Using the touch buttons

.....

.....

.....

.....

.....

. 7 Display screen.....

.....

.....
.....

.....
.....
.....

. 8 Phonebook

.....
.....

.....
.....

..... 15 Creating an entry

.....
.....
.....

.....
.....

.... 15 Editing an entry

.....
.....
.....

.....
.....

..... 16 Associating a ring tone with a phonebook entry

..... 16 Other number

.....
.....
.....

.....
.....
.....

..... 16 Deleting an entry .

.....
.....
.....

.....
.....
.....

..... 16 Calling using the phonebook ...

.....
.....
.....

.....
.....

.. 17 Searching for a contact ...

.....

.....
.....
.....
.....

..... 17 Call log

.....
.....
.....

.....
.....
.....
.....

..... 17 Viewing the received and dialled call log ..

.....
.....
.....

17 The events log

.....
.....
.....

.....
.....
.....
.....

.. 18 Viewing the events log.....

.....
.....
.....

.....
.....

.. 18 Activating/deactivating the new event information screen ...

.....
.....
.....
.....
.....

..... 18 Clearing notifications ..

.....
.....
.....

.....
.....
.....

..... 18 Information

.....
.....
.....
.....

.....
.....
.....
.....

... 18 Phone installation

.....
.....
.....

.... 9 Connecting the base .

.....
.....
.....
.....
.....

....9 Setting up the handset .

.....
.....
.....
.....
.....

.....9 Charging batteries

.....
.....
.....
.....
.....

...10 Settings required before use

.....
.....
.....

....10 Navigating in the menu .

.....
.....
.....
.....
.....

...10 Menu structure

.....
.....
.....
.....
.....

11 Browsing through the menus

.....
.....
.....

..... 11 Accessories.....

.....
.....

.....
.....
.....
.....
.....
.....
..... 19 Alarm clock .

.....
.....
.....
.....
.....
.....
.....

..... 19 Activating / deactivating the alarm clock....

.....
.....

.... 19 Changing the alarm clock ring tone

.....
.....

.... 19 Modifying the alarm clock time .

.....
.....

. 19 Timer

.....
.....
.....
.....
.....
.....
.....

..... 19 Activate the timer...

.....
.....
.....

.....
.....
.....
.....

19 Changing the programmed time of the timer

. 20 Displaying or hiding the programmed time of the timer....

.....
.....

.....
.....
.....
.....

..... 20 Changing the timer ring tone

.....
.....
.....

.....
.. 20 Phone use....

.....
.....

.....
.....
.....
.....

..... 12 Handset location ..

.....
.....
.....

.....
.....
.....
.....

.....12 Calling ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..12 Receiving a call

.....
.....
.....
.....

.....
.....

... 12 Making a call ..

.....
.....
.....
.....
.....

.....
.....

... 13 Ending a call..

.....
.....
.....
.....
.....

.....
.....

.... 13 During a call .

.....
.....
.....

.....
.....

.....
.....
.....
.....
13 Call key function.....

.....
.....
.....
.....

.....
.....
14 Secret mode.....

.....
.....
.....
.....

.....
.....
14 Hands-free mode/Speakerphone mode

.....

..... 14 Calling the last number dialled

.....
.....
.....

..... 15 Call time display ..

.....
.....
.....

... 15 2 Ring tones

.....
.....
.....

..... 20 Changing the ring tones .

.....
.....
.....
.....

. 20 Activating or deactivating the beeps

.....

20 Activating/deactivating the silent mode

.....

..... 21 Settings .

.....
.....

.....
.....
.....

..... 21 Modifying the date and time .

.....
.....

.....
.....

.21 Adjusting the contrast

.....
.....
.....

..21 Modifying the language ...

.....
.....

.....
.....
.....

.22 The voicemail number (according to operator)

....22 Defining forbidden prefixes - Call barring .

.....
.....

.....22 Demo

.....
.....

.....
.....
.....

.....
.....

..23 Advanced settings

.....
.....
.....

.....
.....

....23 Base settings .

.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
... 23 Line settings..
.....

.....
.....
.....
.....
.....
.....
.....
.... 24 Modifying the base code .
.....

.....
.....
.....
.....
.....
.....
.....
. 25 Appendix
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
..... 31 Care and Maintenance .
.....

.....
.....
.....
.....
.....
.....
.....
... 31 Problems ..
.....

.....
.....
.....
.....
.....
.....
.....
..... 31 Technical characteristics ..
.....

.....
.....
.....
.....
.....
.....
.....
..... 32 Initial condition .
.....

.....
.....
.....
.....
.....
.....
.....

.....

32 Environment

.....
.....
.....

.....

.....
.....

.. 33 Packaging

.....
.....
.....
.....

.....

.....
.....

.....

. 33 Batteries and rechargeable batteries

.....
.....

..... 33 The product ..

.....
.....
.....
.....

.....

.....
.....

.....

.... 33 Guarantee.....

.....
.....

.....

.....
.....

.....

.....
.....

.....

. 34 Terms and Conditions for United Kingdom & Ireland only

.....
.....

.....

.....
.....

.....

.....
.....

.....

..... 34 Terms and Conditions for other countries ..

.....
.....

..... 36 Answering machine..

.....

.....
.....

.....

.....
.....

.....

..... 26 Enabling / disabling the answering machine .

.....

.....

.....26 Modifying the outgoing message

.....

.....

.....

.....

27 Recording a personal outgoing message

.....

. 27 Deleting your personal outgoing message....

.....

. 27 Listen to a personal message

.....

.....

.....

..... 27 Playing messages

.....

.....

.....

.....

.....

.....

.....

..27 Remote access to answering machine

.....

.....

.....28 Deleting all the old messages ...

.....

.....

.....

.....

.....28 TAM settings

.....

.....

.....

.....

.....

.....

..... 29 Activating and deactivating call screening ..

.....

.....

...29 Modifying the remote access code ..

.....

.....

.....

...29 Number of rings .

.....

.....

.....

.....

.....

.....

.....

....29 Replacing the batteries .

.....

.....

.....

.....

.... 30 Pairing GAP-compatible DECT handsets on the SIXTY base

.....

.....

.....

30 Pairing of SIXTY handsets ON the SIXTY base

.....

.....

.....

.....

.. 30 3 RECOMMENDATIONS AND SAFETY INSTRUCTIONS Do not install your DECT telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.50 metres of a source of water or outside. This device is designed for use in temperatures of between 5 °C and 45 °C. Do not attempt to remove screws or open the appliance. It does not contain any user-replaceable parts. Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this user manual and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 230 volt power supply. Therefore the sockets should be near the device and easily accessible.

This device is designed to be used for connecting to the public telephone network. If problems should arise, contact your nearest specialist dealer. Only use the telephone cable supplied. For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock. To avoid damaging your handset/base, only use certified rechargeable batteries NiMH 1.

2 V 450 mAh, never use non rechargeable batteries. Insert the batteries in the handset/base battery compartment respecting polarity. The used battery must be disposed of in line with the recycling regulations in this user manual. Your DECT telephone has a range of approx. 50 metres indoors and up to 300 metres outdoors.

The range can be affected by the proximity of metal objects, such as a television and electrical devices. Zones without reception may appear owing to elements in the building. This can cause brief interruptions in the conversation, caused by faulty transmission. Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information. In regions greatly affected by electrical storms we recommend that you protect your telephone circuit with a special fixture for excess voltage. Your SIXTY has anti-skid pads that should leave no traces on your furniture and ensure stability. However, given the the wide variety of finishes used by furniture manufacturers, traces may appear on surfaces in contact with the parts of your SIXTY. Sagemcom Broadband SAS decline all responsibility in any such cases of damage. 4 UNPACKING Place the box in front of you, open it and make sure it contains the following items: one base SIXTY, one handset with its batteries, one telephone line cord, one equipped power adapter and the quick start guide.

PHONE DESCRIPTION Your base The SIXTY is the contemporary interpretation by SAGEMCOM of the S63, which accompanied the development of telephone communications in many countries in the 60s and 70s. It nevertheless has the latest technology, such as browser touch buttons, HiFi ringtones, dialling light and sound effects. Indicator light Keyway * Access to voicemail service/ Access to your messages on the answering machine**

Loudspeaker/Pick up Base button / Paging - Short press: find handsets (Paging) - Press and hold : handset registratio * ** Keyway: indicates the position of the handset earpiece Press and hold the key - If the answering machine is turned off: access to voicemail service, - If the answering machine is turned on: access to your messages on the answering machine. 5 Indicator light operation: · Fast flashing: The base is in pairing mode. · Slow flashing: handset on line or new events. Make sure that when the handset is on the charger, the icon is animated. Your handset SIXTY's particularity is that it has a wireless handset.

The single button on the handset allows the user to hang up or answer an incoming call.



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)

<http://yourpdfguides.com/dref/3992466>

It should be noted that the handset is provided with a buzzer that sounds on receiving an incoming call with the handset not on its base. Speaker Handset charging contacts Battery compartment + Hang up/ Pick up Battery cover Microphone The handset batteries are charged when the handset is placed on its base.

When off the base, the handset's battery power provides 120 hours of standby time and 10 hours of talk time. 6 - Control panel Your SIXTY has touch keys for access to configuration and settings functions. This screen tells you about the state (date and time, unread message, etc..).

Using you can create your own telephone directory, display the list of calls etc. To do this, use the touch keys. and you can choose a menu, a With the touch keys sub-menu or a precise setting. The key allows you to enter the sub-menus of the chosen function and select the setting to modify. With the key you can return to the previous function or cancel the current choice.

The keys and are used when you use the answering machine. See the menu structure to familiarise yourself with what your phone can do. 10 10 Menu structure To access one of your phone's menus, use key PHONEBOOK Option CALL VIEW EDIT RING TONE DELETE ADD NUMBER NEW ENTRY INCOMING CALLS OUTGOING CALLS EVENTS ALARM TIMER EXTERNAL CALL BEEPS SILENT MODE SETTINGS DATE/TIME CONTRAST LANGUAGE VOICE BOX No RESTRICTION ADVANCED SET. DEMO ANS.MACH MESSAGES ON/ OFF OUTGOING MESS. SETTINGS Browsing through the menus or . Use the browsing keys or to select the desired menu. Press Valid. To confirm your selection. Select the desired function by pressing the browsing keys or and then press the Valid.

key. - To return to the previous menu, press Return. - To save the settings, press Valid.. Example: To access the menu SETTINGS /DATE/TIME: 1. Use or to access the menu list. 2. Select SETTINGS using or . Press Valid.

3. Select DATE/TIME using or . Press Valid. You are now under the DATE/TIME menu. Menu CALLS ACCESSORIES RING TONE DATE/TIME 11 11 PHONE USE HANDSET LOCATION Lost your handset? Press the button on the back of the base, behind the keypad.

The handset will then ring. Accepting a call in hands-free mode · Press to speak in hands-free mode (without holding the handset). The symbol and the call time counter are displayed on the screen. · To end the call, press again. CALLING Receiving a call · When a call is received, the phone rings.

· The caller's phone number is displayed on the screen if you have subscribed to the "Caller ID" service. The caller's name may also be displayed if it is included in your phone book. Toggle between handset mode and handsfree mode · If you are in handset mode, press and hold the key and then hang up the handset to toggle to hands-free mode. Press the key again to end the call. · If you are in hands-free mode: - If the handset is hung up on the base, lift the phone handset to toggle to handset mode. - If the handset is not hung up on the base, press the dial tone button to toggle to handset mode. · To end the call, hang up the handset on the base or press . Use the and keys to vary the earphone volume or speakerphone volume. The handset earphone volume or speakerphone volume can vary from 1 to 5. Accepting a call in handset mode · Pick up the phone handset.

You do not need to press the handset's button. · Make sure to identify the handset direction by the dot which identifies the earpiece end. The call time counter is displayed on the screen. · To end the call, hang up the handset or press the handset button. · A visual and audible signal confirms that the handset is hung up correctly. · If the handset is not on the base, you have to press the handset button to take the call. 12 12 Making a call The call can be made in two ways: During a call Receiving a second call (according to operator) · During the call, a beep is transmitted to your telephone by your service provider to let you know that you have a second call waiting. · Press ACCEPT to take this new call. · Your other caller is then put on hold and you can talk with your second caller. Making a call in handset mode · Pick up the handset.

· The icon is displayed on the screen. Dial your number on the keypad. The call time counter is displayed on the screen. Making a call in hands-free mode · Press to obtain a dial tone prompt on the screen. Dial your number on the keypad.

The and icons are displayed on the screen. The call time counter is displayed on the screen. You can also dial a number in pre-dialling mode, whether in handset or hands-free mode: dial the number on the keypad and then lift the handset or press . Making a second call · During a call, you can put your contact on hold and call a second one by pressing -R- and dial the number using the keypad. · The second call is then launched, with the first call still on hold. The caller on hold hears a beep emitted by the network. If necessary, you can correct the number entered by pressing BACK. To alternate from one call to the other · To toggle from one call to the other, press Menu then SWITCH. · The call in progress is put on hold, and you can then take the second call. Ending a call When you have finished your call, press the handset on the base. or hang up To end one of the calls and continue the other one · To toggle from one call and take the other, press Menu and then HANGING UP. · The call in progress is definitely terminated, and you can then take the second call. 13 13 To set up a 3 way-call (the two parties and yourself) · During a call, press Menu and then 3-PARTY CONF. · You can then talk to both parties simultaneously, and "3-PARTY CONF" is displayed on the screen. · To end the 3 way-call, hang up the handset.

Hands-free mode/Speakerphone mode If you want to phone in hands-free mode, do not lift the handset, but press the base key; the displayed on your phone's screen. icon is The caller can then be heard through the loudspeaker and you speak into the base microphone. To end the call, press the key again . Call key function This key is a shortcut to your phone's call log. · From the idle screen, press the key - INCOMING CALLS, - OUTGOING CALLS, - EVENTS. · Press keys or : If you want to toggle to speakerphone mode during a call in handset mode, press the key; the displayed on your phone's screen. icon is to select the calls list. · Press Valid. and then select the number using keys or . The caller can then be heard through the base loudspeaker and the handset earphone and you speak into the handset microphone.

In this mode the base microphone is inactive. You can return to hands-free mode by holding down the key and then replacing the handset. To end the call, replace the handset or press the key .



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)

<http://yourpdfguides.com/dref/3992466>

Secret mode During a call, you can switch to mute mode and your phone's microphone will be muted. The person you are on line with can no longer hear you.

To activate secret mode : · During a call, press Menu / SECRET and then Activ.. · The "SECRET MODE" message will appear on the screen. When you call in hand-free/speakerphone mode, you can increase or decrease the or . audio volume from 1 to 5, using To deactivate secret mode : · Press Exit, "SECRET MODE" disappears from the screen.

Your correspondent will be able to hear you again. 14 14 Calling the last number dialled Your SIXTY stores the last 20 dialled numbers: · Go to CALLS / OUTGOING CALLS. · Select the number you want to call. · Go to Option / CALL. The number is automatically dialed in speakerphone mode. PHONEBOOK

You can save up to 150 entries in your phone book, with each entry able to contain a 24-digit number and a name up to 12 letters long. CREATING AN ENTRY To enter a text, repeatedly press the required key to display the desired letter. · Go to PHONEBOOK / New. · Enter the name alphanumeric keys. · Press Valid.

· Enter the contact's telephone number using the alphanumeric keys. · Press Valid.. · Select an icon for this number to specify the type of number. · Press Valid.. The name and number are then stored in your phone book. of your contact using the Call time display Once connected, the call time is displayed on the screen (minutes and seconds). 15 15 EDITING AN ENTRY · Go to the menu PHONEBOOK.

· Press keys change. or to select the contact you want to OTHER NUMBER This function allows you to assign new numbers to the same name. · Go to the menu PHONEBOOK. · Select the entry you want to assign another number to. · Go to Option / ADD NUMBER.

· Enter the phone number on the alphanumeric keys. · Press Valid.. · Select an icon according to the type of number entered. Press Valid.

· Select Option / Edit. Press Valid.. · You enter the name input screen. To correct the name, press Return to delete characters. Enter your changes on the keypad. After making the changes, press Valid.. · You enter the number input screen.

To correct the number, press Return to delete the numbers. Enter your changes on the keypad. After making the changes, press Valid.. · Select an icon for this number. · Press Valid.. DELETING AN ENTRY TONE WITH A · Go to the menu PHONEBOOK. · Press keys delete. or to select the contact you want to ASSOCIATING A RING PHONEBOOK ENTRY You can associate a unique ring tone to each entry and thus create your own call groups As you need the active number presentation service on your handset, contact your operator to find out about the conditions for obtaining the service.

· Go to the menu PHONEBOOK. · Select the entry with which you want to associate a ring tone. · Go to Option / RING TONE. · Select the ring tone of your choice. · Press Valid.

· 16 16 · Select Option / DELETE. · Press Valid.. · A confirmation screen asks you if you wish to delete the entry.

- To delete the entry, press Yes, the contact is deleted from your phone book. - If you do not wish to delete the entry, press No. CALLING USING THE PHONEBOOK · Go to the menu PHONEBOOK. · From the list of names, select the contact you want to call using keys or . · Go to Option / CALL.

@ @ @ @ @ @ · Select the event to be viewed. · Press Valid.. · The screen presents the following information. @ @ @ @ @ @ - VIEW : To view the selected call again.

- STORE NUMBER : To store the name and number in the phonebook. - DELETE : To delete the call currently viewed. - DELETE ALL : To delete all calls. @ @ @ @ @ The default setting is active. · Go to the menu CALLS / EVENTS. @ @ @ @ @ @ · To view the event log, press Valid.. · Choose the event using · Press Valid.. @ @ · Go to the menu CALLS / EVENTS.

· Select DELETE NOTIF. and press Valid. @ @ @ @ @ @ @ @ @ @ @ @ · Press Valid.. OK is displayed on the screen.

@ @ · An information screen shows the alarm clock status. @ @ @ @ @ @ @ @ · Use or Valid.. @ @ · Press Start. If a timer duration is already specified, the timer is directly activated.

If not please follow instructions in the next paragraph. · Select the ring tone of your choice, press Volume. · Select the desired ring tone using or to increase or decrease the volume, press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. 19 19 Changing the programmed time of the timer · Go to ACCESSORIES / TIMER. Press Valid.. · Select SET DURATION in the list.

Press Valid.. · Enter the desired time. · Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. RING TONES CHANGING THE RING TONES This menu enables you to associate a unique ring tone to incoming calls. · Go to RING TONE / EXTERNAL CALL. · Press Valid.

· Select the ring tone of your choice. · Press Volume. · Adjust the ringer volume using or . Displaying or hiding the programmed time of the timer · Go to ACCESSORIES / TIMER.

· Select VIEW in the list. Press Valid.. · If you want to show the timer, press Yes, else press No. · Press Return.

· Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. ACTIVATING OR DEACTIVATING THE BEEPS · Go to RING TONE / BEEPS. · Press Valid.. · To change the beep status, press or The status is changed on the screen. · Changing the timer ring tone · Go to ACCESSORIES / TIMER.

· Select RING TONE in the list of options, press Valid.. · The list of ring tones appears, the handset plays the ring tone. · Select the ring tone. Press Volume. · Press or to increase or decrease the volume. · Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu.

· Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. 20 20 ACTIVATING/DEACTIVATING THE SILENT MODE When in silent mode, the telephone ringer and keypad beeps are inhibited.

· Go to RING TONE / SILENT MODE. · SILENT MODE? is displayed on the screen. · Press Yes to activate the silent mode. · Press No to deactivate the silent mode SETTINGS MODIFYING THE DATE AND TIME · Go to SETTINGS / DATE/TIME. · Enter the date in DD/MM/YY format.

· Press Valid.. · Enter the time in HH/MM format. When you activate the silent mode, your handset is muted for all timer and alarm type functions. · Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. ADJUSTING THE CONTRAST · Go to SETTINGS / CONTRAST.



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)

<http://yourpdfguides.com/dref/3992466>

· A list with five levels of contrast is displayed.

· Select the level you want using the keys The contrast is directly visible on the screen. · When you have obtained a satisfactory level. · Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. or . 21 21 MODIFYING THE LANGUAGE · Go to SETTINGS / LANGUAGE. · An information screen presents the current language used. - To keep the setting, press Valid.
· - To change the setting, press or . · Select the language. - Press Valid..

OK is displayed on the screen. - Press Return to go back to the previous menu. To check your voicemail service, hold down key . The reception indicator on the the top of the key keeps blinking until you consult the received voice message or delete the notification through the Menu: CALLS/ EVENTS / DELETE NOTIF..

The answering machine message language depends on the phone language. DEFINING FORBIDDEN CALL BARRING PREFIXES - THE VOICEMAIL NUMBER OPERATOR (ACCORDING TO You can prohibit the use of certain prefixes on your telephone. When a prefix is forbidden, it becomes impossible to call numbers that begin by this prefix. · Go to SETTINGS / RESTRICTION. · Enter the base code (by default 0000), press Valid.. · Select PREFIX using or , press Valid.. This function allows you to receive calls in your absence on your operator's voicemail service. To indicate that a new message has been received the reception indicator on the the top of the 'I' key is lit and the new event message is displayed on the screen.

To change the voice box number, proceed as follows: · Go to SETTINGS / VOICE BOX No. · The programmed number is displayed on the screen. - The number is correct, press Valid.. - To modify the number, press Edit. · Select a location (dashes), press Valid.. · Enter the prefix using the keypad (for example : 06, 08, etc..).

Press Valid.. OK is displayed on the screen. · Select ACTIVATE using or . · Press Valid.

· OK is displayed on the screen. · Press Return to go back to the previous menu. 22 22 DEMO This menu allows you to see an animation for each of your phone's key and ring tones. · Go to SETTINGS / DEMO.

Press Valid.. · Display of "DEMO Chenillard" with the animation of each key. · Press the key during this animation, "DEMO MELODY" is displayed, and the melody for external calls is initiated. · Press Exit to stop the demonstration. · Go to SETTINGS / ADVANCED SET. / SET BASE / REGISTR. MODE. · Press Valid..

· REGISTR. MODE? is displayed on the screen, press Yes. · Indicator on the the top of the 'I' key starts to flash rapidly. Your base will remain in registration mode for about 1 minute. You can also set the base to pairing mode by holding down your base's key. ADVANCED SETTINGS Base settings Set the base to registration mode Using this function you can add GAP compatible handsets to your base. The handset that you want to pair with your base must itself be in pair mode. Consult the user booklet of your handset to find out what to do. Resetting the base When you reset your base, all the base parameters are reset to their initial values (factory settings). · Go to SETTINGS / ADVANCED SET.

/ SET BASE / RESET BASE. · Press Valid.. · REINIT. BASE? is displayed on the screen.

· Press Yes. You can save up to 5 GAP-compatible handsets on your SIXTY base. · Enter the base code. · Press Valid..

The "RE-INIT. IN PROCESS" and the OK messages are displayed successively. Your base is now reset. 23 23 After telephone reinitialisation, you have to electrically unplug then plug the base in order to finalize the factory reset process. · An information screen presents the list of countries available. - To keep the displayed country, press Valid.. - To change the country, press or . · Press Valid..

· RE-INIT. IN PROCESS, then OK is displayed on the screen. De-registering a handset · Go to SETTINGS / ADVANCED SET. / SET BASE / DELETE HANDSET. · Press Valid.. · Select using the handset you or . Press Valid.. wish to unregister Modifying the dialling mode The type of dialling generally used is voice frequency (Tone).

It is possible that the exchange to which you are connected uses pulse dialling. · Go to SETTINGS / ADVANCED SET. / SET LINE / DIAL. · Press Valid..

· A screen prompts you to confirm the unregistration. Press Yes to unregister the handset. The handset is no longer registered to the base. Line settings Before changing the settings of the telephone line, contact your operator to obtain the parameters for your line. · A screen displays the current status.

- To keep the status, press Valid.. - To modify the status, press or modified on the screen. · The status is · Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. Modifying the country This menu allows you to select the country where you are using the telephone. · Go to SETTINGS / ADVANCED SET.

/ SET LINE : COUNTRY. · Press Valid.. The default dialling mode is tone. 24 24 Modifying the flash duration If you connect your telephone to a private automatic branch exchange or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, 3 way calling. Contact your service provider to obtain the correct flash duration and then modify it by doing the following. · Go to SETTINGS / ADVANCED SET. / SET LINE / FLASHING. · Press Valid..

· An information screen presents the current flash duration. - To keep the duration, press Valid.. - To modify the duration, press or . · Select the new duration. · Press Valid.. OK is displayed on the screen. · Press Return to go back to the previous menu. · Go to SETTINGS / ADVANCED SET.

/ SET LINE / PABX PREFIX. · Press Valid.. · Press or to modify this setting. · Select the desired option: - ACTIVATE / DEACTIVATE : to select a status. - PREFIX : to enter the number giving you access to the outside line. - EDIT LENGTH : to specify the «digits before prefix». · To modify the prefix, select PREFIX press Valid.. · Enter the prefix using the keypad, press Valid.

· OK is displayed on the screen. · To modify the digits before prefix, select EDIT LENGTH, press Valid.. · Enter the digits before prefix using the keypad. · Press Valid.. OK is displayed on the screen. · Now you can activate the automatic PABX prefix functionality, select ACTIVATE and press Yes. · Press Return to go back to the previous menu.

Setting a PABX prefix If a private automatic branch exchange is used, you can programme the external call prefix.



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)

<http://yourpdfguides.com/dref/3992466>

With this function you can set the: - PABX prefix number, - dialled number length at which point the PABX prefix will be automatically inserted (this length is called "digit before prefix"), - prefix status (on or off). Modifying the base code This code secures and limits the use of your telephone. · Go to **SETTINGS CHANGE CODE**. · Press Valid.

· / **ADVANCED SET.** / 25 25 · Enter the old base (default is 0000). · Press Valid..

code using the keypad **ANSWERING MACHINE** Your phone's answering machine provides the following features: · Active answering machine mode with pre-recorded messages, · Call filtering, · Remote querying. · Enter the new base code using the keypad. · Press Valid.. · Confirm by entering the new base code again. · Press Valid.. **OK** is displayed on the screen. · Press Return to go back to the previous menu. **ENABLING / DISABLING THE ANSWERING MACHINE** · Go to **ANS**.

MACH / ON/OFF. · Press Valid.. · A screen displays the current status of the answering machine (On or Off). · To keep the displayed status, press Valid.. · To change the status, press or : · To activate the answering machine, select **ACTIVATE**. · To turn off the answering machine, select **OFF**. Press Valid..

· **OK** is displayed on the screen. · Press Return to go back to the previous menu. If you have not recorded a personal message, the answering machine will automatically use one of the pre-recorded messages in the selected language. **26 26 MODIFYING THE OUTGOING MESSAGE · DELETE ANOUNCE?** is displayed on the screen, press **Yes** to confirm the deletion of your personal outgoing message. · **OGM DELETED** is displayed on the screen.

· Press Return to go back to the previous menu. In order to modify an outgoing message, you must first turn on the answering machine. Recording a personal outgoing message · Go to **ANS. MACH / OUTGOING MESS. / CHANGE**.

· Press Valid.. · **RECORD OGM** is displayed on the screen. · Press **Begin** to start recording your outgoing message. Start talking in the base microphone. · To stop recording press **End**. Your outgoing message is automatically played back. · Press Return to go back to the previous menu or make a new recording. Listen to a personal message If you have not recorded a personal message, you will hear the anonymous, pre-recorded message. · Go to **ANS**.

MACH / OUTGOING MESS. / PLAY. · Press Valid.. · **PLAY OGM** is displayed on the screen and the outgoing message is played back. At the end of the playback you will return to the menu **RECORD OGM**. · Press Return to go back to the previous menu. Deleting your personal outgoing message If you delete your personal outgoing message, the answering machine will automatically use the anonymous message. · Go to **ANS. MACH / OUTGOING MESS.**

/ DELETE. · Press Valid.. **PLAYING MESSAGES** If you have new messages (unread), these messages are read first. Afterwards, the messages that have already been taken are played back in chronological order (from the oldest messages to the most recent messages).

· Go to **ANS. MACH / MESSAGES / PLAY**. · Press Valid.. · The messages are played through the loudspeaker.

27 27 · Depending on your service provider and your subscription, the name and number of your contact will be displayed on the screen (except for a confidential call). · During playback, you can use the touch-sensitive keys to perform the following actions: - * : go back to the beginning of the message. - * twice : return to the previous message. - # : go to the next message. - Pause / **PLAY** (context key playback. - **DELETE** (context key being played.) : pause/resume The remote access code is 0000 by default. However, it can only be used once it is customised, refer to paragraph "Modifying the remote access code", page 29. · A beep will indicate access to the answer machine, Any unread messages will be automatically played back. · At the end of playback, a new beep will sound to let you know that the answer machine is ready.

· You can carry out the following operations : - 0 : delete the message being played. - 1 : go back to the beginning of the message. - 1 (x2): previous message. - 2 : pause / play. - 3 : next message. - 5 : messages read. - 9 : enable/disable the answering machine.) : delete the message : exit playback of messages.

REMOTE ACCESS TO ANSWERING MACHINE Your answering machine can be queried remotely. This feature allows you to read your messages and query your answering from any phone when you are not at home.

To remotely access your answering machine: · Dial your telephone number. · Wait for the answering machine to come on. · When your outgoing message is played, press «#». · Enter your remote access code. **DELETING ALL THE OLD MESSAGES** · Go to **ANS**.

MACH / MESSAGES / DELETE OLD. To delete old messages one by one, refer to the previous paragraph and delete unwanted messages during playback see paragraph "Playing messages", page 27. · Press Valid.. To confirm the deletion of all the old messages, press **Yes**.

· Press Return to go back to the previous menu. **28 28 TAM SETTINGS** This menu allows you to change the advanced settings of your answering machine. You can access the answering machine **SETTINGS** menu from the **ANS. MACH** menu. · **CODE BASE** is displayed, enter your Base code (default setting is 0000). · Press Valid.. · **CODE DISTANCE** is displayed, enter the new remote access code (4 digits mandatory). · Press Valid..

OK is displayed on the screen. **ACTIVATING SCREENING AND DEACTIVATING CALL** · Press Return to go back to the previous menu. The filtering function, when activated, allows you to listen to the message left by the caller as it is being recorded. You can unhook to answer at any time. · Go to **ANS**.

MACH/SETTINGS/CALL SCREENING. · Press Valid.. · A screen indicating the function status appears. - To keep the current status, press Valid.

· - To change the status, press or . · Press Valid.. **NUMBER OF RINGS** This parameter determines the number of times your phone rings before your answering machine is started.

The number of rings is between 3 and 7. · Go to **ANS. MACH / SETTINGS / NO OF RINGS**. · Press Valid..

· The programmed number of rings is displayed on the screen. Press keys or to change this number (from 3 to 7). · Press Valid.. **OK** is displayed on the screen. · Press Return to go back to the previous menu. **MODIFYING THE REMOTE ACCESS CODE** The remote access code enables you to listen to the messages left on your answering machine via another telephone. · Go to **ANS. MACH / SETTINGS / REMOTE CODE**. · Press Valid.

· **29 29 REPLACING THE BATTERIES** · Remove the battery compartment hatch.



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)
<http://yourpdfguides.com/dref/3992466>

· Remove the old batteries, insert the new batteries one by one in compliance with the polarity of the batteries, as indicated in paragraph "Your handset", page 6 · Refit the battery compartment hatch. · Leave your handset on its base in order to fully charge the batteries. Up to five GAP-compatible DECT handsets can be registered on the SIXTY base. PAIRING OF SIXTY HANDSETS ON THE SIXTY BASE Additional GAP-compatible DECT handsets can be registered on the SIXTY base. To register an additional handset on the SIXTY base: · Set your base to pairing mode by holding down the key. The light indicator on the top of the '1' key starts flashing. The base remains in pairing mode for one minute. · Press on the handset registered until the handset is PAIRING GAP-COMPATIBLE DECT HANDSETS ON THE SIXTY BASE Additional GAP-compatible DECT handsets can be registered on the SIXTY base. To register an additional handset on the SIXTY base: · Set your base to pairing mode by holding down the key. The light indicator on the top of the '1' key starts flashing. The base remains in pairing mode for one minute. · Set the additional handset to registration mode. (Refer to the your handset's user manual).

30 30 APPENDIX CARE AND MAINTENANCE Turn off your phone. Use a soft damp cloth to wipe it. Do not use a dry cloth, strong liquid detergents, thinners, alcohol or any other type of solvent to clean your phone. These products may damage your phone. PROBLEMS Refer to the table presented below in case of an operational malfunction: Problems Possible causes Remedies You are having Contrast too low.

Increase the contrast level (refer to paragraph "Adjusting trouble reading or the contrast", page 21). cannot read the display when not in standby mode. No display on the Power connection unplugged. Check the power connection to the phone. base screen. No tone. The phone jack is not Check the phone cable connection (refer to paragraph connected or is incorrectly "Connecting the base", page 9). connected. Make sure you have a dialling tone. The speaker volume is too low.

Increase the speaker volume (refer to paragraph "Receiving a call", page 12). The phone does not The silent mode is turned on. Turn off the silent mode (refer to paragraph "Activating/ ring when a call is deactivating the silent mode", page 21). received. Your party cannot You have turned on the mute Turn off the silent mode (microphone off) in MENU then hear you. mode (microphone off). MUTE. Make sure that the "SILENT MODE" message is not displayed. You obtain a "busy" Incorrect flashing time. Set the flashing time (refer to paragraph "Modifying the dial tone for each flash duration", page 25).

dialled number. Contact your operator to provide you with the right time. 31 TECHNICAL CHARACTERISTICS Standard: Radio frequency band: Number of channels: Duplex mode: Spacing between channels: Bit rate: Modulation: Vocoding: Transmitting power: Charging time: Range up to: DECT, GAP 1.88-1.90 GHz 120 TDMA 1.

728MHz 1152 kbit/s GFSK ADPCM 250 mW Handset Batteries: 10 hours 300 m outside and up to 50 m inside buildings Batteries: Handset operating time: Type Ni-MH, AAA, 2 x 1.2 V 450 mAh Talk time up to 10 hours, standby time up to 120 hours 20 minutes +5°C to +45°C Base (WxHxL) 138 x 190 x 106 mm Handset (WxHxL) 176 x 220 x 63 mm Base 478g Handset including batteries 157g Max answering machine capacity: Ambient temperature: Dimensions: Weight: INITIAL CONDITION Accessories Alarm clock: Timer: Ring Tone Ringer: Keyboard beeps: Silent mode: Settings Date/Time: Contrast: Restriction: Base code: Advanced Settings off off Traditional On Off 01/01/11 // 00:00 Level 2 off 0000 Dial mode: Flashing: PABX prefix: Answering Machine Status: Call screening: Remote access code: Number of rings: Tone 100 ms Off On Off 0000 7 32 ENVIRONMENT Environmental protection and sustainable development is an important priority for SAGEMCOM. SAGEMCOM has a policy of using environmentally- friendly systems and makes environmental protection an essential part of the life-cycle of its products from the manufacturing, to the installation, operation and disposal. PACKAGING The logo (green point) on the packaging means that a fee is paid to an authorised national organisation to improve packaging recycling and the recycling infrastructure.

Follow the local sorting regulations for this type of waste product in order to improve recycling.

BATTERIES AND RECHARGEABLE BATTERIES If your product contains batteries or rechargeable batteries, these must be disposed of at designated collecting centers. THE PRODUCT The crossed out dustbin displayed on the product signifies that it belongs to the electrical and electronic equipment group. The European regulations request you to carry out your own selective recycling collection at: · the sales outlet when you buy a similar new device. · the collection points available in your area (recycling centres, sorting points, etc). This means you participate in the recycling and valorisation of used electric and electronic goods which would otherwise have a negative impact on the environment and health. 33 GUARANTEE TERMS AND CONDITIONS FOR UNITED KINGDOM & IRELAND ONLY In order to apply the guarantee, you should contact the SAGEMCOM Helpdesk or the retailer where you purchased the equipment. Proof of purchase will be required in either case. Please make sure that you use your equipment only for the purpose for which it was designed and under normal usage conditions. SAGEMCOM do not accept any liability for the equipment if used outside the frame of its original designed purpose or any consequence that may arise from this usage. Should any malfunction arise, the SAGEMCOM Helpdesk or your retailer will advise you how to proceed.

A) General Guarantee conditions SAGEMCOM undertakes to remedy by repair or exchange at its own convenience, free of charge for labour and replacement parts, any defects in the equipment during the guarantee period of 12 (twelve) months or 3 (three) months for accessories, from the date of original invoice of the Equipment, where those defects are a result of faulty workmanship. @@@@ @@@@ Apart from all legal obligatory rules, SAGEMCOM, do not give any Guarantee, either implicit or explicit which is not set force in the present section, and can not be held responsible for any direct or indirect, material or immaterial damage, either in or out of the frame of the present guarantee. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee. This guarantee does not affect the Customer statutory rights. 34 B) Exclusions From Guarantee SAGEMCOM shall have no liability under the guarantee in respect of: · Damage, defects, breakdown or malfunction due to one or more of the following: - Failure to properly follow the installation process and instructions for use - An external cause to the equipment (including but not limited to: lightning, fire, shock, vandalism, inappropriate conditions of electrical network or water damage of any nature) - Modifications made without the written approval of SAGEMCOM - Unsuitable operating conditions, particularly of temperature and humidity - Repair or maintenance of the equipment by persons not authorised by SAGEMCOM · Wear and tear from normal daily use of the equipment and its accessories · Damage due to insufficient or bad packaging of equipment when returned to SAGEMCOM · Usage of new versions of software without the previous approval of SAGEMCOM · Work on any equipment or software modified or added without the prior written consent of SAGEMCOM · Malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment.



You're reading an excerpt. Click here to read official SAGEM SIXTY user guide

<http://yourpdfguides.com/dref/3992466>

Communication problems related to an unsuitable environment including: - Problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent - Transmission faults (for example poor geographical coverage by radio and TV transmitters, interference or poor line quality) - Local network faults (wiring, servers, workstations) or the failure of the transmission network (such as but not limited to interferences, fault or poor quality of the network) - Modification of the parameters of the cellular or broadcast network carried out after the sale of the Product · Normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out. Servicing costs are in any event always borne by the customer. · Malfunctions resulting from the usage of products, consumables or accessories not compatible with the equipment. C) Out of Guarantee Repairs In the cases set forth in B) as well as after expiry of the guarantee period, the customer must ask the Authorised SAGEMCOM Repair Centre for a cost estimation prior to work being carried out. In such cases, the repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the United Kingdom and Ireland. 35 TERMS AND CONDITIONS FOR OTHER COUNTRIES If, despite our best efforts, your product presents any defects, you should refer to your retailer and present the proof of purchase that they gave you on the day of purchase. Should any malfunctioning arise, the retailer will advise you what to do. For the warranty to apply, you should ensure that the product was used in accordance with the instructions for use and the purpose for use, and that you have at your disposal the sales invoice or receipt stating the date of purchase, the name of the retailer, the reference and the serial number of the product. No coverage shall be given under this warranty if the following conditions are applicable: The required documents have been modified or altered in order to take advantage of the warranty. The manufacturing numbers, product brands or labels have been altered or made illegible. Interventions on the product have been made by an unauthorized person. The product has been subjected to abnormal or improper use. The product has been damaged by external factors such as lightning, over-voltage, moisture, accidental damage, improper care as well as all Acts of God. This present warranty does not affect the consumer rights that you may have under the laws in effect in your country.

Important: Should you return the product to the after-sales department, please ensure that you return as well all the elements and accessories originally supplied with the product. 36 253359605B - 09/2011 SIXTY by Sagemcom Broadband SAS All rights reserved. Sagemcom Broadband SAS reserves the right to change the technical characteristics of its products and services or to stop marketing them at any time. The information and specifications included are subject to change without prior notice. Sagemcom Broadband SAS tries to ensure that all information in this document is correct, but does not accept liability for error or omission. Non contractual document. All trademarks are registered by their respective owners. Simplified joint stock company - Capital 35 703 000 - 518 250 360 RCS Nanterre. 250, route de l'Empereur - 92848 Rueil-Malmaison Cedex- France Tél. +33(0)1 57 61 10 00 - Fax : +33(0)1 57 61 10 01

www.

sagemcom.com .



[You're reading an excerpt. Click here to read official SAGEM SIXTY user guide](http://yourpdfguides.com/dref/3992466)

<http://yourpdfguides.com/dref/3992466>