



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM WP 1130. You'll find the answers to all your questions on the SAGEM WP 1130 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM WP 1130
User guide SAGEM WP 1130
Operating instructions SAGEM WP 1130
Instructions for use SAGEM WP 1130
Instruction manual SAGEM WP 1130

Cordless telephone
Model WP 1130

Draadloze telefoon
Model WP 1130



Instructions for use
Gebruiksaanwijzing



[You're reading an excerpt. Click here to read official SAGEM WP 1130 user guide](http://yourpdfguides.com/dref/1202245)

<http://yourpdfguides.com/dref/1202245>

Manual abstract:

Keep the device at a minimum distance of 1.5 m from the sink if you wish to install it in a kitchen. The device was designed for use at an ambient temperature of 5°C - 45°C. In areas with frequent thunderstorms, the device should be protected against electrical surges. It is also advisable to check whether your insurance policy covers such eventualities. Electrical connections: 230 V power supply, alternating current, single-phase with the exception of the facilities on the IT circuit diagram in accordance with the EN 60-950 standard. The base station may only be operated with the supplied power cable. It complies with the TBR21 and TBR38. If problems should occur when using this device, please contact your dealer.

The sign confirms that the products complied with the technical regulations laid down in the directive 1999/5/EC, section 3, which were valid at the time of certification. Please note: You are using a device which complies with the DECT standard for communication in the private sector between cordless telephones and a cordless private branch exchanges or base stations. The use of such devices is subject to the guideline from 13th January 1995 (issued on 26th January 1995) which determines the conditions of a universally applicable licence on the basis of paragraph L. 89 of the Post and Telecommunication Law.

Because radio frequencies are being employed the following directions must be carefully observed: 1.

When DECT systems are being employed no guarantee can be given that approved radio devices will not mutually interfere with one another. 2. The installation of DECT devices (cordless private branch exchanges with more than two connections to the telephone network) must be carried out by a technician who has been approved by the ministry responsible for telecommunication because installations of this kind are rated (in accordance with the paragraphs R. The conditions pertaining to the access to a DECT telephone network must be stipulated in a written agreement from the authorized and responsible network operators. Caution: Only use approved rechargeable batteries which comply with the specifications laid down by the manufacturer.

Damaged or used up batteries is hazardous waste and must be disposed of accordingly. They do not under any circumstances belong in the domestic refuse!

Caution: The telephone cannot be used for emergency calls in the event of a power failure. Your WP 1130 telephone 1 2 Installing the WP 1130 3 The handset

13 The base station 14 Connecting up to the telephone network Inserting the rechargeable batteries into the handset State of charge of the battery Connecting

up to the telephone network 15 16 External calls Muting Volume level of the handset Receiving calls Forwarding a call to another handset Internal calls

Redialling one of the last three numbers Forwarding a call to another telephone Directory Saving a telephone number in the directory Using the directory

Changing/Deleting a number in the directory Saving a dialled number in the directory Searching for a handset Selecting the base station Selecting the

language Naming the handset Emergency number Activating the keyguard Setting the contrast of the display Settings of the base station Selecting the priority

handset for incoming calls Settings for calls Call barring Dialling a barred number Changing the dialling mode Setting the timed break (R key) Setting the

number for automatic outward calls (private branch exchanges) Setting the delay until the outward call connection is made Changing the pin of the base

station Setting year Registering Registering mode of the base station De-registering a handset De-registering a base station Factory default settings of the

base station Factory default settings of the handset Displaying the numbers of received calls Dialling a number Deleting a number Saving a number Use in

combination with devices from other manufacturers Maintenance and care Technical specifications Settings for the handset Setting the melody of the handset

Setting the volume level of the melody Activating/Deactivating the key beeps Changing the pin of a handset Please read these directions for use carefully

before using your WP 1130 telephone for the first time. Your WP 1130 telephone the handset Components of the telephone: A base station a stand a power

supply unit a telephone cord a handset self-adhesive feet Enables you to select the function which is shown on the display directly above the key. mENU key

Displays the menus. Enables you to select the function which is shown on the display directly above the key. Enables you to scroll through certain lists.

Volume There are three volume levels at your disposal (can be set during a call). R edial key Enables you to select one of the last three numbers you have

dialled. Enables you to select the function which is shown on the display directly above the key.

R key Recall function in connection with a private branch exchange. HANG UP key Press to end the call ANSWER key Press this key to answer a call if the

handset is not currently on the base station. Short press: search for handset. long press: register the handset. Charging display Lights up when the handset is

being charged. Call display Lights continually if a call is being made with another handset. flashes fast when registering. Flashes slowly when a handset is

being searched for. Remove the lid of the battery compartment at the back of the handset and insert the plug of the battery into the socket on the left-hand side

of the compartment. The mounting base can be attached in two ways depending on the desired inclination: Position 1: semi-inclined The base rests on its

short side.

Attach two self-adhesive feet to the base station and the other two the mounting base. Slide the two cords through the hole at the rear of the base station. Lay

the battery cord carefully into the compartment and then close the latter by sliding the lid. For the connection of the State of charge of the battery

Recommendation: Charge the battery in the handset for battery 12 hours before using the telephone for the first time. This indicates that the battery is almost

empty and will soon have to be recharged.

Shortly before the battery is empty, the outer part of the battery symbol will start to flash accompanied by an acoustic symbol. This indicates that the battery

has been totally discharged and must be recharged immediately. Connect the telephone cord to the corresponding socket with the following sign: Plug the

other end of the cord into the telephone outlet box. Plug the power supply unit into the socket bearing the following symbol: Insert the mains plug into the wall

socket. Only use the supplied power supply unit.

Using another power pack could cause damage to the device which is not covered by the guarantee. Dial the number before you press the ANSWER key. Enter

the telephone number of your choice and it will appear on the display. If you make a mistake when entering the telephone number, press the Back key to delete

the incorrect figure.



[You're reading an excerpt. Click here to read official SAGEM WP 1130 user guide](http://yourpdfguides.com/dref/1202245)

<http://yourpdfguides.com/dref/1202245>

Now press the ANSWER key in order to dial the number you have entered. Press the HANG UP key to end your call. The length of your call will then be shown for five seconds on the display. Press the MENU key several times until Telephone appears on the display. Press the MENU key several times until Set Language is displayed. During a call you can press the key under the word Mute on the display in order to switch off the microphone.

as long as this option is activated, the word Mute will be visible on the display and the handset will give an acoustic signal. Press the key once more in order to switch on the microphone again. Press the MENU key in order to scroll through the available languages. Press the <<< Back key several times or wait 20 seconds until the telephone has switched back to the idle condition. Three volume levels are available. You can adjust the volume during a call by pressing either the bottom or the top of the VOL key. If you wish to set the volume during a call, press the bottom or the top of the VOL key repeatedly in order to hear the three available volume levels. Press the ANSWER key and wait for the dialling tone. ext Call will then appear on the display. Enter the required telephone number.

The number will then appear on the display. If the handset is on the base station: Take it off the base station and answer the call. The Symbol will light up on the base station and you can then speak to the caller. replace the handset on the base station to end your call. If the handset is not on the base station: You must press the ANSWER key before you can speak with the caller.

In order to end the forwarding process to the second handset you must press the HANG UP key on the first handset. The second handset will then take over the call. Press the HANG UP key on the second handset to end the call. Internal calls can take place between two handsets. If, for example, five handsets have been registered, you can phone an external subscriber when an internal call is taking place between two handsets.

@@ Press the INT key and then enter the number of the required handset. @@ the symbol will then begin to flash. @@ the connection will then be made. @@ ext Call and the duration of the call will appear on the display. @@@@ Press the ANSWER key to accept the call. @@ Press this key if you would like to dial the last number you called. press the ANSWER key to dial the displayed number. @@ Press the ANSWER key when the number you require is displayed. @@@@ According to the timed break which has been set (see "Setting the timed break, p. 15), you can also take advantage of particular functions provided by your network provider.

Please contact your network provider for information about the timed break and the functions which are available. If you try to save a new number and the directory is already full, Full will appear on the display and then the directory again. Using the directory Press the MENU key until Directory is displayed.

Press the OK key several times in order to display the first number by alphabetical order. Press the key (right) several times in order to scroll through the entries in the directory. Or Enter the first letter of the name (press, for example, the 3 key to show the names which begin with "D"). Press the 3 key twice to show the names which begin with "E" etc. Press the key (right) several times to scroll through k key or wait 20 seconds until the telephone switches back into the idle condition. You can determine whether the telephone should produce a sound each time you press a key. You are able to change it.

Press the MENU key several times until Telephone appears on the display. This is how you can change the pin: Press the MENU key several times until Telephone appears on the display. Press the MENU key several times until Handset Pin appears on the display. Press the CHANGE key in order to change the pin. You can now enter the new pin.

Confirm the new pin by entering it once more. If yoss the current setting will be shown (e. Use the MENU key to toggle between the settings Tone and Pulse. Press the OK key in order to save your selection. the handset will confirm by giving an acoustic signal.

@@ If you press the Back key, the numbers will be shown one after another again on the display giving you the possibility of checking them. Changing the dialling mode You can set your telephone to tone dialling or pulse dialling. the default setting is tone dialling. You should only change this setting after consulting your telephone network operator. The telephone call duration has been preset before the telephone leaves the works. Only change this setting after contacting your telephone network operator. He will tell you the value you should set. Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Bs Settings is displayed.

Press the MENU key several times until Bs Settings is displayed. Press the MENU key several times until Tele Config is displayed. Press the MENU key several times until Tele Config is displayed. Press the MENU key several times until Prefix setting is shown on the display. Press the MENU key several times until Timed Break appears on the display. Enter the pin of the base station and then press the Access= will then appear on the display. Enter the number for automatic outward calls (normally 0 or 9). @@ @@ Setting the number for automatic outward calls (private branch exchanges) If the telephone is being used in combination with a private branch exchange, you can define the number for automatic outward calls. @@ Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Telephone is displayed.

Press the MENU key several times until Bs Settings is displayed. Making Link will then appear briefly on the display. Wait until this message disappears.

@@ Press the MENU key several times until Tele Config is displayed. Press the MENU key several times until Base Pin is displayed. Press the MENU key several times until Delay is shown on the display. @@ Enter the new pin. Enter the new pin once more in order to confirm. @@ This will be acknowledged with an acoustic signal. @@@@ Press the MENU key several times until Telephone is displayed.

Press the MENU key several times until Bs Settings is displayed. Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Bs Settings is displayed. Wait until this message has disappeared. @@ Press the MENU key several times until Select Year is displayed.

@@@@@ After approximately 5 seconds the green lamp will start to flash. @@@@ Handsets can only be used if they have been registered at a base station. if the handset has not yet been registered, Subscribe Hs will appear on the display. Option 1 Press the YES button in order to have a number assigned automatically to the handset. Enter the number of the base station (1 to 4) which you would like to register the handset at.



[You're reading an excerpt. Click here to read official SAGEM WP 1130 user guide](http://yourpdfguides.com/dref/1202245)
<http://yourpdfguides.com/dref/1202245>

Enter 1 for a new handset. When the handset has found the base station, Found Base will be displayed for 3 seconds as well as the registering code of the system. After a few seconds, the handset will confirm by giving an acoustic signal. @@ wrong Pin will appear on the display. After a few seconds Subscribe will be displayed again. Or An acoustic signal will be given if the base station is not found and Subscribe will appear on the display. @@ Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Subscribe is displayed. The following steps refer to the handset which you use. If this procedure has been carried out without any errors, you will hear a signal and HS2 De-Registered will be displayed.

If the handset is not registered at another base station, the registration menu will appear on the display again. @@ Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Subscribe is displayed. Press the MENU key several times until Telephone is displayed. Press the MENU key several times until De-Register is displayed.

If the pin you have entered is correct, it will be confirmed by an acoustic signal and HS: 2 - - -? will appear on the display. If you have entered the incorrect pin, you will hear a warning signal and Wrong Pin will appear on the display. After a few seconds Subscribe will appear again. Enter the number of the handset you would like to de-register. Press the MENU key several times until Subscribe is displayed.

Press the MENU key several times until De-Register? Enter the number of the base station you would like to deregister. @@The base station can be reset at any time to the default settings when it left the factory. The following list shows the original default settings of the base station: Function Dialling mode Priority for incoming calls Calls Barred If you have entered the incorrect pin, you will hear a warning signal and Wrong Pin will appear on the display. After a few seconds Subscribe will appear again. If this procedure has been carried out without any errors, the base station will confirm with an acoustic signal. If the base station cannot be found, No Base will appear on the display and shortly afterwards the Subscribe menu. @@Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Subscribe is displayed. Press the MENU key several times until Reset Bs is displayed. Enter the number of the base station which you would like to reset and then press the OK key.

The handset can be reset at any time to the default settings when it left the factory. The following list shows the original default settings of the handset: Function Pin Ring internal call Ring external call Key beeps If this procedure has been carried out without any errors, the base station will confirm with an acoustic signal. subscribe will appear on the display. @@ Setting 0000 1, volume = loud 1, volume = loud on Press the MENU key several times until Telephone is displayed. Press the MENU key several times until Subscribe is displayed. Press the MENU key several times until Reset HS is displayed. If you have entered the incorrect pin, you will hear a warning signal and Wrong Pin will appear on the display. After a few seconds Subscribe will appear again. The caller Id function enables the numbers of your callers to be shown on the display (*). In the event of an incoming call, the number of the caller will be shown on the display.

If this number has been saved in the directory, the name of the caller will be displayed. If the caller withholds the transmission of his telephone number, Withheld No. will be shown on the display. If this service is not available, Ext Call will appear. @@@@Press the MENU key several times until Caller Id is displayed.

Press the MENU key in order to scroll through the stored numbers. @@@@When the number can be seen on the display: Press the Press the MENU key several times until Caller Id is displayed. Press the MENU key to scroll through the stored numbers. When the required number is shown on the display, press the ANSWER key to dial it. Press the Press the SET key in order to save the number.

After the display of a stored number the following two options are open to you for 4 seconds: Back Funktion Press the Function key to delete a number. When this has been done, you will hear a confirming signal and the saved number will be displayed. @@No Yes Press the YES key in order to delete the number. @@@@ registering a WP 1130 handset at the base station of another manufacturer Register the handset as described on page 14. When you are asked to enter the pin of the base station, enter the code of the other base station (you will find the pin in the manual supplied with the base station of the other manufacturer). Registering the handset of another manufacturer at the base station of the WP 1130 Follow the steps described in the manual supplied with the handset of the other manufacturer. If required, switch the base station into the registering mode as described in this manual. Enter the pin of the WP 1130 base station with the handset of the other manufacturer when you are asked to do so. Care Wipe the base station and the handset with a dry cloth occasionally. Do not use any scouring agents or solvents because these can damage the device.

Positioning Place the device in the vicinity of a power point and a telephone outlet box. Keep it as far away as possible from television sets. Defect and used batteries must be disposed of at the designated collecting points. There is no dialling tone Has the telephone cord been correctly connected to the base station and the telephone outlet box? Make sure that the base station is connected up to the power supply. is the handset registered at the base station? If you try to use the handset and it is not registered at the base station, Out of Range will appear on the display. For further information please refer to the chapter about registering. You cannot make or receive calls Is the battery of the handset sufficiently charged? If the battery symbol indicates that the battery is empty, charge the batteries for several hours. The handset does not ring Have you set the volume of the ringing tone to "Off"? You can adjust the volume level of the melody. The guarantee period is 12 months from date of purchase. During the guarantee period, Sagem will repair all faults linked to defective materials or manufacturing, or alternatively provide a product swap.

It is mandatory to provide proof of purchase which must include the purchase date. This guarantee does not cover any faults or defects caused by accidents or misuse (such as a fall, water or external object damage, etc.), or faults caused by normal wear and tear, neglect, or attempts at repair by anyone other than through approved agents. The guarantee does not cover battery wear, or damage that does not reduce the value or functionality of the product. .



[You're reading an excerpt. Click here to read official SAGEM WP](http://yourpdfguides.com/dref/1202245)

[1130 user guide](http://yourpdfguides.com/dref/1202245)

<http://yourpdfguides.com/dref/1202245>