



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY ACE GT-S5830. You'll find the answers to all your questions on the SAMSUNG GALAXY ACE GT-S5830 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY ACE GT-S5830

User guide SAMSUNG GALAXY ACE GT-S5830

Operating instructions SAMSUNG GALAXY ACE GT-S5830

Instructions for use SAMSUNG GALAXY ACE GT-S5830

Instruction manual SAMSUNG GALAXY ACE GT-S5830

The image shows the cover of a 'quick start guide' for the Samsung Galaxy ACE GT-S5830. The cover is black with white text. At the top right, it says 'GT-S5830' in a bold, sans-serif font. Below that, 'quick start guide' is written in a larger, lowercase, sans-serif font. At the bottom, there is a small line of text: 'For more information, refer to the user manual at www.samsungmobile.com.'

GT-S5830 quick start guide

For more information, refer to the user manual at
www.samsungmobile.com.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE GT-S5830 user guide](http://yourpdfguides.com/dref/4295920)
<http://yourpdfguides.com/dref/4295920>

Manual abstract:

samsungmobile.com. Thank you for purchasing this Samsung mobile device. This device will provide you with high quality mobile communication and entertainment based on Samsung's exceptional technology and high standards. · Content in this manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. · The items supplied with your device and available accessories may vary depending on your region or service provider. · You can purchase additional accessories from your local Samsung dealer. · The supplied accessories perform best for your device. · Accessories other than the supplied ones may not be compatible with your device. Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning--situations that could cause injury to yourself or others Caution--situations that could cause damage to your device or other equipment 2 Note--notes, usage tips, or additional information [] Square brackets--device keys Copyright Copyright © 2011 Samsung Electronics This manual is protected under international copyright laws.

No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Trademarks · SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. · The Android logo, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc. · and are trademarks of SRS Labs, Inc. Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.

3 · Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. · Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. @@@@@Remove the back cover. 2.

@@Insert the battery. 4. Replace the back cover. 6 Charge the battery Before using the device for the first time, you must charge the battery. Use only Samsung-approved chargers and cables. Unauthorised chargers or cables can cause batteries to explode or damage your device. 1. Open the cover of the multifunction jack. 2. @@Any damage caused by misuse is not covered by the warranty.

3. @@If this happens, unplug the travel adapter from the device. 7 4. When the battery is fully charged, first unplug the travel adapter from the device and then from the power outlet. Do not remove the battery before removing the travel adapter. Doing so may cause damage to the device. To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use. 8 Getting started Turn your device on and off To turn on your device, press and hold [] .

If you turn on your device for the first time, follow the on-screen instructions to set up your device. To turn off your device, press and hold [] and select Power off. · Follow all posted warnings and directions from authorised personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals. · To use your device's non-network services only, switch to Flight mode. 9 Get to know your device Earpiece Proximity sensor Volume key Touch screen Home key Menu key Mouthpiece Back key Multifunction jack Camera lens Power/Lock key Memory card slot Internal antenna Headset jack Speaker Flashbulb Back cover 10 Keys Key Function Turn on the device (press and hold); Access the quick menus (press and hold); Lock the touch screen. Open a list of options available on the current screen. Return to the idle screen; Open the list of recent applications (press and hold). @@@@The idle screen has multiple panels. Scroll left or right to a panel of the idle screen. You can change the idle screen mode.

@@@@@In Idle mode, select or to access Menu mode. 2. Scroll left or right to another menu screen (if necessary). 3. Select an application. 4. Press [] to return to the previous screen; Press the Home key to return to the idle screen. Access recent applications Press and hold the Home key to view the applications you have accessed recently. 13 Launch multiple applications Your device allows you to multi-task by running multiple applications at the same time. To launch multiple applications, press the Home key while using an application to return to Idle mode, and then select an application to launch.

Enter text You can enter text with the virtual keypads or in handwriting mode. You can also use editing options to copy and paste text. Swype keypad With the Swype keypad, you can enter text by sliding across characters on the keypad. Tap the first character of a word, drag to the following characters, and release your finger on the last character. 14 Samsung keypad The Samsung keypad provides different keypad types (such as QWERTY and 3x4 keypads) and a handwriting mode. When entering text with the QWERTY or 3x4 keypads, use the predictive text feature. This feature will predict the word you are entering and display suggestions. When entering text, rotate the device to display the QWERTY keypad in a widescreen layout. Make or answer a call You can make a call by entering a phone number or selecting a number in your contact list. You can also access the call log to redial recently dialled numbers.

Make a call Open the dialling screen, enter a phone number, and select . Answer a call When a call comes in, drag the dot. right until it reaches 15 Send and receive a message You can create and send text (SMS), multimedia (MMS), or email messages, and view or manage messages you have sent or received. Text and multimedia message You can create and send a simple text message or a multimedia message which can contain text, image, video, and sound files. Email message You can use the email application to send email messages on your device.

Before you send and receive email messages, you must add an email account. Connect to the internet You can connect to the wireless web by using the WLAN feature or mobile network connections. Open the web application and browse web pages. You can bookmark your favourite web pages or use various web options. 16 Safety information To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Warning: Prevent electric shock, fire, and explosion Do not use damaged power cords or plugs, or loose electrical sockets Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord Do not bend or damage the power cord Do not use your device while charging or touch your device with wet hands Do not short-circuit the charger or the battery Do not drop or cause an impact to the charger or the battery Do not charge the battery with chargers that are not approved by the manufacturer Do not use your device during a thunderstorm Your device may malfunction and your risk of electric shock is increased.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE GT-S5830 user guide](http://yourpdfguides.com/dref/4295920)
<http://yourpdfguides.com/dref/4295920>

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre. Handle and dispose of batteries and chargers with care · Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device. · Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices. 17 · Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated. · Never crush or puncture the battery.

· Avoid contact with your device's internal antenna. For service, take your device to a Samsung Service Centre. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges. Install mobile devices and equipment with caution · Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. · Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly. Allow only qualified personnel to service your device Allowing non-qualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty. 23 Handle SIM cards or memory cards with care · Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device. · Protect cards from strong shocks, static electricity, and electrical noise from other devices. · Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth. Ensure access to emergency services Emergency calls from your device may not be possible in some areas or circumstances. Doing this may violate copyright laws. The manSS FOR A PARTICULAR PURPOSE. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device. which will be made available upon request. (Representative in the EU) Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK* 2010.12. 09 Joong-Hoon Choi / Lab Manager (place and date of issue) (name and signature of authorised person) * It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. Some of the contents in this manual may differ from your device depending on the software of the device or your service provider. To install Kies (PC Sync) 1. Download the latest version of Kies from the Samsung website (www.samsungmobile.com) and install it on your PC. 2. Using a PC data cable, connect your device to your PC. Samsung Kies will launch automatically. If Samsung Kies does not automatically launch, double-click the Samsung Kies icon on your PC. Refer to the Kies help for more information. Printed in Korea GH68-33506A English. 03/2011. Rev. 1.0 .



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE GT-S5830 user guide](http://yourpdfguides.com/dref/4295920)
<http://yourpdfguides.com/dref/4295920>