



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY ACE PLUS GT-S7500. You'll find the answers to all your questions on the SAMSUNG GALAXY ACE PLUS GT-S7500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY ACE PLUS GT-S7500
User guide SAMSUNG GALAXY ACE PLUS GT-S7500
Operating instructions SAMSUNG GALAXY ACE PLUS GT-S7500
Instructions for use SAMSUNG GALAXY ACE PLUS GT-S7500
Instruction manual SAMSUNG GALAXY ACE PLUS GT-S7500



GT-S7500
user manual



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

Manual abstract:

Images and screenshots used in this user manual may differ in appearance from the actual product. Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsung.com for the latest version of the user manual. Available features and additional services may vary by device, software, or service provider. Using this manual 2 Formatting and delivery of this user manual is based on Google Android operating systems and may vary depending on the user's operating system. @@@@ You may upgrade your mobile device's software by accessing www.samsung.com.

Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user. Please keep this manual for future reference. Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning--situations that could cause injury to yourself or others Caution--situations that could cause damage to your device or other equipment

Note--notes, usage tips, or additional information Using this manual 3 Refer to--pages with related information; for example: p.

12 (represents "see page 12") Followed by--the order of options or menus you must select to perform a step; for example: In Idle mode, open the application list and select Settings About phone (represents Settings, followed by About phone) Square brackets--device keys; for example: [] (represents the Menu key)

Copyright Copyright © 2012 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Trademarks SAMSUNG and the SAMSUNG logo

are registered trademarks of Samsung Electronics. The Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc. Using this manual 4 and are trademarks of SRS Labs, Inc.

CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc. Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Oracle and Java are registered trademarks of Oracle and/ or its affiliates. Other names may be trademarks of their respective owners. Wi-Fi®, Wi-Fi Protected Setup™, Wi-Fi Direct™, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. All other trademarks and copyrights are the property of their respective owners. Using this manual 5 Contents Assembling ...

.....

.....

.....

.....

.....

.....

.....

..... 10 Unpack ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 10 Install the SIM or USIM card and battery

.....

.....

. 10 Charge the battery

.....

.....

.....

.....

.....

.....

.....

.... 12 Insert a memory card (optional) .

.....

.....

.....

.....

..... 15 Attach a hand strap (optional) ..

.....
.....
.....
.....

.....
17 Getting started

.....
.....
.....
.....
.....

..... 18 Turn your device on and off

.....
.....
.....
.....
.....

.. 18 Get to know your device

.....
.....
.....
.....
.....

19 Use the touch screen

.....
.....
.....
.....
.....

.... 23 Lock or unlock the touch screen and keys .

.....
.....

..... 24 Get to know the idle screen

.....
.....
.....
.....
.....

.. 25 Access applications

.....
.....
.....
.....
.....

.... 27 Customise your device

.....
.....
.....
.....

.....
.....
.....
.....
30 Enter text

.....
.....
.....
.....

.....
.....
.....
.....

.....
36 Download applications from Android Market

.....
.... 40 Download files from the web

.....
.....
.....
.....

.....
..... 41 Synchronise data ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 41 Communication .

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 43 Calling ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 43 Messaging

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

49 Google Mail

.....
.....
.....

.....
.....
.....

..... 51 Email

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 53 Talk

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 55 ChatON

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 56 Social Hub .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 57 Contents 6 Entertainment ...

.....
.....
.....
.....

.....
.....
.....
.....

... 58 Camera ..

.....
.....
.....
.....

.....
.....
.....
.....

..... 58 Gallery ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 67 Videos

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 69 Music ..

.....

.....

.....

.....

.....

.....

.....

83 Voice recorder

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 84 Web

.....

.....

.....

.....

.....

.....

.....

.....

..... 86 Internet

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 86 Maps ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 89 Latitude

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
..... *91 Places*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
..... *92 Navigation*

.....
.....
.....
.....

.....
.....
.....
.....

..... *92 YouTube*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *93 Samsung Apps*

.....
.....
.....
.....

.....
.....
.....
.....

..... *95 Market*

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

. 95 News & Weather

.....
.....
.....

.....
.....
.....
.....

..... 96 Connectivity .

.....
.....
.....

.....
.....
.....
.....

..... 97 Bluetooth ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 97 Wi-Fi ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 99 Wi-Fi Direct ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 101 AllShare ..

.....
.....

.....
.....
.....

.....
.....
.....

... 102 Mobile network sharing

.....
.....
.....

.....
.....
.....

.... 104 Contents 7 GPS

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 106 PC connections

.....
.....
.....

.....
.....
.....

107 VPN connections

.....
.....
.....

.....
.....
.....

.... 109 Tools

.....
.....
.....
.....

.....
.....
.....
.....
.....
111 Clock
.....

.....
.....
.....
.....
.....
.....
.....
.....

.....
. 111 Calculator
.....
.....
.....
.....
.....

.....
.....
..... 113 Downloads ..

.....
.....
.....
.....
.....
.....
.....

.....
... 114 Google Search ..
.....
.....
.....
.....

.....
.....
.. 114 Kies air

.....
.....
.....

.....
.....
.....
114 My files

.....
.....
.....
.....
.....
.....
.....
.....

..... 116 SIM Toolkit ...

.....
.....
.....
.....
.....
.....

... 116 Task Manager

.....
.....
.....
.....
.....
.....
.....

... 117 Thinkfree Office

.....
.....
.....
.....
.....
.....

..... 117 Voice Search .

.....
.....
.....
.....
.....
.....

.. 119 Settings

.....
.....
.....
.....

..... 120 Access the Settings menu ..

.....
.....
.....
.....

. 120 Wireless and network

.....
.....
.....
.....

.. 120 Call ...

.....
.....
.....
.....

.....
.....
.....
.....

.. 122 Sound ...

.....
.....
.....
.....

.....
.....
.....
.....

..... 123 Display

.....
.....
.....
.....

.....
.....

.....
..... 124 Power saving ..

.....
.....
.....
.....
.....
.....
.....
.....

..... 125 Location and security .

.....
.....
.....
.....
.....
.....
.....

..... 126 Applications

.....
.....
.....
.....
.....
.....
.....
.....

... 127 Accounts and sync ..

.....
.....
.....
.....
.....
.....
.....

128 Privacy

.....
.....
.....
.....
.....
.....
.....

... 128 Storage ..

.....
.....
.....
.....
.....

.....
.....
.....
.....

..... 129 Contents 8 Language and keyboard

.....
.....
.....

.....
.....
.....

..... 129 Voice input and output

.....
.....
.....
.....

.....
.....

... 132 Accessibility ..

.....
.....
.....
.....

.....
.....
.....
.....

. 133 Date and time

.....
.....
.....

.....
.....
.....
.....

. 133 About phone

.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 134 Troubleshooting

.....
.....
.....
.....
.....

.. 135 Safety precautions ...

.....
.....

.....
.....
.....

..... 141 Index .

.....
.....
.....
.....
.....
.....
.....
.....

..... 153 Contents 9 Assembling Unpack Check your product box for the following items: Mobile device Battery Quick start guide Use only Samsung-approved software.

Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty. The items supplied with your device and available accessories may vary depending on your region or service provider. You can purchase additional accessories from your local Samsung dealer. The supplied accessories perform best for your device. Accessories other than the supplied ones may not be compatible with your device.

Install the SIM or USIM card and battery When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card. Assembling 10he memory card will appear in the external_sd folder. Assembling 15 1 2 Remove the back cover. Insert a memory card with the gold-coloured contacts facing down.

3 4 Push the memory card in the memory card slot until it locks in place. Replace the back cover. > Remove the memory card 1 2 3 4 5 Before removing a memory card, first unmount it for safe removal. In Idle mode, select Settings Storage Unmount SD card OK. Remove the back cover. Push the memory card gently until it disengages from the device. Remove the memory card. Replace the back cover. Do not remove a memory card while the device is transferring or accessing information, as tth water. The touch screen may malfunction in humid conditions or when exposed to water.

For optimal use of the touch screen, remove the screen protection film before using your device. Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen. Getting started 23 Control your touch screen with the following actions: Tap: Touch once with your finger to select or launch a menu, option, or application.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)

<http://yourpdfguides.com/dref/4261341>

Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list. Drag: Tap and drag your finger up, down, left, or right to move to items on lists. Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item. Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages. Pinch: Place two fingers far apart, and then pinch them together.

Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press the Power key or the Home key. You can also adjust the backlight time. In Idle mode, open the application list and select Settings Display Screen timeout. Lock or unlock the touch screen and keys

You can lock the touch screen and keys to prevent any unwanted device operations.

To lock, press the Power key. To unlock, turn on the screen by pressing the Power key or the Home key, tap anywhere on the screen, and then drag outside of the large circle. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device.

p. 33 Getting started 24 Get to know the idle screen When the device is in Idle mode, you will see the idle screen.

From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items. The idle screen has multiple panels. Scroll left or right to a panel of the idle screen. > Add items to the idle screen 1 2 You can customise the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen, Press [] Add or tap and hold the empty area on the idle screen. Select the item category an item: Widgets: Add widgets to the idle screen. Shortcuts: Add shortcuts to items, such as applications, bookmarks, and contacts. Folders: Create a new folder or add folders for your contacts. Wallpapers: Set a background image. > Move items on the idle screen 1 2 Tap and hold an item to move.

Drag the item to the location you want. Getting started 25 > Remove items from the idle screen 1 2 3 Tap and hold an item to remove. The trash bin appears at the bottom of the idle screen. Drag the item to the trash bin. When the item turns red, release the item. > Use the notifications panel In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the notifications panel. You can activate or deactivate wireless connection features and access a list of notifications, such as messages, calls, events or processing status. To hide the panel, drag the bottom of the list up.

From the notifications panel, you can use the following options: Wi-Fi: Activate or deactivate the Wi-Fi feature. p.

100 Bluetooth: Activate or deactivate the Bluetooth wireless connection feature. p. 97 GPS: Activate or deactivate the GPS feature. Silent mode: Activate or deactivate Silent mode. Auto rotation: Activate or deactivate the auto rotation.

Available options may vary depending on your region or service provider. Getting started 26 > Add or remove panels to the idle screen 1 2 You can add or remove panels of the idle screen to organise widgets according to your preferences and needs. In Idle mode, press [] Edit. You can also place your two fingers on the screen and pinch to switch to Edit mode. Add or remove panels by using the following features: To remove a panel, tap and hold the thumbnail of a panel and drag it to the trash bin at the bottom of the screen.

To add a new panel, select . To change the order of the panels, tap and hold the thumbnail of a panel and drag it to the location you want. When you are finished, press []. 3 Access applications To access your device's applications, 1 2 In Idle mode, select to access the application list. Scroll left or right to another screen. You can also select a dot at the bottom of the screen to move directly to the corresponding screen. Getting started 27 3 Select an application. When you use applications provided by Google, you must have a Google account. If you do not have a Google account, sign up for a Google account. You can add a shortcut to an application by tapping and holding the application icon from the application list.

You can move the icon to the location you want on the idle screen. Press [] to return to the previous screen; Press the Home key to return to the idle screen. If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto rotation. 4 > Organise applications 1 2 3 4 You can reorganise the applications in the application list by changing their order or grouping them into categories to suit your preferences and needs. In the application list, press [] Edit OK. Tap and hold an application. Drag the application icon to the location you want. You can move an application icon to another screen. You can also move most-used applications next to .

Press [] Save. Getting started 28 To add a folder or panel to the screen, 1 2 3 4 5 6 7 1 2 1 2 In the application list, press [] Edit. Tap and hold an application. Drag the application icon to Add Folder or Add Page at the bottom of the screen. Repeat steps 2-3 to add more applications.

Drag Add Folder or Add Page to the screen. A new folder or panel containing the applications is added to the screen. If you added a folder, enter a name and select OK. Press [] Save. In the application list, place your two fingers on the screen and pinch.

Tap and hold the thumbnail of a screen and drag it to the location you want. To change the order of the screens, > Access recent applications Press and hold the Home key to view the applications you have accessed recently. Select an application to access. Getting started 29 > Use the task manager Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs using the task manager. 1 2 In Idle mode, open the application list and select Task Manager Active applications. The list of all the applications currently running on your device appears. To close an application, select Exit.

To close all active applications, select Exit all. Customise your device Get more from your device by customising it to match your preferences. > Set the current time and date 1 2 In Idle mode, open the application list and select Settings Date and time. Set the time and date and change other options. Getting started 30 > Turn on or off the touch tone In Idle mode, open the application list and select Settings Sound Audible selection. > Adjust the volume of the ringtones > Switch to Silent mode Press the Volume key up or down to adjust the ringtone volume.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

To mute or unmute your device, do one of the following: In Idle mode, open the application list and select Keypad and tap and hold . Open the notifications panel from the top of the screen and select Silent mode. Press and hold the Power key and select Silent mode. You can set the device to alert you to various events in Silent mode.

In Idle mode, open the application list and select Settings Sound Vibration Always or Only in silent mode. When you switch to Silent mode, will appear in place of . > Change your ringtone 1 2 In Idle mode, open the application list and select Settings Sound Phone ringtone. Select a ringtone from the list and select OK. Getting started 31 In Idle mode, open the application list and select Settings Display Animation Some animations or All animations.

> Activate animation for switching windows > Select a wallpaper for the idle screen 1 2 3 In Idle mode, press [] Wallpaper an option. Select an image. If you selected an image from Gallery, select Save. If you selected a live wallpaper, select Set wallpaper. If you selected a wallpaper image, select Set wallpaper Save.

Samsung is not responsible for any use of default images or wallpapers provided on your device. > Adjust the brightness of the display 1 2 3 In Idle mode, open the application list and select Settings Display Brightness. Drag the slider to adjust the level of brightness. Select OK. The brightness level of the display will affect how quickly the device consumes battery power. Getting started 32 > Set a screen lock You can lock the touch screen by activating the screen lock feature. Your device will require the unlock code each time you turn on the device or unlock the touch screen. If you forget your unlock code, bring your device to a Samsung Service Centre to reset it. Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software. Set an unlock pattern 1 2 3 4 1 2 3 In Idle mode, open the application list and select Settings Location and security Set up screen lock Pattern.

See the on-screen instructions and example patterns and select Next. Draw a pattern by dragging your finger to connect at least 4 dots and select Continue. Draw the pattern again and select Confirm. In Idle mode, open the application list and select Settings Location and security Set up screen lock PIN. Enter a new PIN (numeric) and select Continue. Enter the PIN again and select OK. Set an unlock PIN code Getting started 33 Set an unlock password 1 2 3 In Idle mode, open the application list and select Settings Location and security Set up screen lock Password. Enter a new password (alphanumeric) and select Continue. Enter the password again and select OK. > Lock your SIM or USIM card 1 2 You can lock your device by activating the PIN supplied with your SIM or USIM card.

In Idle mode, open the application list and select Settings Location and security Set up SIM card lock Lock SIM card. Enter your PIN and select OK. Once the PIN lock is enabled, you must enter the PIN each time you turn on the device. If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.

If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it. Getting started 34 > Activate the Find my mobile feature When someone inserts a new SIM or USIM card in your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device. To use this feature, you need a Samsung account for controlling the device from the web remotely. 1 2 3 4 5 6 7 In Idle mode, open the application list and select Settings Location and security SIM Change Alert Continue. Enter your email address and password for your Samsung account and select Sign in.

To create a Samsung account, select Create account. Select Alert message recipients. Enter the password for your Samsung account again and select Confirm. Enter a phone number including a country code (with +). Enter the text message to be sent to the recipients. Select Done. You can control the lost device via the web. Visit www.samsungdive.com to see the detailed information for this feature.

Getting started 35 Enter text You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen. You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages. p. 129 > Change the keypad type You can change the keypad type. Tap and hold the text input field and select Input method a keypad type (Samsung keypad or Swype). > Enter text using the Samsung keypad 1 2 Select Portrait keypad types and select a text input method. You can select one of key input methods (QWERTY or traditional keypad) or handwriting input methods. Enter text by selecting alphanumeric keys or writing on the screen. You can also use the following keys: 1 2 3 4 5 6 7 8 Number 1 2 Function Change case.

Switch between Symbol/Number mode and ABC mode. Getting started 36 Number 3 Function Access the keypad settings; Change the keypad type (tap and hold). Enter text by voice; This icon is available only when you activate the voice input feature for the Samsung keypad. This feature may be unavailable depending on the selected input language. Clear your input.

Start a new line. Insert a full-stop; Open the symbol panel (press and hold). Insert a space. Functions of this key may vary depending on your service provider. 4 5 6 7 8 > Enter text using the Swype keypad 1 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen.

Getting started 37 2 Continue until you have finished the word. 3 4 5 Release the finger on the last character. When the word displays correctly, select to insert a space. If the correct word does not display, select an alternative word from the list that appears. Repeat steps 1-4 to complete your text. You can also tap the keys to enter text. You can tap and hold a key to enter characters on the upper half of the key. When you tap and hold a key until the character list appears, you can enter special characters and symbols. You can also use the following keys: 1 2 3 4 5 6 7 8 Number 1 Function Change case. Getting started 38 Number 2 3 4 5 6 7 8 Function Enter the recommended word or add a new word to the dictionary; Access the keypad settings (tap and hold).

Switch between Symbol/Number mode and ABC/Number mode. Change the input language. Clear your input. Start a new line. Enter text by voice. This feature may be unavailable depending on the selected input language. Insert a space. > Copy and paste text 1 2 3 4 5 6 7 While you are entering text, you can use the copy and paste feature to use text in other applications.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

Place the cursor on the text you want to copy. Select .

Select Select word or Select all. Drag or to select the text you want. Select Copy to copy, or Cut to cut the text onto the clipboard. In another application, place the cursor where you want to paste the text. Select Paste to insert the text from the clipboard into the text field.

Getting started 39 Download applications from Android Market Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications. This feature may be unavailable depending on your region or service provider. Your device will save user files from downloaded applications to the internal memory. To save the files to the memory card, connect your device to a PC and copy them from the internal memory to the memory card.

> Install an application 1 2 3 1 2 3 In Idle mode, open the application list and select Market. Select Accept when the terms and conditions appear. Search for a file or application and download it. > Uninstall an application From the Android Market home screen, press [Apps. Select the item you want to delete. Select Uninstall OK.] My Getting started 40 Download files from the web Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust. Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

1 2 To download files from the web, In Idle mode, open the application list and select Internet. Search for a file or application and download it. To install applications downloaded from websites other than Android Market, you must select Settings Applications Unknown sources OK. Synchronise data You can synchronise data with various web servers and back up or restore your data. Once the synchronisation is completed, your device stays connected to the web.

If any change is made on the web, the updated information will appear on your device and will automatically begin synchronisation, and vice versa. This feature may be unavailable depending on your region or service provider. Getting started 41 > Set up a server account 1 2 3 1 2 3 4 In Idle mode, open the application list and select Settings Accounts and sync. Select Add account an account type. Follow the on-screen instructions to complete the account setup.

> Activate automatic sync Accounts and sync. In Idle mode, open the application list and select Settings Select Auto-sync. Select an account. Select the applications you want to synchronise. To exclude applications from automatic synchronisation, clear the check boxes next to the applications you want.

> Synchronise data manually 1 2 3 In Idle mode, open the application list and select Settings Accounts and sync. Select an account. Select Sync now. Your device will start synchronising the data you set for synchronisation. Getting started 42 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.

> Make or answer a call You can use the buttons or the touch screen when you make, accept, end or reject calls. When you turn on the proximity sensor, your device automatically turns off and locks the touch screen to prevent accidental inputs when you hold the device near your face. p. 123 Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call. Make a call 1 2 3 In Idle mode, open the application list and select Keypad, and enter an area code and a phone number. to make a call. Select To end the call, select End call. Use the phonebook to save numbers you dial frequently. p. 78 To quickly access the call log to redial the numbers you dialled recently, select Logs.

Communication 43 Answer a call 1 When a call comes in, drag in any direction until it reaches the border of the circle. When the device is ringing, press the Volume key to mute the ringtone. To end the call, select End call. 2 Reject a call When a call comes in, drag in any direction until it reaches the border of the circle. The caller will hear a busy tone. Call an international number 1 2 In Idle mode, open the application list and select Keypad, and tap and hold 0 to insert the + character. Enter the complete number you want to dial (country code, area code and phone number), and then select to dial the number. > Use a headset By plugging a headset into the device, you can answer and control calls hands-free: To answer a call, press the headset button. To reject a call, press and hold the headset button. To place a call on hold or retrieve a held call during a call, press and hold the headset button.

To end a call, press the headset button. Communication 44 You can use the following options while a call is in progress: To adjust the voice volume, press the Volume key up or down. To place a call on hold, select . To retrieve a held call, select . To dial a second call, select Add call and then dial a new number. To answer a second call, drag in any direction until it reaches the border of the circle. when a call waiting tone sounds. The device asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature. To open the dialling screen, select Keypad.

To activate the speakerphone feature, select Speaker. In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode. > Use options during a call To turn off the microphone so that the other party cannot hear you, select Mute. To listen and talk to the other party via a Bluetooth headset, select Headset. To open the phonebook, press [] Contacts. To add a memo, press [] Memo. To switch between the two calls, select Swap. To make a multiparty call (conference call), make or answer a second call and select Merge when connected to the second party. Repeat to add more parties.

You must subscribe to the multiparty call service to use this feature. Communication 45 > View and dial missed calls > Use additional features Set auto rejection Your device will display calls you have missed on the display. To dial the number of a missed call, open the notifications panel and select the missed call. You can use various other call-related features, such as auto rejection, Fixed Dialling Number (FDN) mode, or call diverting or barring. Use auto rejection to reject calls from certain numbers automatically. To activate auto rejection and set up the reject list, 1 2 In Idle mode, open the application list and select Settings Call rejection.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

Select Auto reject mode an option. Option All numbers Auto reject numbers Function Reject all calls. Reject calls from phone numbers on the auto reject list. 3 4 5 6 7 Select Auto reject list.

Select Add and enter a phone number. Select Match criteria an option (if necessary). Select Save. To add more numbers, repeat steps 4-6. Communication 46 Use Fixed Dialling Number (FDN) mode In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list.

To activate FDN mode, 1 2 3 In Idle mode, open the application list and select Settings Call Additional settings Fixed Dialling Numbers Enable FDN. Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts to be used in FDN mode. Set call forwarding Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area.

1 2 3 In Idle mode, open the application list and select Settings Call Call forwarding. Select a condition. Enter a number to which calls will be forwarded and select Enable. Your setting will be sent to the network. Set call barring Call barring is a network feature to restrict certain types of calling or to prevent others from making calls with your device. 1 In Idle mode, open the application list and select Settings Call Additional settings Call barring. Communication 47 2 3 Select a call barring option. Enter a call barring password and select OK. Your setting will be sent to the network. Set call waiting Call waiting is a network feature to alert you of an incoming call while you are on a previous call.

In Idle mode, open the application list and select Settings Call Additional settings Call waiting. Your setting will be sent to the network. > View call logs 1 2 You can view logs of your calls filtered by their types. In Idle mode, open the application list and select Logs. Press [] View by an option to sort the call logs.

From the call logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right. Select a log to view its details. From the detail view, you can dial the number, send a message to the number or add the number to the phonebook. 3 Communication 48 Messaging Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received. You may incur additional charges for sending or receiving messages while outside your home service area.

For details, contact your service provider. > Send a text message 1 2 3 4 5 1 2 In Idle mode, open the application list and select . Select New message. Add recipients of your message. Enter phone numbers manually, separating them with a semicolon or a comma.

Select phone numbers from the lists by selecting . Select Tap to enter message and enter your message text. To insert emoticons, press [] Insert smiley. Select Send to send the message. > Send a multimedia message In Idle mode, open the application list and select Select New message.

. Communication 49 3 Add recipients of your message. Enter phone numbers or email addresses manually, separating them with a semicolon or a comma.

Select phone numbers or email addresses from the lists by selecting . When you enter an email address, the device will convert the message as a multimedia message. Press [] Add subject and enter a subject for the message. Select Tap to enter message and enter your message text. To insert emoticons, press [] Insert smiley. Select and add an item. You can select a file from the file list or create a new photo, video, or sound.

Select Send to send the message. 4 5 6 7 1 2 3 > View a text or multimedia message In Idle mode, open the application list and select . Your messages are grouped into message threads by contact, like a messenger. Select a contact. For a multimedia message, select a message to view the details. Communication

50 > Listen to voice mail messages If you have set missed calls to be diverted to the voice mail server, callers may leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to voice mail messages, 1 2 In Idle mode, open the application list and select Keypad and then tap and hold 1. Follow the instructions from the voice mail server. You must save the voice mail server number before accessing the server. Your service provider can give you the number.

Google Mail You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold. This feature may be unavailable depending on your region or service provider. This Google Mail menu may be labelled differently depending on your service provider.

> Send an email message 1 2 3 In Idle mode, open the application list and select Google Mail. If you are launching this application for the first time, select OK. Press [] Compose. Communication 51 4 5 6 7 1 2 Enter a name or address in the recipient field. Enter a subject and message.

To attach an image file, press [] Attach a file. Select to send the message. > View email messages In Idle mode, open the application list and select Google Mail. Select an email message. From the message view, use the following options: To reply to the message, select . To reply to the message including all recipients, select Reply all. To forward the message to other people, select Forward. To add a star to the message, select . To view an attachment, select Preview. To save it to your memory card, select Download.

To archive the message, select Archive. To delete the message, select Delete. To move to the previous or next message, select or . > Organise email by labels You can organise your email by labelling your messages. You can sort messages by label filter. Communication 52 Add a label to a message 1 2 3 1 2 From the Inbox screen, tap and hold a message. Select Change labels. Select a label to add and select OK. From the Inbox screen, press [] Go to labels. Select the label of the messages you want to view.

Filter messages Email Learn to send or view email messages via your personal or company email account. > Set up an email account 1 2 3 4 In Idle mode, open the application list and select Email. Enter your email address and password. Select Next (for general email accounts, such as Google Mail and Yahoo) or Manual setup (for other company email accounts). Follow the on-screen instructions.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts; Select an account name at the top left of the screen and select one you want to retrieve messages from.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/4261341)

[GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)

<http://yourpdfguides.com/dref/4261341>

Communication 53 > Send an email message 1 2 3 4 5 6 In Idle mode, open the application list and select Email an email account. Select . Add recipients of your message.

Enter email addresses manually, separating them with a semicolon or by selecting the Enter key. Select email addresses from the lists by selecting . To add more recipients, press [] Add Cc/Bcc. Select the subject field to enter a subject. Select the text input field to enter your email text. Select Attach and attach a file. You can select a file from the file list or create a new photo, video, or sound. You cannot attach Digital Rights Management (DRM)protected files. Select Send to send the message. If you are offline or outside your service area, the message will be held in the message thread list until you are online and in your service area.

7 > View an email message When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline. 1 2 In Idle mode, open the application list and select Email an email account. Press [] Refresh to update the message list. Communication 54 3 Select an email message. From the message view, use the following options: To move to the previous or next message, select or . To move the message to another folder, select . To delete the message, select . To reply to the message, select Reply. To forward the message to other people, select Forward.

To view an attachment, select the attachment. To save it to your device, select . Talk Learn to chat with friends and family via Google Talk™. This feature may be unavailable depending on your region or service provider. > Add friends to your friend list 1 2 3 In Idle mode, open the application list and select Talk.

The friend list shows all of your Google Talk contacts at a glance. Press [] Add friend. Enter an email address of the friend and select Send invitation. When your friend accepts the invitation, the friend is added to your friend list. Communication 55 > Start a chat 1 2 3 4 5 In Idle mode, open the application list and select Talk.

Select a friend from the friend list. The chat screen opens. Enter your message and select Send. To insert emoticons, press [] More Insert smiley. To switch between active chats, press [] Switch chats. To end the chat, press [] End chat. ChatON Learn to chat with your friends and family in ChatON. This is an instant messenger based on mobile phone numbers, regardless device type or operating system. While having a conversation with your contacts, you can send various multimedia files and data, such as photos, videos, and contact numbers, animated messages. 1 2 3 4 5 In Idle mode, open the application list and select ChatON.

If you are launching this application for the first time, select OK a region Next. @@ Follow the on-screen instructions to complete the account setup. Chat with friends and family instantly. Communication 56 Social Hub Learn to access Social Hub™, the integrated communication application for Social Network Service (SNS), email, or messages. Visit socialhub.samsungapps.com for more details. 1 2 3 4 In Idle mode, open the application list and select Social Hub. If you are launching this application for the first time, add an account or skip it for a later setup. Select a category.

Check and use contents delivered from Social Hub. Communication 57 Entertainment Camera Learn how to capture and view photos and videos. You can take photos at resolutions up to 2560 x 1920 pixels (5 megapixels) and videos at resolutions up to 640 x 480 pixels. The camera interface appears only in the landscape orientation. Tap the screen to hide or display icons in the viewfinder.

The camera automatically turns off when you do not use it for a specified period. The memory capacity may differ depending on the shooting scene or shooting conditions. > Capture a photo 1 2 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Entertainment 58 3 Aim the lens at the subject and make any necessary adjustments.

1 2 3 4 5 6 7 8 Number Function Check the camera status and settings. : Resolution : Exposure metre type : Number of photos you can take (according to available memory) : Default storage location Change the shooting mode. Change the scene mode. Change the flash setting. Change the camera settings. Switch to the camcorder. Capture a photo. View the photo you captured last. 1 2 3 4 5 6 7 8 Entertainment 59 4 5 Press the Volume key to zoom in or out. The zoom function may be unavailable when shooting in the highest resolution.

Select to take a photo. The photo is saved automatically. After taking photos, select to view the taken photos. To view more photos, scroll left or right. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also select or or double-tap the screen. To send a photo to others, select Share. To set a photo as wallpaper or a caller ID image for a contact, select Set as. To delete a photo, select Delete.

> Capture a photo by using preset options for Your camera provides you with predefined settings for various scenes. You can simply select the proper mode for your shooting conditions and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure. various scenes 1 2 3 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view.

a scene. Select Entertainment 60 4 5 Make any necessary adjustments. Select to take a photo. > Capture a photo in Smile shot mode 1 2 3 4 5 6 Your camera can recognise people's faces and help you take photos of their smiling faces. In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Smile shot. Select Make any necessary adjustments. Aim the camera lens at your subject. Select . Your device recognises people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo. > Capture a series of photos 1 2 3 4 5 You can easily take a series of photos of moving subjects. This is useful when you are photographing children at play or a sporting event. In Idle mode,

open the application list and select Camera to turn on the camera.

Rotate the device anti-clockwise to landscape view. Continuous. Select Make any necessary adjustments. Tap and hold . The camera will continue to take photos until you release the key. Entertainment 61 > Capture a panoramic photo 1 2 3 4 5 6 7 You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes. In Idle mode, open the application list and select Camera to turn on the camera.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

Rotate the device anti-clockwise to landscape view. Panorama.

Select Make any necessary adjustments. Select to take the first photo. Slowly move the device in any direction and align the green frame with the viewfinder.

When you have aligned the green frame and viewfinder, the camera will automatically take the next photo. Repeat step 6 to complete the panoramic photo.

> Customise camera settings Before taking a photo, select options: Option Macro Timer Function to access the following Exposure value Adjust the exposure value. Activate Macro mode to take close-up photos. Select the length of the delay before the camera takes a photo. Entertainment 62 Option Resolution White balance Effects ISO Metering Auto contrast Adjust Image quality Function Change the resolution option. Adjust the colour balance according to lighting conditions.

Apply a special effect, such as sepia or black and white tones. Adjust the sensitivity of the camera imaging sensor. Select a type of exposure metre. Automatically adjust contrast between your subject and background. Adjust contrast, saturation, and sharpness. Set the quality level for your photos. Before taking a photo, select settings: Setting Guidelines Review Function to access the following Display the guidelines on the preview screen. Set the camera to display the taken image. Entertainment 63 Setting Function Set the camera to include location information for your photos. To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in lowlying areas, or in poor weather conditions.

Your location may appear on your photos when you upload them to the web. To avoid this, deactivate the GPS tag setting. Set the camera shutter to make a sound when capturing a photo. Select a memory location for storing captured photos. Reset menus and shooting options. GPS Shutter sound Storage Reset >

Record a video 1 2 3 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Select to switch to the camcorder. Entertainment 64 4 Aim the lens at the subject and make any necessary adjustments. 1 2 3 4 5 6 7 Number Function Check the camcorder status and settings.

: Resolution : Length of video that can be recorded (according to available memory) : Default storage location Change the recording mode (for attaching to a multimedia message or for saving normally). Change the volume the flash setting; You can manually turn the flash on or off or set the camcorder to automatically use the flash when needed. Change the camcorder settings. Switch to the camera. Record a video.

View the video you recorded last. 1 2 3 4 5 6 7 5 Press the Volume key to zoom in or out. The zoom function may be unavailable when recording in the highest resolution. Entertainment 65 6 7 Select to start recording. Select to stop recording.

The video is saved automatically. The camcorder may not be able to properly record videos to a memory card with a slow transfer speed. After recording videos, select to view the recorded videos. To view more videos, scroll left or right. To send a video to others, select Share. To play a video, select Play. To delete a video, select Delete. Before recording a video, select following options: Option Timer Resolution White balance Effects Video quality Adjust Function Select the length of the delay before the camera starts recording a video. Change the resolution option. Adjust the colour balance according to lighting conditions.

Apply a special effect. Set the quality level for your videos. Adjust contrast, saturation, and sharpness. > Customise camcorder settings to access the Entertainment 66 Before recording a video, select following settings: Setting Guidelines Audio recording Review Storage Reset Function to access the Display the guidelines on the preview screen. Turn the audio on or off. Set the camera to display the recorded video. Select a memory location for storing recorded videos. Reset menus and recording options. Gallery Learn to view photos and play videos saved in your memory card. > Supported file formats Type Image Video Format Extension: bmp, gif, jpg, png, wbmp Extension: 3gp, mp4, webm Codec: H.

263, H.264, MPEG4, VP8 Entertainment 67 Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Playback quality may vary by content type. Some files may not play properly depending on how they are encoded.

> View a photo 1 2 3 4 In Idle mode, open the application list and select Gallery. Select a folder. To change the view mode, select or at the top right of the screen. Select a photo (with no icon) to view. While viewing a photo, use the following options: To view more photos, scroll left or right.

To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also select or or double-tap the screen. To send a photo to others, select Send via. To delete a photo, select Delete. To share a photo with others, press [] Share. To set a photo as wallpaper or a caller ID image for a contact, press [] Set as. Entertainment 68 To use additional features with a photo, press [] More and use the following options: - Print: Print a photo using a Wi-Fi or USB connection. Your device is compatible only with some Samsung printers. - Crop: Crop an image from a photo.

- Rotate left: Rotate a photo anti-clockwise. - Rotate right: Rotate a photo clockwise. - Slideshow: Start a slideshow in the selected folder. - Rename: Rename a photo file. - Details: View photo details. > Play a video 1 2 3 In Idle mode, open the application list and select Gallery. Select a video (with the icon) to play. Control playback with the virtual keys. Videos Learn to use the video player to play various kinds of videos. The video player supports the following file formats: 3gp, mp4, webm (Codec: MPEG4, H.

263, H.264, VP8). Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Playback quality may vary by content type.

Some files may not play properly depending on how they are encoded. 1 In Idle mode, open the application list and select Videos. Entertainment 69 2 3 Select a video to play. Control playback with the following icons: Icon Function Change a ratio of the video screen. Restart playback; Skip backward (doubletap); Scan backward in a file (tap and hold).

Pause playback; Select playback. to resume Skip forward; Scan forward in a file (tap and hold). Activate the 5.1 channel surround sound system when a headset is connected. Adjust the volume. Music Learn to listen to your favourite music while on the go with the music player.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

The music player supports the following file formats: 3gp, mp4, mp3, ogg, aac, amr (awb), wav, mid, wma, flac (Codec: MP3, Vorbis (OGG), AAC, AAC+, eAAC+, AMR-NB/ WB, WAV, MIDI, WMA, FLAC). Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Playback quality may vary by content type.

Some files may not play properly depending on how they are encoded. Entertainment 70 > Add music files to your device Start by transferring files to your device or memory card: Download from the wireless web. p. 86 Download from a PC with Samsung Kies. p. 107 Receive via Bluetooth. p. 99 Copy to your memory card. p. 108 > Play music 1 2 3 After transferring music files to your device or memory card, In Idle mode, open the application list and select Music.

Select a music category a music file. Control playback with the following keys: 1 5 2 3 4 6 7 8 Number 1 2 3 Function Activate the 5.1 channel surround sound system when a headset is connected. Activate Shuffle mode. Move to a point of the file by dragging or tapping the bar.

Entertainment 71 Number 4 5 6 7 8 Function Restart playback; Skip backward (double-tap); Scan backward in a file (tap and hold). Adjust the volume. Change the repeat mode (off, repeating a file, or repeating all files). Skip forward; Scan forward in a file (tap and hold). Pause playback; Select to resume playback.

You can control the music player with a headset. In Idle mode, press and hold the headset button to launch the music player. Press the headset button to start or pause playback. SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies. WOW HDTM significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail. > Create a playlist 1 2 In Idle mode, open the application list and select Music. Select Playlists. Entertainment 72 3 4 5 6 Press [] Create. Enter a title for your new playlist and select Save.

Select Add music. Select the files you want to include and select Add. During playback, you can add files to a playlist by pressing [] Add to playlist. You can add songs to the quick list and save them as a playlist. During playback, press [] Add to quick list to add the current song to the quick list. To go to the quick list, from the music player main screen, select Playlists Quick list. To save the quick list as a playlist, press [] Save as playlist. > Add songs to the quick list > Customise music player settings 1 2 3 In Idle mode, open the application list and select Music. Press [] Settings. Adjust the following settings to customise your music player: Option Equaliser Sound effect Music menu Function Select a default equaliser type.

Select a sound effect. Select music categories to display on the music library screen. Entertainment 73 Option Visualisation Lyrics Music auto off Function Display an animated visualisation during playback. Set to display lyrics during playback. The music player supports lyrics with ID3v2 tags only.

Set the music player to automatically turn off after a specified length of time. FM radio Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna. > Listen to the FM radio 1 2 Plug a headset into the device. In Idle mode, open the application list and select FM radio.

The FM radio scans and saves available stations automatically. The first time you turn on the FM radio, it will start automatic tuning. Select the radio station you want from the all station list and press [] to return to the FM radio screen. 3 Entertainment 74 4 Control the FM radio with the following keys: 1 5 6 2 3 4 2 Number 1 2 3 4 5 6 Function Scan the available radio station. Search for an available radio station. Fine-tune the frequency. Add the current radio station to the favourites list. Adjust the volume. Turn the FM radio off or on. > Save a radio station automatically 1 2 Plug a headset into the device.

In Idle mode, open the application list and select FM radio. Entertainment 75 3 4 1 2 3 4 5 Press [] Scan a scanning option. The FM radio scans and saves available stations automatically. Select the radio station you want from the all station list and press [] to return to the FM radio screen. > Add a radio station to the favourites list Plug a headset into the device. In Idle mode, open the application list and select FM radio. Select to turn on the FM radio. Scroll to the radio station you want. Select to add the radio station to the favourites list. You can add a name for a radio station or remove a radio station; Tap and hold a radio station on the favourites list and select Remove or Rename.

> Customise FM radio settings 1 2 In Idle mode, open the application list and select FM radio. Press [] Settings. Entertainment 76 3 Adjust the following settings to customise your FM radio: Option Background playing Function Set whether or not to run the FM radio in the background while using other applications. If this feature is on, you can control the FM radio from the notifications panel. Set whether or not to show the station ID on the FM radio screen; Station IDs are available only from radio stations that provide this information.

Set the FM radio to automatically turn off after a specified length of time. Show station ID FM auto off Entertainment 77 Personal information Contacts Learn to create and manage a list of your personal or business contacts. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays and more for your contacts. > Create a contact 1 2 3 4 5 1 2 3 In Idle mode, open the application list and select . Select .

Select a memory location. @@Enter contact information. Select Save to add the contact to memory. In Idle mode, open the application list and select Keypad. Enter a phone number. Select Add to Contacts Create contact. You can also create a contact from the dialling screen. Personal information 78 4 5 6 1 2 3 Select a memory location. @@Enter contact information. Select Save to add the contact to memory.

> Find a contact In Idle mode, open the application list and select . Scroll up or down on the contact list. You can also drag your finger along the index on the right side to quickly scroll through the list. Select a contact's name. Once you find a contact, you can use the following options: To call the contact, select a phone number. To send a message, select . To send an email message, select an email address. To edit the contact information, press [] Edit. To set the contact as your favourites, select . > Set a speed dial number 1 2 3 4 In Idle mode, open the application list and select .



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>

Press [] More Speed dial setting. Select a location number a contact. Select a phone number (if necessary). You can quickly dial this number by tapping and holding the location number from the dialling screen. Personal information 79 > Create your namecard 1 2 3 4 5 In Idle mode, open the application list and select .

Press [] My profile. Press [] Edit. Enter your own personal details. Select Save. You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

> Create a group of contacts 1 2 3 4 5 1 2 3 By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group. In Idle mode, open the application list and select Groups. Press [] Create. Enter a name and select a ringtone for the group. Select Add member, select contacts to add to the group, and select Add. Select Save. > Copy contacts To copy contacts from the SIM or USIM card to your device, In Idle mode, open the application list and select . Press [] Import/Export Import from SIM card. Select a memory location.

@@In Idle mode, open the application list and select . Press [] Import/Export Export to SIM card. @@Press [] Import/Export Import from SD card. Select a memory location. @@@@Select contact files to import and select OK. In Idle mode, open the application list and select . Press [] Import/Export Export to SD card. @@Select Tap to create event or press [] Create. If an alert message about the calendar sync appears, select OK. Enter the details of the event as required.

@@Select a view mode from the top of the calendar. In Idle mode, open the application list and select Calendar. Select a date on the calendar. @@ To select today's date, press [] Today. Select an event to view its details.

@@Open the notifications panel from the top of the screen. Select a reminder to view more details about the event. @@@@Press [] Search or press and hold [] to search for a memo (if necessary). Personal information 83 3 Select a memo to view its details. To use additional features with a memo, select Option Function Edit the memo.

Delete the memo. Change the colour of the memo. Lock the memo. . Print the memo using a WLAN connection. Your device is compatible only with some Samsung printers. You can send the memo to others by tapping and holding the memo and selecting Send an option. @@Select Record to start recording. @@Your memo is saved automatically. @@Select List.

Select a voice memo to play. @@@@For details, contact your service provider. @@@@To zoom out, move your fingers closer together. You can also double-tap the screen. To open a new window, press [] New window. To view the currently active windows, press [] Windows. You can open multiple pages and switch back and forth between them. To reload the current web page, press [] Refresh. To go to a next page in history, press [Forward.] To bookmark the current web page, press [] Add bookmark.

@@ To search for text on the web page, press [] More Find on page. To view the web page details, press [] More Page info. @@ To view the download history, press [] More Downloads. To customise the browser settings, press [] More Settings. @@@@Select the URL input field.

Select and say a keyword into your device's microphone. @@@@Select Bookmarks. Select Add. Enter a page title and a web address (URL). @@ To open the web page in a new window, select Open in new window.

To edit the bookmark details, select Edit bookmark. @@To copy the web address (URL) of the web page, select Copy link URL. To delete the bookmark, select Delete bookmark. @@Select Most visited or History. Select a web page to access. @@@@If you are launching this application for the first time, select OK. The map will display your current location. Select Search Maps. Enter a keyword for the location and select . To search for a location by voice, select .

Select the location you want to view details. To view a list of all results for your search, select . To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also select or . To add layers to the map, select . To view your current location, select . To switch to a compass view of the map that changes orientation when you move the device, select . To add a star to the location, select the balloon of the location name . > Get directions to a specific destination 1 2 3 In Idle mode, open the application list and select Maps.

Press [] Directions. Enter the addresses of the starting location and the ending location. To select an address from your contact list or starred places, or point the location on the map, select Contacts, Point on map, or My Places. Web 90 4 5 6 Select a travel method (car, bus, or walk) and select Get directions. The route is indicated on the map.

Depending on the selected travel method, you may see multiple routes. Select a route to view details of your trip and select to view the route on the map. Select or to view only a single part of the route. When you are finished, press [] Clear Map. Latitude Learn to share your location with your friends and view friends' locations via Google LatitudeTM.

This feature may be unavailable depending on your region or service provider. 1 2 3 4 5 In Idle mode, open the application list and select Latitude. The device automatically joins Latitude. Select Select from Contacts or Add via email address. Select a friend you want to add, or enter an email address and select Add friends. Select Yes. When your friend accepts your invitation, you can share locations. Press [] Map View. Your friends' locations are marked with their photos on the map. Web 91 Places Learn to search for a place around you.

This feature may be unavailable depending on your region or service provider. 1 2 3 4 In Idle mode, open the application list and select Places. Select a category. Your device searches for places around your current location that are related to the category. Select a place name to view its details. While viewing information, use the following options: To view the place on the map, select Map. To view the route to the place, select Directions. To view the phone number of the place, select Call. Navigation Learn to use the GPS navigation system to find and show your destination with voice guidance. Navigation maps, your current location, and other navigational data may differ from actual location information.

You should always pay attention to road conditions, traffic, and any other factors that may affect your driving and follow all safety warnings and regulations while driving. This feature may be unavailable depending on your region or service provider. 1 In Idle mode, open the application list and select Navigation.

Web 92 2 3 4 If you are launching this application for the first time, select Accept. Enter your destination by using one of the following methods: Speak Destination: Speak your destination such as "Navigate to destination."



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY ACE PLUS GT-S7500 user guide](http://yourpdfguides.com/dref/4261341)
<http://yourpdfguides.com/dref/4261341>