



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY NOTE 10.1 GT-N8000. You'll find the answers to all your questions on the SAMSUNG GALAXY NOTE 10.1 GT-N8000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY NOTE 10.1 GT-N8000
User guide SAMSUNG GALAXY NOTE 10.1 GT-N8000
Operating instructions SAMSUNG GALAXY NOTE 10.1 GT-N8000
Instructions for use SAMSUNG GALAXY NOTE 10.1 GT-N8000
Instruction manual SAMSUNG GALAXY NOTE 10.1 GT-N8000



GT-N8000
user manual



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)
<http://yourpdfguides.com/dref/4565917>

Manual abstract:

□□ Images and screenshots used in this user manual may differ in appearance from the actual product. □□ Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsung.com for the latest version of the user manual. □□ Using this manual 2 Available features and additional services may vary by device, software, or service provider. @@@@ Attempting to customise the operating system may cause your device or applications to work improperly. □□ You may upgrade your mobile device's software by accessing www.samsung.com.

□□ Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user. □□ Please keep this manual for future reference. □□ Using this manual 3 Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning—situations that could cause injury to yourself or others Caution—situations that could cause damage to your device or other equipment Note—notes, usage tips, or additional information □ Refer to—pages with related information; for example: □ p. 12 (represents “see page 12”) Followed by—the order of options or menus you must select to perform a step; for example: Open the application list and select Settings → About device (represents Settings, followed by About device) → Copyright Copyright © 2012 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. □□ The Android logo, Google , Google Maps , Google™™ Mail™, YouTube™, Google Play™ Store, and Google Talk™ are trademarks of Google, Inc. □□ Bluetooth is a registered trademark of the Bluetooth SIG, ® Inc. worldwide. □□ Windows Media Player® is a registered trademark of Microsoft Corporation. □□ Wi-Fi , Wi-Fi Protected Setup , Wi-Fi Direct , ®™™ Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. □□ DivX , DivX Certified and ® associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence. □□ All other trademarks and copyrights are the property of their respective owners. □□ Using this manual 5 ABOUT DIVX VIDEO DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration. DivX Certified® to play DivX® video up to HD 720p, including premium content. May play DivX® video up to HD 1080p. ABOUT DIVX VIDEO-ON-DEMAND Using this manual 6

Contents Assembling . . .

.....

.....

.....

.....

.....

.....

.....

.. 11 Unpack

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

11 Install the SIM or USIM card

.....

.....

.....

.....

.....

.....

..... 11 Charge the battery ...

.....

.....

.....

.....
.....
.....

28 Customise your device

.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 29 Enter text

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 34 Using special features

.....
.....
.....
.....
.....
.....
.....
.....

.... 37 Learn basic S Pen actions.....

.....
.....
.....
.....
.....
.....
.....

..... 37 Learn advanced S Pen actions..

.....
.....
.....
.....
.....
.....
.....

... 37 Replacing the tip of S Pen.....

.....
.....
.....
.....
.....

.....
..... *39 Learn motions...*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *39 Use Handwriting mode.....*

.....
.....
.....

.....
.....
.....
.....

.....
41 Use S Note.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... *45 Use the quick note pad.*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *53 Use S Planner.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
54 Web

.....
.....
.....
.....

.....
.....
.....
.....
..... 57 Internet ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 57 Game Hub

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 61 Contents 7 Play Books

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 62 Play Store . .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....

.....
.. 62 YouTube

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 63 Video Hub ...

.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 64 Maps .

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 64 Latitude

.....
.....
.....

.....
.....
.....

.....
68 Communication

.....

.....

.....

.....

.....

..... 69 Calling

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 69 Messaging .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

79 Google Mail

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 81 Email .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....
.....
..... 83 *Talk*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 86 *ChatON*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 87 *Messenger*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 87 *Google+*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... 87 Entertainment

.....
.....
.....
.....

.....
.....
.. 88 Music Player ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
88 Music Hub

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.. 90 Camera ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... 91 Video Player

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
.....
..... *99 Gallery*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

103 Video Maker

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *106 Contents & Personal information*

.....
.....
.....
.....

..... *109 Contacts*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *109 Connectivity*

.....
.....
.....

.....
.....
.....

..... *113 PC connections* . .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.. *113 Wi-Fi ...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *115 Wi-Fi Direct .*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *118 AllShare Cast ...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *119 AllShare Play*

.....
.....
.....
.....

.....

.....
.....
.....

.. 120 Bluetooth ...

.....
.....
.....
.....
.....
.....
.....
.....

... 123 Mobile network sharing ..

.....
.....
.....
.....
.....
.....
.....

125 GPS :

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 127 TV connections

.....
.....
.....
.....
.....
.....
.....
.....

... 128 VPN connections

.....
.....
.....

.....

.....

.....

.....

.....

..... *130 Tools* .

.....

.....

.....

.....

.....

.....

.....

.....

.... *132 Alarm* .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... *132 Calculator*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... *133 Downloads*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. *133 Dropbox*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *134 Search*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... *135 My Files*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *135 Polaris Office* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... *137 PS Touch*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....

..... 139 World Clock

.....
.....
.....
.....
.....

... 139 Settings

.....
.....
.....
.....
.....

.. 140 Access the Settings menu

.....
.....
.....
.....
.....

140 Wi-Fi

.....
.....
.....
.....
.....

.. 140 Contents 9 Bluetooth ...

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....

... time or when the battery has been unused for an extended period, you must charge the battery. Use only Samsung-approved chargers. Unauthorised chargers can cause batteries to explode or damage your device. Assembling 12 Charge the battery only with a charger. You cannot charge the battery with the USB cable. □□ When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon will also be empty.

If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device. □□ If the battery is completely discharged, you cannot turn on the device, even with the USB power adapter connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device. □□ 1 Connect the USB cable to the USB power adapter, and the device's non-network services only, switch to Flight mode. »Switch to Flight mode In Flight mode, you can disable all wireless connections and use non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals. To activate or deactivate Flight mode, go to Settings → More settings, and then check the check box next to Flight mode. Getting started 17 Get to know your device »Device layout 1 2 3 4 6 3 7 8 5 9 10 11 14 15 12 13 Getting started 18 Number 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 Function Power/Reset/Lock key Volume key Speaker Memory card slot Multifunction jack SIM card slot Front camera lens Ambient light sensor Mouthpiece Headset jack 1 Internal antenna Rear camera lens S Pen slot IrLED Flashbulb 1. Connecting a headset to your device improperly can damage the headset jack or the headset. Getting started 19 »Keys Key Power/ Reset2/ Lock Volume Function Turn on the device (press and hold); Access the device options (press and hold); Lock the touch screen; Reset the device (press and hold for 8-10 seconds).



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)
<http://yourpdfguides.com/dref/4565917>

) Adjust the device's volume. »Indicator icons Icon Icons shown on the bottom of the screen may vary depending on your region or service provider.

Definition No signal Signal strength GPRS network connected EDGE network connected UMTS network connected Open Wi-Fi APs available Wi-Fi AP connected Bluetooth activated GPS activated Call in progress 2. If your device has fatal errors or hang-ups, or freezes, you may need to reset the device to regain functionality. Getting started 20 Icon Definition Call on hold Missed call Uploading data Downloading data Call diverting activated Connected to PC USB tethering activated Wi-Fi tethering activated New text or multimedia message New email message New Google Mail New voice mail message Alarm activated Event notification Roaming (outside of normal service area) Smart stay activated Flight mode activated Music playback in progress Error occurred or caution required Battery power level 3 10:00 AM Current time 3. If you use a charger that is not approved by Samsung, this indicator will not appear.

Getting started 21 Use the S Pen and the touch screen Your device's touch screen lets you easily select items or perform functions. Learn basic actions for using the touch screen. □□ Do not press the touch screen with your fingertips, or use sharp tools on the touch screen. Doing so may damage the touch screen or cause it to malfunction.

□□ Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction. □□ Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water. □□ Leaving the touch screen idle for extended periods may result in afterimages (screen burn-in) or ghosting.

Turn off the touch screen when you do not use the device. □□ Do not bend the S Pen. □□ Do not use the S Pen near by a source of magnetic interference. It may cause the S Pen to malfunction or freeze. For optimal use of the touch screen, remove the screen protection film before using your device.

□□ You can purchase a replacement S Pen from your local Samsung dealer. □□ If your S Pen is not working properly, replace the tip of the S pen or take it to a Samsung Service Centre. □□ For best results, keep the S Pen mostly perpendicular to the touch screen and avoid using it at sharp angles. □□ Getting started 22 Control your touch screen with the following actions: □□ Tap: Touch once with your finger or the supplied S Pen to select or launch a menu, option, or application. □□ Tap and hold: Tap an item and hold it for more than 2 seconds to open a list of options. □□ Drag: Tap and drag your finger up, down, left, or right to move to items on lists. □□ Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item. □□ Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages. »Rotate the touch screen Your device has a built-in motion sensor that detects its orientation. If you rotate the device, the interface will automatically rotate according to the orientation.

To set the interface to keep the orientation, select the right side of the system bar, and then select Screen rotation on the notifications panel. »Lock or unlock the touch screen When you do not use the device for a specified period, your device turns off the touch screen and automatically locks the touch screen to prevent any unwanted device operations. To manually lock the touch screen, press the Power key. To unlock, turn on the screen by pressing the Power key, tap anywhere on the screen, and then flick your finger in any direction. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. □ p. 31 Getting started 23 Get to know the Home screen When the device is in Idle mode, you will see the Home screen. From the Home screen, you can view indicator icons, widgets, shortcuts to applications, and other items. Scroll left or right to a panel of the Home screen. 1 2 3 4 The above screen may differ depending on your region or service provider.

Number 1 2 3 4 Function Select a dot at the top of the screen to move directly to the corresponding screen. Search for applications and files in your device and specific data on the web with the Google Search widget. Access the application list. System bar (See the following section.) Getting started 24 System bar From the system bar, you can quickly navigate screens, access applications, view system information, and more.

Number 1 2 3 4 5 6 Function Capture the current screen; Capture the current screen and open the drawing pad (tap and hold). Return to the previous screen. Return to the Home screen; Access the task manager (tap and hold). Open the list of recent application; Access the application list (tap and hold). Display indicator icons and your device's current status; Open the notifications panel.

Open the mini apps panel. »Add an application shortcut on the Home 1 Open the application list and tap and hold an application 2 icon. Move the icon to the location you want or move it to another panel of the Home screen. screen Getting started 25 »Add a widgets on the Home screen Widgets are small applications that provide convenient functions and information on your Home screen. □□ Some widgets connect to web services. Using a webbased widget may result in additional charges. □□ The widgets available may vary depending on your region or service provider. 1 Open the application list and select Widgets to open the 2 3 widget panel. Scroll left or right on the widget panel. Tap and hold a widget to add it to the Home Screen.

»Move an item on the Home screen 2 appears. Drag the item to the location you want. 1 Tap and hold an item to move until the Home screen grid »Remove an item on the Home screen 1 Tap and hold an item to remove. 2 3 The rubbish bin appears at the top of the Home screen. Drag the item to the rubbish bin. When the item turns red, release the item. »Add or remove a panel from the Home screen You can add or remove Home screen panels to organise widgets. pinch them together to switch to Edit mode. 1 On the Home screen, place two fingers on the screen and Getting started 26 2 Add, remove, or reorganise panels: □□ □□ 3 To add a new panel, select . To remove a panel, tap and hold the panel's thumbnail image, and then drag it to the rubbish bin. □□ To set a panel for the default Home screen, select . □□ To change the order of panels, tap and hold the panel's thumbnail image, and then drag it to a new location. to return to the previous screen. Select »Use the notifications panel From the Home screen or while using an application, select the right side of the system bar, and then select an option on the notifications panel.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)
<http://yourpdfguides.com/dref/4565917>

You can view the device's current status and use the following options: Wi-Fi: Activate or deactivate the Wi-Fi feature.

GPS: Activate or deactivate the GPS feature. Sound: Activate or deactivate Silent mode. You can vibrate or mute your device in Silent mode. Screen rotation: Activate or deactivate the auto rotation. Power saving: Activate or deactivate Power saving mode.

Notification: Set the device to alert you for various events. Mobile data: Activate or deactivate the data connection. Bluetooth: Activate or deactivate the Bluetooth feature. Driving mode: Activate or deactivate Driving mode. Sync: Activate or deactivate auto-syncing of applications. Available options may vary depending on your region or service provider. Getting started 27 Access applications 1 From the Home screen, select 2 3 4 list. Scroll left or right to another screen. You can also select one of dots at the bottom of the screen to move directly to the corresponding screen. Select an application.

To view the widgets panel, select Widgets. to return to the previous screen; Select to Select return to the Home screen. to access the application »Access recent applications 1 Select 2 to view the applications you have accessed recently. Select an application. »Use the task manager Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs using the task manager. 1 Select → Task manager → Active applications. 2 To close an application, select End.

To close all active applications, select End all. Getting started 28 Customise your device Get more from your device by customising it to match your preferences. »Change the language of the display 2 Language and input → Language. Select a language you want. 1 Open the application list and select Settings → »Set the current time and date 2 1 Open the application list and select Settings → Date and time.

Select your time zone, set the time and date, and change other options. Open the application list and select Settings → Sound → Touch sounds. »Turn the touch tone on or off »Adjust the device's volume for each sounds. 1 Press the Volume key up or down. 2 Select and drag the sliders to adjust the volume level »Switch to Silent mode To mute or unmute your device, do one of the following: Open the notifications panel at the right side of the system bar and select Sound.

Press and hold the Power key and select . Open the application list and select Phone → Keypad and . tap and hold Getting started 29 »Select a wallpaper for the Home screen 1 Tap and hold anywhere on the Home Screen. 2 Select Set wallpaper for → Home screen. 3 4 Gallery: Photos you took or images downloaded from the Internet. Live wallpapers: Animated images included with the device. Wallpapers: Wallpaper images included with the device. Select an item. Select Set wallpaper. If you selected an item from Gallery, move or resize the blue frame by dragging it, and then select Done.

Samsung is not responsible for any use of default images or wallpapers provided on your device. »Adjust the brightness of the display → Brightness. 1 Open the application list and select Settings → Display 2 Clear the check box next to Automatic brightness. 3 Drag the slider to adjust the brightness. 4 Select OK. The brightness level of the display will affect how quickly the device consumes battery power. Getting started 30 »Set a screen lock You can lock your device by activating the screen lock feature. Once you set a screen lock, your device will require an unlock code each time you turn it on or unlock the touch screen. If you forget your PIN or password, bring your device to a Samsung Service Centre to reset it. Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software.

Set a face detection unlock 1 Open the application list and select Settings → Security 2 Read the warning message, and then select Next. 3 Select Set it up → Continue. 4 Adjust the device to fit your face inside the figure. 5 When your face is captured correctly, select Continue. 6 Complete the setup of the secondary unlock PIN or pattern.

→ Screen lock → Face unlock. Set an unlock signature 1 Open the application list and select Settings → Security 2 Select Set it up. 3 Draw a signature and select Continue. 4 → Screen lock → Signature. Repeat this step 3 times to set the signature unlock.

Complete the setup of the secondary unlock PIN or pattern. Getting started 31 Set an unlock pattern 1 Open the application list and select Settings → Security 2 See the on-screen instructions and example patterns and 3 4 5 → Screen lock → Pattern. select Next. Draw a pattern by dragging your finger to connect at least 4 dots and select Continue. Draw the pattern again to confirm and select Confirm. Complete the setup of the backup PIN. If you forget your unlock pattern, you can deactivate the screen lock feature with a backup PIN. Set an unlock PIN 1 Open the application list and select Settings → Security 2 Enter a new PIN (numeric) and select Continue. 3 Enter the PIN again and select OK. Set an unlock password → Screen lock → PIN.

1 Open the application list and select Settings → Security 2 Enter a new password (alphanumeric) and select 3 Continue. Enter the password again and select OK. → Screen lock → Password. Getting started 32 »Lock your SIM or USIM card You can lock your device by activating the PIN supplied with your SIM or USIM card. → Set up SIM card lock → Lock SIM card. 1 Open the application list and select Settings → Security Once the PIN lock is enabled, you must enter the PIN each time you turn on the device. If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card. If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it. 2 Enter your PIN and select OK.

»Activate the Find my mobile feature When someone inserts a new SIM or USIM card into your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device. To use this feature, you need a Samsung account for controlling the device from the web remotely. 1 Open the application list and select Settings → Security 2 Select Sign in.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)
<http://yourpdfguides.com/dref/4565917>

3 → SIM Change Alert. To create an account, select Create new account.

Read the terms and conditions, check the check box next to I accept all the terms above and select Agree. Enter your email address and password for your Samsung account and select Sign in. Getting started 33 4 Drag the slide bar to the right next to Save. 5 Select Alert message. 6 Enter the text message that will be sent to the recipients 7 and select OK.

Add recipients: □□ Select Create and enter phone numbers manually, including the country code and the + symbol. □□ Select phone numbers from your contact list by selecting Contacts. Select Save. 8 Enter text You can enter text by selecting characters on the virtual keypad, inputting handwriting on the screen, or speaking words into the microphone. You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages. You can change the keyboard type. Select on the system bar and select a keyboard type. and a voice You can also enter text with your voice. Select input option, according to the language you want to use.

»Change the keyboard type Getting started 34 »Enter text using the Samsung keypad Enter text by selecting alphanumeric keys and you can use the following keys: Number 1 2 3 4 5 6 7 Function Change case. Switch between Number/Symbol mode and ABC mode. Access the keypad settings. Tap and hold to switch to Handwriting mode, enter text by voice. Clear your input. Start a new line. Attach an item. Insert a space. When Predictive text (XT9) mode is activated, you can use continuous input, which allows you to enter text by sweeping on the keypad. □ p.

149 Getting started 35 »Copy and paste text While you are entering text, you can use the copy and paste feature to use text in other applications. 1 Tap and hold a word. 2 Drag or to select the text you want. 3 Select Copy to copy, or Cut to cut the text onto the 4 5 clipboard. In another application, tap and hold the text input field.

Select → Paste to insert the text from the clipboard into the text input field. Getting started 36 Using special features Your device can be used as a powerful notepad, thanks to multiple features that help you input text, capture drawings, and use motion controls or voice commands. Learn basic S Pen actions Your device is supplied with a specialised S Pen. With the S Pen, you can perform the following actions: Tap: Tap an item or area on the screen to select an item, open a menu, or launch an application. □□ Tap and hold: Tap and hold the S Pen on an item for more than two seconds.

□□ Double-tap: Quickly tap an item or area on the screen twice. □□ Flick: Tap an area on the screen, and then slowly drag the S Pen up, down, left, or right to move through lists or screens. □□ Draw: Draw a line or shape on the drawing pad. □□ Write: Write text on the handwriting panel. □□ Learn advanced S Pen actions With the S Pen, you can also perform the following advanced actions. Using special features 37 Back While pressing the S Pen button, drag the S Pen to the left to return to the previous screen. Menu While pressing the S Pen button, drag the S Pen down to open a list of options available on the current screen. Screen capture While pressing the S Pen button, tap and hold the screen to capture a screenshot. After capturing a screenshot, you can draw on it, write on it, or crop it. The edited image will be saved in My Files → sdcard → Pictures → Screenshots.

Quick note While pressing the S Pen button, double-tap the screen to launch the Quick note function. Using special features 38 Replacing the tip of S Pen If the tip is worn down or seems the S Pen is not working properly, replace the tip as new one. If the S Pen is not working properly after replacing the tip, make sure the tip is fully inserted until it reach the end. 1 Grab the tip with the tip extractor tool, and then pull it 2 out. Insert a new tip into the S Pen where you just removed until it reach the end. Learn motions Built-in motion recognition provides you with enhanced controls. You can perform actions by moving your device or performing gestures with your hands. To use some of these functions, you must first activate the motion recognition feature. Open the application list, select Settings → Motion, and then drag the slider to the right of the top right of the screen. Using special features 39 »Tilt While holding the device with two hands, tap and hold two points on the screen, and then tilt the device back and forth to zoom in or out.

»Pan Tap and hold an item on the screen, and then pan the device to the left or right to move the item to another page on the home screen or application list.

When an image is zoomed in, slide the device in any direction to scroll through the image. Using special features 40 Use Handwriting mode From the Samsung keypad, you can switch to Handwriting mode to enter text more easily. To switch to Handwriting mode, tap and hold , and then select without lifting from screen. Write your text on the handwriting panel.

To switch to the Samsung keypad, select . »Handwriting Tutorial □□ When you have written one character, write the next one. Write each letter to the right of the previous character. If you draw a stroke on top of a previous character, it may be recognised as a new character. -- E.

g. Not recognised Using special features 41 □□ Write characters upright (do not slant). -- E.g. Recognised -- E.g. Not recognised □□ Do not write characters on top of one another. -- E.g. Recognised -- E.

g. Not recognised □□ Most of the languages can recognise not only individual characters but characters written together that make up words. (This is referred to as supporting words and phrases.) The languages that do and do not support words and phrase should be listed in this guide. (All languages which support Handwriting SIP should support words and phrases.) Using special features 42 -- Languages that support words and phrases: English UK, English US, Čeština, Български, Dansk, Deutsch, Ελληνικά, Español, Eesti, Suomi, Français, Hrvatski, Magyar, íslenska, Italiano, Қазақ, □□□, Lietuvių, Latviešu, Norsk, Nederlands, Polski, Português, Română, Русски, Slovenčina, Slovenščina, Srpski, Svenska, Türkçe, Українська -- Supporting recognition of individual characters -- Supporting recognition of words and phrases □□ In some languages, cursive writing can be recognised. (Cursive writing recognition) -- For languages in which cursive writing is recognised, connected character writing should also be recognised. -- For languages in which cursive writing is not recognised, characters should be written separately. -- Languages that do and do not support cursive writing should be listed in this guide.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)

<http://yourpdfguides.com/dref/4565917>

-- Languages that support cursive writing: English UK, English US, Deutsch, Español, Français, Italiano, Nederlands, Português -- Languages that do not support cursive writing: Čeština, Български, Ελληνικά, Eesti, Hrvatski, Magyar, íslenska, Қазақ, Lietuvių, Latviešu, Polski, Română, Русский, Slovenčina, Slovenščina, Srpski, Türkçe, Українська, Dansk, Suomi, Norsk, Svenska Using special features 43 -- E.

g. A language that supports cursive writing: English -- E.g. A language that does not support cursive writing: When writing more than one line, make sure you leave enough space. -- E.

g. Recognised -- E.g. Not recognised Using special features 44 Use S Note With S Note, you can create notes by inserting various multimedia contents into notes and add a note shortcut to the home screen. S Note provides various templates to help you create notes easily.

Note/Idea note: You can create a simple note from an empty page. Meeting note: You can create a record of meetings, conferences, or lectures. Magazine: You can create a multimedia note by inserting multimedia files. Diary: You can create a photo diary. Recipe: You can create your own recipes. Travel: You can create travel essays. Memo: You can create memos. »Create a note 1 Open the application list and select S Note. 2 Select → a template. 3 Enter text or draw a sketch.

1 2 3 4 5 Using special features 45 Number 1 2 3 4 5 Function Switch between View and Edit modes. Draw a sketch; Change the pen settings (double-tap). p. 47 Use productivity tools. p. 48 Enter text with the keyboard; Change the text settings (double-tap). p. 47 Erase your text or sketch; Change the eraser thickness or clear your input (double-tap). 4 Add a photo or sound clip. 1 2 3 4 5 Number 1 2 3 4 5 Function Undo your last action. Redo your last action. Add a multimedia file, such as text or a photo. Add a sound clip by recording voices or other sounds. Restrict handwriting input only with the S Pen. Using special features 46 5 To add a page, select .

To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. When zoomed in, drag with two fingers to scroll through the screen. When you are finished, select Save. While creating a note, you can change following attributes: To change the pen type, line thickness, or pen colour, double-tap .

4 5 1 2 3 6 »Change the pen or text attributes Number 1 2 3 4 5 6 Function Change the pen type. Change the line thickness. Change the pen colour. Save the current settings as a pen profile. Open a small window to predraw the pen setting. Delete the preset pen profile. Using special features 47 To change the text attributes, double-tap 1 2 3 . Number 1 2 3 Function Select an option. View or change the current attributes. Change the text colour.

»Use productivity tools 1 Open the application list and select S Note. 2 Select → a template. 3 Double-tap and select a tool. Formula match: Convert a handwritten formula to a well-organised formula. Shape match: Convert shapes you have drawn. Handwriting-to-Text: Convert a handwritten note. When you tap and hold , the tool panel will appear and you can switch between tools easily. Select to search for information about the handwritten keyword on a preset webpage. Using special features 48 »Tutorial for handwritten formulas and figures Write a formula on a single line. If you write a long formula or a formula on more than one line, the device will convert the formula incorrectly.

Unclosed parenthesis or missing figure in the square root will temporarily result in incorrect formula conversion. The formula will be complete when you finish writing the formula. Using special features 49 When you draw an arrow, draw the body of the arrow first. When you draw the head of an arrow, draw it in one stroke. »View notes 1 Open the application list and select S Note.

2 Select to search for a note (if necessary). 3 Select a note. While viewing the note, use the following options: To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. To move to other pages of the note, select the arrow at the bottom of the screen, scroll left or right, and then select a page.

@@ Using special features 50 To hide or show the menu bar, select or . To switch to Edit mode, select or tap the screen. To send the note to others, select → Share via. To export the note, select → Export. Your note will be exported as an image file or a PDF file to My Files → sdcard → S Note Export. To manage the note with multiple pages, select → Edit pages. To save the note as an event, select → Create event. This feature may be unavailable depending on the selected template. To add a shortcut of the note to the home screen, select → Set as shortcut. To print the note using a Wi-Fi or USB connection, select → Print.

Your device is compatible only with some Samsung printers. To save the note for other name, select → Save as. »Edit notes 1 Open the application list and select S Note. 2 Select a note. 3 4 5 To add or change the note cover, tap and hold a note and select Edit cover. Select or tap the screen to switch to the Edit mode. Edit the note with the icons on the screen. To change the background image of the note, select → Change background. To delete the note, select → Delete. To add a tag, select → Add tag.

Select Save. Using special features 51 »Synchronise notes You can synchronise your notes with the web server. 1 Open the application list and select S Note. 2 Select → Sync → an option. 3 Select notes to sync → Sync.

4 5 To synchronise all notes, select → Sync all. Enter your email address and password, and then select Login. Select Sync now. »Manage notes with folders Create a folder 1 Open the application list and select S Note. 2 Select → Create folder.

3 Enter a name and select OK. 4 Select the new folder. To create a note, select → a template. To create sub-folders, select → Create folder. Copy or move notes 1 Open the application list and select S Note. 2 Select a folder (if necessary). 3 Select → Copy or Move. 4 Select notes → Copy or Move. 5 Move to a new location. 6 Select Copy here or Move here.

Using special features 52 Use the quick note pad From any screen, you can create a quick note of text and sketches. open the quick note pad. Enter text or draw a sketch.



You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide
<http://yourpdfguides.com/dref/4565917>

1 While pressing the S Pen button, double-tap the screen to 2 1 2 3 4 5 Number 1 2 3 4 5 Function Draw a sketch; Change the pen settings, such as the pen type, line thickness, or pen colour (double-tap). Enter text with the keyboard. Erase your text or sketch; Change the eraser thickness or clear your input (double-tap). Undo your last action. Redo your last action. . 3 When you are finished, select Using special features 53 Use S Planner Your device provides you with a powerful planner to help you organise your schedules and tasks more conveniently and effectively.

You can create and view events, add items, and change view modes. To launch S Planner, open the application list and select S Planner. 1 2 Number 1 2 Function Select today's date. Set which calendars to display. »Create an event or task To create an event, The tasks and notes you create cannot be synchronised with Google Calendar™.

1 Open the application list and select S Planner → . 2 If alert messages about the calendar sync appear, select Done. Using special features 54 3 Select Add event, and then enter details. □□ □□ 4 To search for and add a location view, select . To add a note, select Notes → Add link to S Note.

□□ To add a image, select Images → Take picture or Images. When you are finished, select Save. . To create a task, 1 Open the application list and select S Planner → 2 Select Add task, and then enter details. □□ 3 To add a note, select Notes → Add link to S Note. □□ To add a image, select Images → Take picture or Images. When you are finished, select Save. »Change the view mode To switch the calendar's view mode, select a view mode tab. You can also tap the screen with two fingers, and then pinch or spread them to change the view mode. 1 Open the application list and select S Planner.

2 Select a view mode at the top of the screen. □□ □□ Year: Monthly blocks for the current year. Month: Daily blocks for the current month. □□ Week: Hourly blocks for the days in one full week. □□ Day: Hourly blocks for one full day. □□ List: A list of all the events. □□ Task: A list of all task. Using special features 55 »View an event or task 1 Open the application list and select S Planner. 2 Select to search for an event or task (if necessary). 3 To limit the range of your search, select All → an option.

4 Select a date on the calendar. □□ 5 To select today's date, select Today. □□ To move to a specific day by entering a date manually, select → Go to, enter the date by selecting or , and then select Set. Select an event or task to view its details. »Stop an event alarm If you set an alarm for a calendar event, the event alarm icon appears at the specified time.

1 Select the event notification from the notifications panel. 2 Select an event or task to view more details. To snooze or dismiss the event alarm, check the box next to the event or task name and select Snooze or Dismiss. Using special features 56 Web Internet Learn to access and bookmark your favourite web pages. □□ You may incur additional charges for accessing the web and downloading media files.

For details, contact your service provider. □□ The web browser menu may be labelled differently depending on your region or service provider. □□ Available icons may vary depending on your region or service provider. »Browse web pages 1 Open the application list and select Internet to launch 2 your homepage. To access a specific web page, select the URL input field, and then enter the web address of the web page. Navigate web pages with the following keys: The above screen may differ depending on your region or service provider. Web 57 Number 1 2 3 4 5 6 7 8 9 Function Close the current tab. Move backward or forward to web pages in history. Reload the current web page; While the device is loading web pages, this icon changes to . Open a new tab.

Open another applications; Not all applications support this feature. Access a list of web browser options. Open a list of saved bookmarks and recent internet history. Search for information. Bookmark the current web page. While browsing a web page, use the following options: □□ To zoom in or out, tap the screen with two fingers and spread them apart (move your fingers closer together to zoom out). If you activate tilting motions, you can zoom in or out by tapping and holding two points with your fingers, and then tilting the device back and forth. □□ To display different applications on the same screen at the same time, select Multiscreen → an option. Web 58 To open a new tab, select → New tab. To open a new tab without saving cookies, select → New incognito tab.

□□ To add the bookmark shortcut to the Home screen, select → Add shortcut to home. □□ To send the web address of the web page to others, select → Share page. □□ To search for text on the web page, select → Find on page. □□ To switch to the desktop view, select → Desktop view. □□ To save the current web page and read it offline later, select → Save for offline reading.

You can view the saved pages by selecting → Saved pages. □□ To view the items downloaded from the web, select → Downloads. □□ To print the web page using a Wi-Fi or USB connection, select → Print. Your device is compatible only with some Samsung printers. □□ To customise browser settings, select → Settings.

□□ □□ »Search for information by voice This feature may be unavailable depending on your region or service provider. 1 Open the application list and select Internet. 2 Select the URL input field. 3 Select and say a keyword into your device's microphone. The device searches for information and web pages related with the keyword. Web 59 »Open multiple pages You can open multiple pages and switch back and forth between them. 1 Open the application list and select Internet. 2 Select to open a new tab. 3 Access another web page on the new tab. 4 To switch back and forth between currently open tabs, select the title of a tab.

»Bookmark your favourite web pages Add a bookmark If you know the web address of a web page, you can manually add a bookmark. 1 Open the application list and select Internet. 2 Enter a web address or a navigate to a web page. 3 Select → to bookmark the current web page. 4 5 6 You can also select to bookmark the current web page. Enter a name for the bookmark. Enter the web address for your favourite web page, and then select a bookmark location to add (if necessary). Select OK. To use bookmark options, select and tap and hold a bookmark: □□ To open the web page in the current tab, select Open. □□ To open the web page in a new tab, select Open in new tab. Web 60 To edit the bookmark, select Edit bookmark.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/4565917)

[GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)

<http://yourpdfguides.com/dref/4565917>

To add the bookmark shortcut to the Home screen, select Add shortcut to home. □□ To send the web address of the web page to others, select Share link. □□ To copy the web address of the web page, select Copy link URL. □□ To delete the bookmark, select Delete bookmark. □□ To use the web page as your homepage of the browser, select Set as homepage. □□ □□ Create a bookmark folder 1 Open the application list and select Internet. 2 Select → . 3 Enter a name for the bookmark folder. 4 Select Done.

»Access recent history 1 Open the application list and select Internet. 2 Select → History. 3 Select a web page to access. Game Hub Learn to access games. 1 Open the application list and select Game Hub. 2 Select a game service. 3 Search for and access games. The games available may vary depending on your region or service provider. Web 61 Play Books Browse and download book files with Google Play Books. You can read book files on your device.

In the application list, select Play Books. This feature may be unavailable depending on your region or service provider. Play Store Based on the Android platform, your device's functionality can be extended by installing additional applications. Play Store provides you an easy and quick way to shop for games and mobile applications. @@ □□ Your device will save user files from downloaded applications to the internal memory. »Download and install an application 2 3 1 Open the application list and select Play Store. You can also select → Play Store at the top right of the application list. If you are launching this application for the first time, select Accept. Search for an application and download it to the device. When the download is complete, the device will install the application automatically.

Web 62 »Uninstall an application 1 Open the application list and select Play Store. 2 Select . 3 Select the item you want to delete. 4 Select Uninstall → OK. YouTube Learn to view and upload videos via YouTube.

This feature may be unavailable depending on your region or service provider. »Watch videos 1 Open the application list and select YouTube. 2 Select a video. 3 Tap a video screen and select to display a full screen. 4 Control playback with the virtual keys.

»Upload videos 1 Open the application list and select YouTube. 2 Select → Sign in, and then select your Google account 3 4 if it is linked to YouTube. You can also select Add account and set up an account to sign in YouTube. Select UPLOAD, and then select a video. Enter details for the upload and select Upload. Web 63 Video Hub Learn to access videos. 1 Open the application list and select Video Hub. 2 Select a category. 3 Search for and access videos. Maps Learn to use Google Maps™ to find your location, search the map for streets, cities, or countries, and get directions.

@@ □□ You must activate location services to find your location and search the map. □ p. 127 »Search for a specific location 2 3 4 1 Open the application list and select Maps. The map will display your current location. Select . Enter a keyword for the location. To search for a location by voice, select . Select the location you want to view details. □□ To view the all of the search result, select Search Results. □□ To view your current location, select . □□ To search for a place around you, select . □□ To get directions to a specific destination, select . □□ To add layers to the map, select . Web 64 To access a list of other options, select . @@ You can also double-tap the screen.

To return to the original size, double-tap the screen. □□ To add a star to the location, select the balloon of the location name → . □□ »Get directions to a specific destination 1 Open the application list and select Maps. 2 Select . 3 Enter the addresses of the starting location and the 4 5 ending location.

To enter an address from your contact list or starred places, or point the location on the map, select → an option. Select a travel method (car, bus, or walk) and select Go. The route is indicated on the map. Depending on the selected travel method, you may see multiple routes. When you are finished, select →

Clear Map. Web 65 Latitude Learn to share your location with your friends and view friends' locations via Google Latitude™. This feature may be unavailable depending on your region or service provider. 1 Open the application list and select Latitude. 2 3 4 5 The device automatically joins Latitude. Select → an option.

Select a friend you want to add, or enter an email address and select Add friends. Select Yes. When your friend accepts your invitation, you can share locations. Select a friend from the list. Your friends' locations are marked with their photos on the map. Places Learn to search for a place around you. This feature may be unavailable depending on your region or service provider. 1 Open the application list and select Places. 2 Select a category. 3 Your device searches for places around your current location that are related to the category.

Select a place name to view its details. Web 66 4 While viewing information, use the following options: To view the place on the map, select . To view the route to the place, select . □□ To view the phone number of the place, select □□ □□ . Navigation Learn to use the GPS navigation system to find and show your destination with voice guidance.

□□ Navigation maps, your current location, and other navigational data may differ from actual location information. You should always pay attention to road conditions, traffic, and any other factors that may affect your driving and follow all safety warnings and regulations while driving. 1 Open the application list and select Navigation. 2 If you are launching this application for the first time, 3 4 select Accept. Enter your destination by using one of the following methods: □□ Speak your destination such as "Navigate to destination.

» □□ Enter your destination with the virtual keypad. □□ Select your destination from addresses of your contacts. □□ Select your destination from the list of your starred places. Follow the on-screen instructions to use the navigation service. Web 67 Samsung Apps Samsung Apps allows you to simply and easily download an abundance of applications directly to your device. Featuring a wealth of games, news, reference, social networking, navigation, health related applications and more, Samsung Apps gives you instant access to a huge choice of mobile experience. Your device gets smarter with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better. @@ □□ For details, please visit www.samsungapps.com.

com. 1 Open the application list and select Samsung Apps. 2 If you are launching this application for the first time, read 3 the terms and conditions and select Accept.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)
<http://yourpdfguides.com/dref/4565917>

Search for and download applications as desired. S Suggest Find and download the latest applications suggested by Samsung. Open the application list and select S Suggest. Web 68 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features. »Make or answer a call You can use the buttons or the touch screen when you make, accept, end or reject calls. Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call. Make a call 1 Open the application list and select Phone → Keypad, 2 3 and enter an area code and a phone number.

Select to make a voice call. For a video call, select Video call. To end the call, select End. ☐☐ Use the phonebook to save numbers you dial frequently. ☐ p. 109 ☐☐ To quickly access the call log to redial the numbers you dialled recently, select Phone → Logs. Communication 69 Answer a call 1 When a call comes in, drag in any direction until it reaches the border of the circle. When the device is ringing, press the Volume key to mute the ringtone. 2 To end the call, select End call. Reject a call When a call comes in, drag in any direction until it reaches the border of the circle.

To send a message when you reject incoming calls, select Reject call with message. First set a text message to be sent to callers. Open the application list and select Phone → Keypad → → Call settings → Call settings → Set reject messages. Make an IP call 1 Open the application list and select Phone → Keypad, 2 and enter an area code and a phone number. Select . ☐☐ You can set accounts for IP calls. Open the application list and select Phone → Keypad → → Call settings → Internet call settings → Accounts. ☐☐ You can set an account as your default IP call account. Open the application list and select Phone → Keypad → → Call settings → Internet call settings → Accounts → an account → Set as primary account. Communication 70 Insert a pause Learn to insert a pause between numbers when entering a PIN or account number on an automatic answering system.

1 Open the application list and select Phone → Keypad, 2 3 4 and then enter an area code and a phone number. Select → Add 2-sec pause or Add wait. Enter additional numbers. Select to dial the number. ☐☐ For a 2-second pause, the additional numbers will be sent to the system automatically after 2 seconds. ☐☐ For a waiting pause, select Yes when the pop-up window appears. Call an international number 1 Open the application list and select Phone → Keypad, 2 and tap and hold 0 to insert the + character. Enter the complete number you want to dial (country code, area code and phone number), and then select to dial the number. »Use a headset By plugging a headset into the device, you can answer and control calls hands-free: ☐☐ To answer a call, press the headset button. ☐☐ To reject a call, press and hold the headset button.

☐☐ To place a call on hold or retrieve a held call during a call, press and hold the headset button. ☐☐ To end a call, press the headset button. Communication 71 »Use options during a voice call You can use the following options while a voice call is in progress: ☐☐ To adjust the voice volume, press the Volume key up or down. ☐☐ To place a call on hold, select Hold. To retrieve a held call, select Unhold.

☐☐ To dial a second call, select Add call, and then dial a new number. ☐☐ To answer a second call, drag in any direction until it reaches the border of the circle when a call waiting tone sounds. The device asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature. ☐☐ To open the dialling screen, select Keypad.

☐☐ To turn off the microphone so that the other party cannot hear you, select Mute. ☐☐ To listen and talk to the other party via a Bluetooth headset, select Headset. ☐☐ To open the phonebook, select → Contacts. ☐☐ To switch between two calls, select Swap. ☐☐ To make a multiparty call (conference call), make or answer a second call and select Merge when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature. Communication 72 You can use the following options while a video call is in progress: ☐☐ To switch between the front and rear camera lens, select Switch camera. ☐☐ To open the dialling screen, select Keypad. ☐☐ To turn off the microphone so that the other party cannot hear you, select Mute.

☐☐ To listen and talk to the other party via a Bluetooth headset, select Headset. ☐☐ To hide your image from the other party, select → Hide me. ☐☐ To select an alternative image or video to be shown to the other party, select → Images or Videos. ☐☐ To use the other party's image, tap and hold the other party's image. You can capture an image of the screen or record the video call by selecting Capture or Record. It is illegal in many areas to record a call without permission. Always ask the other party for permission before recording a call. »Use options during a video call »View and dial missed calls Your device will display calls you have missed on the display. To dial the number of a missed call, open the notifications panel and select the missed call. Communication 73 »Set auto rejection Use auto rejection to reject calls from certain numbers automatically.

To activate auto rejection and create auto reject lists, 1 Open the application list and select Phone → Keypad → 2 Select Auto reject mode, and then select an option. ☐☐ ☐☐ → Call settings → Call settings → Call rejection. 3 4 5 6 7 All numbers: Reject all calls. Auto reject numbers: Reject calls for the certain number. Turn on the auto rejection mode by dragging the slide bar to the right next to Auto reject mode.

Select Auto reject list. Select . Enter a number to reject and select Save. You can set the criteria for the number. To add more numbers, repeat steps 4-6. »Set call forwarding Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area. 1 Open the application list and select Phone → Keypad → → Call settings → Call settings → Call forwarding → a call type. Communication 74 2 Select a condition. 3 Enter a number to which calls will be forwarded and select Enable. Your setting will be sent to the network. »Use Fixed Dialling Number (FDN) mode In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)
<http://yourpdfguides.com/dref/4565917>

To activate FDN mode, 1 Open the application list and select Phone → Keypad → 2 3 → Call settings → Call settings → Additional settings → Fixed Dialling Numbers → Enable FDN. Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts to be used in FDN mode.

»Set call barring → Call barring is a network feature that restricts certain types of calling or prevents others from making calls with your device. 1 Open the application list and select Phone → Keypad 2 Select a condition. 3 Enter a call barring password and select OK. Your setting will be sent to the network. →

Call settings → Call settings → Additional settings → Call barring → a call type. Communication 75 Call waiting is a network feature to alert you of an incoming call while you are on a previous call. This feature is available only for voice calls. Open the application list and select Phone → Keypad → → Call settings → Call settings → Additional settings → Call waiting. Your setting will be sent to the network. »Set call waiting »View call logs You can view logs of your calls and messages filtered by their types.

1 Open the application list and select Phone → Logs. 2 Select → View by → an option. 3 Select a log to view its details. From the detail view, you can dial or send a message to the number. You can also use some helpful functions by tapping and holding a log on the list.

»Customise call settings 1 Open the application list and select Phone → Keypad → 2 Change the following options: Option Call rejection Set reject messages Function Set to reject all calls or from specified phone numbers automatically. You can add phone numbers to the auto reject list. Add or edit the message that will be sent when you reject a call. → Call settings → an option. Communication 76 Option Function ☐☐ Call vibrations: Set the device to Call alert vibrate when the other party answers or ends a call.

☐☐ Call status tones: Set the device to alert you to the call status during a call. ☐☐ Alerts on call: Set the device to alert you to events during a call. The power key Set to end a call when you press the ends calls Power key. or not the device answers calls automatically after a specified period (available only when a headset is connected). ☐☐ Automatic answering timer: Select the length of time that the device Accessory waits before answering calls. settings for call ☐☐ Outgoing call condition: Set to allow outgoing calls with a Bluetooth headset, even when your device is locked. ☐☐ Outgoing call type: Select the type of outgoing calls to make you use a Bluetooth headset. Use extra vol. for calls Increase volume in pocket Set to show the volume key during a call. Set the device to raise the ringtone volume when the device is in an enclosed, such as a bag or pocket.

☐☐ Automatic answering: Set whether Communication 77 Option Call forwarding Function Set to send incoming calls to a specified number. ☐☐ Caller ID: Display your caller ID to ☐☐ Call barring: Set to restrict calls by ☐☐ Call waiting: Set the device to alert other parties for outgoing calls. call type.

Additional settings you to incoming calls during a call. ☐☐ Auto redial: Set to automatically redial a call that was not connected or that was cut off. ☐☐ Fixed Dialling Numbers: Activate FDN mode to prevent calls to phone numbers that are not in the FDN list on the SIM or USIM card. ☐☐ Auto area code: Set to insert a prefix (area or country code) automatically before a phone number. Select an alternative image to be shown to the other party. Set to show your live image to the other party. Set to attempt a voice call when a video call fails to connect.

Select a voicemail service provider. Enter the voicemail server number. You can obtain this number from your service provider. Video call image Own video in received call Use call fail options Voicemail service Voicemail settings Communication 78 Option Vibrate Accounts Use Internet calling Function Set the device to vibrate when voicemails are received. Set to accept IP calls and set up your accounts for IP call services.

Set the device to use IP call services. IP call services are provided only via Wi-Fi. Messaging Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received. You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider.

»Send a text message ☐☐ 1 Open the application list and select Messaging → 2 Add recipients of your message. 3 4 . Enter phone numbers manually, separating them with a semicolon or a comma. ☐☐ Select phone numbers from the lists by selecting . Select Enter message and enter your message text. To insert emoticons, select → Insert smiley. to send the message. Select Communication 79 »Send a multimedia message ☐☐ 1 Open the application list and select Messaging → 2 Add recipients of your message. . Enter phone numbers or email addresses manually, separating them with a semicolon or a comma.

☐☐ Select phone numbers or email addresses from the lists by selecting . When you enter an email address, the device will convert the message as a multimedia message. 3 Select Enter message and enter your message text. 4 5 To insert emoticons, select → Insert smiley. and add an item. Select You can select a file from the file list or create a new photo or video. to send the message. Select »View a text or multimedia message 2 3 1 Open the application list and select Messaging. Your messages are grouped into message threads by contact, like a messenger. Select a contact.

For a multimedia message, select a message to view the details. Communication 80 »Listen to voice mail messages If you have set missed calls to be diverted to the voice mail server, callers can leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to your messages, 1 Open the application list and select Phone → Keypad, 2 . and then tap and hold Follow the instructions from the voice mail server. You must save the voice mail server number before accessing the server.

Contact your service provider for the number. Google Mail You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold.

@@@@ Select SEND to send the message.

@ @2 Select to update the message list. @ @ ☐☐ To search for an email message, select . ☐☐ To archive the message, select . ☐☐ To delete the message, select . ☐☐ To add a label to the message, select .



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8000 user guide](http://yourpdfguides.com/dref/4565917)

<http://yourpdfguides.com/dref/4565917>