



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY NOTE 10.1 GT-N8010. You'll find the answers to all your questions on the SAMSUNG GALAXY NOTE 10.1 GT-N8010 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SAMSUNG GALAXY NOTE 10.1 GT-N8010**  
**User guide SAMSUNG GALAXY NOTE 10.1 GT-N8010**  
**Operating instructions SAMSUNG GALAXY NOTE 10.1 GT-N8010**  
**Instructions for use SAMSUNG GALAXY NOTE 10.1 GT-N8010**  
**Instruction manual SAMSUNG GALAXY NOTE 10.1 GT-N8010**



**GT-N8010**  
user manual



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

**Manual abstract:**

Images and screenshots used in this user manual may differ in appearance from the actual product. Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to [www.samsung.com](http://www.samsung.com) for the latest version of the user manual. Using this manual 2 Available features and additional services may vary by device, software, or service provider. Attempting to customise the operating system may cause your device or applications to work improperly. You may upgrade your mobile device's software by accessing [www.samsung.com](http://www.samsung.com).

Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user. Please keep this manual for future reference. Using this manual 3 Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning—situations that could cause injury to yourself or others Caution—situations that could cause damage to your device or other equipment Note—notes, usage tips, or additional information Refer to—pages with related information; for example: p. 12 (represents “see page 12”) Followed by—the order of options or menus you must select to perform a step; for example: Open the application list and select Settings → About device (represents Settings, followed by About device) → Copyright Copyright © 2012 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google, Google Maps, Google Mail™, YouTube™, Google Play™ Store, and Google Talk™ are trademarks of Google, Inc. Bluetooth is a registered trademark of the Bluetooth SIG, Inc.

worldwide. Windows Media Player® is a registered trademark of Microsoft Corporation. Wi-Fi, Wi-Fi Protected Setup, Wi-Fi Direct, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. DivX, DivX Certified and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence. All other trademarks and copyrights are the property of their respective owners. Using this manual 5 ABOUT DIVX VIDEO DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX videos.

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration. DivX Certified® to play DivX® video up to HD 720p, including premium content. May play DivX® video up to HD 1080p. ABOUT DIVX VIDEO-ON-DEMAND Using this manual 6

Contents Assembling . . .

.....

.....

.....

.....

.....

.....

.....

.. 11 Unpack .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

11 Charge the battery .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 12 Insert a memory card (optional) .....

.....  
.....  
.....  
.....

... 14 Getting started . .

.....  
.....

.....  
.....  
.....  
.....

.. 17 Turn your device on and off .....

.....  
.....  
.....

.....  
.....  
.....

..... 17 Get to know your device .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.. 18 Use the S Pen and the touch screen .....

.....  
.....  
.....

... 22 Get to know the Home screen ..

.....  
.....

.....  
.....  
.....  
.....

..... 24 Access applications . ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

... 28 Customise your device ..

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 29 *Enter text* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 33 *Using special features* .

.....  
.....  
.....

..... 35 *Learn basic S Pen actions...*

.....  
.....  
.....

.....  
.....  
.....

. 35 *Learn advanced S Pen actions...*

.....  
.....

.....  
.....  
.....

..... 36 *Replacing the tip of S Pen...*

.....  
.....  
.....

.....  
.....  
.....

..... 37 *Learn motions.*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

..... 37 Use Handwriting mode.....

.....  
.....  
.....  
.....  
.....

..... 39 Use S Note..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 43 Use the quick note pad...

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 51 Use S Planner.....

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 52 Web .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. 55 Internet .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 55 Game Hub . .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 60 Play Books .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

. 60 Contents 7 Play Store . ...

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.... 60 YouTube .

.....  
.....  
  
.....  
.....  
.....  
.....  
  
.....  
.....  
.....  
.....  
  
.....  
.....  
.....

*61 Video Hub .....*

.....  
.....  
.....  
.....  
  
.....  
.....  
.....  
.....  
  
.....  
.....  
.....

*.. 62 Maps .....*

.....  
.....  
.....  
.....  
  
.....  
.....  
.....  
.....  
  
.....  
.....  
.....  
.....

*..... 62 Latitude .....*

.....  
.....  
.....  
.....  
  
.....  
.....  
.....  
.....  
  
.....  
.....  
.....  
.....

*.. 64 Places ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

... *65 Navigation* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.... *65 Samsung Apps* . ....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. *66 S Suggest* . ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.... *67 Communication* .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *68 Google Mail* ...



.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *68 Email* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

..... *70 Talk* .....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *72 ChatON* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *73 Messenger* .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....  
.. 74 Google+ ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 74 Entertainment ..

.....

.....

.....

.....

.....

..... 75 Music Player .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 75 Music Hub ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 77 Camera .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.. 78 Video Player ...

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....

87 Gallery . ....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.... 90 Video Maker .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 93 Personal information . .....

.....  
.....

.....  
.....

*. 97 Contacts . .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 97 Contents & Connectivity ....*

.....  
.....  
.....

.....  
.....  
.....

*..... 100 PC connections . .*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.. 100 Wi-Fi ...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 102 Wi-Fi Direct .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 105 AllShare Cast ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 106 AllShare Play .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.. 107 Bluetooth ...

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....

... 110 GPS . .

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 112 TV connections .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 113 VPN connections .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 115 Tools ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 117 Alarm ...*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 117 Calculator .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 118 Downloads .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

118 Dropbox .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

... 118 Search .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. 119 My Files .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 120 Polaris Office ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*. 122 PS Touch .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 124 World Clock .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*. 124 Settings . .....*

.....  
.....  
.....

.....  
.....  
.....

*125 Access the Settings menu . .....*

.....  
.....  
.....

.....  
.....  
.....

*..... 125 Wi-Fi ..*

.....  
.....  
.....

.....  
.....



.....  
.....

.....  
.....  
.....  
.....

.....  
*125 Bluetooth .....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*. 125 Data usage . ...*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*..... 125 More settings .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*.. 125 Sound .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....

*the device is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the USB power adapter from the power outlet or unplug the USB cable from the device. □□ While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance. □□ If your device is not charging properly, bring your device and the charger to a Samsung Service Centre.*

*3 When the battery is fully charged, first unplug the USB power adapter and USB cable from the device, and then from the power outlet. Assembling 13 To save energy, unplug the USB power adapter when not in use. The USB power adapter does not have a power switch, so you must unplug the USB power adapter from the electrical socket when not in use to avoid wasting power. The device should remain close to the electrical available Wi-Fi AP connected Bluetooth activated GPS activated Uploading data 2. If your device has fatal errors or hang-ups, or freezes, you may need to reset the device to regain functionality. Getting started 20 Icon Definition Downloading data Connected to PC New email message New Google Mail Alarm activated Event notification Flight mode activated Music playback in progress Error occurred or caution required Smart stay activated Battery power level 3 10:00 AM Current time 3. If you use a charger that is not approved by Samsung, this indicator will not appear. Getting started 21 Use the S Pen and the touch screen Your device's touch screen lets you easily select items or perform functions. Learn basic actions for using the touch screen. □□ Do not press the touch screen with your fingertips, or use sharp tools on the touch screen.*

*Doing so may damage the touch screen or cause it to malfunction. □□ Do not allow the touch screen to come into contact with other electrical devices.*



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

Electrostatic discharges can cause the touch screen to malfunction. □□ Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water. □□ Do not leave the touch screen idle for extended periods. Doing so may result in afterimages or ghosting. Any damage caused by misuse is not covered by the warranty. □□ Do not bend the S Pen. □□ Do not use the S Pen near by a source of magnetic interference.

It may cause the S Pen to malfunction or freeze. For optimal use of the touch screen, remove the screen protection film before using your device. □□ You can purchase a replacement S Pen from your local Samsung dealer. □□ If your S Pen is not working properly, replace the tip of the S pen or take it to a Samsung Service Centre. □□ For best results, keep the S Pen mostly perpendicular to the touch screen and avoid using it at sharp angles.

□□ Getting started 22 Control your touch screen with the following actions: □□ Tap: Touch once with your finger or the supplied S Pen to select or launch a menu, option, or application. □□ Tap and hold: Tap an item and hold it for more than 2 seconds to open a list of options. □□ Drag: Tap and drag your finger up, down, left, or right to move to items on lists. □□ Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item. □□ Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages.

»Rotate the touch screen Your device has a built-in motion sensor that detects its orientation. If you rotate the device, the interface will automatically rotate according to the orientation. To set the interface to keep the orientation, select the right side of the system bar, and then select Screen rotation on the notifications panel. »Lock or unlock the touch screen When you do not use the device for a specified period, your device turns off the touch screen and automatically locks the touch screen to prevent any unwanted device operations. To manually lock the touch screen, press the Power key. To unlock, turn on the screen by pressing the Power key, tap anywhere on the screen, and then flick your finger in any direction. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. □ p. 31 Getting started 23 Get to know the Home screen When the device is in Idle mode, you will see the Home screen. From the Home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

Scroll left or right to a panel of the Home screen. 1 2 3 4 The above screen may differ depending on your region or service provider. Number 1 2 3 4 Function Select a dot at the top of the screen to move directly to the corresponding screen. Search for applications and files in your device and specific data on the web with the Google Search widget. Access the application list. System bar (See the following section.) Getting started 24 System bar From the system bar, you can quickly navigate screens, access applications, view system information, and more. Number 1 2 3 4 5 6 Function Capture the current screen; Capture the current screen and open the drawing pad (tap and hold). Return to the previous screen. Return to the Home screen; Access the task manager (tap and hold). Open the list of recent application; Access the application list (tap and hold). Display indicator icons and your device's current status; Open the notifications panel. Open the mini apps panel. »Add an application shortcut on the Home 1 Open the application list and tap and hold an application 2 icon. Move the icon to the location you want or move it to another panel of the Home screen.

screen Getting started 25 »Add a widget on the Home screen Widgets are small applications that provide convenient functions and information on your Home screen. The widgets available may vary depending on your region or service provider. 1 Open the application list and select Widgets to open the 2 3 widget panel. Scroll left or right on the widget panel. Tap and hold a widget to add it to the Home Screen.

»Move an item on the Home screen 2 appears. Drag the item to the location you want. 1 Tap and hold an item to move until the Home screen grid »Remove an item on the Home screen 1 Tap and hold an item to remove. 2 3 The rubbish bin appears at the top of the Home screen. Drag the item to the rubbish bin. When the item turns red, release the item. »Add or remove a panel from the Home screen You can add or remove Home screen panels to organise widgets. pinch them together to switch to Edit mode. 1 On the Home screen, place two fingers on the screen and Getting started 26 2 Add, remove, or reorganise panels: □□ □□ 3 To add a new panel, select . To remove a panel, tap and hold the panel's thumbnail image, and then drag it to the rubbish bin.

□□ To set a panel for the default Home screen, select . □□ To change the order of panels, tap and hold the panel's thumbnail image, and then drag it to a new location. to return to the previous screen. Select »Use the notifications panel From the Home screen or while using an application, select the right side of the system bar, and then select an option on the notifications panel. You can view the device's current status and use the following options: □□ Wi-Fi: Activate or deactivate the Wi-Fi feature. □□ GPS: Activate or deactivate the GPS feature. □□ Sound: Activate or deactivate Silent mode. You can vibrate or mute your device in Silent mode. □□ Screen rotation: Activate or deactivate the auto rotation. □□ Power saving: Activate or deactivate Power saving mode. □□ Notification: Set the device to alert you for various events. □□ Bluetooth: Activate or deactivate the Bluetooth feature. □□ Driving mode: Activate or deactivate Driving mode. □□ Sync: Activate or deactivate auto-syncing of applications. Available options may vary depending on your region or service provider.

Getting started 27 Access applications 1 From the Home screen, select 2 3 4 list. Scroll left or right to another screen. You can also select one of the dots at the bottom of the screen to move directly to the corresponding screen. Select an application. To view the widgets panel, select Widgets. to return to the previous screen; Select to Select return to the Home screen. to access the application »Access recent applications 1 Select 2 to view the applications you have accessed recently. Select an application. »Use the task manager Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs using the task manager.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

1 Select → Task manager → Active applications. 2 To close an application, select End. To close all active applications, select End all.

Getting started 28 Customise your device Get more from your device by customising it to match your preferences. »Change the language of the display 2 Language and input → Language. Select a language you want. 1 Open the application list and select Settings → »Set the current time and date 2 1 Open the application list and select Settings → Date and time. Select your time zone, set the time and date, and change other options. Open the application list and select Settings → Sound → Touch sounds. »Turn the touch tone on or off »Adjust the device's volume for each sounds. 1 Press the Volume key up or down. 2 Select and drag the sliders to adjust the volume level »Switch to Silent mode To mute or unmute your device, do one of the following: □□ Open the notifications panel at the right side of the system bar and select Sound. □□ Press and hold the Power key, and then select .

Getting started 29 »Select a wallpaper for the Home screen 1 Tap and hold anywhere on the Home Screen. 2 Select Set wallpaper for → Home screen. □□ 3 4 Gallery: Photos you took or images downloaded from the Internet. □□ Live wallpapers: Animated images included with the device. □□ Wallpapers: Wallpaper images included with the device.

Select an item. Select Set wallpaper. If you selected an item from Gallery, move or resize the blue frame by dragging it, and then select Done. Samsung is not responsible for any use of default images or wallpapers provided on your device. »Adjust the brightness of the display → Brightness.

1 Open the application list and select Settings → Display 2 Clear the check box next to Automatic brightness. 3 Drag the slider to adjust the brightness. 4 Select OK. The brightness level of the display will affect how quickly the device consumes battery power. Getting started 30 »Set a screen lock You can lock your device by activating the screen lock feature. □□ Once you set a screen lock, your device will require an unlock code each time you turn it on or unlock the touch screen. □□ If you forget your PIN or password, bring your device to a Samsung Service Centre to reset it. □□ Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software. Set a face detection unlock 1 Open the application list and select Settings → Security 2 Read the warning message, and then select Next. 3 Select Set it up → Continue.

4 Adjust the device to fit your face inside the figure. 5 When your face is captured correctly, select Continue. 6 Complete the setup of the secondary unlock PIN or pattern. → Screen lock → Face unlock. Set an unlock signature 1 Open the application list and select Settings → Security 2 Select Set it up. 3 Draw a signature and select Continue. 4 → Screen lock → Signature. Repeat this step 3 times to set the signature unlock. Complete the setup of the secondary unlock PIN or pattern. Getting started 31 Set an unlock pattern 1 Open the application list and select Settings → Security 2 See the on-screen instructions and example patterns and 3 4 5 → Screen lock → Pattern.

select Next. Draw a pattern by dragging your finger to connect at least 4 dots and select Continue. Draw the pattern again to confirm and select Confirm. Complete the setup of the backup PIN. If you forget your unlock pattern, you can deactivate the screen lock feature with a backup PIN.

Set an unlock PIN 1 Open the application list and select Settings → Security 2 Enter a new PIN (numeric) and select Continue. 3 Enter the PIN again and select OK. Set an unlock password → Screen lock → PIN. 1 Open the application list and select Settings → Security 2 Enter a new password (alphanumeric) and select 3 Continue. Enter the password again and select OK.

→ Screen lock → Password. Getting started 32 Enter text You can enter text by selecting characters on the virtual keypad, inputting handwriting on the screen, or speaking words into the microphone. You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages. You can change the keyboard type. Select on the system bar and select a keyboard type. and a voice You can also enter text with your voice. Select input option, according to the language you want to use. »Change the keyboard type »Enter text using the Samsung keypad Enter text by selecting alphanumeric keys and you can use the following keys: Number 1 2 3 4 Function Change case. Switch between Number/Symbol mode and ABC mode.

Access the keypad settings. Tap and hold to switch to Handwriting mode, enter text by voice. Clear your input. Getting started 33 Number 5 6 7 Function Start a new line. Attach an item. Insert a space. When Predictive text (XT9) mode is activated, you can use continuous input, which allows you to enter text by sweeping on the keypad. □ p. 133 »Copy and paste text While you are entering text, you can use the copy and paste feature to use text in other applications. 1 Tap and hold a word.

2 Drag or to select the text you want. 3 Select Copy to copy, or Cut to cut the text onto the 4 5 clipboard. In another application, tap and hold the text input field. Select Paste to insert the text from the clipboard into the text input field. Getting started 34 Using special features Your device can be used as a powerful notepad, thanks to multiple features that help you input text, capture drawings, and use motion controls or voice commands.

Learn basic S Pen actions Your device is supplied with a specialised S Pen. With the S Pen, you can perform the following actions: Tap: Tap an item or area on the screen to select an item, open a menu, or launch an application. □□ Tap and hold: Tap and hold the S Pen on an item for more than two seconds. □□ Double-tap: Quickly tap an item or area on the screen twice. □□ Flick: Tap an area on the screen, and then slowly drag the S Pen up, down, left, or right to move through lists or screens.

□□ Draw: Draw a line or shape on the drawing pad. □□ Write: Write text on the handwriting panel. □□ Using special features 35 Learn advanced S Pen actions With the S Pen, you can also perform the following advanced actions. Back While pressing the S Pen button, drag the S Pen to the left to return to the previous screen. Menu While pressing the S Pen button, drag the S Pen down to open a list of options available on the current screen. Screen capture While pressing the S Pen button, tap and hold the screen to capture a screenshot. After capturing a screenshot, you can draw on it, write on it, or crop it.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

The edited image will be saved in My Files → sdcard → Pictures → Screenshots. Quick note While pressing the S Pen button, double-tap the screen to launch the Quick note function. Using special features 36 Replacing the tip of S Pen If the tip is worn down or seems the S Pen is not working properly, replace the tip as new one.

If the S Pen is not working properly after replacing the tip, make sure the tip is fully inserted until it reach the end. 1 Grab the tip with the tip extractor tool, and then pull it 2 out. Insert a new tip into the S Pen where you just removed until it reaches the end. Learn motions Built-in motion recognition provides you with enhanced controls. You can perform actions by moving your device or performing gestures with your hands. To use some of these functions, you must first activate the motion recognition feature. Open the application list, select Settings → Motion, and then drag the slider to the right of the top right of the screen. Using special features 37 »Tilt While holding the device with two hands, tap and hold two points on the screen, and then tilt the device back and forth to zoom in or out. »Pan Tap and hold an item on the screen, and then pan the device to the left or right to move the item to another page on the home screen or application list. When an image is zoomed in, slide the device in any direction to scroll through the image.

Using special features 38 Use Handwriting mode From the Samsung keypad, you can switch to Handwriting mode to enter text more easily. To switch to Handwriting without lifting mode, tap and hold , and then select from screen. Write your text on the handwriting panel. To switch to the Samsung keypad, select . »Handwriting Tutorial □□ When you have written one character, write the next one.

Write each letter to the right of the previous character. If you draw a stroke on top of a previous character, it may be recognised as a new character. -- E.g. Not recognised Using special features 39 □□ Write characters upright (do not slant).

-- E.g. Recognised -- E.g. Not recognised □□ Do not write characters on top of one another. -- E.g. Recognised -- E.g. Not recognised □□ Most of the languages can recognise not only individual characters but characters written together that make up words.

(This is referred to as supporting words and phrases.) The languages that do and do not support words and phrase should be listed in this guide. (All languages which support Handwriting SIP should support words and phrases.) -- Languages that support words and phrases: English UK, English US, Čeština, Български, Dansk, Deutsch, Ελληνικά, Español, Eesti, Suomi, Français, Hrvatski, Magyar, íslenska, Italiano, Қазақ, □□□, Lietuvių, Latviešu, Norsk, Nederlands, Polski, Português, Română, Русский, Slovenčina, Slovenščina, Srpski, Svenska, Türkçe, Українська Using special features 40 -- Supporting recognition of individual characters -- Supporting recognition of words and phrases □□ In some languages, cursive writing can be recognised.

(Cursive writing recognition) -- For languages in which cursive writing is recognised, connected character writing should also be recognised. -- For languages in which cursive writing is not recognised, characters should be written separately. -- Languages that do and do not support cursive writing should be listed in this guide. -- Languages that support cursive writing: English UK, English US, Deutsch, Español, Français, Italiano, Nederlands, Português -- Languages that do not support cursive writing: Čeština, Български, Ελληνικά, Eesti, Hrvatski, Magyar, íslenska, Қазақ, □□□, Lietuvių, Latviešu, Polski, Română, Русский, Slovenčina, Slovenščina, Srpski, Türkçe, Українська, Dansk, Suomi, Norsk, Svenska Using special features 41 -- E.g. A language that supports cursive writing: English -- E.

g. A language that does not support cursive writing: □□□ □□ When writing more than one line, make sure you leave enough space. -- E.g. Recognised -- E.g. Not recognised Using special features 42 Use S Note With S Note, you can create notes by inserting various multimedia contents into notes and add a note shortcut to the home screen. S Note provides various templates to help you create notes easily. □□ Note/Idea note: You can create a simple note from an empty page. □□ Meeting note: You can create a record of meetings, conferences, or lectures.

□□ Magazine: You can create a multimedia note by inserting multimedia files. □□ Diary: You can create a photo diary. □□ Recipe: You can create your own recipes. □□ Travel: You can create travel essays. □□ Memo: You can create memos. »Create a note 1 Open the application list and select S Note. 2 Select → a template. 3 Enter text or draw a sketch. 1 2 3 4 5 Using special features 43 Number 1 2 3 4 5 Function Switch between View and Edit modes. Draw a sketch; Change the pen settings (double-tap).

□ p. 45 Use productivity tools. □ p. 46 Enter text with the keyboard; Change the text settings (double-tap). □ p. 45 Erase your text or sketch; Change the eraser thickness or clear your input (double-tap). 4 Add a photo or sound clip. 1 2 3 4 5 Number 1 2 3 4 5 Function Undo your last action. Redo your last action. Add a multimedia file, such as text or a photo.

Add a sound clip by recording voices or other sounds. Restrict handwriting input only with the S Pen. Using special features 44 5 To add a page, select . □□ To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together.

When zoomed in, drag with two fingers to scroll through the screen. When you are finished, select Save. □□ While creating a note, you can change following attributes: □□ To change the pen type, line thickness, or pen colour, double-tap . 4 5 1 2 3 6 »Change the pen or text attributes Number 1 2 3 4 5 6 Function Change the pen type. Change the line thickness.

Change the pen colour. Save the current settings as a pen profile. Open a small window to predraw the pen setting. Delete the preset pen profile. Using special features 45 □□ To change the text attributes, double-tap 1 2 3 . Number 1 2 3 Function Select an option. View or change the current attributes. Change the text colour. »Use productivity tools 1 Open the application list and select S Note. 2 Select → a template.

3 Double-tap and select a tool. □□ Formula match: Convert a handwritten formula to a well-organised formula. □□ Shape match: Convert shapes you have drawn. □□ Handwriting-to-Text: Convert a handwritten note.



[You're reading an excerpt. Click here to read official SAMSUNG](#)

[GALAXY NOTE 10.1 GT-N8010 user guide](#)

<http://yourpdfguides.com/dref/4565971>

□□ When you tap and hold, the tool panel will appear and you can switch between tools easily. □□ Select to search for information about the handwritten keyword on a preset webpage. Using special features 46 »Tutorial for handwritten formulas and figures □□ Write a formula on a single line. If you write a long formula or a formula on more than one line, the device will convert the formula incorrectly. □□ Unclosed parenthesis or missing figure in the square root will temporarily result in incorrect formula conversion. The formula will be complete when you finish writing the formula.

Using special features 47 □□ When you draw an arrow, draw the body of the arrow first. □□ When you draw the head of an arrow, draw it in one stroke. »View notes 1 Open the application list and select S Note. 2 Select to search for a note (if necessary). 3 Select a note.

While viewing the note, use the following options: □□ To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. □□ To move to other pages of the note, select the arrow at the bottom of the screen, scroll left or right, and then select a page. □□ To display different applications on the same screen at the same time, select Multiscreen → an option. While using this feature, you can switch the position of the applications by tapping and holding the application titles.

Using special features 48 To hide or show the menu bar, select or . □□ To switch to Edit mode, select or tap the screen. □□ To send the note to others, select → Share via. □□ To export the note, select → Export. Your note will be exported as an image file or a PDF file to My Files → sdcard → S Note Export. □□ To manage the note with multiple pages, select → Edit pages. □□ To save the note as an event, select → Create event. This feature may be unavailable depending on the selected template. □□ To add a shortcut of the note to the home screen, select → Set as shortcut. □□ To print the note using a Wi-Fi or USB connection, select → Print.

Your device is compatible only with some Samsung printers. □□ To save the note for other name, select → Save as. □□ »Edit notes 1 Open the application list and select S Note. 2 Select a note. 3 4 5 To add or change the note cover, tap and hold a note and select Edit cover. Select or tap the screen to switch to the Edit mode. Edit the note with the icons on the screen. □□ To change the background image of the note, select → Change background. □□ To delete the note, select → Delete. □□ To add a tag, select → Add tag.

Select Save. Using special features 49 »Synchronise notes You can synchronise your notes with the web server. 1 Open the application list and select S Note. 2 Select → Sync → an option. 3 Select notes to sync → Sync.

4 5 To synchronise all notes, select → Sync all. Enter your email address and password, and then select Login. Select Sync now. »Manage notes with folders Create a folder 1 Open the application list and select S Note. 2 Select → Create folder.

3 Enter a name and select OK. 4 Select the new folder. □□ To create a note, select → a template. □□ To create sub-folders, select → Create folder. Copy or move notes 1 Open the application list and select S Note. 2 Select a folder (if necessary). 3 Select → Copy or Move. 4 Select notes → Copy or Move. 5 Move to a new location. 6 Select Copy here or Move here.

Using special features 50 Use the quick note pad From any screen, you can create a quick note of text and sketches. open the quick note pad. Enter text or draw a sketch. 1 While pressing the S Pen button, double-tap the screen to 2 1 2 3 4 5 Number 1 2 3 4 5 Function Draw a sketch; Change the pen settings, such as the pen type, line thickness, or pen colour (double-tap). Enter text with the keyboard. Erase your text or sketch; Change the eraser thickness or clear your input (double-tap). Undo your last action. Redo your last action. . 3 When you are finished, select Using special features 51 Use S Planner Your device provides you with a powerful planner to help you organise your schedules and tasks more conveniently and effectively.

You can create and view events, add items, and change view modes. To launch S Planner, open the application list and select S Planner. 1 2 Number 1 2 Function Select today's date. Set which calendars to display. »Create an event or task To create an event, The tasks and notes you create cannot be synchronised with Google Calendar™.

1 Open the application list and select S Planner → . 2 If alert messages about the calendar sync appear, select Done. Using special features 52 3 Select Add event, and then enter details. □□ □□ 4 To search for and add a location view, select . To add a note, select Notes → Add link to S Note.

□□ To add an image, select Images → Take picture or Images. When you are finished, select Save. . To create a task, 1 Open the application list and select S Planner → 2 Select Add task, and then enter details. □□ 3 To add a note, select Notes → Add link to S Note. □□ To add an image, select Images → Take picture or Images. When you are finished, select Save. »Change the view mode To switch the calendar's view mode, select a view mode tab. You can also tap the screen with two fingers, and then pinch or spread them to change the view mode. 1 Open the application list and select S Planner.

2 Select a view mode at the top of the screen. □□ □□ Year: Monthly blocks for the current year. Month: Daily blocks for the current month. □□ Week: Hourly blocks for the days in one full week. □□ Day: Hourly blocks for one full day. □□ List: A list of all the events. □□ Task: A list of all the tasks. Using special features 53 »View an event or task 3 1 Open the application list and select S Planner. 2 Select to search for an event or task (if necessary). 4 To limit the range of your search, select All → an option.

Select a date on the calendar. □□ To select today's date, select Today. □□ To move to a specific day by entering a date manually, select → Go to, enter the date by selecting or , and then select Set. Select an event or task to view its details. »Stop an event alarm If you set an alarm for a calendar event, the event alarm icon appears at the specified time.

1 Select the event notification from the notifications panel. 2 Select an event or task to view more details. To snooze or dismiss the event alarm, check the box next to the event or task name and select Snooze or Dismiss. Using special features 54 Web Internet Learn to access and bookmark your favourite web pages.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

□□ The web browser menu may be labelled differently depending on your region or service provider.

□□ Available icons may vary depending on your region or service provider. »Browse web pages 1 Open the application list and select Internet to launch 2 your homepage. To access a specific web page, select the URL input field, and then enter the web address of the web page. Navigate web pages with the following keys: The above screen may differ depending on your region or service provider. Web 55 Number 1 2 3 4 5 6 7 8 9 Function Close the current tab. Move backward or forward to web pages in history. Reload the current web page; While the device is loading web pages, this icon changes to . Open a new tab. Open another applications; Not all applications support this feature. Access a list of web browser options.

Open a list of saved bookmarks and recent internet history. Search for information. Bookmark the current web page. While browsing a web page, use the following options: □□ To zoom in or out, tap the screen with two fingers and spread them apart (move your fingers closer together to zoom out). If you activate tilting motions, you can zoom in or out by tapping and holding two points with your fingers, and then tilting the device back and forth. □□ To display different applications on the same screen at the same time, select Multiscreen → an option. While using this feature, you can switch the position of the applications by tapping and holding the application titles. Web 56 To open a new tab, select → New tab. To open a new tab without saving cookies, select → New incognito tab. □□ To add the bookmark shortcut to the Home screen, select → Add shortcut to home. □□ To send the web address of the web page to others, select → Share page. □□ To search for text on the web page, select → Find on page. □□ To switch to the desktop view, select → Desktop view. □□ To save the current web page and read it offline later, select → Save for offline reading. You can view the saved pages by selecting → Saved pages.

□□ To view the items downloaded from the web, select → Downloads. □□ To print the web page using a Wi-Fi or USB connection, select → Print. Your device is compatible only with some Samsung printers. □□ To customise browser settings, select → Settings. □□ □□ »Search for information by voice This feature may be unavailable depending on your region or service provider.

1 Open the application list and select Internet. 2 Select the URL input field. 3 Select and say a keyword into your device's microphone. The device searches for information and web pages related with the keyword. Web 57 »Open multiple pages You can open multiple pages and switch back and forth between them. 1 Open the application list and select Internet. 2 Select to open a new tab. 3 Access another web page on the new tab. 4 To switch back and forth between currently open tabs, select the title of a tab. »Bookmark your favourite web pages Add a bookmark If you know the web address of a web page, you can manually add a bookmark.

1 Open the application list and select Internet. 2 Enter a web address or a navigate to a web page. 3 Select → to bookmark the current web page. 4 5 6 You can also select to bookmark the current web page. Enter a name for the bookmark. Enter the web address for your favourite web page, and then select a bookmark location to add (if necessary). Select OK. Web 58 To use bookmark options, select and tap and hold a bookmark: □□ To open the web page in the current tab, select Open. □□ To open the web page in a new tab, select Open in new tab. □□ To edit the bookmark, select Edit bookmark.

□□ To add the bookmark shortcut to the Home screen, select Add shortcut to home. □□ To send the web address of the web page to others, select Share link. □□ To copy the web address of the web page, select Copy link URL. □□ To delete the bookmark, select Delete bookmark. □□ To use the web page as your homepage of the browser, select Set as homepage.

Create a bookmark folder 1 Open the application list and select Internet. 2 Select → → . 3 Enter a name for the bookmark folder. 4 Select Done. »Access recent history 1 Open the application list and select Internet.

2 Select → History. 3 Select a web page to access. Web 59 Game Hub Learn to access games. 1 Open the application list and select Game Hub. 2 Select a game service. 3 Search for and access games. The games available may vary depending on your region or service provider. Play Books Browse and download book files with Google Play Books. You can read book files on your device. In the application list, select Play Books.

This feature may be unavailable depending on your region or service provider. Play Store Based on the Android platform, your device's functionality can be extended by installing additional applications. Play Store provides you an easy and quick way to shop for games and mobile applications. □□ This feature may be unavailable depending on your region or service provider. □□ Your device will save user files from downloaded applications to the internal memory.

Web 60 »Download and install an application 2 3 1 Open the application list and select Play Store. You can also select → Play Store at the top right of the application list. If you are launching this application for the first time, select Accept. Search for an application and download it to the device. When the download is complete, the device will install the application automatically.

»Uninstall an application 1 Open the application list and select Play Store. 2 Select . 3 Select the item you want to delete. 4 Select Uninstall → OK. YouTube Learn to view and upload videos via YouTube.

This feature may be unavailable depending on your region or service provider. »Watch videos 1 Open the application list and select YouTube. 2 Select a video. 3 Tap a video screen and select to display a full screen. 4 Control playback with the virtual keys.

Web 61 »Upload videos 1 Open the application list and select YouTube. 2 Select → Sign in, and then select your Google account 3 4 if it is linked to YouTube. You can also select Add account and set up an account to sign in YouTube. Select UPLOAD, and then select a video. Enter details for the upload and select Upload. Video Hub Learn to access videos. 1 Open the application list and select Video Hub. 2 Select a category. 3 Search for and access videos. Maps Learn to use Google Maps™ to find your location, search the map for streets, cities, or countries, and get directions.

□□ This feature may be unavailable depending on your region or service provider. □□ You must activate location services to find your location and search the map.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

□ p. 112 Web 62 »Search for a specific location 2 3 4 1 Open the application list and select Maps. The map will display your current location. Select . Enter a keyword for the location. To search for a location by voice, select . Select the location you want to view details. □□ To view the all of the search result, select Search Results.

□□ To view your current location, select . □□ To search for a place around you, select . □□ To get directions to a specific destination, select . □□ To add layers to the map, select . □□ To access a list of other options, select .

□□ To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. You can also double-tap the screen. To return to the original size, double-tap the screen. □□ To add a star to the location, select the balloon of the location name → . Web 63 1 Open the application list and select Maps.

2 Select . 3 Enter the addresses of the starting location and the »Get directions to a specific destination 4 5 ending location. To enter an address from your contact list or starred places, or point the location on the map, select → an option. Select a travel method (car, bus, or walk) and select Go. The route is indicated on the map. Depending on the selected travel method, you may see multiple routes. When you are finished, select → Clear Map. Latitude Learn to share your location with your friends and view friends' locations via Google Latitude™. This feature may be unavailable depending on your region or service provider. 1 Open the application list and select Latitude.

2 3 4 5 The device automatically joins Latitude. Select → an option. Select a friend you want to add, or enter an email address and select Add friends. Select Yes. When your friend accepts your invitation, you can share locations. Select a friend from the list. Your friends' locations are marked with their photos on the map. Web 64 Places Learn to search for a place around you. This feature may be unavailable depending on your region or service provider. 1 Open the application list and select Places.

2 Select a category. 3 4 Your device searches for places around your current location that are related to the category. Select a place name to view its details. While viewing information, use the following options: □□ To view the place on the map, select . □□ To view the route to the place, select .

Navigation Learn to use the GPS navigation system to find and show your destination with voice guidance. □□ Navigation maps, your current location, and other navigational data may differ from actual location information. You should always pay attention to road conditions, traffic, and any other factors that may affect your driving and follow all safety warnings and regulations while driving. □□ This feature may be unavailable depending on your region or service provider. Web 65 1 Open the application list and select Navigation.

2 If you are launching this application for the first time, 3 4 select Accept. Enter your destination by using one of the following methods: □□ Speak your destination such as "Navigate to destination." □□ Enter your destination with the virtual keypad. □□ Select your destination from addresses of your contacts. □□ Select your destination from the list of your starred places. Follow the on-screen instructions to use the navigation service. Samsung Apps Samsung Apps allows you to simply and easily download an abundance of applications directly to your device. Featuring a wealth of games, news, reference, social networking, navigation, health related applications and more, Samsung Apps gives you instant access to a huge choice of mobile experience. Your device gets smarter with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better.

□□ This feature may be unavailable depending on your region or service provider. □□ For details, please visit [www.samsungapps.com](http://www.samsungapps.com). Web 66 1 Open the application list and select Samsung Apps. 2 Select your country. 3 If you are launching this application for the first time, read the terms and conditions and select Accept. Search for and download applications as desired. 5 Suggest Find and download the latest applications suggested by Samsung. Open the application list and select S Suggest.

Web 67 Communication Google Mail You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold. □□ This feature may be unavailable depending on your region or service provider. □□ This Google Mail menu may be labelled differently depending on your region or service provider.

»Send an email message 1 Open the application list and select Google Mail → 2 Select the recipient field and enter an email address. 3 Select the subject field and enter a subject. 4 Select the text field and enter your email text. □□ □□ . 5 To attach a photo, select .

To remove an attached photo, select to the right of an attachment's name. Select SEND to send the message. If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area. Communication 68 »View an email message 1 Open the application list and select Google Mail. 2 Select to update the message list. 3 Select an email message. From the message view, use the following options: □□ To create a new message, select . □□ To search for an email message, select . □□ To archive the message, select . □□ To delete the message, select .

□□ To add a label to the message, select . □□ To move to the next or previous message, scroll left or right. □□ To reply to the message, select . □□ To reply to the message including all recipients, select . □□ To forward the message to other people, select . □□ To add a star to the message, select . □□ To view an attachment, select VIEW. To save it to your device, select SAVE. □□ To make the message as unread, select → Mark unread. □□ To mark the message as important, select → Mark as important.

□□ To hide the message, select → Mute. To move the message to the inbox folder, select All Mail and drag the message to Inbox. □□ To register the message to the spam list, select → Report spam. □□ To reload the messages, select → Refresh. □□ To add a label to a message, select → Manage labels.

□□ To customise the email settings, select → Settings. Available options may vary depending on the account. Communication 69 Email Learn to send or view email messages via your personal or company email account. »Set up an email account 1 Open the application list and select Email.



[You're reading an excerpt. Click here to read official SAMSUNG](#)

[GALAXY NOTE 10.1 GT-N8010 user guide](#)

<http://yourpdfguides.com/dref/4565971>



2 Enter your email address and password.

3 Select Next (for general email accounts) or Manual setup 4 5 (for other company email accounts). Follow the on-screen instructions. To add more email accounts, select → Settings → Add account and repeat steps 2-4. When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one you want to retrieve messages from. »Send an email message □□ 1 Open the application list and select Email → 2 Add recipients of your message. 3 4 5 6 . Enter email addresses manually, separating them with a semicolon or a comma. □□ Select email addresses from the lists by selecting .

Select the subject field and enter a subject. Select the text input field and enter your email text. → files to attach. Select to send the message. Select If you are offline or outside your service area, the message will be held in the outbox until you are online and in your service area. Communication 70 »View an email message When you open an email account, you can view previously retrieved email offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline. 1 Open the application list and select Email. 2 Select to update the message list. 3 Select an email message.

From the message view, use the following options: □□ To search for an email message, select . □□ To reload the messages, select . □□ To create a new message, select . □□ To reply to the message, select . □□ To forward the message to other people, select .

□□ To delete the message, select . □□ To display different applications on the same screen at the same time, select Multiscreen → an option. While using this feature, you can switch the position of the applications by tapping and holding the application titles. □□ To make the message as unread, select → Mark as unread. □□ To move the message to another folder, select → Move.

□□ To save the message, select → Save email. The message will be saved in My Files → sdcard → Saved Email. Communication 71 To view the messages by category, select → Sort by. □□ To change the view mode, select → View mode. □□ To print the message using a Wi-Fi or USB connection, select → Print. Your device is compatible only with some Samsung printers. □□ To save the email addresses of the recipients to your email address as a group of contacts, select → Save as group. □□ To customise the email settings, select → Settings. □□ To delete all messages, select → Delete all. □□ To save an attachment to your device, select the attachment tab → .

The options available may vary depending on the email account or device's orientation. □□ Talk Learn to chat with friends and family via Google Talk™.

This feature may be unavailable depending on your region or service provider. »Set your status 1 Open the application list and select Talk. 2 Add your Google account (if necessary). 3 Customise your status, image, and message to display. Communication 72 »Add friends to your friend list 1 Open the application list and select Talk → . 2 Enter an email address of the friend and select DONE. When your friend accepts the invitation, the friend is added to your friend list. »Start a chat 1 Open the application list and select Talk.

2 Select a friend from the friends list. The chat screen opens. @@@@□□ To use video chat, select, . □□ To use voice chat, select, . @@@@ Learn to access the Google's social network service.

@@@@@□□ Playback quality may vary by content type. @@@ p. 55 □□ Download from a PC with Samsung Kies. □ p. 100 □□ Receive via Bluetooth.

□ p. 112 □□ Synchronise with Windows Media Player 11. □ p. @@@@4 Control playback with the virtual keys. During playback, select to access the following options: □□ To add music files to a playlist, select Add to playlist → New playlist. @@@ You cannot use this option when you connect a headset to your device. @@@@□□ To change the music player settings, select Settings. @@@2 Select → New playlist. 3 Enter a title for your new playlist and select OK. @@@ To delete music files from the playlist, select music files.

Select Done. @@@2 Select → Settings. @@@ Change the playback speed. Set to display lyrics during playback. @@@@□□ : Switch between the front and rear camera lens. □□ : Change the flash setting. □□ : Change the shooting mode. □□ : Apply a special effect. □□ : Adjust the exposure value. You can add or remove shortcuts to frequently used options.

□ p. @@@ Switch to the camcorder. Capture a photo. @@@ To zoom out, pinch them together. @@@@ Select to take a photo.

@@□□ To view more photos, scroll left or right. You can also tap the screen and scroll through the thumbnails of photos at the bottom of the screen. □□ To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. You can also double-tap the screen. To return to the original size, double-tap the screen.

Entertainment 79 To send the photo to others, select → an option. □□ To delete the photo, select → OK. □□ To start a slide show, select → Start slideshow.

Tap the screen to stop the slide show. @@@□□ To register the faces in the photo as face tags, select → Face tag. □ p. 92 □□ To add the photo to the clipboard, select → Copy to clipboard. □□ To rotate the photo anti-clockwise, select → Rotate left. □□ To rotate the photo clockwise, select → Rotate right. □□ To crop a section from the photo, select → Crop.

□□ To edit the photo with the image editor, select → Edit. □□ To set the photo as your wallpaper or a contact image, select → Set picture as. □□ To send the photo to a person whose face is tagged in the photo, select → Buddy photo share. □□ To print the photo via Wi-Fi or USB, select → Print. Your device is compatible only with some Samsung printers. □□ To change the name of a file, select → Rename. □□ To search for devices that have media sharing activated, select → Scan for nearby devices. □□ To view photo details, select → Details. □□ Entertainment 80 You can take photos with various shooting modes. To change the shooting mode, select → Shooting mode → an option.

Option Smile shot Panorama Cartoon Share shot Buddy photo share Function Set the device to recognise people's faces and help you take photos of them when they smile. Take panoramic photos. Take photos with cartoon effects. Take a photo and send it to others via Wi-Fi Direct. Send the photo to a person whose face is tagged in the image.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>

»Change the shooting mode »Customise camera settings Before taking a photo, select options: Option Edit shortcuts Self portrait Flash Shooting mode Function to access the following Edit shortcuts to frequently-used options. Switch between the front and rear camera lenses. Change the flash setting; You can manually turn the flash on or off, or set the camera to automatically use the flash when needed. Change the shooting mode. Entertainment 81 Option Scene mode Exposure value Focus mode Timer Effects Resolution White balance ISO Metering Outdoor visibility Guidelines Image quality Function Change the scene mode.

Adjust the exposure value to change the brightness. Take close-up photos or set the camera to focus on the subject automatically. Select the length of the delay before the camera takes a photo. Apply a special effect, such as sepia or black and white tones. Change the resolution option. Adjust the colour balance according to lighting conditions. Adjust the sensitivity of the imaging sensor. Select a type of exposure metre. Activate Outdoor visibility to select an appropriate lighting condition. Display guidelines on the preview screen.

Select a quality level for your photos. Entertainment 82 Option Function Set the camera to include location information for your photos. □□ To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. □□ Your location may appear on your photos when you upload them to the web. To avoid this, deactivate the GPS tag setting. GPS tag Set the camera to flip the image Save as flipped automatically when you take a photo with the front camera. Storage Reset Select a memory location for saving captured photos. @@2 Drag the slider to switch to the camcorder. @@@@□□ : Change the flash setting. @@□□ : Apply a special effect.

□□ : Adjust the exposure value. You can add or remove shortcuts to frequently used options. □ p. 87 Change the camcorder settings. View the storage location.

Switch to the camera. Record a video. @@To zoom out, pinch them together. @@@@Select to start recording. Select to stop recording.

@@□□ To view more videos, scroll left or right. @@□□ To play the video, select . □□ To send the video to others, select → an option. □□ To delete the video, select → OK. □□ To start a slide show, select → Start slideshow. Tap the screen to stop the slide show. @@□□ To change the name of a file, select → Rename. @@Switch between the front and rear camera lenses. Change the flash setting; You can manually turn the flash on or off. Change the recording mode.

Adjust the exposure value to change the brightness. Select the length of the delay before the camera starts recording a video. Apply a special effect, such as sepia or black and white tones. Change the resolution option. Adjust the colour balance according to lighting conditions. Activate Outdoor visibility to select an appropriate lighting condition. Display guidelines on the preview screen. Select a quality level for your videos. Set the camcorder to flip the image Save as flipped automatically when you record a video with the front camera. Storage Reset Select a memory location for saving recorded videos.

Reset camcorder settings. Entertainment 86 »Edit the shortcut icons You can add or remove shortcuts to frequently-used options. 1 From the preview screen, select → Edit shortcuts. 2 Tap and hold an icon from the option list and drag it to the 3 shortcut area. To remove shortcuts, tap and hold an icon and drag it to the option list.

Tap the screen to return to the preview screen. Video Player Learn to use the video player. □□ Some file formats are not supported depending on the device's software. □□ If a file size exceeds the memory available, an error may occur when you try to open the file. □□ Playback quality may vary by content type.

□□ Some files may not play properly depending on how they are encoded. Entertainment 87 »Play a video 1 Open the application list and select Video Player. 2 Select a video. 3 Control playback with the following keys: 1 2 5 6 7 3 4 8 9 10 Number 1 2 3 4 5 6 7 Function Mute the video. Change the ratio of the video screen. Scan forwards or backwards in the file by dragging or tapping the bar. Restart playback; Skip to the previous file (double-tap); Scan backwards in the file (tap and hold). Select a sound effect. Open different applications that enable Multiscreen feature; Switch to the floating screen mode; Access video player options. Adjust the volume.

Entertainment 88 Number 8 9 10 Function Pause playback; Select playback. Insert a bookmark. Skip to the next file; Scan forwards in the file (tap and hold) to resume While playing a video, use the following options: □□ To switch to the floating screen mode, select . You can move the screen by tapping and holding it. To return to the full screen mode, tap the screen. □□ To display different applications on the same screen at the same time, select Multiscreen → an option. While using this feature, you can switch the position of the applications by tapping and holding the application titles. □□ To send the video to others or share it, select → Share via. □□ To divide the video into segments, select → Chapter preview.

You can search for a segment and skip directly to that point. □□ To trim a segment of the video, select → Trim. □□ To listen to audio via a Bluetooth headset, select → Via Bluetooth. □□ To export the current video to Video maker, select → Video maker. □□ To view your bookmarks, select → Bookmarks.

This option appears only if you have bookmarked during playback by selecting . □□ To view video details, select → Details. □□ To set the video player to turn off automatically after a specific period of time, select → Video auto off. □□ To search for devices that have media sharing activated, select → Scan for nearby devices. Entertainment 89 »Customise video player settings 1 During playback, select → Settings.

2 Change the following options: Option Play speed Subtitles Auto play next Colour tone Outdoor visibility Function Change the playback speed. Customise the settings for a subtitle file. Set the video player to play the next file automatically. Select a colour tone. Set to improve the contrast of the display in bright sunlight. Gallery Learn to view photos and play videos saved in your device's memory. □□ Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented. @@@@□□ Playback quality may vary by content type. □□ Some files may not play properly depending on how they are encoded.

Entertainment 90 »View a photo 1 Open the application list and select Gallery.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE 10.1 GT-N8010 user guide](http://yourpdfguides.com/dref/4565971)  
<http://yourpdfguides.com/dref/4565971>