



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY NOTE GT-N7000. You'll find the answers to all your questions on the SAMSUNG GALAXY NOTE GT-N7000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY NOTE GT-N7000
User guide SAMSUNG GALAXY NOTE GT-N7000
Operating instructions SAMSUNG GALAXY NOTE GT-N7000
Instructions for use SAMSUNG GALAXY NOTE GT-N7000
Instruction manual SAMSUNG GALAXY NOTE GT-N7000



Samsung **GALAXY Note**
GT-N7000
user manual



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

Manual abstract:

Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsung.com for the latest version of the user manual. Available features and additional services may vary by device, software, or service provider. Formatting and delivery of this user manual is based on Google Android operating systems and may vary depending on the user's operating system. Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by third-party applications. Samsung is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customise the operating system may cause your device or applications to work improperly.

Using this manual 2 You may upgrade your mobile device's software by accessing www.samsung.com. Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws.

Samsung is not liable for such copyright infringement by the user. Please keep this manual for future reference. Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning--situations that could cause injury to yourself or others Caution--situations that could cause damage to your device or other equipment Note--notes, usage tips, or additional information Refer to--pages with related information; for example: p.12 (represents "see page 12") Followed by--the order of options or menus you must select to perform a step; for example: In Idle mode, open the application list and select Settings About phone (represents Settings, followed by About phone) Square brackets--device keys; for example: [(represents the Menu key)]

Using this manual 3 Copyright Copyright © 2011 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks Windows Media Player® is a registered trademark of Microsoft Corporation. SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc. Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Oracle and Java are registered trademarks of Oracle and/ or its affiliates. Other names may be trademarks of their respective owners. Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. Using this manual 4 DivX®, DivX Certified®, and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence. All other trademarks and copyrights are the property of their respective owners.

DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos. DivX Certified® to play DivX® video up to HD 720p, including premium content ABOUT DIVX VIDEO ABOUT DIVX VIDEO-ON-DEMAND This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Using this manual 5 Contents Assembling

.....

.....

.....

.....

.....

.....

..... 10 Unpack

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 10 Install the SIM or USIM card and battery ...

.....

.....

.....

... 10 Charge the battery ..

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....
27 Customise your device

.....
.....
.....
.....

.....
.....
.....
.....
..... 30 Enter text

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... 35 Download applications from Android Market .

.....
.....
.....
.....

.... 39 Download files from the web .

.....
.....
.....
.....

.....
.....
.. 40 Synchronise data ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

40 Using special features

.....
.....
.....
.....

..... 42 Learn basic S Pen actions...

.....
.....
.....

.....
.....
.....
.....

. 42 Learn advanced S Pen actions...

.....
.....
.....
.....
.....

..... 43 Learn motions

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

44 Use Handwriting mode

.....
.....
.....
.....
.....
.....
.....

..... 48 Use S Memo...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 53 Use the quick memo pad ...

.....
.....
.....
.....
.....
.....

.....
.....
56 Use S Planner

.....
.....

.....
.....
.....

.....
.....
.....

..... *57 Use Voice talk ...*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... *59 Contents 6 Communication*

.....
.....
.....

.....
.....
.....

. *61 Calling*

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

61 Messaging

.....
.....
.....

.....
.....
.....

.....
..... 75 Entertainment ...

.....
.....
.....
.....

.....
.....
.....
..... 76 Camera ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... 76 Videos

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 87 Gallery

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 88 Photo editor ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *91 Video maker .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *92 Music*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. *95 Music Hub ...*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... *98 FM radio ..*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
113 Web
.....
.....
.....
.....
.....
.....

..... *114 Internet*
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
114 Maps
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
118 Latitude
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... *119 Places*
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 120 Navigation

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 120 Contents 7 YouTube

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 121 Samsung Apps

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 123 Market

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.. 123 Readers Hub

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 124 News & Weather ...

.....
.....
.....

.....
.....
.....

.....
.... 124 Connectivity .

.....
.....

.....
.....
.....

.... 126 Bluetooth

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 126 Wi-Fi

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.. 128 Wi-Fi Direct ...
.....

.....
.....
.....

.....
.....
.....

.....
.....
130 AllShare

.....
.....
.....

.....
.....
.....

.....
.....
.... 131 Mobile network sharing .
.....

.....
.....
.....

.....
.....
.....

. 134 GPS

.....
.....
.....

.....
.....
.....

.... 135 PC connections

.....
.....
.....

... 136 VPN connections

.....
.....
.....
.....
.....
.....
.....

..... 139 Tools .

.....
.....
.....
.....
.....
.....

..... 141 Clock ..

.....
.....
.....
.....
.....
.....
.....
.....

... 141 Calculator

.....
.....
.....
.....
.....
.....

... 144 Downloads

.....
.....
.....

.....
.....
.....
.....

. 144 Google Search

.....
.....
.....
.....

.. 145 Kies air ...

.....
.....
.....
.....
.....
.....

.... 145 Mini diary .

.....
.....
.....
.....
.....

146 My files

.....
.....
.....
.....
.....

.....
.....
.....
..... 147 Polaris Office

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

148 SIM Toolkit

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 149 Task manager .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 150 Voice Search ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 150 Voice talk ...

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....

..... 151 Contents & Settings .

.....
.....
.....
.....
.....

..... 152 Access the Settings menu ..

.....
.....
.....
.....
.....

..... 152 Wireless and network

.....
.....
.....
.....
.....

. battery icon will also be empty. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device. If the battery is completely discharged, you cannot turn on the device, even with the travel adapter connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device. > Charge with a travel adapter 1 Plug the small end of the travel adapter into the multifunction jack. Connecting the travel adapter improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty. Assembling 13 2 Plug the large end of the travel adapter into an electrical socket. You can use the device while it is charging, but it may take longer to fully charge the battery. If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the travel adapter from the device. While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance. If your device is not charging properly, take your device and the charger to a Samsung Service Centre. When the battery is fully charged, first unplug the travel adapter from the device and then from the electrical socket.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

Do not remove the battery before removing the travel adapter. Doing so may cause damage to the device. To save energy, unplug the travel adapter when not in use.

The travel adapter does not have a power switch, so you must unplug the travel adapter from the electrical socket to interrupt the power supply. The travel adapter should remain close to the socket when in use. 3 > Charge with a USB cable 1 Before charging, ensure that your PC is turned on. Plug one end (micro-USB) of the USB cable into the multifunction jack. Assembling 14 2 Plug the other end of the USB cable into a USB port on a PC. Depending on the type of USB cable you are using, it may take some time before charging begins. When the battery is fully charged, first unplug the USB cable from the device and then unplug it from the PC. 3 Insert a memory card (optional) To store additional multimedia files, you must insert a memory card. Your device accepts microSDTM or microSDHCTM memory cards with maximum capacities of 32 GB (depending on memory card manufacturer and type). Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card. Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card. Frequent writing and erasing of data will shorten the lifespan of your memory cards. When you insert a memory card into your device, the memory card's file directory will appear in the external_sd folder under the internal memory. Assembling 15 1 2 Remove the back cover and battery. Insert a memory card with the gold-coloured contacts facing downwards. 3 4 Push the memory card into the memory card slot until it locks in place. Replace the battery and back cover. > Remove the memory card 1 2 3 4 5 Before removing a memory card, first unmount it for safe removal.

In Idle mode, select Applications Settings Storage Unmount SD card OK. Remove the back cover and battery. Push the memory card gently until it disengages from the device. Remove the memory card. Replace the battery and back cover.

Assembling 16 Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device. In Idle mode, select Applications Settings Storage Unmount SD card OK Format SD card Format SD card Erase everything. Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.

> Format the memory card Assembling 17 Getting started Turn your device on and off To turn on your device, press and hold the Power key. If you are turning on your device for the first time, follow the onscreen instructions to set up your device. To turn off your device, press and hold the Power key, and then select Power off OK. Follow all posted warnings and directions from authorised personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals. To use only your devices' non-network services, switch to Flight mode. Press and hold the Power key and select Flight mode. Getting started 18 Get to know your device > Device layout Mouthpiece 1 Earpiece Light sensor Proximity sensor Front camera lens Power/Reset/Lock key Touch screen Home key Menu key Multifunction jack Back key Mouthpiece 1. Active only when you use the speakerphone feature or record videos. Getting started 19 Headset jack GPS antenna 1 Rear camera lens Flash Volume key Back cover Speaker S Pen slot Main antenna > Keys Key Power/Reset/Lock Function Turn on the device (press and hold); Access the quick menus (press and hold); Reset the device (press and hold for 10-15 seconds); Lock the touch screen. Open a list of options available on the current screen; In Idle mode, open the Google search application (press and hold); Open the search input window while using some applications (press and hold).

Menu 1. Do not touch the antenna area or cover this area with your hands or other objects while using wireless functions. 2. If your device experiences fatal errors, hanging, or freezing, you may need to reset the device to regain functionality. Getting started 20 Key Home Back Volume Function Return to the idle screen; Open the list of recent applications (press and hold); Launch the voice talk application (press twice). Return to the previous screen. Adjust the device volume. > Indicator icons Icon Icons shown on the display may vary depending on your region or service provider. Definition No signal Signal strength GPRS network connected EDGE network connected UMTS network connected HSDPA network connected AllShare in progress Open WLANs available

WLAN connected WLAN Direct connected Bluetooth feature activated Getting started 21 Icon Definition Bluetooth headset connected GPS activated Call in progress Call on hold Speakerphone activated Missed call Synchronised with the web Uploading data Downloading data Call diverting activated Connected to PC USB tethering activated WLAN hotspot activated No SIM or USIM card New text or multimedia message New email message New voice mail message Alarm activated Event notification Roaming (outside of normal service area) Silent mode activated Getting started 22 Icon Definition Vibration mode activated Flight mode activated Music playback in progress Music playback paused FM radio playing in the background Error occurred or caution required Battery power level Current time Use the S Pen and the touch screen Your device's touch screen lets you easily select items or perform functions. Learn basic actions for using the touch screen.

To avoid scratching the touch screen, do not tap it with anything sharp. Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction. Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.

Do not bend the S Pen. The tip of the S Pen is not replaceable. Getting started 23 For optimal use of the touch screen, remove the screen protection film before using your device. You can purchase a replacement S Pen from your local Samsung retailer. If your S Pen is not working properly, take it to a Samsung Service Centre.

For best results, keep the S Pen mostly perpendicular to the touch screen and avoid using it at sharp angles. Control your touch screen with the following actions: Tap: Touch once with your finger or the supplied S Pen to select or launch a menu, option, or application. Tap and hold: Tap an item and hold it for more than 2 seconds to open a list of options.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

Drag: Tap and drag your finger up, down, left, or right to move to items on lists. Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item. Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or webpages. You can perform additional actions with the enhanced S Pen that is supplied with your device. p. 42 Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press the Power key or the Home key.

You can also adjust the backlight time. In Idle mode, open the application list and select Settings Display Screen timeout. Getting started 24 Lock or unlock the touch screen and keys You can lock the touch screen and keys to prevent any unwanted device operations. To lock, press the Power key. To unlock, turn on the screen by pressing the Power key or the Home key, tap anywhere on the screen, and then drag outside of the large circle. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. p. 32 Get to know the idle screen When the device is in Idle mode, you will see the idle screen. From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items. The idle screen has multiple panels.

Scroll left or right to the panels on the idle screen. You can also select a dot at the bottom of the screen to move directly to the corresponding panel. > Add items to the idle screen 1 2 You can customise the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen, Press [] Add or tap and hold the empty area on the idle screen. Select the item category an item: Widgets: Add widgets to the idle screen. Shortcuts: Add shortcuts to items, such as applications, bookmarks, and contacts. Folders: Create a new folder or add folders for your contacts. Wallpapers:

Set a background image. Getting started 25 > Move items on the idle screen 1 2 1 2 3 Tap and hold an item. Drag the item to a new location. > Remove items from the idle screen Tap and hold an item. The rubbish bin appears at the bottom of the idle screen. Drag the item to the rubbish bin. When the item turns red, release it. In Idle mode, or while using an application, tap the indicator icons area and drag your finger downwards to open the notifications panel. You can activate or deactivate wireless connection features and access a list of notifications for messages, calls, events, or processing status. To hide the panel, drag the bottom of the list upwards. From the notifications panel, you can use the following options: Wi-Fi: Activate or deactivate the WLAN connection feature. p. 129 Bluetooth: Activate or deactivate the Bluetooth wireless connection feature.

p. 126 GPS: Activate or deactivate the GPS feature. Silent mode: Activate or deactivate Vibration mode. Auto rotation: Activate or deactivate the auto rotation feature. Available options may vary depending on your region or service provider. > Use the notifications panel Getting started 26 > Add or remove panels to the idle screen 1 2 You can add or remove idle screen panels to organise widgets. In Idle mode, press [] Edit. You can also place two fingers on the screen and pinch them together to switch to Edit mode. Add, remove, or reorganise panels: To remove a panel, tap and hold the thumbnail image of the panel, and then drag it to the rubbish bin at the bottom of the screen. To add a new panel, select .

To change the order of the panels, tap and hold a thumbnail image of a panel, and then drag it to a new location. When you are finished, press []. 3 Access applications To access your device's applications, 1 2 In Idle mode, select Applications to access the application list. Scroll left or right to another screen. You can also select a dot at the bottom of the screen to move directly to the corresponding screen.

Getting started 27 3 Select an application. When you use applications provided by Google, you must have a Google account. You can add an application shortcut by tapping and holding the appropriate icon from the application list. You can move shortcut icons to any location on the idle screen. Press [] to return to the previous screen or press the Home key to return to the idle screen.

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto rotation. 4 > Organise applications 1 2 3 4 You can reorganise the applications in the application list by changing their order or grouping them into categories. From the application list, press [] Edit OK. Tap and hold an application icon. Drag the application icon to a new location. You can move an application icon to another screen. You can also move frequently-used applications next to Home. Press [] Save. Getting started 28 To add a folder or panel to the idle screen, 1 2 3 4 5 6 1 2 1 2 In the application list, press [] Edit.

Tap and hold an application icon. Drag the application icon to Add Folder or Add Page at the bottom of the screen. Drag Add Folder or Add Page to the idle screen. A new folder or panel containing the applications is added to the idle screen. If you added a folder, enter a name and select OK. Press [] Save. In the application list, place two fingers on the screen and pinch them together. Tap and hold a panel's thumbnail image, and then drag it to a new location. To change the order of the panels, > Access recent applications Press and hold the Home key to view the applications you have accessed recently. Select an application.

Getting started 29 > Use the task manager Your device is a multitasking device, so can run more than one application at the same time. However, heavy multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs with the task manager. 1 2 In Idle mode, open the application list and select Task manager Active applications. A list of all the active applications on your device appears.

To close an application, select Exit. To close all active applications, select Exit all. Customise your device Get more from your device by customising it to match your preferences. > Set the current time and date 1 2 In Idle mode, open the application list and select Settings Date and time. Set the time and date and change other options.

> Turn on or off the touch tone > Adjust the ringtone volume In Idle mode, open the application list and select Settings Sound Audible selection. Press the Volume key up or down to adjust the ringtone volume. Getting started 30 To mute or unmute your device, do one of the following: In Idle mode, open the application list and select Phone Keypad, and then tap and hold .



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

Press and hold the Power key and select Silent mode. Open the notifications panel at the top of the screen and select Silent mode. You can set the device to alert you to various events in Silent mode. In Idle mode, open the application list and select Settings Sound Vibration Always or Only in silent mode. > Switch to Silent mode > Change your ringtone 1 2 In Idle mode, open the application list and select Settings Sound Phone ringtone. Select a ringtone from the list, and then select OK. In Idle mode, open the application list and select Settings Display Animation Some animations or All animations.

> Activate an animation for switching windows > Select a wallpaper for the idle screen 1 2 3 In Idle mode, press [] Wallpaper an option. Select an image. Select Save or Set wallpaper. Samsung is not responsible for any misuse of default images or wallpapers provided on your device. Getting started 31 > Adjust the brightness of the display 1 2 3 4 In Idle mode, open the application list and select Settings Display Brightness. Clear the tick box next to Automatic brightness. Drag the slider to adjust the brightness. Select OK. The brightness level you set will affect how quickly the device consumes battery power. > Set a screen lock You can lock the touch screen by activating the screen lock feature.

Your device will require the unlock pattern, PIN, or password each time you turn on the device or unlock the touch screen. If you forget your unlock code, take your device to a Samsung Service Centre to reset it. Samsung is not responsible for the loss of security codes or private information, or other damages caused by illegal software. Set an unlock pattern 1 2 3 4 In Idle mode, open the application list and select Settings Location and security Set up screen lock Pattern. View the on-screen instructions and example patterns, and then select Next.

Draw a pattern by dragging your finger to connect at least 4 dots, and then select Continue. Draw the pattern again to confirm and select Confirm. Getting started 32 Set an unlock PIN 1 2 3 1 2 3 In Idle mode, open the application list and select Settings Location and security Set up screen lock PIN. Enter a new PIN (numeric) and select Continue. Enter the PIN again and select OK.

In Idle mode, open the application list and select Settings Location and security Set up screen lock Password. Enter a new password (alphanumeric) and select Continue. Enter the password again and select OK. Set an unlock password > Lock your SIM or USIM card 1 2 You can lock your device with the PIN that is supplied with your SIM or USIM card. In Idle mode, open the application list and select Settings Location and security Set up SIM card lock Lock SIM card. Enter your PIN and select OK. Once the SIM lock is enabled, you must enter the PIN each time you turn on the device. If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card. If you block your SIM or USIM card by entering an incorrect PUK, take the card to your service provider to unblock it.

Getting started 33 > Activate the Find my mobile feature When someone inserts a new SIM or USIM card into your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device. To use this feature, you need a Samsung account to control the device remotely via the web. 1 2 3 4 5 6 7 8 In Idle mode, open the application list and select Settings Location and security SIM Change Alert. Select Continue. Enter the email address and password for your Samsung account, and then select Sign in. To create a Samsung account, select Create an account. Select Alert message recipients. Enter the password for your Samsung account again and select Confirm. Enter a phone number, including the country code (with a +). Enter the text message that will be sent to the recipients.

Select Done. Getting started 34 Enter text You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen. You cannot enter text in some languages. To enter text, you must change the writing language to one of the supported languages. p.

163 > Change the keyboard type You can change the keyboard type. Tap and hold the text input field, and then select Input method a keyboard type (Samsung keypad or Swype). > Enter text with the Swype keyboard 1 2 Tap the first character of a word and then drag your finger to the second character without releasing your finger from the screen. Continue until you have finished spelling the word. 3 Lift your finger.

Getting started 35 4 5 When the device recognises the correct word, select to insert a space. If the device does not recognise the word, select an alternative word from the list that appears. Repeat steps 1-4 to complete your text. You can also tap the keys to enter text. You can tap and hold a key to enter that appear characters above the key. When you tap and hold a key until the character list appears, you can enter special characters and symbols. You can also use the following keys: 1 2 3 4 5 6 7 8 Number 1 2 3 4 5 6 Function Change case. Access the keypad settings; Show the alternative word list for the selected characters; Open the help information (tap and hold). Switch between Symbol mode and ABC/ Number mode. Change the input language; Select input languages (tap and hold).

Clear your input. Start a new line. Getting started 36 Number 7 8 Function Enter text by voice. This feature may be unavailable depending on the selected input language. Insert a space. > Enter text with the Samsung keypad 1 2 Select Portrait keypad types and select a text input method (QWERTY or a traditional keypad). Enter text by selecting alphanumeric keys or writing on the screen. You can also use the following keys: 1 2 3 4 5 6 7 8 Number 1 2 3 Function Change case. Switch between Symbol/Number mode and ABC mode. Access the keypad settings; Change the text input method (tap and hold). Getting started 37 Number Function Enter text by voice; This icon is available only when you activate the voice input feature for the Samsung keypad. This feature may be unavailable depending on the selected input language. Clear your input. Start a new line. Switch to Handwriting mode.

p. 48 Insert a space. 4 5 6 7 8 > Copy and paste text 1 2 3 4 5 6 7 From a text field, you can use the copy and paste feature to use the text in other applications. Place the cursor on the text you want to copy. Select .

Select Select word or Select all. Drag or to select the text. Select Copy to copy, or Cut to cut the text onto the clipboard. In another application, place the cursor where you want to paste the text. Select Paste to insert the text from the clipboard into the text field.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

Getting started 38 Download applications from Android Market Your device's functionality can be extended by installing additional applications for the Android platform. Android Market provides a quick and easy way to shop for games and mobile applications. This feature may be unavailable depending on your region or service provider. Your device will save user files from downloaded applications in the internal memory. > Install an application 1 2 3 1 2 3 In Idle mode, open the application list and select Market.

If you are launching this application for the first time, read the terms and conditions, and then select Accept. Search for a file or application and download it. > Uninstall an application From the main Android Market screen, select My apps. Select an item. Select Uninstall OK. Getting started 39 Download files from the web Files you download from the web can include viruses that will damage your device. To reduce your risk, only download files from sources you trust. Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files. 1 2 To download files from the web, In Idle mode, open the application list and select Internet.

Search for a file or application and download it. To install applications downloaded from websites other than Android Market, you must select Settings Applications Unknown sources OK. Synchronise data You can synchronise data with various web servers and back up or restore your data. Once the synchronisation is complete, your device stays connected to the web. If a change is made to the data, the updated information will automatically be synchronised between your device and the web server.

This feature may be unavailable depending on your region or service provider. Getting started 40 > Set up a server account 1 2 3 1 2 3 4 In Idle mode, open the application list and select Settings Accounts and sync. Select Add account an account type. Follow the on-screen instructions to complete the account setup. > Activate automatic sync Accounts and sync.

In Idle mode, open the application list and select Settings Select Auto-sync. Select an account. Select the applications that you want to synchronise. To exclude applications from automatic synchronisation, clear the tick boxes next to the application names. > Synchronise data manually 1 2 3 In Idle mode, open the application list and select Settings Accounts and sync. Select an account. Select Sync now. Your device will start synchronising the data you set for synchronisation. Getting started 41 Using special features Your device can be used as a powerful notepad, thanks to multiple features that help you input text, capture drawings, and use motion controls or voice commands. Learn basic S Pen actions Your device is supplied with a specialised S Pen.

To perform the following actions, first remove the S Pen from the slot at the bottom of your device. You cannot press the touch keys with the S Pen. Tap: Tap an item or area on the screen to select an item, open a menu, or launch an application. Tap and hold: Tap and hold the S Pen on an item for more than two seconds. Double-tap: Quickly tap an item or area on the screen twice. Flick: Tap an area on the screen and then slowly drag the S Pen up, down, left, or right to move through lists or screens. Draw: Draw a line or shape on the drawing pad. Write: Write text on the handwriting panel. Using special features 42 Learn advanced S Pen actions Press and hold the button on the side of the S Pen to perform the following actions: Back Drag the S Pen to the left to return to the previous screen. Menu Drag the S Pen up to open a list of options available on the current screen.

Screen capture Tap and hold the screen to capture a screenshot. After capturing a screenshot, you can draw on it, write on it, or crop it. The edited image will be saved in My files ScreenCapture Capture_ Edited. You cannot capture a screenshot while using a camera or playing a video. Using special features 43 Quick memo Double-tap to launch the Quick memo function.

Learn motions Built-in motion recognition provides you with enhanced controls. You can perform actions by moving your device or performing gestures with your hands. To use some of these functions, you must first activate the motion recognition feature. In Idle mode, open the application list, and then select Settings Motion Motion activation. Shake Shake your device to search for Bluetooth-enabled devices.

Using special features 44 Double-tap While using Voice talk, begin voice recognition by tapping the device twice quickly. Tilt While holding the device with two hands, tap and hold two points on the screen, and then tilt the device back and forth to zoom in or out. Using special features 45 Palm sweep Sweep your palm across the screen to capture a screenshot. The image will be saved in My files ScreenCapture. You cannot capture a screenshot while using a camera or playing a video. Palm touch Touch the screen with your palm to pause media playback or mute the radio. Using special features 46 Tap and twist Place your finger on the screen and then twist it to rotate an image. Pan Tap and hold an item on the screen, and then pan the device to the left or right to move the item to another page on the idle screen or application list. Using special features 47 Turn over Place the device face down to mute ringtones. Use Handwriting mode From the Samsung keypad, you can switch to Handwriting mode to enter text more easily.

To switch to Handwriting mode, select . Using special features 48 Write your text on the handwriting panel. When the device to enter it in the text recognises the correct word, select input field. Otherwise, select a word from the alternative word list. You can use a variety of gestures in Handwriting mode to edit text. For more information about gestures, select Handwriting settings Gesture guide. To switch to the Samsung keypad, select . > Pen detection Your device can detect inputs from the S Pen. When you tap the field with the S Pen, the device will open the handwriting panel. To use this feature, select Pen detection. > Handwriting Tutorial When you have written one character, write the next one. Write each letter to the right of the previous character. If you draw a stroke on top of a previous character, it may be recognised as a new character. - E.g.

Not recognised Using special features 49 Write characters upright (do not slant). - E.g. Recognised - E.g.

Not recognised Do not write characters on top of one another. - E.g. Recognised - E.g. Not recognised Most of the languages can recognise not only individual characters but characters written together that make up words. (This is referred to as supporting words and phrases.)



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

) The languages that do and do not support words and phrase should be listed in this guide. (All languages which support Handwriting SIP should support words and phrases.) Using special features 50 - Languages that support words and phrases: English UK, English US, Cestina, , Dansk, Deutsch, , Español, Eesti, Suomi, Français, Hrvatski, Magyar, íslenska, Italiano, , , Lietuvi, Latvietu, Norsk, Nederlands, Polski, Português, Román, , Slovencina, Slovenscina, Srpski, Svenska, Türkçe, - Supporting recognition of individual characters - Supporting recognition of words and phrases In some languages, cursive writing can be recognised.

(Cursive writing recognition) - For languages in which cursive writing is recognised, connected character writing should also be recognised. - For languages in which cursive writing is not recognised, characters should be written separately. - Languages that do and do not support cursive writing should be listed in this guide. - Languages that support cursive writing: English UK, English US, Deutsch, Español, Français, Italiano, Nederlands, Português - Languages that do not support cursive writing: Cestina, , , Eesti, Hrvatski, Magyar, íslenska, , , Lietuvi, Latvietu, Polski, Román, , Slovencina, Slovenscina, Srpski, Türkçe, , Dansk, Suomi, Norsk, Svenska Using special features 51 - E.g. A language that supports cursive writing: English - E.g. A language that does not support cursive writing: When writing more than one line, make sure you leave enough space. - E.g.

Recognised - E.g. Not recognised Using special features 52 Use S Memo With S Memo, you can create memos with enriched content by drawing sketches or adding photos or sound clips. 1 2 3 4 In Idle mode, open the application list and select S Memo. If you are launching this application for the first time, select the tick box next to Do not show again, and then select Done.

Select . To enter text with the keyboard, select . Enter text or draw a sketch. Redo your last action. Undo your last action.

Erase your text or sketch; Change the eraser thickness or clear your input (double-tap). Draw a sketch; Change the pen settings (doubletap). Enter text with the keyboard. Create a new memo. Using special features 53 To change the pen type, line thickness, or pen colour, double-tap . 1 2 3 4 Number 1 2 3 4 Function Change the pen type. Change the line thickness. Change the pen colour. Open to view more colour or change the shade of colour. Changing the colour shade is available when you select the highlighter.

Using special features 54 5 Select , and then add a photo or sound clip. Mark the memo as important. Add a sound clip by recording voices or other sounds. Add a photo or text. Scroll through the screen. 6 To add a page, select . p. 110 You can also change the background image of the memo. Press [] Change background an image. To zoom in, place two fingers on the screen and spread them apart.

To zoom out, move your fingers closer together. When zoomed in, drag with two fingers to scroll through the screen. When you are finished, select Save. For more information about viewing or editing memos, or using other memo features, see page 110. Using special features 55 Use the quick memo pad From any screen, you can create a quick memo of text and sketches.

1 2 While pressing the S Pen button, double-tap the screen to open the quick memo pad. Enter text or draw a sketch. Redo your last action. Undo your last action. Erase your text or sketch; Change the eraser thickness or clear your input (double-tap).

Draw a sketch; Change the pen settings, such as the pen type, line thickness, or pen colour (doubletap). Enter text with the keyboard. Create a new memo. 3 When you are finished, select Save. Using special features 56 Use S Planner Your device provides you with a powerful planner to help you organise your schedules and tasks more conveniently and effectively. You can create and view events, add items, and change view modes. To launch S Planner, in Idle mode, open the application list, and then select S Planner. Add a calendar event or task. Select today's date. Set which calendars to display.

Hide or display the view mode tabs. Using special features 57 > Create an event or task The tasks and notes you create cannot be synchronised with Google Calendar™. To create an event, 1 2 3 4 1 2 In Idle mode, open the application list and select S Planner . If alert messages about the calendar sync appear, select OK. Select Add event, and then enter details. To search for and add a location view, select . To add a memo, select Memos Create S Memo or Link to S Memo. To add a photo, select Pictures Capture picture or Pictures. When you are finished, select Save. In Idle mode, open the application list and select S Planner .

Select Add task, and then enter details. To add a memo, select Memos Create S Memo or Link to S Memo. To add a photo, select Pictures Capture picture or Pictures. When you are finished, select Save. This feature is available only for English and Korean.

To create a task, 3 To create an event or task from a memo, 1 In Idle mode, open the application list and select S Planner . Using special features 58 2 3 Select Quick add, and then enter details. When you are finished, select Save. The device will automatically classify the details in the text and enter them into the corresponding fields. > Add a memo 1 2 3 4 In Idle mode, open the application list and select S Planner.

Change the view mode to month view (if necessary). Tap and hold a day to create a sketch memo. Enter details and select Save. For more information about changing view mode or view events or tasks, see page 107. Use Voice talk Built-in voice recognition provides you with a quick and easy way to launch applications and features. When your hands are engaged with other tasks or you are not able to look at the device's screen, such as while you are driving, you can say a command to perform an action. To launch the voice command feature, quickly press the Home key twice. If you are launching the application for the first time, you will see a tutorial and help information. Afterwards, you will see the main Voice talk screen. This feature may be unavailable in some languages.

This feature may be unavailable depending on your region or service provider. Using special features 59 Access help information. Deactivate or activate the voice command feature. Select a voice command category. Initiate the voice command feature. > Learn voice commands > Use voice commands 1 To view available voice commands, select under What can I say? and a category 2 3 From the Voice Talk screen, do one of the following: Select a category to view the available commands. Select Tap & Speak to initiate the voice command feature.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

You can say a voice command for any type of feature. Say a command into the microphone, and then select Done. Say additional commands to respond to the voice guide for the feature you selected.

Using special features 60 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features. > Make or answer a call You can use the buttons or the touch screen when you make, accept, end, or reject calls. To prevent accidental inputs, the proximity sensor automatically locks the touch screen when you hold the device near your face. p. 155 Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call.

Make a call 1 2 3 In Idle mode, open the application list and select Phone Keypad, and then enter an area code and a phone number. Select to make a voice call. To make a video call, select . To end the call, select End call. Use the phonebook to save numbers that you dial frequently.

p. 102 To access the call log and redial numbers you have called recently, select Phone Logs. Communication 61 Answer a call 1 2 When a call comes in, drag outside of the large circle. To mute the ringtone, press the Volume key while the device is ringing. To end the call, select End call. Reject a call When a call comes in, drag outside of the large circle. To send a message when you reject an incoming call, select Reject call with message. First create a text message to be sent to callers. In Idle mode, open the application list and select Settings Call Set reject messages. Call an international number 1 2 In Idle mode, open the application list and select Phone Keypad, and then tap and hold 0 to insert the + character.

Enter the complete number you want to dial (country code, area code, and phone number), and then select to dial the number. > Use a headset By plugging a headset into the device, you can answer and control calls conveniently: To answer a call, press the headset button. To reject a call, press and hold the headset button. To place a call on hold or retrieve a held call, press and hold the headset button. To end a call, press the headset button. Communication 62 You can use the following options during a voice call: To adjust the voice volume, press the Volume key up or down. To place a call on hold, select . To retrieve a held call, select . To dial a second call, select Add call, and then dial a new number. To answer a second call, drag outside of the large circle when a call waiting tone sounds.

The device asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature. To open the dialling screen, select Keypad. To activate the speakerphone feature, select Speaker. In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature.

For better audio performance, use the normal phone mode. > Use options during a voice call To turn off the mouthpiece so that the other party cannot hear you, select Mute. To converse with the other party via a Bluetooth headset, select Headset. To open the phonebook, press [] Contacts. To add a memo, press [] Memo.

To switch between two calls, select Swap. To make a multiparty call (conference call), make or answer a second call, and then select Merge when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature. Communication 63 You can use the following options while a video call is in progress: To switch between the front and rear camera lens, select Switch Camera. To turn off the mouthpiece so that the other party cannot hear you, select Mute. To hide your image from the other party, press [] Hide me. To select an alternative image to be shown to the other party, press [] Outgoing image. To open the dialling screen, press [] Dialpad. To converse with the other party via a Bluetooth headset, press [] Switch to headset.

To activate the speakerphone feature, press [] Speaker On/Off. To use the other party's image, tap and hold it. You can capture an image of the screen or record the video call. It is illegal in many areas to record a call without permission. Always ask the other party for permission before recording a call. > Use options during a video call > View and dial missed calls Your device will display missed calls on the display. To return the call, open the notifications panel and select the missed call. Communication 64 > Use additional features Set auto rejection You can use other call-related features, such as auto rejection, Fixed Dialling Number (FDN) mode, or call diverting or barring. Use auto rejection to reject calls from certain numbers automatically. To activate auto rejection and create auto reject lists, 1 2 In Idle mode, open the application list and select Settings Call Call rejection.

Select Auto reject mode an option. Option All numbers Auto reject numbers Function Reject all calls. Reject calls from phone numbers on the Auto reject list. 3 4 5 6 7 Select Auto reject list. Select Add and enter a phone number.

Select Match criteria an option (if necessary). Select Save. To add more numbers, repeat steps 4-6. Use Fixed Dialling Number (FDN) mode In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list. To activate FDN mode, 1 In Idle mode, open the application list and select Settings Call Additional settings Fixed Dialing Numbers Enable FDN.

Communication 65 2 3 Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts to be used in FDN mode. Set call forwarding Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area. 1 2 3 In Idle mode, open the application list and select Settings Call Call forwarding a call type. Select a condition. Enter a number to which calls will be forwarded and select Enable. Your setting will be sent to the network. Set call barring Call barring is a network feature to restrict certain types of calling or to prevent others from making calls with your device. 1 2 3 In Idle mode, open the application list and select Settings Call Additional settings Call barring a call type.

Select a call barring option. Enter a call barring password and select OK. Your setting will be sent to the network. Communication 66 Set call waiting Call waiting is a network feature to alert you of an incoming call while you are on a previous call. This feature is available only for voice calls. In Idle mode, open the application list and select Settings Call Additional settings Call waiting.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

Your setting will be sent to the network. > View call logs 1 2 You can view logs of your calls filtered by their types. In Idle mode, open the application list and select Phone Logs. Press [] View by an option to sort the call logs.

From the call logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right. Select a log to view its details. From the detail view, you can dial the number, send a message to the number, or add the number to the phonebook or Auto reject list. 3 Messaging Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages that you have sent or received. You may incur additional charges for sending or receiving messages while outside of your home service area.

For details, contact your service provider. Communication 67 > Send a text message 1 2 3 In Idle mode, open the application list and select Messaging. Select . Add recipients: Enter phone numbers manually and separate them with a semicolon or a comma. Select phone numbers from your call and contact lists by selecting .

Select Tap to enter message and enter your message text. To insert emoticons, press [] Insert smiley. Select Send to send the message. 4 5 1 2 3 > Send a multimedia message In Idle mode, open the application list and select Messaging. Select . Add recipients: Enter phone numbers or email addresses and separate them with a semicolon or a comma. Select phone numbers or email addresses from the call, message, or contact by selecting . When you enter an email address, the device will convert the message to a multimedia message. Press [] Add subject and enter a subject for the message. 4 Communication 68 5 6 7 1 2 3 Select Tap to enter message and enter your message text.

To insert emoticons, press [] Insert smiley. Select and add an item. You can select a file, sketch memo, or event from the file list or create a new photo, video, sound, or sketch memo. Select Send to send the message. > View a text or multimedia message In Idle mode, open the application list and select Messaging.

Your messages are grouped into message threads by contact. Select a contact. Select a multimedia message to view more details. > Listen to voice mail messages If you have set missed calls to be diverted to the voice mail server, callers can leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to your messages, 1 2 In Idle mode, open the application list, select Phone Keypad, and then tap and hold 1.

Follow the instructions from the voice mail server. You must save the voice mail server number before accessing the server. Contact your service provider for the number. Communication 69 Google Mail You can retrieve new email messages from the Google Mail™ webmail service to your Inbox. When you access this application, the Inbox screen appears.

The total number of unread messages appears in the title bar and unread messages appear in bold type. This feature may be unavailable depending on your region or service provider. This menu may be labelled differently depending on your service provider. > Send an email message 1 2 3 4 5 6 7 1 2 In Idle mode, open the application list and select Google Mail. If you are launching this application for the first time, select OK.

Press [] Compose. Enter a name or address in the recipient field. To add more recipients, press [] Add Cc/Bcc. Enter a subject and message. To attach an image file, press [] Attach a file. Select to send the message. > View an email message In Idle mode, open the application list and select Google Mail. Select an email message. Communication 70 From the message view, use the following options: Available options may vary depending on the account. To reply to the message, select .

To reply to the message and include all recipients, select Reply all. To forward the message to other people, select Forward. To mark the message as important, select . To view an attachment, select Preview. To save it to your device, select Download. To archive the message, select Archive. To delete the message, select Delete. To move to the previous or next message, select or . > Organise email by labels Add a label to a message You can organise your email by labelling your messages. You can sort messages with the label filter.

1 2 3 1 2 From the Inbox screen, tap and hold a message. Select Change labels. Select a label, and then select OK. From the Inbox screen, press [] Go to labels. Select the label for the messages you want to view.

Filter messages Communication 71 Email Learn to send or view email messages via your personal or company email account. > Set up an email account 1 2 3 4 In Idle mode, open the application list and select Email. Enter your email address and password. Select Next (for general email accounts, such as Google Mail and Yahoo) or Manual setup (for other company email accounts). Follow the on-screen instructions.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one you want to retrieve messages from. > Send an email message 1 2 3 4 In Idle mode, open the application list and select Email. Select . Add recipients: Enter email addresses manually and separate them with a semicolon or a comma. Select email addresses from the call, message, or contact lists by selecting . Add more recipients by pressing [] Add Cc/Bcc. Select the subject field to enter a subject. Communication 72 5 6 Select the text input field to enter your email text.

Select Attach and attach a file. You can select a file, sketch memo, or event from the file list or create a new photo, video, sound, or sketch memo. You cannot attach Digital Rights Management (DRM) protected files. Select Send to send the message. If you are offline or outside your service area, the message will be held in the message thread list until you are online and inside your service area. 7 > View an email message When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline. 1 2 3 In Idle mode, open the application list and select Email an email account. Press [] Refresh to update the message list. Select an email message.

From the message view, use the following options: To move to the previous or next message, select or . To move the message to another folder, select . To delete the message, select . To reply to the message, select Reply. To forward the message to other people, select Forward.

To view an attachment, select the attachment. To save it to your device, select . Communication 73 Talk Learn to chat with friends and family with the Google Talk™ instant messaging service.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>

This feature may be unavailable depending on your region or service provider. > Add friends to your friend list 1 2 3 In Idle mode, open the application list and select Talk.

The friend list shows all of your messaging contacts at a glance. Press [] Add friend. Enter a friend's email address and select Send invitation. When your friend accepts the invitation, he or she is added to your friend list. > Start a chat 1 2 3 4 5 In Idle mode, open the application list and select Talk. Select a friend from the friend list. The chat screen opens. Enter your message and select Send. To insert emoticons, press [] More Insert smiley. To switch between active chats, press [] Switch chats.

To end the chat, press [] End chat. Communication 74 Social Hub Learn to access Social Hub™, the integrated communication application for SNS (Social Network Service), email and messages. Visit socialhub.samsungapps.com for more details. 1 2 3 4 In Idle mode, open the application list and select Social Hub. If you are launching this application for the first time, add an account or skip it for a later setup. Select a category at the top left of the screen. Check and use contents delivered from Social Hub. Communication 75 Entertainment Camera Learn how to capture and view photos and videos.

You can take photos at resolutions up to 3264 x 2448 pixels (8 megapixels) and videos at resolutions up to 1920 x 1080 pixels. The camera automatically turns off when you do not use it for a specified period. The memory capacity may differ depending on the shooting scene or shooting conditions. > Capture a photo 1 2 In Idle mode, open the application list and select Camera to turn on the camera. Aim the lens at the subject and make any necessary adjustments. 1 3 4 2 5 6 Entertainment 76 Number 1 2 Function Change the camera settings. Open the image viewer to view photos you captured. Use camera shortcuts. : Change the flash setting. : Switch between the front and rear camera lenses.

You can add or remove shortcuts to frequently used options. p. 87 View the default storage location. Switch to the camcorder. Capture a photo. 3 4 5 6 3 4 5 Press the Volume key to zoom in or out. You can also tap the screen with two fingers and spread them apart to zoom in (move your fingers closer together to zoom out). Tap where you want to focus on the preview screen. The focus frame moves to the place you tap and changes to green when the subject is in focus. to take a photo.

Select The photo is saved automatically. Entertainment 77 After taking photos, select the image viewer icon to view the taken photos. To view more photos, scroll left or right. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. To send a photo to others, select Share. To delete a photo, select Delete. To use additional features with a photo, select More and use the following options: - Set as: Set a photo as wallpaper or a caller ID image for a contact. - Rename: Rename a photo file. > Capture a photo with preset options Your camera provides you with predefined settings for various scenes.

You can simply select the proper mode for your shooting conditions and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure. 1 2 3 4 In Idle mode, open the application list and select Camera to turn on the camera. Select Scene mode a scene. Make any necessary adjustments.

Select to take a photo. Entertainment 78 > Capture a photo in Self shot mode 1 2 3 4 You can take photos of yourself conveniently with the front camera lens. In Idle mode, open the application list and select Camera to turn on the camera. Select Self portrait. Make any necessary adjustments.

Select to take a photo. > Capture a photo in Smile shot mode 1 2 3 4 Your camera can recognise people's faces to help you take photos of them. In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Smile shot. Make any necessary adjustments. Aim the camera lens at your subject and select . Your device recognises people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo. > Capture a beauty photo 1 2 3 4 You can hide facial imperfections using Beauty mode. In Idle mode, open the application list and select Camera to turn on the camera.

Select Shooting mode Beauty. Make any necessary adjustments. Select to take a photo. Entertainment 79 > Capture a panoramic photo 1 2 3 4 5 6 You can take wide panoramic photos with Panorama shooting mode. This mode is convenient for photographing landscapes. In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Panorama. Make any necessary adjustments. Select to take the first photo. Slowly move the device in any direction and align the green frame with the viewfinder.

When you have aligned the green frame and viewfinder, the camera will automatically take the next photo. Repeat step 5 to complete the panoramic photo. > Capture a photo in Shashot mode 1 2 3 4 5 You can capture a photo and automatically send it to your friends simultaneously with the Shashot feature.

This mode is available only when Wi-Fi Direct is connected. In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Share Shot. Select OK to connect to a Wi-Fi Direct (if necessary). Select users from the list. When other users accept the connection, they are highlighted in the user list. to take a photo.

Select Your photo is sent to the connected users. Entertainment 80 > Capture a photo of action 1 2 3 4 5 6 You can capture shots of a moving subject and then combine them into a single photo that shows the action. In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Action shot. Make any necessary adjustments. Select to capture the first photo. Move the device to follow the moving subject. The device automatically captures the next photos. Continue to follow the subject until the device has captured all the shots necessary for the action photo. > Capture a photo in Cartoon mode You can take photos with cartoon effects.

1 2 3 4 In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Cartoon. Make any necessary adjustments. Select to take a photo. Entertainment 81 > Customise camera settings Before taking a photo, select options: Option Edit shortcuts Self portrait Flash Shooting mode Scene mode Function to access the following Edit shortcuts to frequently-used options. Switch between the front and rear camera lenses. Change the flash setting. You can manually turn the flash on or off, or set the camera to automatically use the flash when needed. Change the shooting mode.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY NOTE GT-N7000 user guide](http://yourpdfguides.com/dref/4261337)
<http://yourpdfguides.com/dref/4261337>