



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY S ADVANCE GT-I9070. You'll find the answers to all your questions on the SAMSUNG GALAXY S ADVANCE GT-I9070 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY S ADVANCE GT-I9070
User guide SAMSUNG GALAXY S ADVANCE GT-I9070
Operating instructions SAMSUNG GALAXY S ADVANCE GT-I9070
Instructions for use SAMSUNG GALAXY S ADVANCE GT-I9070
Instruction manual SAMSUNG GALAXY S ADVANCE GT-I9070



GT-I9070
user manual



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

Manual abstract:

This user manual has been specially designed to guide you through the functions and features of your device. Read me first Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use. The descriptions in this manual are based on the default settings of your device. Images and screenshots used in this user manual may differ in appearance from the actual product. Using this manual 2 Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsung.com for the latest version of the user manual. @@@@ Samsung is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customise the operating system may cause your device or applications to work improperly.

You may upgrade your mobile device's software by accessing www.samsung.com. Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws.

Samsung is not liable for such copyright infringement by the user. Please keep this manual for future reference. Using this manual 3 Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning--situations that could cause injury to yourself or others Caution--situations that could cause damage to your device or other equipment Note--notes, usage tips, or additional information Refer to--pages with related information; for example: p. 12 (represents "see page 12") Followed by--the order of options or menus you must select to perform a step; for example: In Idle mode, open the application list and select Settings About phone (represents Settings, followed by About phone) Square brackets--device keys; for example: [(represents the Menu key)] [] Copyright Copyright © 2012 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc. Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Oracle and Java are registered trademarks of Oracle and/ or its affiliates. Other names may be trademarks of their respective owners. Wi-Fi®, Wi-Fi Protected Setup™, Wi-Fi Direct™, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. Windows Media Player® is a registered trademark of Microsoft Corporation. DivX®, DivX Certified®, and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence. All other trademarks and copyrights are the property of their respective owners.

Using this manual 5 DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos. DivX Certified® to play DivX® video up to HD 720p, including premium content ABOUT DIVX VIDEO ABOUT DIVX VIDEO-ON-DEMAND This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu.

Go to vod.divx.com for more information on how to complete your registration.

Using this manual 6 Contents Assembling

.....

.....

.....

.....

.....

.....

.....

. 11 Unpack

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 11 Install the SIM or USIM card and battery

.....

.....

..... 11 Charge the battery .

.....

.....

.....

.....

.....
.....
.....
.....

.. 13 Insert a memory card (optional)

.....
.....
.....

. 16 Getting started

.....
.....
.....
.....
.....
.....

..... 19 Turn your device on and off ...

.....
.....
.....
.....
.....
.....

... 19 Get to know your device

.....
.....
.....
.....
.....
.....

. 20 Use the touch screen

.....
.....
.....
.....
.....
.....

24 Lock or unlock the touch screen and keys

.....
.....
.....
.....
.....
.....

..... 25 Get to know the idle screen

.....
.....
.....
.....
.....
.....

... 26 Access applications

.....
.....
.....
.....
.....
.....

.....
..... 28 Customise your device

.....
.....
.....

.....
.....
.....

. 31 Enter text

.....
.....
.....

.....
.....
.....

. 35 Download applications from Android Market

.....

..... 40 Download files from the web

.....
.....
.....

..... 41 Synchronise data .

.....
.....
.....

.....
.....
.....

.....
.....

41 Communication

.....
.....
.....
.....

..... 43 Calling ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 43 Messaging

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 50 Google Mail

.....
.....
.....

.....
.....
.....

..... 52 Email ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 54 Talk

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 56 Social Hub

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....
.... 57 Contents 7 Entertainment

.....
.....
.....
.....

.....
.....
.....
58 Camera

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 58 Videos .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
68 Gallery

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 69 Photo editor

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

72 Music

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 73 Music Hub ...

.....
.....
.....
.....

.....
.....
.....
.....

..... 76 FM radio

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 76 Personal information ...

.....
.....
.....
.....

.....

. 80 Contacts

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 80 Calendar

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *84 Task*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *86 Memo*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

86 Voice recorder

.....
.....
.....
.....

.....
.....
.....
.....

. 87 Web

.....
.....
.....

.....
.....
.....
.....

.....
.....

89 Internet

.....
.....
.....

.....
.....

.....
.....
.....
.....

..... *89 Maps* ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *93 Latitude*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *94 Places* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *95 Navigation*

.....
.....
.....
.....

.....
.....
.....
.....

..... *95 YouTube* .

.....
.....

.....
.....
.....

.....
.....
.....

..... *96 Samsung Apps*

.....
.....

.....
.....
.....

.....
.....

. 97 Market

.....

.....
.....
.....

.....
.....
.....

. 98 News & Weather

.....
.....

.....
.....
.....

.....
.....

.... *98 Connectivity* .

.....

.....
.....
.....

.....
.....

. 100 Bluetooth

.....

.....
.....
.....

.....

.....
.....
.....

.... 100 Wi-Fi

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 102 Contents & Wi-Fi Direct

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 104 AllShare

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 105 Mobile network sharing ...

.....
.....
.....

.....
.....
.....

..... 108 GPS ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 109 PC connections ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 110 VPN connections

.....
.....
.....
.....
.....
.....
.....

..... 112 Tools ..

.....
.....
.....
.....
.....
.....
.....
.....

.... 115 Clock .

.....
.....
.....
.....
.....
.....
.....

115 Calculator

.....
.....
.....
.....
.....
.....
.....

.. 118 Downloads

.....
.....
.....

.....
.....
.....
.....

.....
.....
.. 118 Google Search ..
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... 119 Kies air

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.... 119 Mini diary .
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 120 My files
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 121 Polaris Office ..
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
122 SIM Toolkit

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..... *124 Task manager*

.....
.....

.....
.....

.....
.....

.....
.....

..... *124 Voice command*

.....
.....

.....
.....

.....
.....

.....
.....

..... *125 Voice Search*

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..... *125 Voice talk*

.....
.....

.....
.....

.....
.....

.....
.....

..... *126 Settings*

.....
.....

.....
.....
.....
.....

.....
.....
.... 127 Access the Settings menu .
.....

.....
.....
.....
.....

..... 127 Wireless and network ...
.....
.....
.....

.....
.....
.....
.....

... 127 Call
.....
.....
.....

.....
.....
.....
.....

... 129 Sound
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 131 Display ...

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.... 132 Power saving .

.....

.....

.....

.....

.....

.....

.....

.....

.....

133 Location and security

.....

.....

.....

.....

.....

.....

..... 134 Contents & Applications

.....

.....

.....

.....

.....

.....

.....

.....

..... 135 Accounts and sync .

.....

.....

.....

.....

.....

.....

.....

.....
. 136 Motion

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 136 Privacy

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....
..... 137 Storage ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 137 Language and keyboard .

.....travel adapter from the outlet when not in use to avoid wasting power.

The travel adapter should remain close to the socket when in use. 3 > Charge with a USB cable 1 Before charging, ensure that your PC is turned on. Plug one end (micro-USB) of the USB cable into the multifunction jack. Assembling 15 2 Plug the other end of the USB cable into a USB port on a PC. Depending on the type of USB cable you are using, it may take some time before charging begins. When the battery is fully charged, first unplug the USB cable from the device and then fed Bluetooth headset connected GPS activated Call in progress Call on hold Speakerphone activated Missed call Synchronised with the web Uploading data Downloading data Getting started 22 Icon Definition Call diverting activated Connected to PC USB tethering activated Wi-Fi tethering activated No SIM or USIM card New text or multimedia message New email message New voice mail message Alarm activated Event notification Roaming (outside of normal service area) Silent mode activated Vibration mode activated Flight mode activated Music playback in progress Music playback paused FM radio turned on in the background Error occurred or caution required Battery power level 10:00 Current time Getting started 23 Use the touch screen Your device's touch screen lets you easily select items or perform functions.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

Learn basic actions to use the touch screen. To avoid scratching the touch screen, do not use sharp tools. Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.

Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water. For optimal use of the touch screen, remove the screen protection film before using your device. Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip.

The touch screen will not react to touches of sharp tools, such as a stylus or pen. Getting started 24 Control your touch screen with the following actions:
Tap: Touch once with your finger to select or launch a menu, option, or application. Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list. Drag: Tap and drag your finger up, down, left, or right to move to items on lists. Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages. Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press the Power key or the Home key. You can also adjust the backlight time. In Idle mode, open the application list and select Settings Display Screen timeout. Lock or unlock the touch screen and keys You can lock the touch screen and keys to prevent any unwanted device operations. To lock, press the Power key. To unlock, turn on the screen by pressing the Power key or the Home key, and then flick the window with your finger. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. p.

33 Getting started 25 Get to know the idle screen When the device is in Idle mode, you will see the idle screen. From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items. The idle screen has multiple panels. Scroll left or right to a panel of the idle screen. You can also select a dot at the bottom of the screen to move directly to the corresponding screen. > Add items to the idle screen 1 2 You can customise the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen, Press [] Add or tap and hold the empty area on the idle screen. Select the item category an item: Widgets: Add widgets to the idle screen. Shortcuts: Add shortcuts to items, such as applications, bookmarks, and contacts. Folders: Create a new folder or add folders for your contacts.

Wallpapers: Set a background image. > Move items on the idle screen 1 2 Tap and hold an item to move. Drag the item to the location you want. Getting started 26 > Remove items from the idle screen 1 2 3 Tap and hold an item to remove. The trash bin appears at the bottom of the idle screen.

Drag the item to the trash bin. When the item turns red, release the item. In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the notifications panel. You can activate or deactivate wireless connection features and access a list of notifications, such as messages, calls, events or processing status. To hide the panel, drag the bottom of the list up.

From the notifications panel, you can use the following options: Wi-Fi: Activate or deactivate the Wi-Fi feature. p. 103 Bluetooth: Activate or deactivate the Bluetooth wireless connection feature. p. 100 GPS: Activate or deactivate the GPS feature. Silent mode: Activate or deactivate Silent/Vibration mode. Auto rotation: Activate or deactivate the auto rotation. Available options may vary depending on your region or service provider. > Use the notifications panel Getting started 27 > Add or remove panels to the idle screen 1 2 You can add or remove panels of the idle screen to organise widgets according to your preferences and needs. In Idle mode, press [] Edit.

You can also place your two fingers on the screen and pinch to switch to Edit mode. Add or remove panels by using the following features: To remove a panel, tap and hold the thumbnail of a panel and drag it to the trash bin at the bottom of the screen. To add a new panel, select . To change the order of the panels, tap and hold the thumbnail of a panel and drag it to the location you want. When you are finished, press []. 3 Access applications To access your device's applications, 1 2 In Idle mode, select Applications to access the application list. Scroll left or right to another application screen. You can also select a dot at the bottom of the screen to move directly to the corresponding screen. Getting started 28 3 Select an application. When you use applications provided by Google, you must have a Google account.

If you do not have a Google account, sign up for a Google account. You can add a shortcut to an application by tapping and holding the application icon from the application list. You can move the icon to the location you want on the idle screen. Press [] to return to the previous screen; Press the Home key to return to the idle screen. If you rotate the device while using some features, the interface will automatically rotate as well.

To prevent the interface from rotating, open the notifications panel and select Auto rotation. While using the device, you can capture an image of a screen by pressing and holding Home key and the Power key simultaneously. The image will be saved in My files ScreenCapture. 4 > Organise applications 1 2 3 4 You can reorganise the applications in the application list by changing their order or grouping them into categories to suit your preferences and needs. In the application list, press [] Edit OK.

Tap and hold an application. Drag the application icon to the location you want. You can move an application icon to another main menu screen. You can also move most-used applications next to Home. Press [] Save. Getting started 29 To add a folder or panel to the menu screen, 1 2 3 4 5 6 7 1 2 1 2 In the application list, press [] Edit. Tap and hold an application. Drag the application icon to Add Folder or Add Page at the bottom of the screen. Repeat steps 2-3 to add more applications. Drag Add Folder or Add Page to the menu screen.

A new folder or panel containing the applications is added to the menu screen. If you added a folder, enter a name and select OK. Press [] Save. In the application list, place your two fingers on the screen and pinch. Tap and hold the thumbnail of a screen and drag it to the location you want. To change the order of the main menu screens, > Access recent applications Press and hold the Home key to view the applications you have accessed recently.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

Select an application to access. Getting started 30 > Use the task manager Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption.

To avoid these problems, end unnecessary programs using the task manager. 1 2 In Idle mode, open the application list and select Task manager Active applications. The list of all the applications currently running on your device appears. To close an application, select Exit. To close all active applications, select Exit all.

Customise your device Get more from your device by customising it to match your preferences. > Set the current time and date 1 2 In Idle mode, open the application list and select Settings Date and time. Set the time and date and change other options. > Turn on or off the touch tone In Idle mode, open the application list and select Settings Sound Audible selection. > Adjust the volume of the ringtones Press the Volume key up or down to adjust the ringtone volume.

Getting started 31 > Switch to Silent mode To mute or unmute your device, do one of the following: In Idle mode, open the application list and select Phone Keypad and tap and hold #. Open the notifications panel from the top of the screen and select Silent mode. Press and hold the Power key and select Silent mode. You can set the device to alert you to various events in Silent mode. In Idle mode, open the application list and select Settings Sound Vibration Always or Only in Silent mode. > Change your ringtone 1 2 In Idle mode, open the application list and select Settings Sound Phone ringtone. Select a ringtone from the list and select OK. In Idle mode, open the application list and select Settings Display Animation Some animations or All animations. > Activate animation for switching windows > Select a wallpaper for the idle screen 1 2 3 In Idle mode, press [] Wallpaper an option. Select an image.

Select Save or Set wallpaper. Samsung is not responsible for any use of default images or wallpapers provided on your device. Getting started 32 > Adjust the brightness of the display 1 2 3 4 In Idle mode, open the application list and select Settings Display Brightness. Clear the check box next to Automatic brightness. Drag the slider to adjust the level of brightness. Select OK. The brightness level of the display will affect how quickly the device consumes battery power. > Set a screen lock You can lock the touch screen by activating the screen lock feature. Your device will require the unlock code each time you turn on the device or unlock the touch screen. If you forget your unlock code, bring your device to a Samsung Service Centre to reset it.

Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software. Set an unlock pattern 1 2 3 4 In Idle mode, open the application list and select Settings Location and security Set up screen lock Pattern. See the on-screen instructions and example patterns and select Next. Draw a pattern by dragging your finger to connect at least 4 dots and select Continue. Draw the pattern again and select Confirm.

Getting started 33 Set an unlock PIN code 1 2 3 1 2 3 In Idle mode, open the application list and select Settings Location and security Set up screen lock PIN. Enter a new PIN (numeric) and select Continue. Enter the PIN again and select OK. In Idle mode, open the application list and select Settings Location and security Set up screen lock Password. Enter a new password (alphanumeric) and select Continue.

Enter the password again and select OK. Set an unlock password > Lock your SIM or USIM card 1 2 You can lock your device by activating the PIN supplied with your SIM or USIM card. In Idle mode, open the application list and select Settings Location and security Set up SIM card lock Lock SIM card. Enter your PIN and select OK. Once the PIN lock is enabled, you must enter the PIN each time you turn on the device. If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card. If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it. Getting started 34 > Activate the Find my mobile feature When someone inserts a new SIM or USIM card in your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device. To use this feature, you need a Samsung account for controlling the device from the web remotely.

1 2 3 4 5 6 7 In Idle mode, open the application list and select Settings Location and security SIM change alert. Select Sign in, enter your email address and password for your Samsung account, and select Sign in. To create a Samsung account, select Sign up. Select Alert message recipients. Enter the password for your Samsung account again and select OK. Enter a phone number including a country code (with +). Enter the text message to be sent to the recipients. Select Done. Enter text You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen. You cannot enter text in some languages.

To enter text, you should change the writing language to one of the supported languages. p. 137 Getting started 35 > Change the keyboard type You can change the keyboard type. Tap and hold the text input field and select Input method a keyboard type (Samsung keypad or Swype). > Enter text using the Swype keyboard 1 2 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen. Continue until you have finished the word. 3 4 5 Release the finger on the last character. When the word displays correctly, select to insert a space. If the correct word does not display, select an alternative word from the list that appears. Repeat steps 1-4 to complete your text.

You can also tap the keys to enter text. You can tap and hold a key to enter characters on the upper half of the key. When you tap and hold a key until the character list appears, you can enter special characters and symbols. Getting started 36 You can also use the following keys: 1 2 3 4 5 6 7 8 Number 1 2 3 4 5 6 7 8 Function Change case. Access the keypad settings (tap and hold). Switch between Symbol/Number mode and ABC mode. Change the input language. Clear your input. Start a new line. Enter text by voice.

This feature may be unavailable depending on the selected input language. Insert a space. Getting started 37 > Enter text using the Samsung keypad 1 2 Select Portrait keypad types and select a text input method. You can select one of key input methods (QWERTY or traditional keypad) or handwriting input methods.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/4295913)

[GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)

<http://yourpdfguides.com/dref/4295913>

Enter text by selecting alphanumeric keys or writing on the screen. You can also use the following keys: 1 2 3 4 5 6 7 Number 1 2 3 Function Change case. Switch between Symbol/Number mode and ABC mode. Access the keypad settings; Change the keyboard type (tap and hold). Enter text by voice; This icon is available only when you activate the voice input feature for the Samsung keypad. This feature may be unavailable depending on the selected input language. Clear your input. Start a new line. Insert a space. Getting started 4 5 6 7 38 > Copy and paste text 1 2 3 4 5 6 7 While you are entering text, you can use the copy and paste feature to use text in other applications. Place the cursor on the text you want to copy.

Select . Select Select word or Select all to select the text you want. Drag or to select the text you want. Select Copy to copy, or Cut to cut the text onto the clipboard. In another application, place the cursor where you want to paste the text.

Select Paste to insert the text from the clipboard into the text field. Getting started 39 Download applications from Android Market Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications. @@ Your device will save user files from downloaded applications to the internal memory. > Install an application 1 2 3 1 2

3 In Idle mode, open the application list and select Market. Select Accept when the terms and conditions appear. Search for a file or application and download it. > Uninstall an application From the Android Market home screen, press [apps]. Select the item you want to delete. Select Uninstall OK.

J My Getting started 40 Download files from the web When you download files or web applications from the web, your device saves them in a memory card.

Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust. Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files. 1 2 To download files from the web, In Idle mode, open the application list and select Internet. Search for a file or application and download it. To install applications downloaded from websites other than Android Market, you must select Settings Applications Unknown sources OK. Synchronise data You can synchronise data with various web servers and back up or restore your data. Once the synchronisation is completed, your device stays connected to the web.

If any change is made on the web, the updated information will appear on your device and will automatically begin synchronisation, and vice versa. This feature may be unavailable depending on your region or service provider. Getting started 41 > Set up a server account 1 2 3 1 2 3 4 In Idle mode, open the application list and select Settings Accounts and sync. Select Add account an account type. Follow the on-screen instructions to complete the account setup.

> Activate automatic sync Accounts and sync. In Idle mode, open the application list and select Settings Select Auto-sync. Select an account. Select the applications you want to synchronise. To exclude applications from automatic synchronisation, clear the check boxes next to the applications you want.

> Synchronise data manually 1 2 3 In Idle mode, open the application list and select Settings Accounts and sync. Select an account. Select Sync now. Your device will start synchronising the data you set for synchronisation. Getting started 42 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features. > Make or answer a call You can use the buttons or the touch screen when you make, accept, end or reject calls. When you turn on the proximity sensor, your device automatically turns off and locks the touch screen to prevent accidental inputs when you hold the device near your face. p. 130 Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call. Make a call 1 2 3 In Idle mode, open the application list and select Phone Keypad, and enter an area code and a phone number.

to make a voice call. Select For a video call, select . To end the call, select End call. Use the phonebook to save numbers you dial frequently. p. 80 To quickly access the call log to redial the numbers you dialled recently, select Phone Logs. Communication 43 Answer a call 1 2 When a call comes in, drag outside of the large circle. When the device is ringing, press the Volume key to mute the ringtone. To end the call, select End call. Reject a call When a call comes in, drag outside of the large circle.

To send a message when you reject incoming calls, select Reject call with message. First set a text message to be sent to callers. In Idle mode, open the application list and select Settings Call Set reject messages. Call an international number 1 2 In Idle mode, open the application list and select Phone Keypad, and tap and hold 0 to insert the + character. Enter the complete number you want to dial (country code, area code and phone number), and then select to dial the number.

> Use a headset By plugging a headset into the device, you can answer and control calls hands-free: To answer a call, press the headset button. To reject a call, press and hold the headset button. To place a call on hold or retrieve a held call during a call, press and hold the headset button. To end a call, press the headset button. Communication 44 > Use options during a voice call You can use the following options while a voice call is in progress: To adjust the voice volume, press the Volume key up or down.

To place a call on hold, select . To retrieve a held call, select . To dial a second call, select Add call and then dial a new number. To answer a second call, drag outside of the large circle when a call waiting tone sounds. The device asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature. To open the dialling screen, select Keypad. To activate the speakerphone feature, select Speaker. In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

To turn off the microphone so that the other party cannot hear you, select Mute. To listen and talk to the other party via a Bluetooth headset, select Headset.

To open the phonebook, press [] Contacts. To add a memo, press [] Memo. To switch between the two calls, select Swap. To make a multiparty call (conference call), make or answer a second call and select Merge when connected to the second party.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/4295913)

[GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)

<http://yourpdfguides.com/dref/4295913>

Repeat to add more parties. You must subscribe to the multiparty call service to use this feature. Communication 45 You can use the following options while a video call is in progress: To switch between the front and rear camera lens, select Switch Camera. To turn off the microphone so that the other party cannot hear you, select Mute.

To hide your image from the other party, press [] Hide me. To select an alternative image to be shown to the other party, press [] Outgoing image. To open the dialling screen, press [] Dialpad. To listen and talk to the other party via a Bluetooth headset, press [] Switch to headset. To activate the speakerphone feature, press [] Speaker On/Off.

To use the other party's image, tap and hold the other party's image. You can capture an image of the screen or record the video call. > Use options during a video call > View and dial missed calls Your device will display calls you have missed on the display. To dial the number of a missed call, open the notifications panel and select the missed call. Communication 46 > Use additional features Set auto rejection You can use various other call-related features, such as auto rejection, Fixed Dialling Number (FDN) mode, or call diverting or barring.

Use auto rejection to reject calls from certain numbers automatically. To activate auto rejection and create auto reject lists, 1 2 In Idle mode, open the application list and select Settings Call Call rejection. Select Auto reject mode an option. Option All numbers Auto reject numbers Function Reject all calls. Reject calls from phone numbers on the auto reject list. 3 4 5 6 7 Select Auto reject list. Select Add and enter a phone number. Select Match criteria an option (if necessary). Select Save. To add more numbers, repeat steps 4-6.

Communication 47 Use Fixed Dialling Number (FDN) mode In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list. To activate FDN mode, 1 2 3 In Idle mode, open the application list and select Settings Call Additional settings Fixed Dialling Numbers Enable FDN.

Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts to be used in FDN mode. Set call forwarding Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area. 1 2 3 In Idle mode, open the application list and select Settings Call Call forwarding a call type. Select a condition. Enter a number to which calls will be forwarded and select Enable. Your setting will be sent to the network.

Set call barring Call barring is a network feature to restrict certain types of calling or to prevent others from making calls with your device. 1 In Idle mode, open the application list and select Settings Call Additional settings Call barring a call type. Communication 48 2 3 Select a call barring option. Enter a call barring password and select OK. Your setting will be sent to the network.

Set call waiting Call waiting is a network feature to alert you of an incoming call while you are on a previous call. This feature is available only for voice calls. In Idle mode, open the application list and select Settings Call Additional settings Call waiting. Your setting will be sent to the network. > View call logs 1 2 You can view logs of your calls filtered by their types.

In Idle mode, open the application list and select Phone Logs. Press [] View by an option to sort the call logs. From the call logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right. Select a log to view its details. From the detail view, you can dial the number, send a message to the number or add the number to the phonebook or auto reject list. 3 Communication 49 Messaging Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received. You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider. > Send a text message 1 2 3 4 5 1 2 In Idle mode, open the application list and select Messaging. Select .

Add recipients of your message. Enter phone numbers manually, separating them with a semicolon or a comma. Select phone numbers from the lists by selecting . Select Tap to enter message and enter your message text. To insert emoticons, press [] Insert smiley. Select Send to send the message. > Send a multimedia message In Idle mode, open the application list and select Messaging. Select . Communication 50 3 Add recipients of your message. Enter phone numbers or email addresses manually, separating them with a semicolon or a comma.

Select phone numbers or email addresses from the lists by selecting . When you enter an email address, the device will convert the message as a multimedia message. Press [] Add subject and enter a subject for the message. Select Tap to enter message and enter your message text. To insert emoticons, press [] Insert smiley.

Select and add an item. You can select a file from the file list or create a new photo, video, or sound. Select Send to send the message. 4 5 6 7 1 2 3 > View a text or multimedia message In Idle mode, open the application list and select Messaging. Your messages are grouped into message threads by contact, like a messenger.

Select a contact. For a multimedia message, select a message to view the details. Communication 51 > Listen to voice mail messages If you have set missed calls to be diverted to the voice mail server, callers may leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to voice mail messages, 1 2 In Idle mode, open the application list and select Phone Keypad and then tap and hold 1. Follow the instructions from the voice mail server. You must save the voice mail server number before accessing the server. Your service provider can give you the number. Google Mail You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold.

@@ This Google Mail menu may be labelled differently depending on your service provider. > Send an email message 1 2 In Idle mode, open the application list and select Google Mail. If you are launching this application for the first time, select OK. Communication 52 3 4 5 6 7 1 2 Press [] Compose. Enter a name or address in the recipient field. Enter a subject and message. To attach an image file, press [] Attach a file. Select to send the message.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

> View email messages In Idle mode, open the application list and select Google Mail. Select an email message.

From the message view, use the following options: To reply to the message, select . To reply to the message including all recipients, select Reply all. To forward the message to other people, select Forward. To add a star to the message, select . To view an attachment, select Preview.

To save it to your device, select Download. To archive the message, select Archive. To delete the message, select Delete. To move to the previous or next message, select or . > Organise email by labels You can organise your email by labelling your messages.

You can sort messages by label filter. Communication 53 Add a label to a message 1 2 3 1 2 From the Inbox screen, tap and hold a message. Select Change labels. Select a label to add and select OK. From the Inbox screen, press [] Go to labels. Select the label of the messages you want to view. Filter messages

Email Learn to send or view email messages via your personal or company email account. > Set up an email account 1 2 3 4 In Idle mode, open the application list and select Email. Enter your email address and password. Select Next (for general email accounts, such as Google Mail and Yahoo) or Manual setup (for other company email accounts).

Follow the on-screen instructions. When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts; Select an account name at the top left of the screen and select one you want to retrieve messages from. Communication 54 > Send an email message 1 2 3 4 5 6 7 In Idle mode, open the application list and select Email. Select . Add recipients of your message. Enter email addresses manually and separate them by inserting a semicolon. Select email addresses from the lists by selecting . To add more recipients, press [Add Cc/Bcc.] Select the subject field to enter a subject.

Select the text input field to enter your email text. Select Attach and attach a file. You cannot attach Digital Rights Management (DRM)protected files. Select Send to send the message. If you are offline or outside your service area, the message will be held in the message thread list until you are online and in your service area.

> View an email message When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline. 1 2 3 In Idle mode, open the application list and select Email an email account. Press [] Refresh to update the message list. Select an email message.

Communication 55 From the message view, use the following options: To move to the previous or next message, select or . To move the message to another folder, select . To delete the message, select . To reply to the message, select Reply. To forward the message to other people, select Forward. To view an attachment, select next to the attachment field and select the attachment. To save it to your device, select . Talk Learn to chat with friends and family via Google TalkTM. This feature may be unavailable depending on your region or service provider. > Add friends to your friend list 1 2 3 In Idle mode, open the application list and select Talk.

The friend list shows all of your Google Talk contacts at a glance. Press [] Add friend. Enter an email address of the friend and select Send invitation. When your friend accepts the invitation, the friend is added to your friend list. Communication 56 > Start a chat 1 2 3 4 5 In Idle mode, open the application list and select Talk. Select a friend from the friend list. The chat screen opens. Enter your message and select Send. To insert emoticons, press [] More Insert smiley.

To switch between active chats, press [] Switch chats.

To end the chat, press [] End chat. Social Hub Learn to access Social HubTM, the integrated communication application for Social Network Service (SNS), email, messages, instant messages, contacts or calendar information. Visit socialhub.samsungapps.com for more details.

1 2 In Idle mode, open the application list and select Social Hub. Check and use contents delivered from Social Hub. Communication 57 Entertainment Camera Learn how to capture and view photos and videos. You can take photos at resolutions up to 2560 x 1920 pixels (5 megapixels) and videos at resolutions up to 1280 x 720 pixels. The camera automatically turns off when you do not use it for a specified period.

The memory capacity may differ depending on the shooting scene or shooting conditions. > Capture a photo 1 2 In Idle mode, open the application list and select Camera to turn on the camera. Aim the lens at the subject and make any necessary adjustments. 1 3 4 2 5 6 Entertainment 58 Number 1 2 Function Change the camera settings. Open the image viewer to view photos you captured. Use camera shortcuts. : Change the flash setting. : Switch between the front and rear camera lenses. You can add or remove shortcuts to frequently used options. p.

68 Check the camera status. : Number of photos you can take (according to available memory); This icon is shown only when the number is less than 300. : Default storage location Switch to the camcorder. Capture a photo. 3 4 5 6 3 4 Tap where you want to focus on the preview screen. The focus frame moves to the place you tap and changes to green when the subject is in focus. to take a photo. Select The photo is saved automatically. Entertainment 59 After taking photos, select the image viewer icon to view the taken photos. To view more photos, scroll left or right.

To zoom in or out, place two fingers on the screen and spread them apart (move your fingers closer together to zoom out) or double-tap the screen. To send a photo to others, select Share. To delete a photo, select Delete. To use additional features with a photo, select More and use the following options: - Set as: Set a photo as wallpaper or a caller ID image for a contact. - Rename: Rename a photo file.

> Capture a photo by using preset options for Your camera provides you with predefined settings for various scenes. You can simply select the proper mode for your shooting conditions and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure. various scenes 1 2 3 4 5 In Idle mode, open the application list and select Camera to turn on the camera. Select Scene mode a scene.

Press []. Make any necessary adjustments. Select to take a photo. Entertainment 60 > Capture a photo in Self shot mode 1 2 3 4 You can take photos of yourself conveniently using the front camera lens. In Idle mode, open the application list and select Camera to turn on the camera. Select Self portrait.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

Make any necessary adjustments. Select to take a photo. > Capture a photo in Smile shot mode 1 2 3 4 Your camera can recognise people's faces and help you take photos of their smiling faces. In Idle mode, open the application list and select Camera to turn on the camera.

Select Shooting mode Smile shot. Make any necessary adjustments. Aim the camera lens at your subject and select . Your device recognises people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo. > Capture a panoramic photo 1 2 You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes. In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Panorama. Entertainment 61 3 4 5 6 Make any necessary adjustments.

Select to take the first photo. Slowly move the device in any direction and align the green frame with the viewfinder. When you have aligned the green frame and viewfinder, the camera will automatically take the next photo. Repeat step 5 to complete the panoramic photo. > Capture a photo of action 1 2 3 4 5 6

You can capture shots of a moving subject and then combine them into a single photo that shows the action.

In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Action shot. Make any necessary adjustments. Select to capture the first photo. Move the device to follow the moving subject.

The device automatically captures the next photos. Continue to follow the subject until the device has captured all the shots necessary for the action photo. >

Capture a photo in Cartoon mode You can take photos with cartoon effects. 1 2 3 4 In Idle mode, open the application list and select Camera to turn on the camera. Select Shooting mode Cartoon. Make any necessary adjustments. Select to take a photo. Entertainment 62 Before taking a photo, select options:

Option Edit shortcuts Self portrait Flash Shooting mode Scene mode Focus mode Timer Effects Resolution White balance ISO Function > Customise camera settings to access the following Add or remove shortcuts to frequently used options. Switch between the front and rear camera lenses. Change the flash setting; You can manually turn the flash on or off, or set the camera to automatically use the flash when needed.

Change the shooting mode. Change the scene mode. Take close-up photos or set the camera to focus on the subject. Select the length of the delay before the camera takes a photo. Apply a special effect, such as sepia or black and white tones. Change the resolution option. Adjust the colour balance according to lighting conditions. Adjust the sensitivity of the camera imaging sensor. Exposure value Adjust the exposure value. Entertainment 63 Option Metering Auto contrast Blink detection Guidelines Image quality Function Select a type of exposure metre.

Automatically adjust contrast between your subject and background. Set the camera to alert you when people close their eyes. Display the guidelines on the preview screen. Set the quality level for your photos. Set the camera to include location information for your photos.

To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in lowlying areas, or in poor weather conditions. Your location may appear on your photos when you upload them to the web. To avoid this, deactivate the GPS tag setting. Select a memory location for storing captured photos. Reset menus and shooting options.

GPS tag Storage Reset Entertainment 64 > Record a video 1 2 3 In Idle mode, open the application list and select Camera to turn on the camera. Drag the slider to the camcorder to switch to the camcorder. Aim the lens at the subject and make any necessary adjustments. 1 3 4 2 5 6 Number 1 2 Function Change the camcorder settings. Open the image viewer to view videos you recorded. Use camcorder shortcuts. : Change the flash setting. : Change the recording mode or switch between the front and rear camera lenses. You can add or remove shortcuts to frequently used options. p.

68 3 Entertainment 65 Number 4 5 6 Function Check the camcorder status. : Length of video that can be recorded (according to available memory) : Default storage location Switch to the camera. Record a video. 4 5 Select to start recording. to stop recording. Select The video is saved automatically. The camcorder may not be able to properly record videos to a memory card with a slow transfer speed. After recording videos, select the image viewer icon to view the recorded videos. To view more videos, scroll left or right. To play a video, select .

To send a video to others, select Share. To delete a video, select Delete. To use additional features with a video, select More and use the following options: - Play: Play a video. - Rename: Rename a video file. Entertainment 66 Before recording a video, select options: Option Edit shortcuts Flash Recording mode Timer Effects Resolution White balance Video quality Guidelines Storage Reset Function > Customise camcorder settings to access the following Add or remove shortcuts to frequently used options.

Change the flash setting; You can manually turn the flash on or off. Change the recording mode. Select the length of the delay before the camera starts recording a video. Apply a special effect, such as sepia or black and white tones. Change the resolution option.

Adjust the colour balance according to lighting conditions. Set the quality level for your videos. Display the guidelines on the preview screen. Select a memory location for storing recorded videos. Reset menus and recording options. Exposure value Adjust the exposure value. Entertainment 67 > Edit the shortcut icons 1 2 3 You can add or remove shortcuts to frequently used options. From the preview screen, select Edit shortcuts or press [] Edit shortcuts.

Tap and hold an icon from the option list and drag it to the shortcut area. To remove shortcuts, tap and hold an icon and drag it to the option list.

Press [] to return to the preview screen. Videos Learn to use the video player to play various kinds of videos. The video player supports the following file formats: 3gp, mp4, avi, wmv, flv, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX®). Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented. Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files.

Playback quality may vary by content type. Some files may not play properly depending on how they are encoded. 1 2 In Idle mode, open the application list and select Videos.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

Select a video to play. Entertainment 68 3 Control playback with the following icons: Icon Function Change a ratio of the video screen. Restart playback; Skip backward (doubletap); Scan backward in a file (tap and hold). Pause playback; Select playback. to resume Skip forward; Scan forward in a file (tap and hold). Activate the 5.1 channel surround sound system when a headset is connected. Adjust the volume. Gallery Learn to view photos and play videos saved in your device's memory and memory card. > Supported file formats Type Image Video Format bmp, gif, jpg, png 3gp, mp4, avi, wmv, flv, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX®) Entertainment 69 Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented. Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Playback quality may vary by content type.

Some files may not play properly depending on how they are encoded. > View a photo 1 2 3 4 In Idle mode, open the application list and select Gallery. Select a folder. To change the view mode, select or at the top right of the screen. Select a photo (with no icon) to view. While viewing a photo, use the following options: To view more photos, scroll left or right. To zoom in or out, tap the screen with two fingers and spread them apart (move your fingers closer together to zoom out). You can also select or , or double-tap the screen. If you activated tilting motions, you can zoom in or out by tapping and holding two points with your fingers and then tilting the device back and forth. To send a photo to others, select Send via.

To delete a photo, select Delete Confirm deletions. Entertainment 70 To share a photo with others via AllShare or community websites, press [] Share via. To set a photo as wallpaper or a caller ID image for a contact, press [] Set as. To use additional features with a photo, press [] More and use the following options: - Copy: Copy a photo file. - Print: Print a photo using Wi-Fi or USB connection.

Your device is compatible only with some Samsung printers. - Edit: Edit a photo. - Crop: Crop an image from a photo. - Motion: Access the settings to control motion recognition of your device. - Rotate left: Rotate a photo anti-clockwise.

- Rotate right: Rotate a photo clockwise. - Slideshow: Start a slideshow in the selected folder. - Rename: Rename a photo file. - Details: View photo details. > Play a video 1 2 3 4 In Idle mode, open the application list and select Gallery. Select a video (with the icon) to play. Rotate the device to landscape view. Control playback with the virtual keys. p. 68 Entertainment 71 Photo editor You can edit photos and apply various effects.

1 2 3 4 5 6 7 8 9 In Idle mode, open the application list and select Photo editor. Select Select picture a folder an image. To take a new photo, select Capture picture. Select New selection OK. To add to or subtract from the selection border, select Add to selection or Remove from selection. To reverse the selection, select Inverse selection. To change the selection size, select . To rotate or flip the image, select . To crop the image, select . To undo or redo your last action, select or .

Drag your finger over the area you want to select. Select to apply a colour effect, or select to apply a filter effect. To use additional tools, such as copying and warping, select . Select a variation of the effect to apply. Adjust the image as desired (if necessary) and select Done.

When you are finished, press [] Save. Enter a name and select OK. Entertainment 72 Music Learn to listen to your favourite music while on the go with the music player. The music player supports the following file formats: mp3, m4a, mp4, 3gp, 3ga, wma, ogg, oga, aac, flac. Some file formats are not supported depending on the software of the device.

If the file size exceeds the available memory, an error can occur when you open files. Playback quality may vary by content type. Some files may not play properly depending on how they are encoded. > Add music files to your device Start by transferring files to your device or memory card: Download from the wireless web. p. 89 Download from a PC with Samsung Kies. p. 110 Receive via Bluetooth. p. 102 Copy to your memory card.

p. 111 Synchronise with Windows Media Player 11. p. 111 > Play music 1 2 3 After transferring music files to your device or memory card, In Idle mode, open the application list and select Music. Select a music category. Select a music file. Entertainment 73 4 Control playback with the following icons: Icon Function Adjust the volume. Activate the 5.1 channel surround sound system when a headset is connected. Activate Shuffle mode.

Change the repeat mode (off, repeating a file, or repeating all files). Restart playback; Skip backward (doubletap); Scan backward in a file (tap and hold). Pause playback; Select playback. to resume Skip forward; Scan forward in a file (tap and hold). You can control the music player with a headset.

In Idle mode, press and hold the headset button to launch the music player. Press the headset button to start or pause playback. > Create a playlist 1 2 3 4 5 6 In Idle mode, open the application list and select Music. Select Playlists. Press [] Create.

Enter a title for your new playlist and select Save. Select Add music. Select the files you want to include and select Add. During playback, you can add files to a playlist by pressing [] Add to playlist a playlist. Entertainment 74 You can add songs to the quick list and save them as a playlist. During playback, press [] Add to quick list to add the current song to the quick list. To go to the quick list, from the music player main screen, select Playlists Quick list. To save the quick list as a playlist, press [] Save as playlist. > Add songs to the quick list > Customise music player settings 1 2 3 In Idle mode, open the application list and select Music. Press [] Settings.

Adjust the following settings to customise your music player: Option Equaliser Sound effect Music menu Visualisation Lyrics Music auto off Function Select a default equaliser type. Select a sound effect. Select music categories to display on the music library screen. Display an animated visualisation during playback. Set to display lyrics during playback. The music player supports lyrics with ID3v2 tags only. Set the music player to automatically turn off after a specified length of time. Entertainment 75 Music Hub You can access the online music store, and search for and buy your favourite songs. This feature may be unavailable depending on your region or service provider. 1 2 3 In Idle mode, open the application list and select Music Hub.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>

If you are launching this application for the first time, select the check box next to Do not show for 90 days and select Confirm. Search for songs, and preview or buy your favourite songs. FM radio Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna. > Listen to the FM radio 1 2 Plug a headset into the device.

In Idle mode, open the application list and select FM radio. The FM radio scans and saves available stations automatically. The first time you turn on the FM radio, it will start automatic tuning. Entertainment 76 3 Control the FM radio with the following keys: 1 4 5 2 3 2 Number 1 2 3 4 5 Function Turn off or on the FM radio. Search for an available radio station.

Add the current radio station to the favourites list. Adjust the volume. Fine-tune the frequency. > Save a radio station automatically 1 2 3 Plug a headset into the device. In Idle mode, open the application list and select FM radio. Press [] Scan a scanning option. The FM radio scans and saves available stations automatically. Entertainment 77 > Add a radio station to the favourites list 1 2 3 4 5 Plug a headset into the device. In Idle mode, open the application list and select FM radio. Select to turn on the FM radio.

Scroll to the radio station you want. Select to add to the favourites list. You can add a name for a radio station or remove a radio station; Tap and hold a radio station on the favourites list and select Remove or Rename. > Customise FM radio settings 1 2 3 In Idle mode, open the application list and select FM radio. Press [] Settings. Adjust the following settings to customise your FM radio: Option Background playing Function Set whether or not to run the FM radio in the background while using other applications. If this feature is on, you can control the FM radio from the notifications panel. Set whether or not to show the station ID on the FM radio screen; Station IDs are available only from radio stations that provide this information. Show station ID Entertainment 78 Option Alternative frequency FM auto off Function Set whether or not the FM radio attempts to retune a radio station when the signal is weak. Set the FM radio to automatically turn off after a specified length of time.

Entertainment 79 Personal information Contacts Learn to create and manage a list of your personal or business contacts. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays and more for your contacts. > Create a contact 1 2 3 4 5 1 2 3 4 5 6 In Idle mode, open the application list and select Contacts. Select . Select a memory location.

If you have more than one account, select an account to which you want to add the contact. Enter contact information. Select Save to add the contact to memory. In Idle mode, open the application list and select Phone Keypad. Enter a phone number.

Select Add to Contacts Create contact. Select a memory location. If you have more than one account, select an account to which you want to add the contact. Enter contact information. Select Save to add the contact to memory. You can also create a contact from the dialling screen. Personal information 80 > Find a contact 1 2 3 In Idle mode, open the application list and select Contacts. Scroll up or down on the contact list. You can also drag your finger along the index on the right side to quickly scroll through the list. Select a contact's name.

Once you find a contact, you can use the following options: To call the contact, select or . To send a message, select . To send an email message, select . To edit the contact information, press [] Edit. To set the contact as your favourites, select . > Set a speed dial number 1 2 3 4 In Idle mode, open the application list and select Contacts. Press [] Speed dial settings. Select a location number a contact. Select a phone number (if necessary). You can quickly dial this number by tapping and holding the location number from the dialling screen.

> Create your namecard 1 2 3 In Idle mode, open the application list and select Contacts. Press [] My profile. Press [] Edit. Personal information 81 4 5 Enter your own personal details. Select Save.

You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature. > Retrieve contacts from your community You can view the list of community website accounts and select an account to add a contact from the website to your phone contacts. accounts 1 2 3 4 In Idle mode, open the application list and select Contacts. Press [] More View SNS friends. Select an account.

Select contacts and select Add. You can add comments to messages uploaded by your contacts and view their shared photos. In Idle mode, open the application list and select Contacts a contact Activities or Media. > Create a group of contacts 1 2 By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group. In Idle mode, open the application list and select Contacts. Scroll left or right to Groups. Personal information 82 3 4 5 6 1 2 3 4 1 2 3 Press [] Create. Enter a name and select a ringtone for the group. Select Add member, select contacts to add to the group, and select Add.

Select Save. > Copy contacts To copy contacts from the SIM or USIM card to your device, In Idle mode, open the application list and select Contacts. Press [] More Import/Export Import from SIM card. Select a memory location. If you have more than one account, select an account to which you want to add the contact. Select contacts to copy and select Import. In Idle mode, open the application list and select Contacts. Press [] More Import/Export Export to SIM card. Select contacts to copy and select Export Yes. To copy contacts from your device to the SIM or USIM card, > Import or export contacts 1 2 To import contact files (in vcf format) from a memory card to your device, In Idle mode, open the application list and select Contacts.

Press [] More Import/Export Import from SD card. Personal information 83 3 4 5 1 2 3 Select a memory location. If you have more than one account, select an account to which you want to add the contact. Select an option for importing a single contact file, multiple contact files, or all contact files, and select OK. Select contact files to import and select OK.

In Idle mode, open the application list and select Contacts. Press [] More Import/Export Export to SD card. Select OK to confirm. To export contacts from your device to a memory card, Calendar Learn to create and manage daily, weekly or monthly events, and set alarms to remind yourself of important events. > Create an event 1 2 3 4 5 In Idle mode, open the application list and select Calendar.

Select Tap to create event or press [] Create.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY S ADVANCE GT-I9070 user guide](http://yourpdfguides.com/dref/4295913)
<http://yourpdfguides.com/dref/4295913>