



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY TREND GT-S7560. You'll find the answers to all your questions on the SAMSUNG GALAXY TREND GT-S7560 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY TREND GT-S7560
User guide SAMSUNG GALAXY TREND GT-S7560
Operating instructions SAMSUNG GALAXY TREND GT-S7560
Instructions for use SAMSUNG GALAXY TREND GT-S7560
Instruction manual SAMSUNG GALAXY TREND GT-S7560

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

To install Samsung Kies (PC Sync)  Kies

1. Download the latest version of Samsung Kies from the Samsung website (www.samsung.com/kies) and install it on your computer.
2. Connect your device to a computer with a USB cable. Refer to the Samsung Kies help for more information.

www.samsung.com

English (EU), 10/2013, Rev. 1.1



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

Manual abstract:

Connect your device to a computer with a USB cable. © 2013. Rev. 1.0. This manual has been specially designed to guide you through the functions and features of your device. Read me first Before using your device, read the entire manual and all safety instructions to ensure safe and proper use. The descriptions in this manual are based on the default settings of your device. The images and screenshots used in this manual may differ from the actual product. The contents of this manual may differ from the product, or from software provided by service providers or carriers, and are subject to change without prior notice. Access the Samsung website (www.samsung.com) for the latest version of the manual. Content (high quality content) that requires high CPU and RAM usage will affect the overall performance of the device. Applications related to the content may not work properly depending on the device's specifications and the environment that it is used in. Available features and additional services may vary by device, software, or service provider. Formatting and delivery of this manual is based on Android operating systems and may vary depending on the user's operating system.

Using this manual 2 Applications on this device may perform differently from comparable computer applications and may not include all functions available in the computer version. Applications and their functions may vary by region or hardware specifications. Samsung is not liable for performance issues caused by third-party applications. Samsung is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customise the operating system may cause your device or applications to work improperly.

You can upgrade your device's software by accessing the Samsung website (www.samsung.com). Software, audio, wallpapers, and images provided in this device are licensed for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by users. You may incur additional charges for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select an appropriate data tariff plan. For details, contact your service provider. Please keep this manual for future reference.

Using this manual 3 Instructional icons Before you start, familiarise yourself with the icons used in this manual: Warning—situations that could cause injury to yourself or others Caution—situations that could cause damage to your device or other equipment Note—notes, usage tips, or additional information Refer to—pages with related information; for example: p. 12 (represents "refer to page 12") Followed by—the order of options or menus you must select to perform a step; for example: In the application list, select Settings → About device (represents Settings, followed by About device) → Copyright Copyright © 2013 Samsung Electronics This manual is protected under international copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google, Google Maps, Google™™ Mail™, YouTube™, Google Play™ Store, Google Latitude™, and Google Talk™ are trademarks of Google, Inc. Bluetooth is a registered trademark of the Bluetooth SIG, ® Inc. worldwide. Wi-Fi, Wi-Fi Protected Setup, Wi-Fi Direct, Wi-Fi ®™™ CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. All other trademarks and copyrights are the property of their respective owners. Using this manual 5 Contents Assembling.

Using this manual 3 Instructional icons Before you start, familiarise yourself with the icons used in this manual: Warning—situations that could cause injury to yourself or others Caution—situations that could cause damage to your device or other equipment Note—notes, usage tips, or additional information Refer to—pages with related information; for example: p. 12 (represents "refer to page 12") Followed by—the order of options or menus you must select to perform a step; for example: In the application list, select Settings → About device (represents Settings, followed by About device) →

Copyright Copyright © 2013 Samsung Electronics This manual is protected under international copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google, Google Maps, Google™™ Mail™, YouTube™, Google Play™ Store, Google Latitude™, and Google Talk™ are trademarks of Google, Inc. Bluetooth is a registered trademark of the Bluetooth SIG, ® Inc. worldwide. Wi-Fi, Wi-Fi Protected Setup, Wi-Fi Direct, Wi-Fi ®™™ CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. All other trademarks and copyrights are the property of their respective owners. Using this manual 5 Contents Assembling.

.....

.....

.....

.....

.....

.....

.....

..... 10 Unpack

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 10 Device layout .

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....

.....
11 Keys

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 13 Insert the SIM or USIM card and the battery

.....
.....
.....

14 Charge the battery

.....
.....
.....
.....

.....
.....
.....
.....

..... 16 Insert a memory card (optional)

.....
.....
.....

.....
.....
.....

... 20 Getting started.....

.....
.....
.....
.....

.... 23 Turn on or off your device .

.....
.....

.....
.....
.....
.....

.....
.....

23 Use the touch screen

.....

.....

.....

.....

.....

.....

.....

.....

..... 24 Lock or unlock the touch screen and the keys

.....

.....

.. 27 Get to know the Home screen ...

.....

.....

.....

.....

.....

..... 27 Access applications .

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 33 Launch multiple applications

.....

.....

.....

.....

.....

.....

.. 35 Customise your device ...

.....

.....

.....

.....

.....

.....

.....

.... 35 Enter text

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
..... 41 Communication..

.....
.....
.....
.....

.....
.....
..... 44 Calling ..
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... 44 Messages ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 55 Google Mail

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 57 Email

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
..... *58 Talk* ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

61 ChatON

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *62 Messenger* ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
..... *63 Google+*

.....
.....

.....
.....
.....

.....
.....
.....
.....

. 63 Contents 6 Entertainment....

.....
.....
.....
.....

..... 64 Camera .

.....
.....
.....
.....
.....

.. 64 Video Player ...

.....
.....
.....
.....
.....
.....

. 72 Gallery

.....
.....
.....
.....
.....
.....

..... 75 Music Player

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... *77 FM Radio*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *82 Personal information.*

.....
.....
.....

.....
85 Contacts

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. *85 S Planner* ...

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 88 Memo

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 91 Voice Recorder

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 92 Web and GPS-based services.....

.....
.....
.....

..... 94 Internet

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 94 Game Hub

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 98 Maps

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 98 Navigation ...

.....
.....
.....
.....

.....
.....
.....

.....
.....

.. 100 Local ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 101 Play Books .

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 102 Play Movies .

.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *102 Play Magazines* ...

.....
.....
.....

.....
.....
.....

.....
.....

.. *102 Play Store* ...

.....
.....
.....
.....
.....

.....
.....
.....

.....
.....

.... *103 Samsung Apps* .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

104 YouTube

.....
.....
.....
.....

.....
.....
.....

.....
.... *104 Connectivity.*

.....
.....
.....
.....
.....

..... *107 USB connections ..*

.....
.....
.....
.....
.....
.....
.....
.....

..... *107 Wi-Fi*

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... *109 Contents 7 Wi-Fi Direct ...*

.....
.....
.....
.....
.....
.....
.....
.....

..... *112 Mobile network sharing*

.....
.....
.....
.....
.....
.....

..... *113 Bluetooth ..*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
115 GPS

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 117 VPN connections

.....
.....
.....
.....

.....
.....
.....
.....

.....
. 118 Tools...

.....
.....

.....
.....
.....
.....

.....
.....

... 121 Calculator ..

.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
..... *121 Clock* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

121 Downloads

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *124 My Files* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *124 Search*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 126 SIM Toolkit ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
... 126 Settings..

.....
.....

.....
.....
.....

.....
.... 127 Access the setting options .

.....
.....

.....
.....
.....

.....
.. 127 Wi-Fi ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 127 Bluetooth

.....
.....
.....

.....
.....
.....

.....
.....

.....
..... 127 *Data usage*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 127 *More settings*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 128 *Blocking mode*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 129 *Sound*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 129 *Display*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *130 Wallpaper*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *131 Storage*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *131 Battery*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *131 Applications manager*

.....
.....
.....
.....

.....

.....
. 132 Accounts and sync

.....

.....

.....

.....

.....

.....

.....

.....

..... 132 Location services .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 132 Contents & Security

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 132 Language and input

.....

.Assembling 15 3 Insert the battery. 4 Replace the back cover. Charge the battery Before using the device for the first time or when the battery has been unused for an extended period, you must charge the battery. You can charge the battery with a travel adapter or by connecting the device to a computer with a USB cable.

Use only Samsung-approved chargers and cables. Unapproved chargers or cables may cause batteries to explode or damage your device. Assembling 16 When your battery is low, the device will emit a warning tone and show a low battery message. Recharge your battery to continue using your device. □□ If the battery is completely discharged, you cannot turn on the device, even with the device charging.

Allow a depleted battery to charge for a few minutes before you try to turn on the device. □□ If you use multiple applications at once, network applications, or applications that need a connection to another device, the battery will drain quickly. To avoid disconnecting from the network or losing power during a data transfer, always use these applications after fully charging the battery. □□ »Charge with a travel adapter multifunction jack. 1 Plug the small end of the travel adapter into the Connecting the travel adapter improperly may cause serious damage to the device.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

Any damage caused by misuse is not covered by the warranty. Assembling 17 2 Plug the large end of the travel adapter into an electrical socket. □□ If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the travel adapter from the device. □□ The device may heat up while charging.

This is normal and should not affect your device's lifespan or performance. □□ If your device is not charging properly, take your device and the charger to a Samsung Service Centre. adapter from the device, and then from the electrical socket. Do not remove the battery while the device is connected to the travel adapter. Doing so may damage the device. To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the electrical socket when not in use to avoid wasting power. The device should remain close to the electrical socket while charging. 3 When the battery is fully charged, first unplug the travel Assembling 18 About the battery charging icons When you charge the battery while the device is off, the following icons will show the current battery charging status: Charging Fully charged »Charge with a USB cable 2 Before charging, ensure that your computer is turned on. 1 Plug the small end (micro-USB) of the USB cable into the multifunction jack.

Plug the large end of the USB cable into a USB port on a computer. Depending on the type of the USB cable you are using, it may take some time before charging begins. cable from the device, and then from the computer. 3 When the battery is fully charged, first unplug the USB Assembling 19 »Reduce the battery consumption Your device provides options that help you save battery power. By customising these options and deactivating features in the background, you can use the device longer between charges: □□ When you are not using your device, switch to Sleep mode by pressing the Power key. □□ Close unnecessary applications with the task manager. □□ Deactivate the Bluetooth feature. □□ Deactivate the Wi-Fi feature. □□ Deactivate auto-syncing of applications. □□ Decrease the backlight time.

□□ Decrease the brightness of the display. Insert a memory card (optional) Your device accepts memory cards with maximum capacities of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device. Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card. It may also corrupt data saved on the memory card. Assembling 20 Your device supports only the FAT file structure for memory cards. If you insert a memory card formatted with a different file structure, your device will ask you to reformat the memory card. □□ Frequent writing and erasing of data will shorten the lifespan of your memory cards. □□ When you insert a memory card into your device, the memory card's file directory will appear in the extSdCard folder.

□□ 1 Open the cover of the memory card slot. 2 Insert a memory card with the gold-coloured contacts facing upwards. 3 Push the memory card into the memory card slot until it 4 locks in place. Close the cover of the memory card slot. Assembling 21 »Remove a memory card Ensure that the device is not currently accessing the memory card. 1 In the application list, select Settings → Storage → 2 3 4 5 Unmount SD card → OK. Open the cover of the memory card slot. Push the memory card gently until it disengages from the device. Remove the memory card. Close the cover of the memory card slot.

Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device. Formatting your memory card on a computer may cause incompatibilities with your device. Format the memory card only on the device. In the application list, select Settings → Storage → Format SD card → Format SD card → Erase everything. Before formatting the memory card, remember to make backup copies of all important data.

The manufacturer's warranty does not cover loss of data resulting from user actions. »Format a memory card Assembling 22 Getting started Turn on or off your device 1 Press and hold the Power key. 2 Enter the PIN supplied with your SIM or USIM card and select OK (if necessary). If you are turning on your device for the first time, follow the on-screen instructions to set up your device. You must sign in to Google or create a Google account to use applications that interact with the Google server.

To turn off your device, press and hold the Power key, and then select Power off → OK. □□ Follow all posted warnings and directions from approved personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals. □□ To use only your device's non-network features, switch to Flight mode. □ p. 128 Getting started 23 Use the touch screen Your device's touch screen lets you easily select items or perform functions. Learn basic actions for using the touch screen. □□ Do not press the touch screen with your fingertips, or use sharp tools on the touch screen. Doing so may damage the touch screen or cause it to malfunction. □□ Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.

□□ Do not allow the touch screen to come into contact with liquids. The touch screen may malfunction in humid conditions or when exposed to liquids. □□ Leaving the touch screen idle for extended periods may result in afterimages (screen burn-in) or ghosting. Turn off the touch screen when you do not use the device. For optimal use of the touch screen, remove the screen protection film before using your device. □□ Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches from sharp objects, such as a stylus or pen. □□ Getting started 24 Control your touch screen with the following actions: Tap Touch once to select or launch a menu, option, or application. Tap and hold Tap an item and hold it for more than 2 seconds.

Drag Tap an item and move it to a new location. Double-tap Tap an item twice quickly. Getting started 25 Flick Briskly scroll up, down, left, or right to move through lists or screens. Pinch Place two of your fingers far apart, and then pinch them together. Your device turns off the touch screen when you do not use it for a specified period.

To turn on the screen, press the Power key or the Home key. □□ You can set the length of time that the device waits before turning off the screen.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

In the application list, select Settings → Display → Screen timeout. □□ Getting started 26 Lock or unlock the touch screen and the keys When you do not use the device for a specified period, your device turns off the touch screen and locks the touch screen and the keys automatically to prevent unintended operations. To lock the touch screen and the keys manually, press the Power key.

To unlock them, turn on the screen by pressing the Power key or the Home key, and then flick your finger in any direction. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. □ p. 38 Get to know the Home screen From the Home screen, you can view your device's status and access applications. The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen. You can also select one of the dots at the bottom of the screen to move directly to the corresponding panel. Getting started 27 »Indicator icons Icon Icons shown on the display may vary depending on your region or service provider. Definition No signal Signal strength Connected to GPRS network Connected to EDGE network Connected to HSDPA network Wi-Fi AP connected Bluetooth feature activated GPS-based services in use Call in progress Missed call Connected to computer No SIM or USIM card New message Alarm activated Roaming (outside of service area) Silent mode activated (vibrate) Getting started 28 Icon Definition Silent mode activated (mute) Flight mode activated Error occurred or caution required Battery power level »Use the notifications panel To open the notifications panel, tap the indicator icons area and drag it downwards. To hide the panel, drag the bottom of the panel upwards.

From the notifications panel, you can view your device's current status and use the following options: □□ Wi-Fi: Activate or deactivate the Wi-Fi feature. □ p. 127 □□ GPS: Activate or deactivate the GPS feature. □ p. 132 □□ Sound: Activate or deactivate Silent mode. You can mute your device or set it to vibrate in Silent mode. □□ Screen rotation: Allow or prevent the interface from rotating when you rotate the device. □□ Blocking mode: Activate or deactivate Blocking mode. In Blocking mode, your device will block all notifications. □□ Mobile data: Activate or deactivate the data connection. □□ Bluetooth: Activate or deactivate the Bluetooth feature. □ p. 127 □□ Driving mode: Activate or deactivate Driving mode. □□ Sync: Activate or deactivate auto-syncing of applications. The options available may vary depending on your region or service provider.

Getting started 29 »Move an item on the Home screen Tap and hold an item, and then drag it to a new location. »Remove an item from the Home screen Tap and hold an item, and then drag it to the rubbish bin. Getting started 30 »Customise the quick access panel You can customise the quick access panel at the bottom of the Home screen by adding or removing application shortcuts. □□ To remove an application icon, tap and hold the icon, and then drag it to the rubbish bin. □□ To add an application shortcut, tap and hold a new application shortcut on the Home screen, and then drag it to the empty location.

»Add or remove a panel from the Home screen You can add or remove Home screen panels to organise widgets. 1 On the Home screen, place two fingers on the screen and 2 pinch them together to switch to Edit mode. Add, remove, or reorganise panels: □□ To remove a panel, tap and hold the panel's thumbnail image, and then drag it to the rubbish bin. □□ To add a new panel, select . □□ To set the main panel of the Home screen, select . □□ To change the order of panels, tap and hold the panel's thumbnail image, and then drag it to a new location. Press the Back key to return to the previous screen. 3 Getting started 31 »Use widgets Widgets are small applications that provide convenient functions and information on your Home screen. □□ Some widgets connect to web services. Using a webbased widget may result in additional charges.

□□ The widgets available may vary depending on your region or service provider. Add a widget to the Home screen 1 In the application list, select Widgets to open the widget 2 3 panel. Scroll left or right on the widget panel to find a widget. Tap and hold a widget to add it to the Home screen. Add a Settings shortcut to the Home screen You can create shortcuts to frequently-used setting options on the Home screen. panel. Tap and hold Settings shortcut, and release it on the Home screen. Select a setting option, such as Bluetooth or Wi-Fi. 1 In the application list, select Widgets to open the widget 2 3 Getting started 32 Access applications Launch applications and take full advantage of features on your device. You can reorganise the application list to match your preferences, or download applications from the Internet to enhance your device's functionality.

1 On the Home screen, select Apps to access the 2 3 4 application list. Scroll left or right to another screen. You can also select one of the dots at the bottom of the screen to move directly to the corresponding screen. Select an application. Press the Back key to return to the previous screen.

Press the Home key to return to the Home screen. □□ You can add an application shortcut to the Home screen by tapping and holding an icon in the application list. □□ If you rotate the device while using some features, the interface will rotate as well. To prevent the interface from rotating, select Settings → Display → Autorotate screen. □□ While using the device, you can capture a screenshot by pressing and holding the Home key and the Power key simultaneously.

The image will be saved in My Files → All files → sdcard → Pictures → Screenshots. Getting started 33 »Organise applications You can change the order of applications in the application list or group them into categories. 1 In the application list, press the Option key and select Edit. 2 Tap and hold an application icon. 3 Organise applications: To move the application, drag it to a new location. □□ To add the application to a new folder, drag it to . □□ To move the application to a new panel, drag it to . □□ To uninstall the application, drag it to . When you drag the application icon to , you can view information about the application. □□ 4 Select Save.

»Uninstall an application 2 1 In the application list, press the Option key and select Uninstall. Select on an application icon and then select OK. You can uninstall only the applications that you have downloaded. »Access recently-used applications 2 have accessed recently. Select an application.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

1 Press and hold the Home key to view the applications you Getting started 34 Launch multiple applications Your device allows you to multitask by running multiple applications at the same time. To launch multiple applications, press the Home key while using an application. Then select another application to launch from the Home screen. »Manage applications You can manage multiple applications with the task manager. 1 Press and hold the Home key, and then select Task 2 manager → Active applications.

The task manager launches and shows active applications. Control active applications: □□ To switch applications, select one from the list. □□ To close an application, select End. □□ To close all active applications, select End all. Customise your device Get more from your device by changing settings to match your preferences.

»Change the display language 2 input → Language. Select a language. 1 In the application list, select Settings → Language and Getting started 35 In the application list, select Settings → Sound → Touch sounds. »Turn on or off the touch tones »Adjust the device's volume for each sound. 1 Press the Volume key up or down.

2 Select and drag the sliders to adjust the volume level »Change your call ringtone 2 Device ringtone. Select a ringtone → OK. 1 In the application list, select Settings → Sound → To mute or unmute your device, do one of the following: □□ Tap the indicator icons area and drag it downwards to open the notifications panel, and then select Sound. □□ Press and hold the Power key, and then select or . »Switch to Silent mode Getting started 36 »Select a wallpaper for the Home screen 2 Home screen. Select an image folder → an image. 1 In the application list, select Settings → Wallpaper → »Change the display font 2 style. Select a font → Yes. 1 In the application list, select Settings → Display → Font »Adjust the brightness of the display 2 3 1 In the application list, select Settings → Display → Brightness. Drag the slider to the left or right.

Select OK. The brightness of the display will affect how quickly the device consumes battery power. Getting started 37 »Lock your device You can lock your device by activating the screen lock feature. □□ If you forget your password, take your device to a Samsung Service Centre to reset it. □□ Samsung is not responsible for the loss of passwords or private information, or other damages caused by illegal software. Set an unlock pattern 1 In the application list, select Settings → Security → 2 3 4 5 Screen lock → Pattern. View the on-screen instructions and the example pattern, and then select Next. Draw a pattern to connect at least 4 dots and select Continue. Draw the pattern again to confirm and select Confirm. Complete the setup of the backup PIN.

If you forget your unlock pattern, you can deactivate the screen lock feature with a backup PIN. Set an unlock PIN 1 In the application list, select Settings → Security → 2 3 Screen lock → PIN. Enter a new PIN and select Continue. Enter the PIN again and select OK. Getting started 38 Set an unlock password 1 In the application list, select Settings → Security → 2 3 Screen lock → Password.

Enter a new password (alphanumeric) and select Continue. Enter the password again and select OK. »Lock your SIM or USIM card You can lock your device with the PIN that is supplied with your SIM or USIM card. Once the SIM or USIM lock is enabled, you must enter the PIN each time you turn on the device or access applications that require the PIN. 1 In the application list, select Settings → Security → Set 2 up SIM card lock → Lock SIM card.

Enter your PIN and select OK. □□ If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card. □□ If you block your SIM or USIM card by entering an incorrect PUK, take the SIM or USIM card to your service provider to unblock it. Getting started 39 »Activate the Find my mobile feature When someone inserts a new SIM or USIM card into your lost or stolen device, the Find my mobile feature will send the contact number to your specified recipients automatically, so that you can locate and recover your device. To use this feature, you must create a Samsung account for controlling the device remotely via the Internet. 1 In the application list, select Settings → Security → SIM 2 3 4 5 6 7 8 Change Alert. Select Sign in. To create a Samsung account, select Create new account. Enter the email address and password for your Samsung account, and then select Sign in.

Drag the SIM Change Alert switch to the right. Select Alert message. Enter the text message that will be sent to the recipients and select OK. Add recipients:

□□ Select Create and enter phone numbers manually, including the country code and the + symbol. □□ Select phone numbers from your contact list by selecting Contacts. Select Save. Getting started 40 Enter text You can enter text by speaking words into the microphone, by selecting characters on the virtual keypad, or by writing on the screen. Text entry is not supported in some languages. To enter text, you must change the input language to one of the supported languages. »Change the text input method 2 1 From a text field, tap the indicator icons area and drag it downwards to open the notifications panel.

Select Select input method → a text input method. »Enter text with the Google voice input feature 1 Speak your text into the microphone. 2 When you are finished, select Done. To add input languages for voice recognition, select the language → Add more languages. Getting started 41 »Enter text using the Samsung keypad 2 3 1 From a text field, tap the indicator icons area and drag it downwards to open the notifications panel.

Select Select input method → Configure input methods, and then select next to Samsung keyboard → Portrait keyboard types → a keypad type. Enter text by selecting alphanumeric keys. You can also use the following keys: Number 1 2 3 4 5 6 Function Change the case. Switch text input modes. Access the keypad settings; Tap and hold to switch to Handwriting mode, enter text by voice, or access the clipboard.

Clear your input. Start a new line. Insert a space. Functions of this key may vary depending on your service provider. When Predictive text (XT9) mode is activated, you can use continuous input, which allows you to enter text by sweeping on the keypad. □ p. 127 Getting started 42 When entering text with the 3x4 keypad, you can use the following modes: Mode ABC Function 1.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

Select to switch to ABC mode. 2. Select a corresponding virtual key until the appropriate character appears.

1. Select to switch to Number mode. 2. Select a number. You can enter numbers by tapping and holding a virtual key in ABC mode. 1. Select to switch to Symbol mode. 2. Select □ or □ to scroll to a symbol set. 3.

Select a symbol. Number Symbol »Copy and paste text From a text field, you can copy and paste text to another application. 1 Tap and hold a passage of text. 2 Drag or to select the text to be copied. 3 Select or to add the text to the clipboard.

4 In another application, place the cursor at the point where 5 the text will be inserted. Select → Paste to insert the text from the clipboard into the text field.

Getting started 43 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call, or customising and using call-related features. □□ To prevent accidental inputs, turn on the proximity sensor to lock the touch screen when you hold the device near your face. □ p.

52 □□ Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call. »Make a call 2 3 4 1 In the application list, select Phone → Keypad, and then enter an area code and a phone number. Select to make a voice call. To make a video call, select . Select an application to use for making the call (if necessary). Select End call to end the call. □□ You can save numbers that you call frequently in the contact list. □ p. 85 □□ To access the call log and redial numbers you have called recently, select Phone → Logs. Communication 44 »Answer a call 1 During an incoming call, select 2 Select End call to end the call.

finger outside of the large circle. and then drag your To mute the ringtone, press the Volume key. »Reject a call During an incoming call, select and then drag your finger outside of the large circle. To send a message to the caller when you reject a call, drag the reject message bar at the bottom of the screen upwards. You can select one of several preset messages or create your own messages. □ p. 52 »Make an international call 2 3 1 In the application list, select Phone → Keypad, and then tap and hold 0 to insert the + character. Enter a complete number (country code, area code, and phone number). Select to dial the number. Communication 45 »Use a headset Connect a headset to your device to answer and control calls conveniently.

□□ To answer a call, press the headset button. □□ To reject a call, press and hold the headset button. □□ To place a call on hold or retrieve a held call, press and hold the headset button. □□ To end a call, press the headset button. »Use options during a voice call □□ You can use the following options during a voice call: The options available may vary depending on your region or service provider.

To adjust the voice volume, press the Volume key up or down. □□ To place a call on hold, select . To retrieve a held call, select . □□ To dial a second call, select Add call, and then dial a new number. □□ To switch between two calls, select Swap.

□□ To answer a second call, select and then drag your finger outside of the large circle when a call waiting tone sounds. The first call is placed on hold automatically. You must subscribe to the call waiting service to use this feature. □□ To open the keypad, select Keypad. □□ To activate the speakerphone feature, select Speaker. In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode. Communication 46 To turn off the microphone so that the other party cannot hear you, select Mute. □□ To converse with the other party via a Bluetooth headset, select Headset. □□ To make a multiparty call (conference call), make or answer a second call, and then select Merge when connected to the second party.

Repeat this to add more parties. You must subscribe to the multiparty call service to use this feature. □□ To open the contact list, press the Option key and select Contacts. □□ To create a memo, press the Option key and select Memo. □□ To connect the current party with the party placed on hold, press the Option key and select Transfer. You will be disconnected from both parties. □□ »Use options during a video call You can use the following options while a video call is in progress: The options available may vary depending on your region or service provider. To switch between the front and rear camera, select Switch camera. □□ To turn off the microphone so that the other party cannot hear you, select Mute. □□ To hide your image from the other party, press the Option key and select Hide me.

□□ To select an image to be shown to the other party, press the Option key and select Outgoing image. □□ Communication 47 To open the keypad, press the Option key and select Keypad. □□ To converse with the other party via a Bluetooth headset, press the Option key and select Switch to headset. □□ To deactivate the speakerphone feature, press the Option key and select Speaker off. □□ Tap and hold the other party's image to access the following options: --

To capture the other party's image, select Capture image.

-- To record a video of the other party's image, select Record video. It is illegal in many areas to record a call without permission. Always ask the other party for permission before recording a call. □□ »View and dial a missed call Your device will show missed calls. To return the call, tap the indicator icons area and drag it downwards to open the notifications panel, and then select the missed call notification.

»Set auto rejection Use auto rejection to reject calls from specified numbers automatically. 1 In the application list, select Phone. 2 Press the Option key and select Call settings → Call rejection. Communication 48 3 Drag the Auto reject mode switch to the right. 4 Select Auto reject mode → an option. Option All numbers Auto reject numbers Function Reject all calls. Reject calls from phone numbers on the auto reject list. 5 Select Auto reject list. 6 Select Create. 7 Enter a number and select Save.

8 You can set the criteria for the number. 9 To add more numbers, repeat steps 6-7. »Activate Fixed Dialling Number (FDN) mode 1 In the application list, select Phone. 2 Press the Option key and select Call settings → 3 4 5 In FDN mode, your device will prevent outgoing calls to any number that is not saved in the FDN list on your SIM or USIM card. Additional settings → Fixed Dialling Numbers. Select Enable FDN. Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

Communication 49 »Set call diverting Call diverting is a network feature that sends incoming calls to a specified number. You can set this feature separately for several conditions.

1 In the application list, select Phone. 2 Press the Option key and select Call settings → Call 3 4 forwarding → a call type. Select a condition. Enter a number to which calls will be forwarded and select Enable. Your setting will be sent to the network.

»Set call barring Call barring is a network feature that restricts certain types of calling or prevents others from making calls with your device. 1 In the application list, select Phone. 2 Press the Option key and select Call settings → 3 4 Additional settings → Call barring → a call type. Select a call barring option. Enter a call barring password and select OK.

Your setting will be sent to the network. Communication 50 »Set call waiting Call waiting is a network feature that alerts you to an incoming call while you are on another call. This feature is available only for voice calls. 1 In the application list, select Phone. 2 Press the Option key and select Call settings → Additional settings → Call waiting. Your setting will be sent to the network. »View a call or message log You can view logs of calls and messages that are filtered by type. 1 In the application list, select Phone → Logs. 2 Press the Option key and select View by → an option. 3 Select a log entry to view its details.

You can make a call or send a message to a contact by scrolling left or right on a log entry. From the detail view, you can make a call, send a message to the number, or add the number to the contact list or the auto reject list. Communication 51 »Customise call settings 1 In the application list, select Phone. 2 Press the Option key and select Call settings. 3 Change the following options: Option Call rejection Set reject messages Call alert → Call vibrations Call alert →

Call status tones Call alert → Alerts on call Call answering/ ending → Answering key Function Set to reject calls from specified phone numbers automatically. You can add phone numbers to the auto reject list. Add or edit the message that will be sent when you reject a call. Set the device to vibrate when the other party answers or ends a call. Set the device to alert you to the call status during a call. Set the device to alert you to events during a call.

Set to answer calls by pressing the Home key. Call answering/ Set to end a call when you press ending → The the Power key. power key ends calls Auto screen off during calls Set to turn on the proximity sensor during a call. Communication 52 Option Function Set whether or not the device Accessory settings answers calls automatically after for call → Automatic a specified period (available only answering when a headset is connected). Select the length of time that the Accessory settings for call → Automatic device waits before answering answering timer calls.

Accessory settings for call → Outgoing call conditions Accessory settings for call → Outgoing call type Call forwarding Additional settings → Caller ID Additional settings → Call barring Additional settings → Call waiting Additional settings → Auto redial Set to allow outgoing calls with a Bluetooth headset, even when your device is locked. Select the type of outgoing calls to make you use a Bluetooth headset. Set to send incoming calls to a specified number.

Display your caller ID to other parties for outgoing calls. Set to restrict calls by call type.

Set the device to alert you to incoming calls during a call. Set to automatically redial a call that was not connected or that was cut off. Communication 53 Option Additional settings → Fixed Dialling Numbers Additional settings → Auto area code Video call image Own video in received call Use call fail options Voicemail service Voicemail settings Vibrate Accounts Use Internet calling Function Activate FDN mode to prevent calls to phone numbers that are not in the FDN list on the SIM or USIM card. Set to insert a prefix (area or country code) automatically before a phone number. Select an alternative image to be shown to the other party. Set to show your live image to the other party. Set to attempt a voice call when a video call fails to connect. Select a voicemail service provider. Enter the voicemail server number. You can obtain this number from your service provider.

Set the device to vibrate when voicemails are received. Set to accept IP calls and set up your accounts for IP call services. Set whether to use IP call services for all calls or only for IP calls. Communication 54 Messages Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages that you have sent or received. You may incur additional charges for sending or receiving messages while you are outside your home service area.

For details, contact your service provider. »Send a text message □□ 1 In the application list, select Messaging → 2 Add recipients: . 3 4 Enter phone numbers manually and separate them with a semicolon or a comma. □□ Select phone numbers from your call, message, or contact lists by selecting . Select the text field and enter your message text.

To insert emoticons, press the Option key and select Insert smiley. To send the message, select . »Send a multimedia message □□ 1 In the application list, select Messaging → 2 Add recipients: . Enter phone numbers manually and separate them with a semicolon or a comma. □□ Select phone numbers from your call, message, or contact lists by selecting .

Communication 55 When you enter an email address, the device will convert the message to a multimedia message. 3 Select the text field and enter your message text. 4 5 6 To insert emoticons, press the Option key and select Insert smiley. Select and attach a file. Press the Option key and select Add subject, and then enter a subject.

To send the message, select . »View a text or multimedia message 1 In the application list, select Messaging. 2 3 Your messages are grouped by contact as a message thread. Select a contact. Select a multimedia message to view more details. »Listen to a voicemail message If you have set your device to divert missed calls to the voicemail server, callers may leave voicemail messages when you miss calls. 1 In the application list, select Phone → Keypad, and then 2 tap and hold 1. Follow the instructions from the voicemail server. You must save the voicemail server number before accessing the voicemail server. Contact your service provider for this number.

Communication 56 Google Mail Learn to send or view email messages via the Google Mail™ webmail service. □□ This feature may be unavailable depending on your region or service provider.



[You're reading an excerpt. Click here to read official SAMSUNG](#)

[GALAXY TREND GT-S7560 user guide](#)

<http://yourpdfguides.com/dref/5518745>

☐☐ This feature may be labelled differently depending on your region or service provider. »Send an email message 1 In the application list, select Google Mail → . 2 Select the recipient field and enter an email address. 3 Select the subject field and enter a subject. 4 Select the text field and enter your email text. 5 Press the Option key and select Attach picture or Attach 6 video, and then attach a file. To send the message, select . If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area.

»View an email message 1 In the application list, select Google Mail. 2 Select to update the message list. 3 Select an email message. Communication 57 From the message view, use the following options: ☐☐ To move to the next or previous message, scroll right or left. ☐☐ To add the message to the favourites list, select .

☐☐ To reply to the message, select . ☐☐ To reply to the message and include all recipients, select → Reply all. ☐☐ To forward the message to others, select → Forward. ☐☐ To archive the message, select . ☐☐ To delete the message, select .

☐☐ To add a label to the message, select . ☐☐ To mark the message as unread, select . ☐☐ To mark the message as important, press the Option key and select Mark as important. ☐☐ To hide the message, press the Option key and select Mute. To view hidden messages, select → All mail from the label list. ☐☐ To add the message to the spam list, press the Option key and select Report spam or Report phishing. ☐☐ To change the email settings, press the Option key and select Settings. ☐☐ To view an attachment, select the attachment. To save it to your device, press the Option key and select Save. The method of saving attachment to your device may vary depending on the file type.

Email Learn to send or view email messages via your personal or company email account. »Set up an email account 1 In the application list, select Email. 2 Enter your email address and password. Communication 58 3 Select Next. To enter account details manually, select 4 Manual setup. Follow the on-screen instructions. When you are finished setting up the email account, email messages will be downloaded to your device. If you have created two or more accounts, you can switch between them. Select an account name at the top of the screen, and then select the account from which you want to retrieve messages. »Send an email message ☐☐ 1 In the application list, select Email → 2 Add recipients: .

3 4 5 6 Enter email addresses manually and separate them with a semicolon or a comma. ☐☐ Select email addresses from your call, message, or contact lists by selecting . Select the subject field and enter a subject. Select the text field and enter your email text. Select and attach a file.

To send the message, select . If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area. »View an email message 1 In the application list, select Email. 2 Select to update the message list. 3 Select an email message.

Communication 59 From the message view, use the following options: ☐☐ To move to the next or previous message, scroll right or left. ☐☐ To reply to the message, select . ☐☐ To reply to the message and include all recipients, select . ☐☐ To forward the message to others, select . ☐☐ To delete the message, select . ☐☐ To mark the message as important, select . ☐☐ To mark the message as unread, press the Option key and select Mark as unread. ☐☐ To move the message to another folder, press the Option key and select Move. ☐☐ To save the message to your device, press the Option key and select Save email. The message will be saved in My Files → All files → sdcard → Saved Email.

☐☐ To print the message via Wi-Fi or USB, press the Option key and select Print. Your device is compatible only with some Samsung printers. ☐☐ To create a new message, press the Option key and select Compose. ☐☐ To save the email addresses of the recipients to the phonebook as a group of contacts, press the Option key and select Save as group. ☐☐ To change the email settings, press the Option key and select Settings. ☐☐ To save an attachment to your device, select the attachment tab → . The options available may vary depending on the email account. Communication 60 Talk Learn to send and receive instant messages to friends and family with the Google Talk™ instant messaging service. This feature may be unavailable depending on your region or service provider. »Set your status 1 In the application list, select Talk.

2 Select a Google account. 3 Select your name at the top of your friend list. 4 Customise your status, image, and message. »Add a contact to your friend list 1 In the application list, select Talk → . 2 Enter a friend's email address, and then select DONE.

When your friend accepts the invitation, he or she is added to your friend list. Communication 61 »Start a conversation 3 1 In the application list, select Talk. 2 Select a contact from the friend list. 4 The conversation screen opens. Enter and send your message.

☐☐ To add more contacts to the conversation, press the Option key and select Add to chat. ☐☐ To switch between active conversations, scroll left or right. ☐☐ To use video chat, select . ☐☐ To use voice chat, select . Press the Option key and select End chat to end the conversation. ChatON Learn to use ChatON to send and receive instant messages from any device that has a mobile phone number. 1 In the application list, select ChatON. If you are launching this application for the first time, follow the on-screen instructions to complete the account setup. 2 Enter and send your message. Communication 62 Messenger Learn to send and receive instant messages from friends and family with the Google+ messenger instant messaging service.

This feature may be unavailable depending on your region or service provider. 1 In the application list, select Messenger. If you are launching this application for the first time, follow the on-screen instructions to complete the account setup. 2 Enter and send your message. Google+ Learn to access Google's social network service. You can create groups to send and receive instant messages and upload your photos. This feature may be unavailable depending on your region or service provider. 1 In the application list, select Google+. If you are launching this application for the first time, follow the on-screen instructions to complete the account setup. 2 Select a social network feature.

Communication 63 Entertainment Camera Learn how to take and view photos and videos. ☐☐ The camera turns off automatically when you do not use it for a specified period.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/5518745)

[GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)

<http://yourpdfguides.com/dref/5518745>

☐☐ The memory capacity may differ depending on the scene or shooting conditions. »Take a photo 1 In the application list, select Camera. 2 Aim the camera lens at the subject and make any necessary adjustments.

Entertainment 64 Number 1 2 3 Function Change the camera settings. View photos you have taken. Take a photo. Use camera shortcuts. ☐☐ : Apply a special effect.

☐☐ : Change the shooting mode. ☐ p. 67 ☐☐ : Change the flash setting: You can turn on or off the flash manually, or set the camera to use the flash when needed. ☐☐ : Switch to the front camera to take a photo of yourself. You can add or remove shortcuts to frequently-used options. ☐ p. 72 View the storage location. Switch to the camcorder. 4 5 6 To zoom in, place two fingers on the screen and slowly spread them apart. To zoom out, pinch them together.

You can also zoom in or out with the Volume key. The zoom function may be unavailable when shooting in the highest resolution. 3 Select to take a photo. The photo is saved automatically. Entertainment 65 After taking a photo, select the image viewer to view it. ☐☐ To view more photos, scroll left or right. @@ To return to the original size, double-tap the screen. ☐☐ To send the photo to others or share it, select . ☐☐ To start a slide show, select → Start slideshow. Tap the screen to stop the slide show.

☐☐ To delete the photo, press the Option key and select Delete. ☐☐ To add the photo to the clipboard, press the Option key and select Copy to clipboard. ☐☐ To rotate the photo anti-clockwise, press the Option key and select Rotate left. ☐☐ To rotate the photo clockwise, press the Option key and select Rotate right. ☐☐ To crop a section from the photo, press the Option key and select Crop.

☐☐ To set the photo as your wallpaper or a contact image, press the Option key and select Set as. ☐☐ To print the photo via Wi-Fi or USB, press the Option key and select Print. Your device is compatible only with some Samsung printers. @@@☐☐ To view photo details, press the Option key and select Details. Entertainment 66 »Change the shooting mode Option Smile shot Panorama Cartoon Share shot Function You can take photos with various shooting modes.

To change the shooting mode, select → an option. Set the device to recognise people's faces and help you take photos of them when they smile. Take panoramic photos. Take photos with cartoon effects. Take a photo and send it to others via Wi-Fi Direct. Before taking a photo, select options: Option Edit shortcuts Self portrait Flash Shooting mode Scene mode Function »Customise camera settings to access the following Edit shortcuts to frequently-used options. Switch to the front camera to take a photo of yourself. Change the flash setting: You can turn on or off the flash manually, or set the camera to use the flash when needed. Change the shooting mode. ☐ p.

67 Change the scene mode. Entertainment 67 Option Exposure value Focus mode Timer Effects Resolution White balance ISO Metering Guidelines Image quality Function Adjust the exposure value to change the brightness. Select a focus mode. You can take close-up photos, or set the camera to focus on the subject or human faces automatically. Select the length of the delay before the camera takes a photo. Apply a special effect. Select a resolution option. Adjust the colour balance according to the lighting conditions. Adjust the sensitivity of the imaging sensor. Select a type of exposure metering.

Set to view the grid lines on the preview screen. Select a quality level for your photos. Set the camera to include location information for your photos. ☐☐ To improve GPS reception, avoid shooting in locations where the signal may be obstructed, such as between buildings or in lowlying areas, or in poor weather conditions. ☐☐ Your location may appear on your photos when you upload them to the Internet.

To avoid this, deactivate the GPS tag setting. GPS tag Entertainment 68 Option Function Set the camera to flip the image Save as flipped automatically when you take a photo with the front camera. Storage Reset Select a memory location for saving captured photos. Reset camera settings. »Record a video 1 In the application list, select Camera.

2 Drag the slider to switch to the camcorder. 3 Aim the camera lens at the subject and make any necessary adjustments. Number 1 2 Function Change the camcorder settings. View videos you have recorded. Entertainment 69 Number 3 Function Record a video. Use camcorder shortcuts. ☐☐ : Apply a special effect. ☐☐ : Change the recording mode (for attaching to a multimedia message or for saving normally). ☐☐ : Change the flash setting. ☐☐ : Switch to the front camera to record a video of yourself.

You can add or remove shortcuts to frequently-used options. ☐ p. 72 View the storage location. Switch to the camera. 4 5 6 To zoom in, place two fingers on the screen and slowly spread them apart. To zoom out, pinch them together. You can also zoom in or out with the Volume key. The zoom function may be unavailable when shooting in the highest resolution. 4 Select 5 Select to start recording. to stop recording.

The video is saved automatically. The camcorder may not be able to properly record videos on memory cards with slow transfer speeds. After recording a video, select the image viewer to view it. ☐☐ To view more videos, scroll left or right. ☐☐ To play the video, select .

☐☐ To send the video to others or share it, select . Entertainment 70 To start a slide show, select → Start slideshow. Tap the screen to stop the slide show. ☐☐ To delete the video, press the Option key and select Delete. @@☐☐ To view video details, press the Option key and select Details.

☐☐ Before recording a video, select options: Option Edit shortcuts Self recording Flash Recording mode Exposure value Timer Effects Resolution White balance Guidelines Function »Customise camcorder settings to access the following Edit shortcuts to frequently-used options. Switch to the front camera to record a video of yourself. Change the flash setting. Change the recording mode (for attaching to a multimedia message or for saving normally). Adjust the exposure value to change the brightness. Select the length of the delay before the camcorder starts recording a video. Apply a special effect. Select a resolution option. Adjust the colour balance according to the lighting conditions. Set to view the grid lines on the preview screen.

Entertainment 71 Option Video quality Storage Reset Function Select a quality level for your videos. Select a memory location for saving recorded videos. Reset camcorder settings. »Edit the shortcut icons 2 3 You can add or remove shortcuts to frequently-used options. 1 From the preview screen, tap and hold the shortcut area, or select → Edit shortcuts.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>

Tap and hold an icon from the option list, and then drag it to the shortcut area. To remove shortcuts, tap and hold an icon, and then drag it to the option list. Tap the screen to return to the preview screen. Video Player Learn to use the video player. @@@@ Playback quality may vary by content type. @@ Some files may not play properly depending on how they are encoded. Entertainment 72 »Play a video 1 In the application list, select Video Player. 2 Select a video. 3 Control playback with the following keys: Number 1 2 3 4 5 6 Function Scan forwards or backwards in the file by dragging or tapping the bar. Change the ratio of the video screen. Restart playback; Skip to the previous file (tap within 2 seconds); Scan backwards in the file (tap and hold). Adjust the volume. Pause playback; Select playback. to resume Skip to the next file; Scan forwards in the file (tap and hold). Entertainment 73 During playback, press the Option key to access the following options: @@ To search for devices that have media sharing activated, press the Option key and select Scan for Nearby devices. @@ To send the video to others or share it, select Share via. @@ To trim a segment of the video, select Trim. @@@@ To change the video player settings, select Settings. @@@@ Change the playback speed. Select a sound effect. @@@@ Playback quality may vary by content type. @@@@ To return to the original size, double-tap the screen. @@ To send the image to others or share it, select . @@ To start a slide show, select → Start slideshow. Tap the screen to stop the slide show.

@@ To delete the image, press the Option key and select Delete. @@@@ Your device is compatible only with some Samsung printers. @@@@ 4 Control playback with the keys. @@ To send the video to others or share it, select Share via. @@ To trim a segment of the video, select Trim. @@@@ To change the video player settings, select Settings. @@ To view video details, select Details. Music Player Learn to listen to your favourite music while on the go. @@@@ Playback quality may vary by content type. @@ Some files may not play properly depending on how they are encoded.

Entertainment 77 »Add music files to your device Start by transferring files to your device or memory card: @@ Download from the Internet. @ p. 94 @@ Download from a computer with Samsung Kies. @ p. 107 @@ Download from a computer with Windows Media Player. @ p. 107 @@ Receive via Bluetooth. @ p. 117 @@ Receive via Wi-Fi. @ p. 112 @@ Copy to your memory card. »Play music 1 In the application list, select Music Player. 2 Select a music category → a music file. 3 Control playback with the following keys: Entertainment 78 Number 1 2 3 4 5 6 7 8 9 10 Function Activate Shuffle mode. Scan forwards or backwards in the file by dragging or tapping the bar. Select a sound effect. Restart playback; Skip to the previous file (tap within 2 seconds); Scan backwards in the file (tap and hold). Adjust the volume. Change the repeat mode. Sort music files by mood or year.

Pause playback; Select playback. Open the playlist. Skip to the next file; Scan forwards in the file (tap and hold). to resume You can control the music player with a headset. On the Home screen, press and hold the headset button to launch the music player. Then, press the headset button to start or pause playback. Entertainment 79 During playback, press the Option key to access the following options: @@ To add music files to the quick list (for saving as a playlist), select Add to quick list. @@ To listen to music via a Bluetooth headset, select Via Bluetooth. @@ To send the music file to others or share it, select Share music via. @@ To add the music file to a playlist, select Add to playlist. @@ To view music details, select Details. @@ To set the music file as your ringtone, select Set as. @@ To change the music player settings, select Settings. @@ To stop playback and close the music player, select End. 1 In the application list, select Music Player → Playlists. 2 Press the Option key and select Create playlist. 3 Enter a title for your new playlist and select OK. 4 Select Add music. 5 Select the files to include and select Done. »Create a playlist Entertainment 80 »Customise music player settings 1 In the application list, select Music Player. 2 Press the Option key and select Settings. 3 Change the following options: Option SoundAlive Play speed Music menu Lyrics Music auto off Function Select a sound effect. Change the playback speed. Select music categories to show on the music library screen. Set to show song lyrics during playback. Set the music player to turn off automatically after a specific period of time. Entertainment 81 FM Radio Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna. »Listen to the FM radio 1 Plug a headset into your device. 2 In the application list, select FM Radio.

The FM radio scans and saves available stations automatically. The first time you turn on the FM radio, it will start automatic tuning. 3 Select a radio station. 4 Control the FM radio with the following keys: Number 1 2 3 Function Record a song from the FM radio. Turn on or off the FM radio. Search for an available radio station. Entertainment 82 Number 4 5 6 7 Function Add the current radio station to the favourites list. Adjust the volume. Access services for the current station, such as downloading music files or calling the station. This option may be unavailable depending on your region. Fine-tune the frequency. »Record a song from the FM radio 1 Plug a headset into your device. 2 In the application list, select FM Radio. 3 Select to turn on the FM radio. 4 Scroll a radio station. 5 Select to start recording. 6 When you are finished, select . The recorded file will be saved in My Files → All files → sdcard → Sounds. »Save radio stations automatically 1 Plug a headset into your device. 2 In the application list, select FM Radio. 3 Select to turn on the FM radio. 4 Press the Option key and select Scan → an option. The FM radio scans and saves available stations automatically. Entertainment 83 »Add a radio station to the favourites list 1 Plug a headset into your device. 2 In the application list, select FM Radio. 3 Select to turn on the FM radio. 4 Scroll to a radio station. 5 Select to add the station to the favourites list. »Customise FM radio settings 1 In the application list, select FM Radio. 2 Press the Option key and select Settings.

3 Change the following options: Option Storage Radio text Function Select a memory location for saving FM radio clips. Set to show the station ID on the FM radio screen.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY TREND GT-S7560 user guide](http://yourpdfguides.com/dref/5518745)
<http://yourpdfguides.com/dref/5518745>