



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY XCOVER GT-S5690. You'll find the answers to all your questions on the SAMSUNG GALAXY XCOVER GT-S5690 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY XCOVER GT-S5690
User guide SAMSUNG GALAXY XCOVER GT-S5690
Operating instructions SAMSUNG GALAXY XCOVER GT-S5690
Instructions for use SAMSUNG GALAXY XCOVER GT-S5690
Instruction manual SAMSUNG GALAXY XCOVER GT-S5690

Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

To install Kies (PC Sync)  Kies

1. Download the latest version of Kies from the Samsung website (www.samsung.com/kies) and install it on your PC.
2. Using a USB cable, connect your device to your PC. Samsung Kies will launch automatically. Refer to the Kies help for more information.

www.samsung.com

English (EU). 03/2012. Rev. 1.2



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

Manual abstract:

Using a USB cable, connect your device to your PC. Samsung Kies will launch automatically. @03/2012. Rev. @@This device will provide you with high quality mobile communication and entertainment based on Samsung's exceptional technology and high standards. This user manual has been specially designed to guide you through the functions and features of your device. Read me first Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use. The descriptions in this manual are based on the default settings of your device. Images and screenshots used in this user manual may differ in appearance from the actual product. Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice.

Refer to www.samsung.com for the latest version of the user manual. Available features and additional services may vary by device, software, or service provider. Formatting and delivery of this user manual is based on Google Android operating systems and may vary depending on the user's operating system. Using this manual 2 Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by third-party applications. Samsung is not liable for performance issues or incompatibilities caused by user editing of registry settings. You may upgrade your mobile device's software by accessing www.samsung.com.

Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user. Please keep this manual for future reference. Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: Warning--situations that could cause injury to yourself or others Caution--situations that could cause damage to your device or other equipment Note--notes, usage tips, or additional information Using this manual 3 Refer to--pages with related information; for example: p. 12 (represents "see page 12") Followed by--the order of options or menus you must select to perform a step; for example: In Idle mode, open the application list and select Settings About phone (represents Settings, followed by About phone) Square brackets--device keys; for example: [(represents the Menu key)] [] Copyright © 2012 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc.

and are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc. Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Oracle and Java are registered trademarks of Oracle and/ or its affiliates. Other names may be trademarks of their respective owners. Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. All other trademarks and copyrights are the property of their respective owners. Using this manual 5 Contents Assembling ..

.....

.....

.....

.....

.....

.....

.....

..... 10 Unpack .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 10 Install the SIM or USIM card and battery

.....

.....

..... 10 Charge the battery ...

.....

.....

.....

.....

.....

.....

.....
13 Insert a memory card (optional)
.....
.....
.....

..... *15 Getting started .*
.....
.....
.....
.....
.....
.....

... *18 Turn your device on and off*
.....
.....
.....
.....
.....

. *18 Get to know your device*
.....
.....
.....
.....

.... *19 Use the touch screen .*
.....
.....
.....
.....
.....

... *24 Lock or unlock the touch screen and keys ..*
.....
.....

.... *25 Get to know the idle screen*
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....

. *25 Access applications*
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... *28 Customise your device*

.....
.....
.....
.....

.... 30 Enter text .

.....
.....
.....
.....
.....
.....
.....
.....

..... 35 Download applications from Android Market .

.....
.....

... 39 Download files from the web

.....
.....
.....
.....

..... 40 Synchronise data ...

.....
.....
.....
.....
.....
.....

... 40 Communication ..

.....
.....
.....
.....
.....

..... 42 Calling

.....
.....
.....
.....
.....
.....

. 42 Messaging

.....

.....
.....

.....
.....
.....

.....
.....

.... 46 Google Mail .

.....

.....
.....
.....

.....
.....
.....

..... 49 Email

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 51 Talk

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 53 Social Hub

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 54 Contents 6 Entertainment

.....
.....
.....
.....

.....
.....
... 55 Camera ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 55 Gallery ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 62 Music ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 64 Music Hub

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 67 FM radio

.....

.....
.....
.....

.....
.....
.....
.....

.....
.... *68 Personal information* .

.....
.....

.....
.....
.....

..... *71 Contacts* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

71 Calendar

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... *75 Memo*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *77 Voice recorder* ...

.....
.....
.....

.....
.....
.....

.....
.....
.....
... 78 Web ..
.....

.....
.....
.....
.....
.....
.....
.....

.. 79 Internet

.....
.....
.....
.....

.....
.....
.....
.....
..... 79 Maps

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
... 83 Latitude

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.. 84 Places

.....
.....
.....
.....

.....
.....
.....
.....

.....
... *85 Navigation* ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. *86 YouTube*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... *87 Samsung Apps*

.....
.....
.....
.....

.....
.....
.....
.....

... *88 Market*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *88 News & Weather* ..

.....
.....
.....
.....

.....
.....

.....
.....
..... 89 Connectivity

.....
.....
.....

.....
.....
.....
.....

..... 90 Bluetooth

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 90 Wi-Fi

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 92 Wi-Fi Direct

.....
.....
.....
.....

.....
.....
.....
.....

..... 94 Mobile network sharing

.....
.....

.....
.....
.....
.....

..... 95 GPS

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 96 Contents 7 PC connections

.....
.....
.....
.....
.....
.....

..... 97 VPN connections .

.....
.....
.....
.....
.....
.....
.....
.....

99 Tools

.....
.....
.....
.....
.....
.....
.....

. 101 Clock

.....
.....
.....
.....
.....
.....

..... 101 Calculator ...

.....
.....
.....
.....
.....

.....
.....
.....

.....
.... 102 CardioTrainer .

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 102 Downloads

.....
.....
.....
.....

.....
.....
.....
.....

.....
103 Google Search

.....
.....

.....
.....
.....
.....

.....
.....

.... 103 My files .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
. 104 Polaris Office

.....
.....

.....
.....
.....
.....

.....
.....
.....

... 105 SIM Toolkit

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 106 Task manager .

.....
.....
.....
.....
.....
.....
.....
.....

.... 107 Voice Search .

.....
.....
.....
.....
.....
.....
.....
.....

.. 107 Settings

.....
.....
.....
.....
.....
.....
.....

..... 108 Access the Settings menu ..

.....
.....
.....
.....
.....
.....

..... 108 Wireless and network

.....
.....
.....
.....
.....
.....
.....

.. 108 Call

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 110 Sound

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 111 Display

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 112 Location and security ..

.....
.....
.....
.....

.....
.....
.....
.....

.... 112 Applications

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 114 Accounts and sync ...

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.... 115 Privacy .
.....

.....
.....
.....
.....
.....
.....
.....
.....

.....
.. 115 Storage ...
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 115 Language and keyboard
.....
.....
.....

.... 115 Voice input and output
.....
.....
.....
.....

.....
.....
.. 118 Accessibility ...
.....
.....
.....
.....
.....
.....
.....

119 Contents & Date and time
.....
.....
.....

.....
.....
.....
.....

119 Torchlight

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 119 About phone ...

.....
.....
.....

.....
.....
.....

..... 119 Troubleshooting ..

.....
.....
.....

.....
.....
.....

..... 120 Safety precautions ..

.....
.....
.....

126 Index

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 138 Contents 9 Assembling Unpack Check your product box for the following items: Mobile device Battery Quick start guide Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty. The items supplied with your device and available accessories may vary depending on your region or service provider. You can purchase additional accessories from your local Samsung dealer. The supplied accessories perform best for your device.

Accessories other than the supplied ones may not be compatible with your device. Install the SIM or USIM card and battery When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card. Assembling 10 To install the SIM or

USIM card and battery. 1 2 If the device is on, press and hold [] and select Power off OK to turn it off. Turn the sing of data will shorten the lifespan of memory cards. When you insert a memory card in your device, the file directory of the memory card will appear in the sdcard folder. 1 2 Remove the battery and the back cover. Insert a memory card with the gold-coloured contacts facing down. 3 Lock the memory card in place.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)

<http://yourpdfguides.com/dref/4262405>

4 Replace the battery and the back cover.

Assembling 16 > Remove the memory card 1 2 3 4 Before removing a memory card, first unmount it for safe removal. In Idle mode, select Settings Storage Unmount SD card OK. Remove the battery and the back cover. Remove the memory card. Replace the battery and the back cover.

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device. In Idle mode, select Settings Storage Unmount SD card OK Format SD card Format SD card Erase everything. Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.

> Format the memory card Assembling 17 Getting started Turn your device on and off To turn on your device, press and hold []. If you turn on your device for the first time, follow the on-screen instructions to set up your device. To turn off your device, press and hold [] and then select Power off OK. Follow all posted warnings and directions from authorised personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals. To use your device's non-network services only, switch to Flight mode. Press and hold [] and select Flight mode. Getting started 18 Get to know your device > Device layout Proximity sensor Earpiece Volume key Touch screen Home key Back key Menu key Mouthpiece Headset jack Flashbulb Power/Reset/ Lock key Speaker Camera lens Back cover Multifunction jack Internal antenna Getting started 19 > Maintain your water and dust resistant feature Your phone offers limited protection against accidental exposure to water in some conditions, but you should never intentionally immerse the phone in water. Do not expose your phone to high water pressures or any other liquids, such as salt water, ionized water or dirty water. If the phone gets wet, dry it thoroughly with a clean soft cloth. Ensure that all covers are properly aligned and tightly closed.

The back, headset, and multifunction jack covers may be loosened slightly if the device is dropped or receives an impact. Ensure that all the covers are properly aligned and tightly closed. Otherwise, they may not provide protection from water. Always keep the back cover, headset jack cover, multifunction jack cover, and the area around them clean and be careful to avoid damaging them. If these areas become contaminated, they may not provide protection from dust and water. Any service performed on the phone may reduce the water and dust protection. Avoid exposing the phone to dust and water if any service has been performed on it. Exposing the phone to extreme temperatures may reduce the water and dust protection. Use your phone at -20 °C to 50 °C. Getting started 20 > Keys Key Power/ Reset/ Lock Menu Home Back Function Turn on the device (press and hold); Access the quick menus (press and hold); Reset the device (press and hold for 8-10 seconds); Lock the touch screen.

Open a list of options available on the current screen; Open the quick search bar (press and hold). Return to the idle screen; Open the list of recent applications (press and hold). Return to the previous screen. Adjust the device's volume; When the idle screen is locked, turn the torch Volume light on (press and hold up) or off (press down). 1.

If your device has fatal errors or hang-ups, or freezes, you may need to reset the device to regain functionality. > Indicator icons Icon Icons shown on the display may vary depending on your region or service provider. Definition No signal Signal strength GPRS network connected Getting started 21 Icon Definition EDGE network connected UMTS network connected Open WLANs available WLAN connected Bluetooth activated Bluetooth headset connected GPS activated Call in progress Call on hold Speakerphone activated Missed call Synchronised with the web Uploading data Downloading data Call diverting activated Connected to PC USB tethering activated Getting started 22 Icon Definition Wi-Fi tethering activated No SIM or USIM card New text or multimedia message New email message New voice mail message New Google Mail Alarm activated Event notification Roaming (outside of normal service area) Silent mode activated Vibration mode activated Flight mode activated Music playback in progress Music playback paused FM radio turned on in the background Error occurred or caution required Battery power level 10:00 Current time Getting started 23 Use the touch screen Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen. To avoid scratching the touch screen, do not use sharp tools. Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction. Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water. For optimal use of the touch screen, remove the screen protection film before using your device. Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen. Control your touch screen with the following actions: Tap: Touch once with your finger to select or launch a menu, option, or application. Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list.

Drag: Tap and drag your finger up, down, left, or right to move to items on lists. Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item. Getting started 24 Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages. Pinch: Place two fingers far apart, and then pinch them together. Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press []. You can also adjust the backlight time. In Idle mode, open the application list and select Settings Display Screen timeout. Lock or unlock the touch screen and keys You can lock the touch screen and keys to prevent any unwanted device operations. To lock, press [].

To unlock, turn on the screen by pressing [] and then flick the window with your finger. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. p. 32 Get to know the idle screen When the device is in Idle mode, you will see the idle screen. From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

The idle screen has multiple panels.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

Scroll left or right to a panel of the idle screen. Getting started 25 > Add items to the idle screen 1 2 You can customise the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen, Press [] Add or tap and hold the empty area on the idle screen.

Select the item category an item: Widgets: Add widgets to the idle screen.

Shortcuts: Add shortcuts to items, such as applications, bookmarks, and contacts. Folders: Create a new folder or add folders for your contacts. Wallpapers: Set a background image. > Move items on the idle screen 1 2 1 2 3 Tap and hold an item to move. Drag the item to the location you want. > Remove items from the idle screen Tap and hold an item to remove. The trash bin appears at the bottom of the idle screen. Drag the item to the trash bin. When the item turns red, release the item. Getting started 26 In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the notifications panel.

You can activate or deactivate wireless connection features and access a list of notifications, such as messages, calls, events or processing status. To hide the panel, drag the bottom of the list up. From the notifications panel, you can use the following options: Wi-Fi: Activate or deactivate the WLAN connection feature. p. 93 BT: Activate or deactivate the Bluetooth wireless connection feature. p. 90 GPS: Activate or deactivate the GPS feature. Sound/Vibration: Activate or deactivate Vibration mode. Auto rotation: Activate or deactivate the auto rotation. Available options may vary depending on your region or service provider.

> Use the notifications panel > Add or remove panels to the idle screen 1 2 You can add or remove panels of the idle screen to organise widgets according to your preferences and needs. In Idle mode, press [] Edit. You can also place your two fingers on the screen and pinch to switch to Edit mode. Add or remove panels by using the following features: To remove a panel, tap and hold the thumbnail of a panel and drag it to the trash bin at the bottom of the screen.

Getting started 27 3 To add a new panel, select .

To change the order of the panels, tap and hold the thumbnail of a panel and drag it to the location you want. When you are finished, press []. Access applications To access your device's applications, 1 2 3 In Idle mode, select to access the application list. Scroll left or right to another screen. You can also select a dot at the top of the screen to move directly to the corresponding screen.

Select an application. When you use applications provided by Google, you must have a Google account. If you do not have a Google account, sign up for a Google account. You can add a shortcut to an application by tapping and holding the application icon from the application list. You can move the icon to the location you want on the idle screen. Press [] to return to the previous screen; Press [] to return to the idle screen. If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto rotation. 4 Getting started 28 > Organise applications 1 2 3 4 1 2 You can reorganise the applications in the application list by changing their order or grouping them into categories to suit your preferences and needs. In the application list, press [] Edit.

Tap and hold an application. Drag the application icon to the location you want. You can move an application icon to another screen. You can also move most-used applications next to . Press [] Save. > Access recent applications Press and hold [] to view the applications you have accessed recently. Select an application to access. > Use the task manager Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption.

To avoid these problems, end unnecessary programs using the task manager. 1 2 In Idle mode, open the application list and select Task manager Active applications. The list of all the applications currently running on your device appears. To close an application, select End. To close all active applications, select End all.

Getting started 29 Customise your device Get more from your device by customising it to match your preferences. > Set the current time and date 1 2 In Idle mode, open the application list and select Settings Date and time. Set the time and date and change other options. > Turn on or off the touch tone In Idle mode, open the application list and select Settings Sound Audible selection. > Adjust the volume of the ringtones > Switch to Silent mode Press the Volume key up or down to adjust the ringtone volume.

To mute or unmute your device, do one of the following: In Idle mode, open the application list and select Keypad and tap and hold . Open the notifications panel from the top of the screen and select Sound. Press and hold [] and select Silent mode. You can set the device to alert you to various events in Silent mode. In Idle mode, open the application list and select Settings Sound Vibrate Always or Only in Silent mode. When you switch to Silent mode, will appear in place of . Getting started 30 > Change your ringtone 1 2 In Idle mode, open the application list and select Settings Sound Phone ringtone. Select a ringtone from the list and select OK. In Idle mode, open the application list and select Settings Display Animation Some animations or All animations. > Activate animation for switching windows > Select a wallpaper for the idle screen 1 2 3 In Idle mode, press [] Wallpaper an option.

Select an image. Select Save or Set wallpaper. Samsung is not responsible for any use of default images or wallpapers provided on your device. You can download live wallpapers from Market. > Adjust the brightness of the display 1 2 3 In Idle mode, open the application list and select Settings Display Brightness. Drag the slider to adjust the level of brightness. Select OK. The brightness level of the display will affect how quickly the device consumes battery power. Getting started 31 > Set a screen lock You can lock the touch screen by activating the screen lock feature. Your device will require the unlock code each time you turn on the device or unlock the touch screen.

If you forget your unlock code, bring your device to a Samsung Service Centre to reset it. Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software. Set an unlock pattern 1 2 3 4 5 6 1 2 3 In Idle mode, open the application list and select Settings Location and security Set screen lock Pattern.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

See the on-screen instructions and example patterns and select Next. Draw a pattern by dragging your finger to connect at least 4 dots. Select Continue. Draw a pattern again to confirm. Select Confirm. In Idle mode, open the application list and select Settings Location and security Set screen lock PIN. Enter a new PIN (numeric) and select Continue.

Enter the PIN again and select OK. Set an unlock PIN code Getting started 32 Set an unlock password 1 2 3 In Idle mode, open the application list and select Settings Location and security Set screen lock Password. Enter a new password (alphanumeric) and select Continue. Enter the password again and select OK. > Lock your SIM or USIM card 1 2 You can lock your device by activating the PIN supplied with your SIM or USIM card. In Idle mode, open the application list and select Settings Location and security Set up SIM card lock Lock SIM card. Enter your PIN and select OK. Once the PIN lock is enabled, you must enter the PIN each time you turn on the device. If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.

If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it. Getting started 33 > Activate the Find my mobile feature When someone inserts a new SIM or USIM card in your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device. To use this feature, you need a Samsung account for controlling the device from the web remotely. 1 2 3 4 5 6 7 8 In Idle mode, open the application list and select Settings Location and security SIM change alert. Select the check box next to I accept all the terms above and select Accept. Select Sign in, enter your email address and password for your Samsung account, and select Sign in. To create a Samsung account, select Sign up. Select Alert message recipients. Enter the password for your Samsung account again and select OK. Enter a phone number including a country code (with +).

Enter the text message to be sent to the recipients. Select Done. Getting started 34 Enter text You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen. You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.

p. 115 > Change the keyboard type You can change the keyboard type. Tap and hold the text input field and select Input method a keyboard type (Samsung keypad or Swype). > Enter text using the Samsung keypad 1 2 Select Portrait keypad types and select a text input method. You can select one of key input methods (QWERTY or traditional keypad) or handwriting input methods.

Enter text by selecting alphanumeric keys or writing on the screen. You can also use the following keys: 1 2 3 4 5 6 7 Number 1 Function Change case. Getting started 35 Number 2 Function Switch between Symbol/Number mode and ABC mode. Enter text by voice. This feature may be unavailable depending on the selected input language. Clear your input. Start a new line. Access the keypad settings; Change the keyboard type (tap and hold). Insert a space. Functions of this key may vary depending on your service provider.

3 4 5 6 7 > Enter text using the Swype keypad 1 2 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen. Continue until you have finished the word. Getting started 36 3 4 5 Release the finger on the last character. When the word displays correctly, select to insert a space. If the correct word does not display, select an alternative word from the list that appears. Repeat steps 1-4 to complete your text. You can also tap the keys to enter text. You can tap and hold a key to enter characters on the upper half of the key. When you tap and hold a key until the character list appears, you can enter special characters and symbols. You can also use the following keys: 1 2 3 4 5 6 7 Number 1 2 3 4 Function Change case.

Access the swype tip screen; Open the help information (tap and hold). Switch between Symbol/Number mode and ABC/Number mode. Clear your input. Getting started 37 Number 5 6 7 Function Start a new line. Enter text by voice.

This feature may be unavailable depending on the selected input language. Insert a space. > Copy and paste text 1 2 3 4 5 6 7 While you are entering text, you can use the copy and paste feature to use text in other applications. Place the cursor on the text you want to copy. Select .

Select or . Drag or to select the text you want. Select to copy, or to cut the text onto the clipboard. In another application, place the cursor where you want to paste the text. Select to insert the text from the clipboard into the text field. Getting started 38 Download applications from Android Market Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications. This feature may be unavailable depending on your region or service provider. Your device will save user files from downloaded applications to the internal memory. To save the files to the memory card, connect your device to a PC and copy them from the internal memory to the memory card.

> Install an application 1 2 3 1 2 3 In Idle mode, open the application list and select Market. Select Accept when the terms and conditions appear. Search for a file or application and download it. > Uninstall an application From the Android Market home screen, select My apps. Select the item you want to delete. Select Uninstall OK. Getting started 39 Download files from the web Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust. Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

1 2 To download files from the web, In Idle mode, open the application list and select Internet. Search for a file or application and download it. To install applications downloaded from websites other than Android Market, you must select Settings Applications Unknown sources OK. Synchronise data You can synchronise data with various web servers and back up or restore your data. Once the synchronisation is completed, your device stays connected to the web. If any change is made on the web, the updated information will appear on your device and will automatically begin synchronisation, and vice versa. This feature may be unavailable depending on your region or service provider.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

Getting started 40 > Set up a server account 1 2 3 1 2 3 4 In Idle mode, open the application list and select Settings Accounts and sync. Select Add account an account type. Follow the on-screen instructions to complete the account setup.

> Activate automatic sync Accounts and sync. In Idle mode, open the application list and select Settings Select Auto sync. Select an account. Select the applications you want to synchronise. To exclude applications from automatic synchronisation, clear the check boxes next to the applications you want. > Synchronise data manually 1 2 3 In Idle mode, open the application list and select Settings Accounts and sync. Select an account. Press [] Sync now. Your device will start synchronising the data you set for synchronisation. Getting started 41 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.

> Make or answer a call You can use the buttons or the touch screen when you make, accept, end or reject calls. When you turn on the proximity sensor, your device automatically turns off and locks the touch screen to prevent accidental inputs when you hold the device near your face. p. 111 Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call. Make a call 1 2 3 In Idle mode, open the application list and select Keypad, and enter an area code and a phone number. To make a call. Select To end the call, select End call. Use the phonebook to save numbers you dial frequently. p. 71 To quickly access the call log to redial the numbers you dialled recently, select Logs.

Communication 42 Answer a call 1 2 When a call comes in, drag right until it reaches the dot. When the device is ringing, press the Volume key to mute the ringtone. To end the call, select End call. left until it reaches the dot. The Reject a call When a call comes in, drag caller will hear a busy tone.

Call an international number 1 2 In Idle mode, open the application list and select Keypad, and tap and hold 0 to insert the + character. Enter the complete number you want to dial (country code, area code and phone number), and then select to dial the number. > Use a headset By plugging a headset into the device, you can answer and control calls hands-free: To answer a call, press the headset button. To reject a call, press and hold the headset button. To place a call on hold or retrieve a held call during a call, press and hold the headset button.

To end a call, press the headset button. Communication 43 > Use options during a call You can use the following options while a call is in progress: To adjust the voice volume, press the Volume key up or down. To place a call on hold, select . To retrieve a held call, select . To dial a second call, select Add call and then dial a new number. To answer a second call, drag right when a call waiting tone sounds. The device asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature. To open the dialling screen, select Dialpad. To activate the speakerphone feature, select Speaker.

In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode. To turn off the microphone so that the other party cannot hear you, select Mute. To listen and talk to the other party via a Bluetooth headset, select Headset. To switch between the two calls, select Swap. To make a multiparty call (conference call), make or answer a second call and select Merge when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature. Communication 44 > View and dial missed calls > Use additional features Your device will display calls you have missed on the display. To dial the number of a missed call, open the notifications panel and select the missed call.

You can use various other call-related features, such as Fixed Dialling Number (FDN) mode or call diverting. Use Fixed Dialling Number (FDN) mode In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list. To activate FDN mode, 1 2 3 In Idle mode, open the application list and select Settings Call Fixed Dialling Numbers Enable FDN. Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts to be used in FDN mode.

Set call forwarding Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area. 1 2 3 In Idle mode, open the application list and select Settings Call Call forwarding. Select a condition. Enter a number to which calls will be forwarded and select Enable.

Your setting will be sent to the network. Communication 45 Set call waiting Call waiting is a network feature to alert you of an incoming call while you are on a previous call. In Idle mode, open the application list and select Settings Call Additional settings Call waiting. Your setting will be sent to the network. > View call logs 1 2 You can view logs of your calls filtered by their types. In Idle mode, open the application list and select Logs. Press [] View by an option to sort the call logs. From the call logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right. Select a log to view its details. From the detail view, you can dial the number, send a message to the number or add the number to the phonebook.

3 Messaging Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received. You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider. Communication 46 >

Send a text message 1 2 3 In Idle mode, open the application list and select . Select New message. Add recipients of your message. Enter phone numbers manually, separating them with a semicolon or a comma. Select phone numbers from the lists by selecting the options under the recipient field. Select Enter message here and enter your message text. To insert emoticons, press [] Insert smiley.

Select Send to send the message. 4 5 1 2 3 > Send a multimedia message In Idle mode, open the application list and select . Select New message. Add recipients of your message. Enter phone numbers or email addresses manually, separating them with a semicolon or a comma. Select phone numbers or email addresses from the lists by selecting the options under the recipient field.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/4262405)

[GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)

<http://yourpdfguides.com/dref/4262405>

When you enter an email address, the device will convert the message as a multimedia message. Press [] Add subject and add a subject for the message. Select Enter message here and enter your message text. To insert emoticons, press [] Insert smiley.

4 5 Communication 47 6 7 1 2 3 Select and add an item. You can select a file from the file list or create a new photo, video, or sound. Select Send to send the message. > View a text or multimedia message In Idle mode, open the application list and select . Your messages are grouped into message threads by contact, like a messenger. Select a contact. For a multimedia message, select a message to view the details. > Listen to voice mail messages If you have set missed calls to be diverted to the voice mail server, callers may leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to voice mail messages, 1 2 In Idle mode, open the application list and select Keypad and then tap and hold 1. Follow the instructions from the voice mail server.

You must save the voice mail server number before accessing the server. Your service provider can give you the number. Communication 48 Google Mail You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold. This feature may be unavailable depending on your region or service provider. This Google Mail menu may be labelled differently depending on your service provider. > Send an email message 1 2 3 4 5 6 7 In Idle mode, open the application list and select Google Mail. If you are launching this application for the first time, select OK. Press [] Compose.

Enter a name or address in the recipient field. To add more recipients, press [] Add Cc/Bcc. Enter a subject and message. To attach an image file, press [] Attach a file. Select to send the message.

Communication 49 > View email messages 1 2 In Idle mode, open the application list and select Google Mail. Select an email message. From the message view, use the following options: To reply to the message, select . To reply to the message including all recipients, select Reply all. To forward the message to other people, select Forward.

To add a star to the message, select . To view an attachment, select Preview. To save it to your memory card, select Download. To archive the message, select Archive. To delete the message, select Delete. To move to the previous or next message, select or . > Organise email by labels Add a label to a message You can organise your email by labelling your messages. You can sort messages by label filter. 1 2 3 From the Inbox screen, tap and hold a message. Select Change labels.

Select a label to add and select OK. Communication 50 1 2 Filter messages From the Inbox screen, press [] Go to labels. Select the label of the messages you want to view. Email Learn to send or view email messages via your personal or company email account. > Set up an email account 1 2 3 4 In Idle mode, open the application list and select Email. Enter your email address and password. Select Next (for general email accounts, such as Google Mail and Yahoo) or Manual setup (for other company email accounts). Follow the on-screen instructions. When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts; Select an account name at the top right of the screen and select one you want to retrieve messages from.

> Send an email message 1 2 In Idle mode, open the application list and select Email. Press [] Compose. Communication 51 3 4 5 6 Add recipients of your message. Enter email addresses manually, separating them with a semicolon. Select email addresses from the lists by selecting the options under the recipient field.

Select the subject field to enter a subject. Select the text input field to enter your email text. Select Attach and attach a file. You can select a file from the file list or create a new photo, video, or sound. You cannot attach Digital Rights Management (DRM) protected files.

Select Send to send the message. If you are offline or outside your service area, the message will be held in the outbox until you are online and in your service area. 7 > View an email message When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline. 1 2 3 In Idle mode, open the application list and select Email an email account. Press [] Refresh to update the message list. Select an email message. Communication 52 From the message view, use the following options: To move to the previous or next message, select or . To move the message to another folder, select . To delete the message, select .

To reply to the message, select Reply. To forward the message to other people, select Forward. To view an attachment, select next to the attachment field and select a file. To save it to your device, select . Talk Learn to chat with friends and family via Google Talk™. This feature may be unavailable depending on your region or service provider. > Add friends to your friend list 1 2 3 In Idle mode, open the application list and select Talk. The friend list shows all of your Google Talk contacts at a glance. Press [] Add friend. Enter an email address of the friend and select Send invitation.

When your friend accepts the invitation, the friend is added to your friend list. Communication 53 > Start a chat 1 2 3 4 5 In Idle mode, open the application list and select Talk. Select a friend from the friend list. The chat screen opens. Enter your message and select Send.

To insert emoticons, press [] More Insert smiley. To switch between active chats, press [] Switch chats. To end the chat, press [] End chat. Social Hub Learn to access Social Hub™, the integrated communication application for Social Network Service (SNS), email, messages, instant messages, contacts or calendar information. Visit socialhub.

samsungapps.com for more details. 1 2 In Idle mode, open the application list and select Social Hub. Check and use contents delivered from Social Hub. Communication 54 Entertainment Camera Learn how to capture and view photos and videos. You can take photos at resolutions up to 2048 x 1536 pixels (3.2 megapixels) and videos at resolutions up to 640 x 480 pixels. To use the camera, you must first insert a memory card. The camera interface appears only in the landscape orientation. Tap the screen to hide or display icons in the viewfinder.

The memory capacity may differ depending on the shooting scene or shooting conditions. > Capture a photo 1 2 3 In Idle mode, open the application list and select Camera to turn on the camera.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

Rotate the device anti-clockwise to landscape view. Aim the lens at the subject and make any necessary adjustments. 1 2 3 4 5 6 7 8 Entertainment 55 Number 1 2 3 4 5 6 7 8 Function Change the shooting mode. Change the scene mode. Change the flash setting. Change the camera settings. View the number of photos you can take (according to available memory); This icon is shown only when the number is less than 300. Switch to the camcorder.

Capture a photo. View the photo you captured last. 4 5 Press the Volume key to zoom in or out. The zoom function may be unavailable when shooting in the highest resolution. Select to take a photo.

The photo is saved automatically. After taking photos, select to view the taken photos. To view more photos, scroll left or right. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together.

You can also select or , or double-tap the screen. To send a photo to others, select Share. To set a photo as wallpaper or a caller ID image for a contact, select Set as. To delete a photo, select Delete. Entertainment 56 > Capture a photo by using preset options for Your camera provides you with predefined settings for various scenes. You can simply select the proper mode for your shooting conditions and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure. various scenes 1 2 3 4 5 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. a scene.

Select Make any necessary adjustments. Select to take a photo. > Capture a photo in Smile shot mode 1 2 3 4 5 6 Your camera can recognise people's faces and help you take photos of their smiling faces. In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Smile shot. Select Make any necessary adjustments. Aim the camera lens at your subject. Select . Your device recognises people in an image and detects their smiles.

When the subject smiles, the device automatically takes a photo. Entertainment 57 > Capture a panoramic photo 1 2 3 4 5 6 7 You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes. In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view.

Panorama. Select Make any necessary adjustments. Select to take the first photo. Slowly move the device in any direction and align the green frame with the viewfinder. When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.

Repeat step 6 to complete the panoramic photo. > Customise camera settings Before taking a photo, select options: Option Focus mode Timer Resolution White balance Function to access the following Exposure value Set the exposure value. Take close-up photos or set the camera to focus on the subject. Select the length of the delay before the camera takes a photo. Change the resolution option. Adjust the colour balance according to lighting conditions.

Entertainment 58 Option Effects Metering Image quality Function Apply a special effect. Select a type of exposure metre. Set the quality level for your photos. Before taking a photo, select settings: Setting Guidelines Review Function to access the following Display the guidelines on the preview screen.

Set the camera to display the taken image. Set the camera to include location information for your photos. To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions.]. GPS Use the menu Set to take a photo by pressing [key for Camera Reset Reset menus and shooting options. > Record a video 1 2 3 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Select to switch to the camcorder. Entertainment 59 4 Aim the lens at the subject and make any necessary adjustments. 4 1 5 6 7 2 3 Number 1 2 3 4 5 6 7 Function Change the recording mode (for attaching to a multimedia message or for saving normally).

Change the flash settings. Change the camcorder settings. View the length of video that can be recorded (according to available memory); This icon is shown only when less than 20% of the memory capacity remains. Switch to the camera. Record a video.

View the video you recorded last. 5 6 Press the Volume key to zoom in or out. The zoom function may be unavailable when recording in the highest resolution. Select to start recording. Entertainment 60 7 Select to stop recording.

The video is saved automatically. The camcorder may not be able to properly record videos to a memory card with a slow transfer speed. After recording videos, select to view the recorded videos. To view more videos, scroll left or right. To send a video to others, select Share. To play a video, select Play. To delete a video, select Delete. Before recording a video, select following options: Option Timer Resolution White balance Effects Video quality Function > Customise camcorder settings to access the Exposure value Set the exposure value. Select the length of the delay before the camera starts recording a video. Change the resolution option.

Adjust the colour balance according to lighting conditions. Apply a special effect. Set the quality level for your videos. Entertainment 61 Before recording a video, select following settings: Setting Guidelines Review Function to access the Display the guidelines on the preview screen. Set the camera to display the recorded video.]. Use the menu Set to record a video by pressing [key for Camera Reset Reset menus and shooting options. Gallery Learn to view photos and play videos saved in your memory card. > Supported file formats Type Image Video Format BMP, GIF, JPG, PNG, WBMP 3GP, MP4, MKV, WMV, ASF, AVI, MPG, MOV (Codec: MPEG4, H.263, H.

264, VC-1, WMV) Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Entertainment 62 > View a photo 1 2 3 4 In Idle mode, open the application list and select Gallery. Select a folder. To change the view mode, select or at the top right of the screen.

Select a photo (with no icon) to view. While viewing a photo, use the following options: To view more photos, scroll left or right. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also select or , or double-tap the screen.

To start a slideshow in the selected folder, select Slideshow. Tap the screen to stop the slideshow. To send a photo to others, select Menu Share.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

To delete a photo, select Menu Delete. To use additional features with a photo, select Menu More and use the following options: - Details: View photo details. - Set as: Set a photo as wallpaper or a caller image for a contact. - Crop: Crop an image from a photo. - Rotate left: Rotate a photo anti-clockwise. - Rotate right: Rotate a photo clockwise. > Play a video 1 2 3 4 In Idle mode, open the application list and select Gallery.

Select a video (with the icon) to play. Rotate the device to landscape view. Control playback with the virtual keys. Entertainment 63 Music Learn to listen to your favourite music while on the go with the music player. The music player supports the following file formats: 3GPP, MPEG4, MP3, AAC, OGG, WAV, ASF (Codec: MP3, VORBIS (OGG), AAC, AAC+, EAAC+, AMR-NB/WB, PCM, WMA, MIDI). To use the music player, you must first insert a memory card. Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Start by transferring files to your memory card: Download from the wireless web. p.

79 Download from a PC with Samsung Kies. p. 98 Receive via Bluetooth. p. 92 Copy to your memory card.

p. 98 > Add music files to your memory card > Play music 1 2 After transferring music files to your memory card, In Idle mode, open the application list and select Music. Select a music category a music file. Entertainment 64 3 Control playback with the following keys: 1 5 2 3 4 6 7 8 Number 1 2 3 4 5 6 7 8 1 1 Function Activate the 5.1 channel surround sound system when a headset is connected.

Move to a point of the file by dragging or tapping the bar. Restart playback or skip backward; Scan backward in a file (tap and hold). Open the playlist. Change the repeat mode (off, repeating one file, or repeating all files). Activate Shuffle mode. Pause playback; Select playback. to resume Skip forward; Scan forward in a file (tap and hold). 1. These icons are shown when you tap the player screen. Entertainment 65 You can control the music player with a headset.

In Idle mode, press and hold the headset button to launch the music player. Press the headset button to start or pause playback. SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies. WOW HDTM significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail. > Use the party shuffle feature 1 2 3 When you turn on the party shuffle feature, your device selects and plays music files randomly. In Idle mode, open the application list and select Music. Press [] Party shuffle. To turn off the party shuffle feature, press [] Party shuffle off. > Customise music player settings 1 2 3 In Idle mode, open the application list and select Music.

Select a category a music file. Press [] Settings. Entertainment 66 4 Adjust the following settings to customise your music player: Option 5.1 channel Equaliser Function Set whether or not to activate the virtual 5.1 channel surround sound system when a headset is connected.

Select a default equaliser type. Music Hub You can access the online music store, and search for and buy your favourite songs. You can also add a music file to your wish list and play downloaded music files. This feature may be unavailable depending on your region or service provider. 1 2 3 4 From the Home screen, open the application list and select Music Hub.

If you are launching this application for the first time, download the application from Samsung Apps and install it on your device. If you are launching this application for the first time, select Confirm. Search for songs, and preview or buy your favourite songs. Entertainment 67 FM radio Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna. > Listen to the FM radio 1 2 Plug a headset into the device. In Idle mode, open the application list and select FM radio. The FM radio scans and saves available stations automatically. The first time you turn on the FM radio, it will start automatic tuning. Control the FM radio with the following keys: 1 2 3 4 3 5 3 Number 1 2 3 4 5 Function Turn the FM radio off or on.

Fine-tune the frequency. Search for an available radio station. Add the current radio station to the favourites list. Adjust the volume. Entertainment 68 > Save a radio station automatically 1 2 3 Plug a headset into the device. In Idle mode, open the application list and select FM radio. Press [] Scan a scanning option. The FM radio scans and saves available stations automatically. > Add a radio station to the favourites list 1 2 3 4 5 Plug a headset into the device. In Idle mode, open the application list and select FM radio.

to turn on the FM radio. Select Scroll to the radio station you want. Select to add to the favourites list. You can add a name for a radio station or remove a radio station; Tap and hold a radio station on the favourites list and select Remove or Rename. > Customise FM radio settings 1 2 3 In Idle mode, open the application list and select FM radio.

Press [] Settings. Adjust the following settings to customise your FM radio: Option Region Function Select your region. Entertainment 69 Option Background playing Function Set whether or not to run the FM radio in the background while using other applications. If this feature is on, you can control the FM radio from the notifications panel. Set whether or not to show the station ID on the FM radio screen; Station IDs are available only from radio stations that provide this information.

Set whether or not the FM radio attempts to retune a radio station when the signal is weak. Set the FM radio to automatically turn off after a specified length of time. Show station ID Alternative frequency FM radio auto off Entertainment 70 Personal information Contacts Learn to create and manage a list of your personal or business contacts. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays and more for your contacts. > Create a contact 1 2 3 4 5 1 2 3 4 In Idle mode, open the application list and select . Select or press [] Create. Select a memory location. @@Enter contact information. Select Save to add the contact to memory. In Idle mode, open the application list and select Keypad.

Enter a phone number. Select Add to Contacts Create contact. Select a memory location. You can also create a contact from the dialling screen. Personal information 71 5 6 1 2 3 Enter contact information. Select Save to add the contact to memory. > Find a contact In Idle mode, open the application list and select . Scroll up or down on the contact list.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>

You can also drag your finger along the index on the right side to quickly scroll through the list. Select a contact's name. Once you find a contact, you can use the following options: To call the contact, select a phone number. To send a message, select Message. To send an email message, select an email address. To edit the contact information, press [] Edit. To set the contact as your favourites, select .

> Set a speed dial number 1 2 3 4 In Idle mode, open the application list and select . Press [] More Speed dial. Select a location number a contact. Select a phone number (if necessary). You can quickly dial this number by tapping and holding the location number from the dialling screen.

Personal information 72 > Create your namecard 1 2 3 4 In Idle mode, open the application list and select . Press [] My profile. Enter your own personal details. Select Save. You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature. > Retrieve contacts from your community You can view the list of community website accounts and select an account to add a contact from the website to your phone contacts. accounts 1 2 3 4 In Idle mode, open the application list and select Press [] View SNS Friends. Select an account. Select contacts and select Add. .

> Create a group of contacts 1 2 3 4 By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group. In Idle mode, open the application list and select Groups. Press [] Create. Enter a name and select a ringtone for the group. @@Press [] Import/Export Import from SIM card. Select contacts to copy and select Import. In Idle mode, open the application list and select . Press [] Import/Export Export to SIM card. @@Press [] Import/Export Import from SD card.

Select a memory location. @@@@Press [] Import/Export Export to SD card. @@In Idle mode, open the application list and select History. @@In Idle mode, open the application list and select Activities. @@Press [] More Create.

Enter the details of the event as required. @@Press [] and select Day, Week, or Month. In Idle mode, open the application list and select Calendar. Select a date on the calendar. @@ To select today's date, press [] Today.

@@Open the notifications panel from the top of the screen. Select a reminder to view more details about the event. @@Select Create memo or press [] Create. Enter your memo text. Press [] to hide the keypad. Select a colour to change a background colour. @@Select a memo to view its details. To edit the memo, select . To delete the memo, select OK. @@@@Select Record to start recording.

Speak into the microphone. When you are finished, select Stop. Your memo is saved automatically. @@Select List. Select a voice memo to play. @@@@For details, contact your service provider. @@@@Navigate web pages with the following keys: 1 2 Web 79 The above screen may differ depending on your region or service provider. Number 1 2 Function Enter the web address of a web page to access. Open a list of saved bookmarks, frequently visited pages and recent internet history. While browsing the web page, use the following options: To zoom in, place two fingers on the screen and spread them apart.

To zoom out, move your fingers closer together. You can also double-tap the screen. To open a new window, press [] New window. To view the currently active windows, press [] Windows. You can open multiple pages and switch back and forth between them.

To reload the current web page, press [] Refresh. To go to a next page in history, press [] Forward. To bookmark the current web page, press [] Add bookmark. To add a shortcut to the current web page to the idle screen, press [] More Add shortcut to home screen. To search for text on the web page, press [] More Find on page.

To view the web page details, press [] More Page info. To send the web address (URL) of the web page to others, press [] More Share page. Web 80 To view the download history, press [] More Downloads. To customise the browser settings, press [] More Settings. > Search for information by voice 1 2 3 4 5 This feature may be unavailable depending on your region or service provider. In Idle mode, open the application list and select Internet. Select the URL input field. Select . Select Speak now (if necessary). Say a keyword into your device's microphone.

The device searches for information and web pages related with the keyword. > Bookmark your favourite web pages 1 2 3 4 5 If you know the web address of the web page, you can manually add a bookmark. To add a bookmark, In Idle mode, open the application list and select Internet. Select Bookmarks. Select Add. To bookmark the web page you were viewing, skip to step 5. Enter a page title and a web address (URL). Select OK. Web 81 From the bookmark list, tap and hold a bookmark and use the following options: To open the web page in the current window, select Open. To open the web page in a new window, select Open in new window.

To edit the bookmark details, select Edit bookmark. To add the bookmark shortcut to the idle screen, select Add shortcut to home screen. To send the web address (URL) of the web page to others, select Share link. To copy the web address (URL) of the web page, select Copy link URL. To delete the bookmark, select Delete bookmark.

To use the web page as your homepage of the browser, select Set as homepage. > Access the frequently visited pages or the 1 2 3 recent history In Idle mode, open the application list and select Internet. Select Most visited or History. Select a web page to access. You can add a web page to the bookmark list by selecting .

Web 82 Maps Learn to use Google Maps™ to find your location, search the online map for streets, cities, or countries, and get directions. This feature may be unavailable depending on your region or service provider. > Search for a specific location 1 2 3 4 In Idle mode, open the application list and select Maps. The map will display your current location. Press [] Search or select Search Maps. Enter a keyword for the location and select . To search for a location by voice, select . Select the location you want to view details. To view a list of all results for your search, select . To zoom in, place two fingers on the screen and spread them apart.

To zoom out, move your fingers closer or , or double-tap together. You can also select the screen. To search for a place around you, select . To add layers to the map, select . To view your current location, select . To add a star to the location, select the balloon of the location name . Web 83 > Get directions to a specific destination 1 2 3 4 5 6 7 In Idle mode, open the application list and select Maps. Press [] Directions. Enter the addresses of the starting location and the ending location.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY XCOVER GT-S5690 user guide](http://yourpdfguides.com/dref/4262405)
<http://yourpdfguides.com/dref/4262405>