



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GALAXY Y GT-S5360. You'll find the answers to all your questions on the SAMSUNG GALAXY Y GT-S5360 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GALAXY Y GT-S5360
User guide SAMSUNG GALAXY Y GT-S5360
Operating instructions SAMSUNG GALAXY Y GT-S5360
Instructions for use SAMSUNG GALAXY Y GT-S5360
Instruction manual SAMSUNG GALAXY Y GT-S5360



Samsung GALAXY Young **GT-S5360**
user manual



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Manual abstract:

Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsung.com for the latest version of the user manual. Available features and additional services may vary by device, software, or service provider. Formatting and delivery of this user manual is based on Google Android operating systems and may vary depending on the user's operating system. Using this manual 2 Applications and their functions may vary by country, region, or hardware specifications. @@@@ Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user.

Please keep this manual for future reference.

Instructional icons Before you start, familiarise yourself with the icons you will see in this manual: **Warning**--situations that could cause injury to yourself or others **Caution**--situations that could cause damage to your device or other equipment **Note**--notes, usage tips, or additional information Using this manual 3 Refer to--pages with related information; for example: p.12 (represents "see page 12") Followed by--the order of options or menus you must select to perform

a step; for example: In Idle mode, open the application list and select Settings About phone (represents Settings, followed by About phone) Square brackets--device keys; for example: [(represents the Menu key)] [] Copyright Copyright © 2011 Samsung Electronics This user manual is protected under international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics. Using this manual 4 Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. The Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc.

and are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc. Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

All other trademarks and copyrights are the property of their respective owners. Using this manual 5 Contents Assembling

.....
.....
.....
.....

.....
.....
.....

.. 10 Unpack

.....
.....
.....
.....

.....
.....
.....
.....

.....

. 10 Install the SIM or USIM card and battery

.....

.....

10 Charge the battery

.....
.....

.....
.....
.....
.....

.....

... 12 Insert a memory card (optional) ..

.....
.....

.....
.....
.....

.. 15 Attach a hand strap (optional)

.....
.....
.....
.....

.... 17 Getting started

.....
.....
.....

.....
.....
.....

..... 18 Turn your device on and off .

.....
.....
.....
.....

.....
.....

. 18 Get to know your device

.....
.....
.....
.....
.....

..... 19 Use the touch screen .

.....
.....
.....
.....
.....
.....
.....

..... 23 Lock or unlock the touch screen and keys ..

.....
.....

..... 24 Get to know the idle screen .

.....
.....
.....
.....

.....
.....

. 24 Access applications

.....
.....
.....
.....
.....

.....
.....

... 27 Customise your device ..

.....
.....
.....

.....
.....
.....
.... 29 Enter text .

.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 33 Download applications from Android Market

.....
... 37 Download files from the web ..

.....
.....
.....
.....

.. 38 Synchronise data

.....
.....
.....
.....
.....

..... 38 Communication ..

.....
.....
.....
.....
.....
.....

. 40 Calling

.....
.....
.....
.....
.....

..... 40 Messaging

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... *45 Google Mail* .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

47 Email

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *49 Talk* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *51 Social Hub* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. *52 Contents 6 Entertainment* ...

.....
.....

.....
.....
.....

.....
... *53 Camera* ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *53 Gallery* ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *60 Music*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *62 FM radio* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. *65 Personal information*

.....
.....
.....

.....
..... 68 Contacts

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 68 Calendar ...

.....
.....
.....

.....
.....
.....

.....
.....

... 72 Memo ..

.....
.....

.....
.....

.....
.....

.....
... 73 Voice recorder .

.....
.....

.....
.....

.....
.....

..... 74 Web

.....
.....
.....

.....
.....
.....

..... 75 Internet .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 75 Maps

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

78 Latitude

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 80 Places

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

80 Navigation

.....
.....
.....
.....

.....
.....

.....
.....

..... 81 YouTube ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

82 Samsung Apps

.....
.....
.....

.....
.....
.....
.....

83 Market

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 83 News & Weather

.....
.....
.....

.....
.....
.....
.....

... 84 Connectivity ..

.....
.....
.....

.....
.....
.....
.....

.. 85 Bluetooth ...

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

.. 85 Wi-Fi

.....
.....
.....
.....
.....
.....
.....
.....
.....

. 87 Mobile network sharing

.....
.....
.....
.....
.....

.... 89 GPS

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 90 PC connections

.....
.....
.....
.....
.....
.....
.....

.... 91 VPN connections

.....
.....
.....
.....

.....
.....
.....
.....
92 Contents 7 Tools

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
... 95 Clock

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
. 95 Calculator

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
96 Downloads

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 96 Google Search ...

.....
.....
.....
.....
.....
.....
.....

.....

..... *97 My files ..*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *97 Quickoffice*

.....
.....
.....

.....
.....
.....
.....

.....
.....

.... *98 SIM Toolkit .*

.....
.....
.....
.....

.....
.....
.....
.....

..... *99 Task manager ...*

.....
.....
.....

.....
.....
.....
.....

.....
.....

.... *99 Voice Search .*

.....
.....
.....
.....

.....
.....
.....
.....

.. 100 Settings

.....
.....
.....
.....
.....
.....
.....

..... 101 Access the Settings menu ..

.....
.....
.....
.....
.....
.....

..... 101 Wireless and networks

.....
.....
.....
.....
.....
.....
.....

101 Call settings

.....
.....
.....
.....
.....
.....
.....

.... 102 Sound

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 104 Display ..

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
104 Location and security

.....
.....
.....
.....

.....
.....
.....
.....
. 105 Applications

.....
.....
.....
.....

.....
.....
.....
.....
.....
..... 106 Accounts and sync .

.....
.....
.....
.....

.....
.....
.....
.....
.....
. 107 Privacy

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.... 108 SD card and phone storage

.....
.....
.....
.....

.....
.....
.....
.....
.....
..... 108 Locale and text .

.....
.....
.....
.....
.....
.....

.....
.....
.....
.. 108 Voice input and output ...

.....

.....
.....
.....
.....

110 Accessibility

.....
.....
.....
.....

.....
.....
.....

... 111 Date and time

.....
.....
.....
.....

.....
.....
.....
.....

... 112 About phone

.....
.....
.....

.....
.....
.....
.....

.... 112 Contents & Troubleshooting .

.....
.....
.....
.....
.....

.... 113 Safety precautions

.....
.....
.....

.....
.....
.....

. 119 Index

.....
.....
.....
.....
.....

.....
.....
.....

. 130 Contents 9 Assembling Unpack Check your product box for the following items: Mobile device Battery Quick start guide Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty. The items supplied with your device and available accessories may vary depending on your region or service provider. You can purchase additional accessories from your local Samsung dealer. The supplied accessories perform best for your device. Accessories other than the supplied ones may not be compatible with your device. Install the SIM or USIM card and battery When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card. Assembling 10 To install the SIM or USIM card and battery, 1 2 If the device is on, press and hold [] and select Power off OK to turn it off.

Remove the back cover. Be careful not to damage your fingernails when you remove the back cover. 3 Insert the SIM or USIM card with the gold-coloured contacts facing down. The antenna is located in the upper area on the back of the device. Do not remove the protective tape covering the antenna, as this can damage the antenna.

4 Insert the battery. Assembling 11 5 Replace the back cover. Charge the battery Before using the device for the first time, you must charge the battery. You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable. Use only Samsung-approved chargers and cables.

Unauthorised chargers or cables can cause batteries to explode or damage your device. When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon will also be empty. If the battery level becomes Unmount SD card OK Format SD card Format SD card Erase everything. Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions. Attach a hand strap (optional) 1 Remove the back cover. 2 Slide a hand strap through the slot and hook it over the small projection. 3 Replace the back cover. Assembling 17 Getting started Turn your device on and off To turn on your device, press and hold [].

If you turn on your deviceo not use the device for a specified period. To turn on the screen, press [] or the Home key. You can also adjust the backlight time.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

In Idle mode, open the application list and select Settings Display Screen timeout. Lock or unlock the touch screen and keys You can lock the touch screen and keys to prevent any unwanted device operations. To lock, press []. To unlock, turn on the screen by pressing [] or the Home key and then flick the window with your finger. You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. p. 31 Get to know the idle screen When the device is in Idle mode, you will see the idle screen.

From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items. Getting started 24 > Add items to the idle screen 1 2 You can customise the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen, Press [] Add or tap and hold the empty area on the idle screen. Select the item category an item: Widgets: Add widgets to the idle screen. Shortcuts: Add shortcuts to items, such as applications, bookmarks, and contacts.

Folders: Create a new folder or add folders for your contacts. Wallpapers: Set a background image. > Move items on the idle screen 1 2 1 2 3 Tap and hold an item to move. Drag the item to the location you want. > Remove items from the idle screen Tap and hold an item to remove.

The trash bin appears at the bottom of the idle screen. Drag the item to the trash bin. When the item turns red, release the item. Getting started 25 > Use the notifications panel In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the notifications panel. You can activate or deactivate wireless connection features and access a list of notifications, such as messages, calls, events or processing status. To hide the panel, drag the bottom of the list up. From the notifications panel, you can use the following options: Wi-Fi: Activate or deactivate the WLAN connection feature. p. 88 B/T: Activate or deactivate the Bluetooth wireless connection feature. p.

85 GPS: Activate or deactivate the GPS feature. Sound/Vibration: Activate or deactivate Vibration mode. Auto rotation: Activate or deactivate the auto rotation. Available options may vary depending on your region or service provider. > Add or remove panels to the idle screen 1 2 You can add or remove panels of the idle screen to organise widgets according to your preferences and needs. In Idle mode, press [] Edit. You can also place your two fingers on the screen and pinch to switch to Edit mode. Add or remove panels by using the following features: To remove a panel, tap and hold the thumbnail of a panel and drag it to the trash bin at the bottom of the screen. Getting started 26 3 To add a new panel, select . To change the order of the panels, tap and hold the thumbnail of a panel and drag it to the location you want.

When you are finished, press []. Access applications To access your device's applications, 1 2 3 In Idle mode, select to access the application list. Scroll left or right to another screen. You can also select a dot at the top of the screen to move directly to the corresponding screen. Select an application.

When you use applications provided by Google, you must have a Google account. If you do not have a Google account, sign up for a Google account. You can add a shortcut to an application by tapping and holding the application icon from the application list. You can move the icon to the location you want on the idle screen. Press [] to return to the previous screen; Press the Home key to return to the idle screen.

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto rotation. 4 Getting started 27 > Organise applications 1 2 3 4 1 2 You can reorganise the applications in the application list by changing their order or grouping them into categories to suit your preferences and needs. In the application list, press [] Edit. Tap and hold an application. Drag the application icon to the location you want. You can move an application icon to another screen. You can also move most-used applications next to . Press [] Save. > Access recent applications Press and hold the Home key to view the applications you have accessed recently.

Select an application to access. > Use the task manager Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs using the task manager. 1 2 In Idle mode, open the application list and select Task manager Active applications. The list of all the applications currently running on your device appears. To close an application, select End. To close all active applications, select End all. Getting started 28 Customise your device Get more from your device by customising it to match your preferences.

> Set the current time and date 1 2 In Idle mode, open the application list and select Settings Date and time. Set the time and date and change other options. > Turn on or off the touch tone In Idle mode, open the application list and select Settings Sound Audible selection. > Adjust the volume of the ringtones > Switch to Silent mode Press the Volume key up or down to adjust the ringtone volume. To mute or unmute your device, do one of the following: In Idle mode, open the application list and select Keypad and tap and hold .

Open the notifications panel from the top of the screen and select Sound. Press and hold [] and select Silent mode. You can set the device to alert you to various events in Silent mode. In Idle mode, open the application list and select Settings Sound Vibrate Always or Only in Silent mode. When you switch to Silent mode, will appear in place of.

Getting started 29 > Change your ringtone 1 2 In Idle mode, open the application list and select Settings Sound Phone ringtone. Select a ringtone from the list and select OK. In Idle mode, open the application list and select Settings Display Animation Some animations or All animations. > Activate animation for switching windows > Select a wallpaper for the idle screen 1 2 3 In Idle mode, press [] Wallpaper an option. Select an image. Select Save or Set wallpaper. Samsung is not responsible for any use of default images or wallpapers provided on your device. > Adjust the brightness of the display 1 2 3 In Idle mode, open the application list and select Settings Display Brightness. Drag the slider to adjust the level of brightness. Select OK.

The brightness level of the display will affect how quickly the device consumes battery power.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Getting started 30 > Set a screen lock You can lock the touch screen by activating the screen lock feature. Your device will require the unlock code each time you turn on the device or unlock the touch screen. If you forget your unlock code, bring your device to a Samsung Service Centre to reset it. Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software. Set an unlock pattern 1 2 3 4 1 2 3 In Idle mode, open the application list and select Settings Location and security Set screen lock Pattern. See the on-screen instructions and example patterns and select Next. Draw a pattern by dragging your finger to connect at least 4 dots and select Continue. Draw a pattern again and select Confirm. In Idle mode, open the application list and select Settings Location and security Set screen lock PIN.

Enter a new PIN (numeric) and select Continue. Enter the PIN again and select OK. Set an unlock PIN code Getting started 31 Set an unlock password 1 2 3 In Idle mode, open the application list and select Settings Location and security Set screen lock Password. Enter a new password (alphanumeric) and select Continue. Enter the password again and select OK.

> Lock your SIM or USIM card 1 2 You can lock your device by activating the PIN supplied with your SIM or USIM card. In Idle mode, open the application list and select Settings Location and security Set up SIM card lock Lock SIM card. Enter your PIN and select OK. Once the PIN lock is enabled, you must enter the PIN each time you turn on the device. If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked.

You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card. If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it. Getting started 32 > Activate the Find my mobile feature When someone inserts a new SIM or USIM card in your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device. To use this feature, you need a Samsung account for controlling the device from the web remotely. 1 2 3 4 5 6 7 8 In Idle mode, open the application list and select Settings Location and security SIM Change Alert. Read the terms and conditions, select the check box next to I accept all the terms above and select Accept. Select Sign in, enter your email address and password for your Samsung account, and select Sign in. To create a Samsung account, select Sign up. Select Alert message recipients. Enter the password for your Samsung account again and select OK.

Enter a phone number including a country code (with +). Enter the text message to be sent to the recipients. Select Done. Enter text You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen. You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages. p. 108 Getting started 33 > Change the keypad type You can change the keypad type. Tap and hold the text input field and select Input method a keypad type (Samsung keypad or Swype). > Enter text using the Samsung keypad 1 2 Select Portrait keypad types and select a text input method.

You can select one of key input methods (QWERTY or traditional keypad) or handwriting input methods. Enter text by selecting alphanumeric keys or writing on the screen. You can also use the following keys: 1 2 3 4 5 6 7 Number 1 2 Function Change case. Switch between Symbol/Number mode and ABC mode. Enter text by voice; This icon is available only when you activate the voice input feature for the Samsung keypad.

This feature may be unavailable depending on the selected input language. 3 Getting started 34 Number 4 5 6 7 Function Clear your input. Start a new line. Access the keypad settings; Change the keypad type (tap and hold). Insert a space.

Functions of this key may vary depending on your service provider. > Enter text using the Swype keypad 1 2 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen. Continue until you have finished the word. 3 4 5 Release the finger on the last character. When the word displays correctly, select to insert a space. If the correct word does not display, select an alternative word from the list that appears. Repeat steps 1-4 to complete your text. Getting started 35 You can also tap the keys to enter text. You can tap and hold a key to enter characters on the upper half of the key. When you tap and hold a key until the character list appears, you can enter special characters and symbols.

You can also use the following keys: 1 2 3 4 5 6 7 Number 1 2 3 4 5 6 7 Function Change case. Access the swype tip screen; Open the help information (tap and hold). Switch between Symbol/Number mode and ABC/Number mode. Clear your input. Start a new line. Enter text by voice. This feature may be unavailable depending on the selected input language. Insert a space. Getting started 36 > Copy and paste text 1 2 3 4 5 6 7 While you are entering text, you can use the copy and paste feature to use text in other applications. Place the cursor on the text you want to copy.

Select . Select or . Drag or to select the text you want. Select to copy, or to cut the text onto the clipboard. In another application, place the cursor where you want to paste the text.

Select to insert the text from the clipboard into the text field. Download applications from Android Market Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications. This feature may be unavailable depending on your region or service provider. Your device will save user files from downloaded applications to the internal memory.

To save the files to the memory card, connect your device to a PC and copy them from the internal memory to the memory card. > Install an application 1 2 In Idle mode, open the application list and select Market. Search for a file or application and download it. Getting started 37 > Uninstall an application 1 2 3

From the Android Market home screen, select My apps. Select the item you want to delete. Select Uninstall OK. Download files from the web Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust. Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

1 2 To download files from the web, In Idle mode, open the application list and select Internet.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/4295930)

[GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)

<http://yourpdfguides.com/dref/4295930>

Search for a file or application and download it. To install applications downloaded from websites other than Android Market, you must select Settings Applications Unknown sources OK. Synchronise data You can synchronise data with various web servers and back up or restore your data. Once the synchronisation is completed, your device stays connected to the web. If any change is made on the web, the updated information will appear on your device and will automatically begin synchronisation, and vice versa. This feature may be unavailable depending on your region or service provider. Getting started 38 > Set up a server account 1 2 3 1 2 3 4 In Idle mode, open the application list and select Settings Accounts and sync. Select Add account an account type.

Follow the on-screen instructions to complete the account setup.

- > Activate automatic sync Accounts and sync. In Idle mode, open the application list and select Settings Select Auto-sync. Select an account. Select the applications you want to synchronise. To exclude applications from automatic synchronisation, clear the check boxes next to the applications you want.
- > Synchronise data manually 1 2 3 In Idle mode, open the application list and select Settings Accounts and sync. Select an account. Press [] Sync now. Your device will start synchronising the data you set for synchronisation. Getting started 39 Communication Calling Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.
- > Make or answer a call You can use the buttons or the touch screen when you make, accept, end or reject calls. When you turn on the proximity sensor, your device automatically turns off and locks the touch screen to prevent accidental inputs when you hold the device near your face. p. 103 Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call. Make a call 1 2 3 In Idle mode, open the application list and select Keypad, and enter an area code and a phone number. Select to make a call. To end the call, select End call. Use the phonebook to save numbers you dial frequently. p. 68 To quickly access the call log to redial the numbers you dialled recently, select Logs.

Communication 40 Answer a call 1 2 When a call comes in, drag right until it reaches the dot. When the device is ringing, press the Volume key to mute the ringtone. To end the call, select End call. left until it reaches the dot. The Reject a call When a call comes in, drag caller will hear a busy tone. Call an international number 1 2 In Idle mode, open the application list and select Keypad, and tap and hold 0 to insert the + character. Enter the complete number you want to dial (country code, area code and phone number), and then select to dial the number. > Use a headset By plugging a headset into the device, you can answer and control calls hands-free: To answer a call, press the headset button. To reject a call, press and hold the headset button. To place a call on hold or retrieve a held call during a call, press and hold the headset button.

To end a call, press the headset button. > Use options during a call You can use the following options while a call is in progress: To adjust the voice volume, press the Volume key up or down. To place a call on hold, select . To retrieve a held call, select . Communication 41 To dial a second call, select Add call and then dial a new number.

To answer a second call, drag right when a call waiting tone sounds. The device asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature. To open the dialling screen, select Dialpad. To activate the speakerphone feature, select Speaker.

In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode. To turn off the microphone so that the other party cannot hear you, select Mute. To listen and talk to the other party via a Bluetooth headset, select Headset. To switch between the two calls, select Swap. To make a multiparty call (conference call), make or answer a second call and select Merge when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature. > View and dial missed calls Your device will display calls you have missed on the display. To dial the number of a missed call, open the notifications panel and select the missed call.

Communication 42 > Use additional features You can use various other call-related features, such as Fixed Dialling Number (FDN) mode or call diverting. Use Fixed Dialling Number (FDN) mode In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list. To activate FDN mode, 1 2 3 In Idle mode, open the application list and select Settings Call settings Fixed Dialling Numbers Enable FDN. Enter the PIN2 supplied with your SIM or USIM card and select OK. Select FDN list and add contacts to be used in FDN mode. Set call forwarding Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area. 1 2 3 In Idle mode, open the application list and select Settings Call settings Call forwarding. Select a condition. Enter a number to which calls will be forwarded and select Enable.

Your setting will be sent to the network. Communication 43 Set call waiting Call waiting is a network feature to alert you of an incoming call while you are on a previous call. In Idle mode, open the application list and select Settings Call settings Additional settings Call waiting. Your setting will be sent to the network. > View call logs 1 2 You can view logs of your calls filtered by their types.

In Idle mode, open the application list and select Logs. Press [] View by an option to sort the call logs. From the call logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right. Select a log to view its details. From the detail view, you can dial the number, send a message to the number or add the number to the phonebook.

3 Communication 44 Messaging Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received. You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider. > Send a text message 1 2 3 In Idle mode, open the application list and select . Select New message. Add recipients of your message.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Enter phone numbers manually, separating them with a semicolon or a comma. Select phone numbers from the lists by selecting Contacts. Select Tap to compose and enter your message text. To insert emoticons, press [] Insert smiley.

Select Send to send the message. 4 5 1 2 > Send a multimedia message In Idle mode, open the application list and select Select New message. . Communication 45 3 Add recipients of your message. Enter phone numbers or email addresses manually, separating them with a semicolon or a comma. Select phone numbers or email addresses from the lists by selecting Contacts. When you enter an email address, the device will convert the message as a multimedia message. Press [] Add subject and enter a subject for the message. Select Tap to compose and enter your message text. To insert emoticons, press [] Insert smiley.

Select and add an item. You can select a file from the file list or create a new photo, video, or sound. Select Send to send the message. 4 5 6 7 1 2 3 > View a text or multimedia message In Idle mode, open the application list and select . Your messages are grouped into message threads by contact, like a messenger. Select a contact. For a multimedia message, select a message to view the details. Communication 46 > Listen to voice mail messages If you have set missed calls to be diverted to the voice mail server, callers may leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to voice mail messages, 1 2 In Idle mode, open the application list and select Keypad and then tap and hold 1. Follow the instructions from the voice mail server.

You must save the voice mail server number before accessing the server. Your service provider can give you the number. Google Mail You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold. This feature may be unavailable depending on your region or service provider. This Google Mail menu may be labelled differently depending on your service provider. > Send an email message 1 2 In Idle mode, open the application list and select Google Mail. Press [] Compose. Communication 47 3 4 5 6 1 2 Enter a name or address in the recipient field.

Enter a subject and message. To attach an image file, press [] Attach a file. Select to send the message. > View email messages In Idle mode, open the application list and select Google Mail. Select an email message. From the message view, use the following options: To reply to the message, select . To reply to the message including all recipients, select Reply all. To forward the message to other people, select Forward. To add a star to the message, select . To view an attachment, select Preview.

To save it to your memory card, select Download. To archive the message, select Archive. To delete the message, select Delete. To move to the previous or next message, select or . > Organise email by labels You can organise your email by labelling your messages.

You can sort messages by label filter. Communication 48 Add a label to a message 1 2 3 1 2 From the Inbox screen, tap and hold a message. Select Change labels. Select a label to add and select OK. From the Inbox screen, press [] Go to labels.

Select the label of the messages you want to view. Filter messages Email Learn to send or view email messages via your personal or company email account. > Set up an email account 1 2 3 4 In Idle mode, open the application list and select Email. Enter your email address and password. Select Next (for general email accounts, such as Google Mail and Yahoo) or Manual setup (for other company email accounts). Follow the on-screen instructions. When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts; Select an account name at the top right of the screen and select one you want to retrieve messages from. Communication 49 > Send an email message 1 2 3 4 5 6 7 8 In Idle mode, open the application list and select Email an email account. Press [] Compose.

Select Contacts. You can enter an email address manually or select one from the logs or contact groups by selecting another option. Select contacts and select Add. Select the Cc/Bcc field and add more recipients. Select the subject field and enter a subject. Select the text input field and enter your email text. Select Attach and attach a file. You can select a file from the file list or create a new photo, video, or sound. You cannot attach Digital Rights Management (DRM)protected files. Select Send to send the message.

If you are offline or outside your service area, the message will be held in the outbox until you are online and in your service area. 9 > View an email message When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline. 1 In Idle mode, open the application list and select Email an email account. Communication 50 2 3 Press [] Refresh to update the message list.

Select an email message. From the message view, use the following options: To reply to the message, press [] Reply. To forward the message to other people, press [] Forward. To delete the message, press [] Delete. To move the message to another folder, press [] Move to folder.

To load images from the message, press [] Show pictures. To change the text size, press [] More Text size. To add the email address to the phonebook, press [] More Add to Contacts. To save the message as an event, press [] More Save in Calendar. To view an attachment, select the attachment item. To save it to your memory card, select . Talk Learn to chat with friends and family via Google Talk™. This feature may be unavailable depending on your region or service provider. > Add friends to your friend list 1 In Idle mode, open the application list and select Talk. The friend list shows all of your Google Talk contacts at a glance.

Communication 51 2 3 Press [] Add friend. Enter an email address of the friend and select Send invitation. When your friend accepts the invitation, the friend is added to your friend list. > Start a chat 1 2 3 4 5 In Idle mode, open the application list and select Talk. Select a friend from the friend list. The chat screen opens. Enter your message and select Send. To insert emoticons, press [] More Insert smiley. To switch between active chats, press [] Switch chats. To end the chat, press [] End chat.

Social Hub Learn to access Social Hub™, the integrated communication application for Social Network Service (SNS), email, messages, instant messages, contacts or calendar information.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Visit socialhub.samsungapps.com for more details. 1 2 In Idle mode, open the application list and select Social Hub.

Check and use contents delivered from Social Hub. Communication 52 Entertainment Camera Learn how to capture and view photos and videos. You can take photos at resolutions up to 1600 x 1200 pixels (2 megapixels) and videos at resolutions up to 320 x 240 pixels. To use this feature, you must first insert a memory card. The camera interface appears only in the landscape orientation.

Tap the screen to hide or display icons in the viewfinder. The camera automatically turns off when you do not use it for a specified period. The memory capacity may differ depending on the shooting scene or shooting conditions. > Capture a photo 1 2 3 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Aim the lens at the subject and make any necessary adjustments. 1 2 3 4 5 Entertainment 6 7 8 53 Number Function Check the camera status and settings. : Resolution : Exposure metre type : Number of photos you can take (according to available memory) : Storage location Change the shooting mode. Change the scene mode. Adjust the brightness.

Change the camera settings. Switch to the camcorder. Capture a photo. View the photo you captured last. 1 2 3 4 5 6 7 8 4 5 Press the Volume key to zoom in or out. The zoom function may be unavailable when shooting in the highest resolution. Select to take a photo. The photo is saved automatically. Entertainment 54 After taking photos, select to view the taken photos. To view more photos, scroll left or right.

To zoom in or out, tap the screen and select or . To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen. To send a photo to others, select Share.

To set a photo as wallpaper or a caller ID image for a contact, select Set as. To delete a photo, select Delete. > Capture a photo by using preset options for Your camera provides you with predefined settings for various scenes. You can simply select the proper mode for your shooting conditions and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure.

various scenes 1 2 3 4 5 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. a scene. Select Make any necessary adjustments. Select to take a photo. Entertainment 55 > Capture a photo in Smile shot mode 1 2 3 4 5 6 Your camera can recognise people's faces and help you take photos of their smiling faces. In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Smile shot. Select Make any necessary adjustments.

Aim the camera lens at your subject. Select . Your device recognises people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo. > Capture a panoramic photo 1 2 3 4 5 6 7 You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes. In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Panorama. Select Make any necessary adjustments.

Select to take the first photo. Slowly move the device in any direction and align the green frame with the viewfinder. When you have aligned the green frame and viewfinder, the camera will automatically take the next photo. Repeat step 6 to complete the panoramic photo. Entertainment 56 Before taking a photo, select options: Option Timer Resolution White balance Effects Metering Image quality Function > Customise camera settings to access the following Select the length of the delay before the camera takes a photo.

Change the resolution option. Adjust the colour balance according to lighting conditions. Apply a special effect. Select a type of exposure metre. Set the quality level for your photos.

Before taking a photo, select settings: Setting Guidelines Review Function to access the following Display the guidelines on the preview screen. Set the camera to display the taken image. Set the camera to include location information for your photos. To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. Reset menus and shooting options. GPS Reset Entertainment 57 > Record a video 1 2 3 4 In Idle mode, open the application list and select Camera to turn on the camera. Rotate the device anti-clockwise to landscape view. Select to switch to the camcorder. Aim the lens at the subject and make any necessary adjustments. 1 2 5 6 7 3 4 Number Function Check the camcorder status and settings.

: Resolution : Length of video that can be recorded (according to available memory) : Storage location Change the recording mode (for attaching to a multimedia message or for saving normally). Adjust the brightness. Change the camcorder settings. Switch to the camera. Record a video. View the video you recorded last. 1 2 3 4 5 6 7 Entertainment 58 5 6 7 Press the Volume key to zoom in or out. The zoom function may be unavailable when recording in the highest resolution. Select to start recording. Select to stop recording.

The video is saved automatically. The camcorder may not be able to properly record videos to a memory card with a slow transfer speed. After recording videos, select to view the recorded videos. To view more videos, scroll left or right. To send a video to others, select Share.

To play a video, select Play. To delete a video, select Delete. > Customise camcorder settings Before recording a video, select following options: Option Timer Resolution White balance Effects Video quality Function to access the Select the length of the delay before the camera starts recording a video. Change the resolution option. Adjust the colour balance according to lighting conditions.

Apply a special effect. Set the quality level for your videos. Entertainment 59 Before recording a video, select following settings: Setting Guidelines Review Reset Function to access the Display the guidelines on the preview screen. Set the camera to display the recorded video. Reset menus and recording options. Gallery Learn to view photos and play videos saved in your memory card. > Supported file formats Type Image Video Format Extension: bmp, gif, jpg, png, wbmp Extension: 3gp, mp4, mkv Codec: H.263 , H.264, mpeg4 Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files.

Playback quality may vary by content type.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Some files may not play properly depending on how they are encoded. Entertainment 60 > View a photo 1 2 3 4 In Idle mode, open the application list and select Gallery. Select a folder. To change the view mode, select or at the top right of the screen. Select a photo (with no icon) to view. While viewing a photo, use the following options: To view more photos, scroll left or right. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen.

To start a slideshow in the selected folder, select Slideshow. Tap the screen to stop the slideshow. To send a photo to others, select Menu Share. To delete a photo, select Menu Delete. To use additional features with a photo, select Menu More and use the following options: - Details: View photo details.

- Set as: Set a photo as wallpaper or a caller image for a contact. - Crop: Crop an image from a photo. - Rotate left: Rotate a photo anti-clockwise. - Rotate right: Rotate a photo clockwise. > Play a video 1 2 3 4 In Idle mode, open the application list and select Gallery.

Select a video (with the icon) to play. Rotate the device anti-clockwise to landscape view. Control playback with the virtual keys. Entertainment 61 Music Learn to listen to your favourite music while on the go with the music player. The music player supports the following file formats: mp3, m4a, 3gp, mp4, ogg (Codec: mp3, vorbis(ogg), aac, aac+, eaac+, amr-nb/wb, wav, midi) To use this feature, you must first insert a memory card. Some file formats are not supported depending on the software of the device. If the file size exceeds the available memory, an error can occur when you open files. Playback quality may vary by content type. Some files may not play properly depending on how they are encoded. Start by transferring files to your memory card: Download from the wireless web.

p. 75 Download from a PC with Samsung Kies. p. 91 Receive via Bluetooth. p. 87 Copy to your memory card. p. 92 > Add music files to your memory card > Play music 1 2 After transferring music files to your memory card, In Idle mode, open the application list and select Music. Select a music category a music file. Entertainment 62 3 Control playback with the following keys: 1 5 2 3 4 6 7 8 Number 1 2 3 4 5 6 7 8 1 1 Function Activate the 5.

1 channel surround sound system when a headset is connected. Move to a point of the file by dragging the bar. Restart playback or skip backward; Scan backward in a file (tap and hold). Pause playback; Select playback; To resume Change the repeat mode (off, repeating one file, or repeating all files). Activate Shuffle mode. Open the playlist. Skip forward; Scan forward in a file (tap and hold). 1. These icons are shown when you tap the player screen. Entertainment 63 You can control the music player with a headset. In Idle mode, press and hold the headset button to launch the music player. Press the headset button to start or pause playback. SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies. WOW HDTM significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail. > Use the party shuffle feature 1 2 3 When you turn on the party shuffle feature, your device selects and plays music files randomly. In Idle mode, open the application list and select Music. Press [] Party shuffle. To turn off the party shuffle feature, press [] Party shuffle off.

> Customise music player settings 1 2 3 In Idle mode, open the application list and select Music. Select a category a music file. Press [] Settings. Entertainment 64 4 Adjust the following settings to customise your music player: Option 5.1 channel Equaliser Function Set whether or not to activate the virtual 5.1 channel surround sound system when a headset is connected. Select a default equaliser type. FM radio Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna. > Listen to the FM radio 1 2 Plug a headset into the device.

In Idle mode, open the application list and select FM radio. The FM radio scans and saves available stations automatically. The first time you turn on the FM radio, it will start automatic tuning. Entertainment 65 3 Control the FM radio with the following keys: 1 2 3 4 3 5 Number 1 2 3 4 5 Function Turn the FM radio off or on. Fine-tune the frequency.

Search for an available radio station. Add the current radio station to the favourites list. Adjust the volume. > Save a radio station automatically 1 2 3 Plug a headset into the device. In Idle mode, open the application list and select FM radio.

Press [] Scan a scanning option. The FM radio scans and saves available stations automatically. > Add a radio station to the favourites list 1 2 Plug a headset into the device. In Idle mode, open the application list and select FM radio. Entertainment 66 3 4 5 Select to turn on the FM radio. Scroll to the radio station you want. Select to add to the favourites list. You can add a name for a radio station or remove a radio station; Tap and hold a radio station on the favourites list and select Remove or Rename. > Customise FM radio settings 1 2 3 In Idle mode, open the application list and select FM radio. Press [] Settings.

@@@ Select . Select a memory location. @@Enter contact information. Select Save to add the contact to memory. In Idle mode, open the application list and select Keypad. Enter a phone number. Select Add to Contacts . Select a memory location. @@Enter contact information. @@Scroll up or down on the contact list.

@@@@ To send a message, select Message. To send an email message, select an email address. To edit the contact information, press [] Edit. @@Press [] More Speed dial. Select a location number a contact.

Select a phone number (if necessary). You can quickly dial this number by tapping and holding the location number from the dialling screen. > Create your namecard 1 2 In Idle mode, open the application list and select Press [] My profile. . Personal information 69 3 4 Enter your own personal details. Select Save. @@Start by creating a group. In Idle mode, open the application list and select Groups. Press [] Create. Enter a name and select a ringtone for the group. @@Press [] Import/Export Import from SIM card. Select a memory location. @@Select contacts to copy and select Import. In Idle mode, open the application list and select . Press [] Import/Export Export to SIM card.

@@Press [] Import/Export Import from SD card. Select a memory location. @@@Select contact files to import and select OK. In Idle mode, open the application list and select .



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Press [] Import/Export Export to SD card. @@In Idle mode, open the application list and select History. @@In Idle mode, open the application list and select Activities. @@Press [] More Create. Enter the details of the event as required. @@Press [] Day, Week, or Month.

In Idle mode, open the application list and select Calendar. Select a date on the calendar. @@ To select today's date, press [] Today. @@Open the notifications panel from the top of the screen. Select a reminder to view more details about the event.

@@Select Create memo or press [] Create. Enter your memo text. Press [] to hide the keypad. Select a colour to change a background colour. @@Select a memo to view its details.

To edit the memo, select . To delete the memo, select OK. @@@@Select Record to start recording. Speak into the microphone. When you are finished, select Stop. Your memo is saved automatically. @@Select List. Select a voice memo to play. @@@@For details, contact your service provider. @@@@To access a specific web page, select the URL input field, enter the web address (URL) of the web page, and select .

Navigate web pages with the following keys: 1 2 The above screen may differ depending on your region or service provider. Web 75 Number 1 2 Function Enter the web address of a web page to access. Open a list of saved bookmarks, frequently visited pages and recent internet history. While browsing the web page, use the following options: To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen. To open a new window, press [] New window. To view the currently active windows, press [] Windows. You can open multiple pages and switch back and forth between them. To reload the current web page, press [] Refresh.

To go to a next page in history, press [Forward.] To bookmark the current web page, press [] Add bookmark. To add a shortcut to the current web page to the idle screen, press [] More Add shortcut to Home. To search for text on the web page, press [] More Find on page. To view the web page details, press [] More Page info.

To send the web address (URL) of the web page to others, press [] More Share page. To view the download history, press [] More Downloads. To customise the browser settings, press [] More Settings. Web 76 > Search for information by voice 1 2 3 This feature may be unavailable depending on your region or service provider. In Idle mode, open the application list and select Internet.

Select the URL input field. Select and say a keyword into your device's microphone. The device searches for information and web pages related with the keyword. > Bookmark your favourite web pages 1 2 3 4 5 If you know the web address of the web page, you can manually add a bookmark. To add a bookmark, In Idle mode, open the application list and select Internet. Select Bookmarks. Select Add. Enter a page title and a web address (URL). Select OK. From the bookmark list, tap and hold a bookmark and use the following options: To open the web page in the current window, select Open.

To open the web page in a new window, select Open in new window. To edit the bookmark details, select Edit bookmark. Web 77 To add the bookmark shortcut to the idle screen, select Add shortcut to Home. To send the web address (URL) of the web page to others, select Share link. To copy the web address (URL) of the web page, select Copy link URL. To delete the bookmark, select Delete bookmark. To use the web page as your homepage of the browser, select Set as homepage. > Access the frequently visited pages or the 1 2 3 recent history In Idle mode, open the application list and select Internet. Select Most visited or History. Select a web page to access.

You can add a web page to the bookmark list by selecting . Maps Learn to use Google Maps™ to find your location, search the online map for streets, cities, or countries, and get directions. This feature may be unavailable depending on your region or service provider. > Search for a specific location 1 2 In Idle mode, open the application list and select Maps. If you are launching this application for the first time, select OK.

The map will display your current location. Web 78 3 4 Press [] Search. Enter a keyword for the location and select . To search for a location by voice, select . To view a list of all results for your search, select .

To zoom in or out, select or . To add layers to the map, press [] Layers. To view your current location, press [] My Location. To add a star to the location, select the balloon of the location name . > Get directions to a specific destination 1 2 3 4 5 6 7 In Idle mode, open the application list and select Maps. Press [] Directions. Enter the addresses of the starting location and the ending location. To select an address from your contact list or starred places, or point the location on the map, select Contacts, Point on map, or My Places. Select a travel method (car, bus, or walk) and select Get directions. Select a travel route to view details of your trip (if necessary).

Select . The route is indicated on the map. To view only the single or . part of the route, select When you are finished, press [] More Clear Map. Web 79 Latitude Learn to share your location with your friends and view friends' locations via Google Latitude™. This feature may be unavailable depending on your region or service provider. 1 2 3 4 5 In Idle mode, open the application list and select Latitude. The device automatically joins Latitude. Select Select from Contacts or Add via email address. Select a friend you want to add, or enter an email address and select Add friends.

Select Yes. When your friend accepts your invitation, you can share locations. Press [] See map. @@@@Select a category. @@@@ To view the route to the place, select Directions.

@@@@@ Contacts: Select your destination from addresses of your contacts. @@This feature may be unavailable depending on your region or service provider. > Watch videos 1 2 3 4 5 1 2 3 1 2 3 In Idle mode, open the application list and select YouTube. @@Select a video from the list. Rotate the device to landscape view.

Control playback with the icons on the screen. > Share videos In Idle mode, open the application list and select YouTube. Select a video. Select More Share an option. > Upload videos In Idle mode, open the application list and select YouTube. Press [] Upload and select a video. Skip to 8. If you want to upload new videos, select to turn on the camera. Rotate the device anti-clockwise to landscape view. Web 82 4 5 6 7 8 9 Aim the lens at the subject and make any adjustments.

Select to start recording. Select to stop recording. Select Save to upload the video that you have recorded. Enter your user name and password and select Sign in. Enter details of the upload and select Upload.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>

Samsung Apps Samsung Apps allows you to simply and easily download an abundance of applications directly to your device. Featuring a wealth of games, news, reference, social networking, navigation, health related applications and more, Samsung Apps gives you instant access to a huge choice of mobile experience. Your device gets smarter with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better. The feature may be unavailable depending on your region or service provider.

For details, please visit www.samsungapps.com. 1 2 3 In Idle mode, open the application list and select Samsung Apps. If you are launching this application for the first time, read the terms and conditions and select Accept.

Search for and download applications as desired. Market You can download games, ringtones, or other applications from the Android Market. Web 83 This feature may be unavailable depending on your region or service provider. 1 2 In Idle mode, open the application list and select Market. Search for a file and download it to the device.

p. 37 News & Weather Learn to view the weather information and read top news and other news articles. > View the weather information 1 2 In Idle mode, open the application list and select News & Weather. Select Weather at the top of the screen. Your device searches for your current location and displays the weather information. You can change the location to view the weather information in another region. Press [] Settings Weather settings and clear the check box next to Use My Location. Then select a location in Set location. > Read news articles 1 2 3 In Idle mode, open the application list and select News & Weather. Scroll left to a news topic at the top of the screen.

Select an article to open it. To add news topics, press [] Settings News settings Select news topics. Web 84 Connectivity Bluetooth Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10 m without requiring a physical connection. You do not need to line up the devices to beam information with Bluetooth. If the devices are within range of one another, you can exchange information between them even if they are located in different rooms. Samsung is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth wireless feature. Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced. Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device. >

Turn on the Bluetooth wireless feature 1 2 In Idle mode, open the application list and select Settings Wireless and networks Bluetooth settings. Select Bluetooth to turn on the Bluetooth wireless feature. Connectivity 85 > Find and pair with other Bluetooth-enabled 1 2 3 devices In Idle mode, open the application list and select Settings Wireless and networks Bluetooth settings Scan devices. Select a device. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select OK. Alternatively, select Accept to match the PIN between your device and the device.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services. Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it. > Send data using the Bluetooth wireless feature 1 2 3 Select a file or item, such as a contact, memo, or media file, from an appropriate application or My files.

Select an option for sending data via Bluetooth. The method for selecting an option may vary by data type. Search for and pair with a Bluetooth-enabled device. Connectivity 86 > Receive data using the Bluetooth wireless 1 feature In Idle mode, open the application list and select Settings Wireless and networks Bluetooth settings Discoverable. Your device is visible to other Bluetooth devices for 120 seconds. When prompted, enter the PIN for the Bluetooth wireless feature and select OK (if necessary). Select Accept to confirm that you are willing to receive data from the device. 2 3 Received data is saved to the bluetooth folder. If you receive a contact, it is automatically saved to the phonebook. Wi-Fi Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.

11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available. Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France. Connectivity 87 > Activate the WLAN feature In Idle mode, open the application list and select Settings Wireless and networks Wi-Fi settings Wi-Fi. An active WLAN running in the background will consume battery power. To preserve battery power, activate the WLAN only when needed. > Find and connect to a WLAN 1 2 3 4 1 2 3 4 In Idle mode, open the application list and select Settings Wireless and networks Wi-Fi settings. The device will automatically search for available WLANs. Select a network under Wi-Fi networks.

Enter a password for the network (if necessary). Select Connect. > Add a WLAN manually In Idle mode, open the application list and select Settings Wireless and networks Wi-Fi settings Add Wi-Fi network. Enter the SSID for the network and select the security type. Set the security settings depending on the selected security type.

Select Save. Connectivity 88 Mobile network sharing Learn to set your device as a wireless modem or wireless access point for PCs or other devices, and share your device's mobile network connection. > Share your device's mobile network via WLAN 1 2 3 In Idle mode, open the application list and select Settings Wireless and networks Tethering and portable hotspot. Select Mobile AP to activate the Wi-Fi tethering feature. Select Mobile AP settings Configure mobile AP to configure network settings to use your device as an access point.

Option Network SSID Security Function View and edit the device name that will be shown to external devices. Select the security type. 4 5 When you are finished, select Save. From another device, locate your device's name in the available connection list and connect to the network. Your device shares the mobile network connection on another device. > Share your device's mobile network via USB 1 2 Using a USB cable, connect the multifunction jack on your device to a PC.



[You're reading an excerpt. Click here to read official SAMSUNG GALAXY Y GT-S5360 user guide](http://yourpdfguides.com/dref/4295930)
<http://yourpdfguides.com/dref/4295930>