



### **Manual abstract:**

Follow all local regulations when disposing of used batteries or devices. · Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated. · Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating. Protect the device, batteries, and chargers from damage · Avoid exposing your device and batteries to very cold or very hot temperatures. · Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries. · Prevent batteries from contacting metal objects, as this can create a connection between the + and terminals of your batteries and lead to temporary or permanent battery damage. · Never use a damaged charger or battery. · To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency. If you are using a hearing aid, contact the manufacturer for information about radio interference Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid. Turn off the device in potentially explosive environments · Turn off your device in potentially explosive environments instead of removing the battery. · Always comply with regulations, instructions and signs in potentially explosive environments.

· Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas. · Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Turn off your device when in an aircraft Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft. Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device Electronic devices in your car may malfunction due to radio frequency of your device.

Contact the manufacturer for more information. Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips: · Use a hands-free device. · Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device. · Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you. · Let the person you are speaking with know you are driving.

Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous. · Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely. · Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue. · Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

· Some of the contents in this manual may differ from your phone · Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. · This product includes certain free/open source software.

The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website [opensource.samsung.com](http://opensource.samsung.com), depending on the software of the phone or your service provider. Caution: Follow all safety warnings and regulations when using your device in restricted areas Turn off your device where prohibited Comply with all regulations that restrict the use of a mobile device in a particular area. Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices. Do not use your device near a pacemaker · Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker. · If you must use your device, keep at least 15 cm away from the pacemaker. [www.samsung.com](http://www.samsung.com) Printed in Korea GH68-35696A English (EU). 09/2011. Rev. 1.0 · Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies. · Use your device to help others in emergencies.

If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number. · Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, nonemergency number. Do not store your device with such metal objects as coins, keys and necklaces · Your device may become deformed or malfunction. · If the battery terminals are in contact with metal objects, it may cause a fire. Do not store your device near magnetic fields · Your device may malfunction or the battery may discharge from exposure to magnetic fields. · Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields. · Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time. Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers · The battery may leak. · Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device · The screen of your device may be damaged.



**[You're reading an excerpt. Click here to read official SAMSUNG GT-C3520 user guide](http://yourpdfguides.com/dref/4124192)**  
<http://yourpdfguides.com/dref/4124192>

· If bent or deformed, your device may be damaged or parts may malfunction. If your device has a camera flash or light, do not use a flash close to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes. Use caution when exposed to flashing lights · While using your device, leave some lights on in the room and do not hold the screen too close to your eyes. · Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods.

If you feel any discomfort, stop using the device immediately. Reduce the risk of repetitive motion injuries When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician. Ensure maximum battery and charger life · Avoid charging batteries for more than a week, as overcharging may shorten battery life.

· Over time, unused batteries will discharge and must be recharged before use. · Disconnect chargers from power sources when not in use. · Use batteries only for their intended purposes. Use manufacturer-approved batteries, chargers, accessories and supplies · Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. · Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung. Do not bite or suck on the device or the battery · Doing so may damage the device or cause explosion. · If children use the device, make sure that they use the device properly. When speaking on the device: · Hold the device upright, as you would with a traditional phone. @@@@For service, take your device to a Samsung Service Centre. @@@@Do not turn on your device if it is wet.

@@Then, dry the device with a towel and take it to a service centre. @@@@Do not store your device in hot or cold areas. @@@@.

In dry environments, static electricity can build up i Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. @@@@charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. 1 2 3 5 3 6 7 4 8 4 8 Your phone displays the following status indicators on the top of the screen: Icon Description No signal Signal strength Network searching GPRS network connected EDGE network connected Call in progress Browsing the web Connecting to secured web page Roaming (outside of normal service area) Call diverting activated No SIM card Bluetooth activated Alarm activated Memory card inserted FM radio on 10:00 Install the SIM card and battery 1. Remove the back cover and insert the SIM card. Icon Description FM radio suspended Music playback in progress Music playback paused New text message (SMS) New multimedia message (MMS) New email message New configuration message New push message New voice mail message Normal profile activated Silent profile activated Battery power level Current time To AC power outlet Battery Back cover SIM Card · Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged. · To save energy, unplug the travel adapter when not in use.

The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use. Instructional icons Note: notes, usage tips, or additional information Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages Create message (represents Messages, followed by Create message) ] > Square brackets: phone keys; for example: [ ] (represents the Power/End key) Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey) Access menus To access your phone's menus, 1. In Idle mode, press <Menu> to access Menu mode. You may need to press the Confirm key to access Menu mode depending on your region or service provider.

2. Use the Navigation key to scroll to a menu or option. 3. Press <Select> or the Confirm key to confirm the highlighted option. 4.

Press <Back> to move up one level; Press [ ] to return to Idle mode. · When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider. · Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software. 2. Insert the battery and replace the back cover. Insert a memory card (optional) Your phone accepts microSDTM or microSDHCTM memory cards up to 16 GB (depending on memory card manufacturer and type). · Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone. · Frequent writing and erasing of data will shorten the life span of memory cards.

1. Remove the back cover. 2. Insert a memory card with the gold-coloured contacts facing up. [ < Charge the battery 1. Plug a travel adapter into the multifunction jack. 2. When charging is finished, unplug the travel adapter. Turn your phone on or off To turn your phone on, 1. Press and hold [ ]. 2. Enter your PIN and press <Confirm> (if necessary). If the battery remains fully discharged or removed from the device, the time and date will be reset. To turn your phone off, repeat step 1 above. Make a call 1.

In Idle mode, enter an area code and a phone number. 2. Press [ ] to dial the number. 3. To end the call, press [ ].

Memory card 3. Push the memory card in the memory card slot until it locks in place. 4. Replace the back cover. Answer a call 1. When a call comes in, press [ 2. To end the call, press [ ]. ]. Call a recently dialled number 1. In Idle mode, press [ ] to display a list of recent numbers.

2. Scroll left or right to select a call type. 3. Scroll up or down to select a number or name. 4. Press the Confirm key to view details of the call or [ ] to dial the number. Change your ringtone 1. In Menu mode, select Settings Sound profiles.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3520 user guide](http://yourpdfguides.com/dref/4124192)

<http://yourpdfguides.com/dref/4124192>

2. Scroll to the profile you are using.

If you are using the silent profile, you are not allowed to change the ringtone. 3. Press <Edit> Voice call ringtone. 4. Select a memory location (if necessary). 5. Select a ringtone. To switch to another profile, select it from the list. You can change the idle screen to another style. In Menu mode, select Settings Display Smart home and scroll left or right to a style you want.

To access the smart home items Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item. Number mode Press an appropriate alphanumeric key to enter a number. Symbol mode Press an appropriate alphanumeric key to enter a symbol. · To move the cursor, press the Navigation key. · To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>. · To insert a space between characters, press [0]. · To change the line, press [0] three times. · To enter punctuation marks, press [1]. Send and view messages To send a text message or multimedia message 1.

In Menu mode, select Messages Create message. 2. Enter a recipient number and scroll down. 3. Enter the message text. See "Enter text." For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4. 4. Press <Options> Add multimedia and add an item.

5. Press the Confirm key to send the message. To view a text or multimedia messages 1. In Menu mode, select Messages Inbox. 2.

Select a text or multimedia message. Adjust the volume To adjust the volume of the ringtone 1. In Menu mode, select Settings Sound profiles. 2. Scroll to the profile you are using.

If you are using the silent profile, you are not allowed to adjust the volume of the ringtone. 3. Press <Edit> Volume. 4. Scroll to Call alert. 5. Scroll left or right to adjust the volume level and press <Save>. To adjust the volume of voice during a call While a call is in progress, press the Navigation key up or down to adjust the volume. In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Enter text To change the text input mode · Press and hold [ ] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language. · Press [ ] to change case or switch to Number mode. · Press [ ] to switch to Symbol mode. · Press and hold [ ] to select an input mode or change the input language. T9 mode 1. Press the appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

@@@To add items to the smart home screen 1. @@2. Press <Edit>. 3. Select the items to display on the smart home screen.

For the shortcuts toolbar, you can add or delete the shortcuts as desired. Press <Options> Edit shortcuts. 4. Press <Options> Save. 5.

Press the Confirm key. Add a new contact The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select Contacts <Options> Settings Save new contacts to a memory location. 1. In Idle mode, enter a phone number and press <Options>. 2. Select Add to Contacts Create contact a memory location (if necessary). 3. Select a number type (if necessary). 4.

Enter contact information. 5. Press the Confirm key or press <Options> Save to add the contact to memory. Make fake calls You can simulate an incoming call when you want to get out of meetings or unwanted conversations. To activate the fake call feature In Menu mode, select Settings Call Fake call Fake call hot key On. To make a fake call In Idle mode, press and hold the Navigation key down. Activate the mobile tracker When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker, 1. In Menu mode, select Settings Security Mobile tracker. 2.

Enter your password and press <OK>. The first time you access Mobile tracker, you will be prompted to create and confirm a password. 3. Press the Confirm key to turn on the mobile tracker feature. 4.

Scroll down and press the Confirm key to open the recipient list. 5. Press <Search> <Add> to select a recipient in your contact list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.

6. When you are finished selecting contacts, press <Save>. 7. Scroll down and enter the sender's name. 8. Press the Confirm key <Accept>. Use the camera To capture photos 1. In Menu mode, select Camera to turn on the camera. 2. Rotate the phone anti-clockwise to landscape view.

3. Aim the lens at the subject and make any adjustments. 4. Press the Confirm key to take a photo. The photo is saved automatically. To view photos In Menu mode, select My files Images a photo file. To capture videos 1. In Menu mode, select Camera to turn on the camera. 2. Rotate the phone anti-clockwise to landscape view.

3. Press [1] to switch to the camcorder. Aim the lens at the subject and make any adjustments. 4. Press the Confirm key to start recording.

5. Press the Confirm key or <Stop> to stop recording. The video is saved automatically. To view videos In Menu mode, select My files Videos a video file.

Listen to music 1.

In Menu mode, select Music. 2. Select a music category a music file. 3. Control playback using the following keys: Key Confirm Function Pause or resume playback Listen to the FM radio 1. 2. 3. 4. Plug a headset into the phone. In Menu mode, select Apps FM radio.

Press the Confirm key to start the FM radio. Press <Yes> to start automatic tuning. The radio scans and saves available stations automatically. The first time you turn on the FM radio, you will be prompted to start automatic tuning. 5. Control the FM radio using the following keys: Key Confirm Navigation

Function Turn the FM radio on or off ·Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold) ·Up/Down: Adjust the volume RADIO Declaration of Conformity (R&TTE) We, Samsung Electronics declare under our sole responsibility that the product GSM Mobile Phone : GT-C3520 to which this declaration relates, is in conformity with the following standards and/or other normative documents. SAFETY SAR EMC EN 60950-1 : 2006+A11:2009 EN 50360 : 2001 / AC 2006 EN 62209-1 : 2006 EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.

1 (11-2005) EN 301 489-17 V2.1.1 (05-2009) EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.

7.1 (10-2006) ·Left: Skip backward; Scan backward in a file (press and hold) Navigation ·Right: Skip forward; Scan forward in a file (press and hold)

·Up/Down: Adjust the volume 1 2 3 4 Activate the 5.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3520 user guide](http://yourpdfguides.com/dref/4124192)

<http://yourpdfguides.com/dref/4124192>

*I channel surround sound system when a headset is plugged. Select a sound effect Activate or deactivate Shuffle mode Change the repeat mode We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC. The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies): BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK\* Identification mark: 0168 The technical documentation kept at : Samsung Electronics QA Lab. which will be made available upon request. (Representative in the EU) Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK\* 2011.09.06 (place and date of issue) Joong-Hoon Choi / Lab Manager (name and signature of authorised person) \* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. .*



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3520 user guide](http://yourpdfguides.com/dref/4124192)  
<http://yourpdfguides.com/dref/4124192>