




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GT-C3590. You'll find the answers to all your questions on the SAMSUNG GT-C3590 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GT-C3590 User guide SAMSUNG GT-C3590 Operating instructions SAMSUNG GT-C3590 Instructions for use SAMSUNG GT-C3590 Instruction manual SAMSUNG GT-C3590

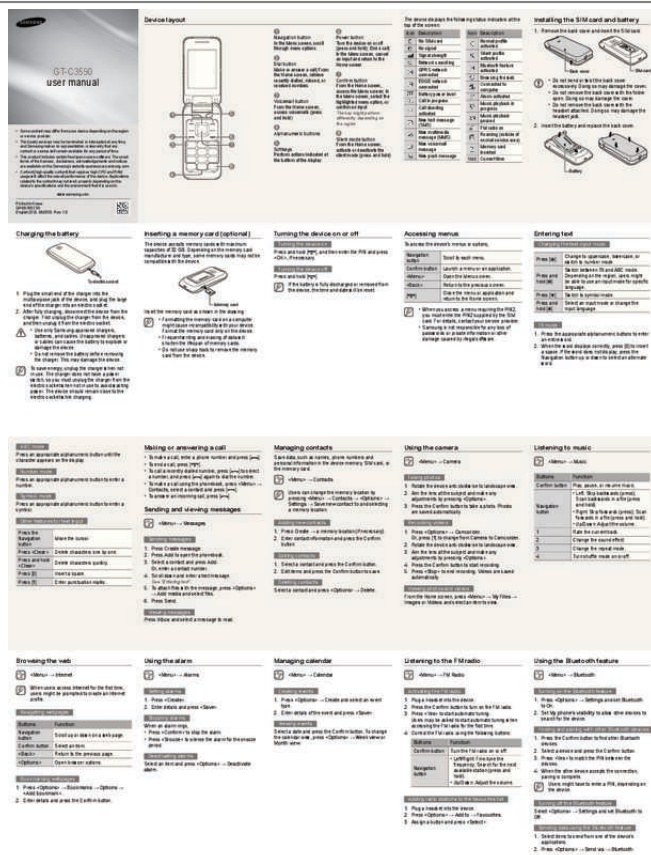

You're reading an excerpt. [Click here to read official SAMSUNG GT-C3590 user guide](http://yourpdfguides.com/dref/5389601)
<http://yourpdfguides.com/dref/5389601>

Manual abstract:

@@@Applications related to the content may not work properly depending on the device's specifications and the environment that it is used in.
www.samsung.com Printed in Korea GH68-39513A English (EU). 06/2013. Rev. 1.0 GT-C3590 7 Back cover SIM card 3 5 Voicemail button From the Home screen, access voicemails (press and hold) • Do not bend or twist the back cover excessively. Doing so may damage the cover. • Do not remove the back cover with the folder open.

Doing so may damage the cover. • Do not remove the back cover with the headset attached. Doing so may damage the headset jack. 2. Insert the battery and replace the back cover.

4 2 3 6 7 8 Alphanumeric buttons 8 5 Softkeys Perform actions indicated at the bottom of the display Silent mode button From the Home screen, activate or deactivate the silent mode (press and hold) 4 Battery Charging the battery Inserting a memory card (optional) The device accepts memory cards with maximum capacities of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the device. Turning the device on or off Turning the device on], and then enter the PIN and press Press and hold [<OK>, if necessary. Turning the device off Press and hold []. Accessing menus To access the device's menus or options, Navigation button Confirm button <Menu> <Back> [] Scroll to each menu. Launch a menu or an application. Open the Menu screen. Return to the previous screen. Close the menu or application and return to the Home screen. • When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider. • Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software. Entering text Changing the text input mode Press [] Press and hold [] Press [] Press and hold [] T9 mode 1. Press the appropriate alphanumeric buttons to enter an entire word. 2.

When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation button up or down to select an alternate word. Change to uppercase, lowercase, or switch to number mode. Switch between T9 and ABC mode. Depending on the region, users might be able to use an input mode for specific language. Switch to symbol mode. Select an input mode or change the input language. To electric socket 1. Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger into an electric socket. 2.

After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket. • Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause the battery to explode or damage the device. • Do not remove the battery before removing the charger.

This may damage the device. To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The device should remain close to the electric socket while charging. If the battery is fully discharged or removed from the device, the time and date will be reset.

Memory card Insert the memory card as shown in the drawing. • Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device. • Frequent writing and erasing of data will shorten the lifespan of memory cards. • Do not use sharp tools to remove the memory card from the device. ABC mode Press an appropriate alphanumeric button until the character appears on the display. Number mode Press an appropriate alphanumeric button to enter a number. Symbol mode Press an appropriate alphanumeric button to enter a symbol. Other features for text input Press the Navigation button Press <Clear> Press and hold <Clear> Press [0] Press [1] Move the cursor. Delete characters one by one.

Delete characters quickly. Insert a space. Enter punctuation marks. Making or answering a call • To make a call, enter a phone number and press []. • To end a call, press []. • To call a recently dialled number, press [] to select] again to dial the number. a number, and press [• To make a call using the phonebook, press <Menu> → Contacts, select a contact and press []. • To answer an incoming call, press []. Managing contacts Save data, such as names, phone numbers and personal information in the device memory, SIM card, or the memory card. <Menu> → Contacts Users can change the memory location by pressing <Menu> → Contacts → <Options> → Settings → Save new contact to and selecting a memory location.

Adding new contacts 1. Press Create → a memory location (if necessary). 2. Enter contact information and press the Confirm button. Editing contacts 1. Select a contact and press the Confirm button. 2. Edit items and press the Confirm button to save. Deleting contacts Select a contact and press <Options> → Delete. Using the camera <Menu> → Camera Taking photos 1.

Rotate the device anti-clockwise to landscape view. 2. Aim the lens at the subject and make any adjustments by pressing <Options>. 3. Press the Confirm button to take a photo. Photos are saved automatically. Recording videos 1. Press <Options> → Camcorder. Or, press [1] to change from Camera to Camcorder. 2.

Rotate the device anti-clockwise to landscape view. 3. Aim the lens at the subject and make any adjustments by pressing <Options>. 4. Press the Confirm button to start recording. 5. Press <Stop> to end recording. Videos are saved automatically. Viewing photos and videos From the Home screen, press <Menu> → My Files → Images or Videos and select an item to view. Listening to music <Menu> → Music Buttons Confirm button Function Play, pause, or resume music.

• Left: Skip backwards (press); Scan backwards in a file (press and hold). • Right: Skip forwards (press); Scan forwards in a file (press and hold). • Up/Down: Adjust the volume. Rate the current track. Change the sound effect.

Change the repeat mode. Turn shuffle mode on or off. Sending and viewing messages <Menu> → Messages Sending messages 1. Press Create message. 2. Press Add to open the phonebook. 3. Select a contact and press Add. Or, enter a contact number. 4. Scroll down and enter a text message. See "Entering text". 5. To attach files with the message, press <Options> → Add media and select files. 6.

Press Send. Viewing messages Press Inbox and select a message to read. Navigation button 1 2 3 4 Browsing the web <Menu> → Internet When users access Internet for the first time, users might be prompted to create an Internet profile.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3590 user guide](http://yourpdfguides.com/dref/5389601)
<http://yourpdfguides.com/dref/5389601>

Navigating webpages Buttons Navigation button Confirm button <Back> <Options> Function Scroll up or down on a web page. Select an item. Return to the previous page. Open browser options. Using the alarm <Menu> → Alarms Setting alarms 1. Press <Create>. 2. Enter details and press <Save>. Stopping alarms When an alarm rings, • Press <Confirm> to stop the alarm. • Press <Snooze> to silence the alarm for the snooze period. Deactivating alarms Select an item and press <Options> → Deactivate alarm. Managing calendar <Menu> → Calendar Creating events 1. Press <Options> → Create and select an event type. 2. Enter details of the event and press <Save>. Viewing events Select a date and press the Confirm button. To change the calendar view, press <Options> → Week view or Month view.

Listening to the FM radio <Menu> → FM Radio Activating the FM radio 1. Plug a headset into the device. 2. Press the Confirm button to turn on the FM radio. 3. Press <Yes> to start automatic tuning. Users may be asked to start automatic tuning when accessing the FM radio for the first time. 4. Control the FM radio using the following buttons: Buttons Confirm button Navigation button Function Turn the FM radio on or off. • Left/Right: Fine-tune the frequency; Search for the next available station (press and hold).

• Up/Down: Adjust the volume. Using the Bluetooth feature <Menu> → Bluetooth Turning on the Bluetooth feature 1. Press <Options> → Settings and set Bluetooth to On. 2. Set My phone's visibility to allow other devices to search for the device. Finding and pairing with other Bluetooth devices 1. Press the Confirm button to find other Bluetooth devices. 2. Select a device and press the Confirm button. 3. Press <Yes> to match the PIN between the devices. 4. When the other device accepts the connection, pairing is complete. Users might have to enter a PIN, depending on the device. Turning off the Bluetooth feature Select <Options> → Settings and set Bluetooth to Off.

Sending data using the Bluetooth feature 1. Select items to send from one of the device's applications. 2. Press <Options> → Send via → Bluetooth.

Bookmarking webpages 1. Press <Options> → Bookmarks → Options → <Add bookmark>. 2. Enter details and press the Confirm button. Adding radio stations to the favourites list 1. Plug a headset into the device. 2. Press <Options> → Add to → Favourites. 3. Assign a button and press <Select>. Customising the device Settings control how applications and functions operate.

Change them to customise the device. Appearances, sound profiles, call actions, and many more can be customised. Menu → Settings Adjusting the sound profiles <Menu> → Settings → Sound profiles To switch to another profile, select it from the list. Changing the ringtone Backing up data Back up data, such as contacts, messages, calendar, and tasks to the memory card. To use this feature, a memory card must be installed. <Menu> → Settings → Backup manager Backing up data Press Backup, select items to back up and press <Backup>. Restoring data Press Restore, select items to restore and press <Restore>. Using the mobile tracker The mobile tracker feature helps locate and recover the device if its stolen or lost. When someone inserts a different SIM card, a tracking message will be sent to preset recipients. This feature might be unavailable due to certain features supported by the service provider. <Menu> → Settings → Security → Mobile tracker Users might have to confirm the password when accessing the mobile tracker. Activating the mobile tracker 1. 2. 3. 4.

Enter password and press <OK>. Press Change on Failure to comply with safety cautions and regulations can cause injury or property damage Do not use your device near other electronic devices • Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices. • Using an LTE data connection may cause interference with other devices, such as audio equipment and telephones. If you use a hearing aid, contact the manufacturer for information about radio interference The radio frequency emitted by your device may interfere with some hearing aids.

Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device. Do not bend or damage the power cord Trademarks • SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. • Bluetooth is a registered trademark of the Bluetooth SIG, Inc. worldwide. • All other trademarks and copyrights are the property of their respective owners. Doing so may cause electric shock or fire. ® Do not use your device while it is charging or touch your device with wet hands Doing so may cause electric shock. Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio towers Radio frequencies may cause your device to malfunction. Turn off the device in potentially explosive environments Do not short-circuit the charger or the device Doing so may cause electric shock or fire, or the battery may malfunction or explode. Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

• The battery may leak.

• Your device may overheat and cause a fire. Do not use your device in a hospital, on an aircraft, or in an automotive equipment that can be interfered with by radio frequency This safety information contains content for mobile devices. Some content may be not applicable to your device. To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device. Do not use your device outdoor during a thunderstorm Doing so may result in electric shock or device malfunction. Use manufacturer-approved batteries, chargers, accessories, and supplies Do not use or store your device in areas with high concentrations of dust or airborne materials • Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. They may also cause a fire or cause the battery to explode. • Use only Samsung-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device. • Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock. Do not bite or suck the device or the battery • Doing so may damage the device or result in an explosion or fire.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3590 user guide](http://yourpdfguides.com/dref/5389601)
<http://yourpdfguides.com/dref/5389601>

- Children or animals can choke on small parts. Make sure the device is turned off during takeoff and landing. Position your device within easy reach.

Rain, sleet, snow, ice, and heavy traffic can be hazardous. Do not take notes or look up phone numbers. Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you feel any discomfort, stop using the device immediately. If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device. If you feel discomfort, such as a muscle spasm, or disoriented, stop using the device immediately and consult a physician. To prevent eye strain, take frequent breaks while using the device. Use caution when using the device while walking or moving. Always be aware of your surroundings to avoid injury to yourself or others. Make sure the headset cable does not become entangled in your arms or on nearby objects. Do not carry your device in your back pockets or around your waist. You could be injured or damage the device if you fall. Do not paint or put stickers on your device. Leaving batteries unused over time may reduce their lifespan and performance. It may also cause the batteries to malfunction or explode, or cause a fire. Follow all instructions in this manual to ensure the longest lifespan of your device and battery.

Damages or poor performance caused by failure to follow warnings and instructions can void your manufacturer's warranty. Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damages or deterioration caused by using unapproved accessories are not. Do not store your device with metal objects, such as coins, keys, and necklaces. Reduce the risk of repetitive motion injuries. Your device may be scratched or may malfunction. If the battery terminals come into contact with metal objects, this may cause a fire. Your device may malfunction or the battery may discharge from exposure to magnetic fields. Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields. Do not store your device near magnetic fields. When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

- Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the device and consult your physician. When using the device, mind the following: Hold the device upright, as you would with a traditional phone. Speak directly into the microphone.

Internal antenna Do not use the device if the screen is cracked or broken. Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired. Install mobile devices and equipment with caution. Protect your hearing and ears when using a headset. Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while walking may distract your attention and cause an accident. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device. Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region. Do not use your device or applications for a while if the device is overheated. Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly. Your device may be damaged or may malfunction. If bent or deformed, your device may be damaged or parts may malfunction. Do not disassemble, modify, or repair your device. Care and use your mobile device properly. Keep your device dry. Humidity and liquids may damage the parts or electronic circuits in your device.

Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre. Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty. Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation. Do not drop your device or cause impacts to your device. Do not use your device with the back cover removed. The battery may fall out of the device, which may result in damage or malfunction. If your device has a camera flash or light, do not use it close to the eyes of people or pets. Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes. Ensure maximum battery and charger life. Avoid charging your device for more than a week, as overcharging may shorten battery life. Over time, unused device will discharge and must be recharged before use.

- Disconnect the charger from power sources when not in use. Use the battery only for their intended purposes. Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre. Do not disassemble or puncture the battery, as this can cause explosion or fire.
- Turn off the device before removing the battery. If you remove the battery with the device turned on, it may cause the device to malfunction. Wipe your device or charger with a towel or an eraser. Clean the battery terminals with a cotton ball or a towel. Do not use chemicals or detergents.

Doing so may discolour or corrode the outside the device or may result in electric shock or fire.



You're reading an excerpt. Click here to read official SAMSUNG GT-C3590 user guide

<http://yourpdfguides.com/dref/5389601>

When cleaning your device, mind the following Do not use the device for anything other than its intended use Your device may malfunction. Avoid disturbing others when using the device in public Allow only qualified personnel to service your device Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty. • Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information. • In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information. • Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN. Specific Absorption Rate (SAR) certification information THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES For more information, visit www.samsung.com/sar and search for your device with the model number.

Declaration of Conformity Correct disposal of this product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This EEE is compliant with RoHS. Product details For the following Product : GSM BT Mobile Phone Model(s) : GT-C3590 Do not distribute copyright-protected material Handle SIM cards, memory cards, or cables with care • When inserting a card or connecting a cable to your device, make sure that the card is inserted or the cable is connected to the proper side. • Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device. • Protect cards from strong shocks, static electricity, and electrical noise from other devices. • Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth. • Inserting a card or connecting a cable by force or improperly may result in damage to the multipurpose jack or other parts of the device. Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material. Malware and viruses To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service ••••• Your mobile device is a radio transmitter and receiver. @@@@The SAR limit for mobile devices is 2.0 W/kg. @@The highest SAR values under the ICNIRP guidelines for this device model are: Maximum SAR for this model and conditions under which it was recorded Head SAR Body-worn SAR 0.331 W/kg 0.332 W/kg Declaration & Applicable standards We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of: SAFETY EN 60950-1 : 2006 + A12 : 2011 SAR EN 50360 : 2001 / A1 : 2012 EN 62479 : 2010 EN 62311 : 2008 EN 62209-1 : 2006 EN 62209-2 : 2010 EMC EN 301 489-01 V1.9.2 (09-2011) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.2.1 (09-2012) RADIO EN 301 511 V9.

0.2 (03-2003) EN 300 328 V1.7.1 (10-2006) and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment. The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies): TÜV SÜD BABT, Octagon House, Concorde Way, Fareham, Hampshire, PO15 5RL, UK* Identification mark: 0168 Ensure access to emergency services Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel. Protect your personal data and prevent leakage or misuse of sensitive information • While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data. • When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information. • Carefully read the permissions screen when downloading applications.

Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information. Do not download unknown applications. Do not visit untrusted websites. Delete suspicious messages or email from unknown senders. Set a password and change it regularly. Deactivate wireless features, such as Bluetooth, when not in use. If the device behaves abnormally, run an antivirus program to check for infection. • Run an antivirus program on your device before you launch newly downloaded applications and files. • Install antivirus programs on your computer and run them regularly to check for infection. • Do not edit registry settings or modify the device's operating system.

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value. A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be positioned at least 1.5 cm away from the body. Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3590 user guide](http://yourpdfguides.com/dref/5389601)
<http://yourpdfguides.com/dref/5389601>

Correct disposal of batteries in this product (Applicable in countries with separate collection systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

*If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system. Representative in the EU Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK 2013.06.11 (Place and date of issue) Joong-Hoon Choi / Lab. Manager (Name and signature of authorised person) * This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. .*



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3590 user guide](http://yourpdfguides.com/dref/5389601)
<http://yourpdfguides.com/dref/5389601>