



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GT-C3750. You'll find the answers to all your questions on the SAMSUNG GT-C3750 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG GT-C3750 User guide SAMSUNG GT-C3750 Operating instructions SAMSUNG GT-C3750 Instructions for use SAMSUNG GT-C3750 Instruction manual SAMSUNG GT-C3750

Mobile Phone user manual

Safety precautions

Warning: Prevent electric shock, fire, and explosion

- Do not use damaged power cables, plugs, or power electrical supplies.
- Do not touch the power cord with wet hands, do not immerse the charging cable in water.
- Do not bend or damage the power cord.
- Do not use your device while charging or touch your device while fully charged.
- Do not start about the charger in the battery.
- Do not start or charge overnight in the charge or fully charged.
- Do not charge the battery with damaged or not approved by the manufacturer.
- Do not use your device during or after a lightning storm.
- Your device may contain lead or other toxic materials. Do not dispose of your device in the environment.
- Do not handle a damaged or leaking lithium-ion battery. For a complete list of instructions, contact your nearest authorized service center.
- Do not use your device near gas or other flammable and explosive environments.
- Use only the type approved battery and do not charge partially damaged or your device, damaged battery and charging cable.
- Do not use your device in a damaged power source.
- Do not use your device in an area where there is a risk of fire or explosion, such as in an area where there is a risk of fire or explosion, such as in a gas station, a fuel pump, or a gas station.
- Do not use your device in an area where there is a risk of fire or explosion, such as in a gas station, a fuel pump, or a gas station.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

- Turn off your device when prohibited.
- Comply with all regulations that restrict the use of mobile devices in a particular area.
- Do not use your device near other electronic devices. Mobile devices can emit radio frequency energy.
- Do not use your device near other electronic devices.
- Do not use your device near other electronic devices.
- Do not use your device near other electronic devices.

Copy with all safety warnings and regulations regarding mobile device usage when operating as vehicle

- Do not drink or eat while driving or while operating your device.
- Do not drink or eat while driving or while operating your device.
- Do not drink or eat while driving or while operating your device.

Specific Absorption Rate (SAR) certification information

The SAR is a measure of the rate at which energy is absorbed by the human body when exposed to an electromagnetic field. The SAR is measured in Watts per kilogram (W/kg). The SAR is a measure of the rate at which energy is absorbed by the human body when exposed to an electromagnetic field. The SAR is measured in Watts per kilogram (W/kg). The SAR is a measure of the rate at which energy is absorbed by the human body when exposed to an electromagnetic field. The SAR is measured in Watts per kilogram (W/kg).

Phone layout

CE0168

You're reading an excerpt. Click here to read official SAMSUNG GT-C3750 user guide <http://yourpdfguides.com/dref/5526695>

Manual abstract:

• Never use a damaged charger or battery. • To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker. Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency. If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency. If you are using a hearing aid, contact the manufacturer for information about radio interference. Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid. Turn off the device in potentially explosive environments • Turn off your device in potentially explosive environments instead of removing the battery. • Always comply with regulations, instructions and signs in potentially explosive environments. • Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas. • Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Turn off your device when in an aircraft Using your device in an aircraft is illegal.

Your device may interfere with the electronic navigation instruments of the aircraft. Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device. Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information. Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle. While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law.

For your safety and the safety of others, practice good common sense and remember the following tips: • Use a hands-free device. • Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device. •

Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road.

If you receive an incoming call at an inconvenient time, let your voice mail answer it for you. • Let the person you are speaking with know you are driving.

Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous. • Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely. • Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.

• Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road. • Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies. • Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number. user manual Mobile Phone Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord Do not bend or damage the power cord Do not use your device while charging or touch your device with wet hands Do not short-circuit the charger or the battery Do not drop or cause an impact to the charger or the battery Do not charge the battery with chargers that are not approved by the manufacturer Do not use your device during a thunderstorm Your device may malfunction and your risk of electric shock is increased. Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre. Handle and dispose of batteries and chargers with care • Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.

• Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices. • Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated. • Some of the contents in this manual may differ from your phone • Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.

• This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com. depending on the software of the phone or your service provider.

Caution: Follow all safety warnings and regulations when using your device in restricted areas Turn off your device where prohibited Comply with all regulations that restrict the use of a mobile device in a particular area. Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices. Do not use your device near a pacemaker • Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker. • If you must use your device, keep at least 15 cm away from the pacemaker. www.samsung.com Printed in Korea GH68-34173B English (EU), 04/2011. Rev.

1.0 • Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, nonemergency number. Proper care and use of your mobile device Keep your device dry • Humidity and all types of liquids may damage device parts or electronic circuits. • When wet, remove the battery without turning on your device. Dry your device with a towel and take it to a service centre. • Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty. Do not use or store your device in dusty, dirty areas Dust can cause your device to malfunction. Do not store your device on slopes If your device falls, it can be damaged.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3750 user guide](http://yourpdfguides.com/dref/5526695)

<http://yourpdfguides.com/dref/5526695>

Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C • Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C. • Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car). • Store the battery at 0 °C to 40 °C. Do not store your device with such metal objects as coins, keys and necklaces • Your device may become deformed or malfunction. • If the battery terminals are in contact with metal objects, it may cause a fire. Do not store your device near magnetic fields • Your device may malfunction or the battery may discharge from exposure to magnetic fields. • Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields. • Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time. Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers • The battery may leak.

• Your device may overheat and cause a fire. Do not drop your device or cause impacts to your device • The screen of your device may be damaged. • If bent or deformed, your device may be damaged or parts may malfunction. If your device has a camera flash or light, do not use a flash close to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes. Ensure maximum battery and charger life • Avoid charging batteries for more than a week, as overcharging may shorten battery life. • Over time, unused batteries will discharge and must be recharged before use. • Disconnect chargers from power sources when not in use. • Use batteries only for their intended purposes. Use manufacturer-approved batteries, chargers, accessories and supplies • Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. • Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck on the device or the battery • Doing so may damage the device or cause explosion. @@@@ • Speak directly into the mouthpiece. • Avoid contact with your device's internal antenna. @@@@ • For service, take your device to a Samsung Service Centre. @@@@ • When this happens, stop using the product and consult your physician. @@@@ • Do not use chemicals or detergents. @@ • Take the device to a Samsung Service Centre to have it repaired. @@@@ • Handle SIM cards or memory cards with care • Do not remove a card while the device Call in progress SOS message feature activated Browsing the web Connecting to secured web page Roaming (outside of normal service area) Call diverting activated No SIM card Connected with PC Bluetooth activated Alarm activated Memory card inserted 10:00 Icon Description FM radio on FM radio suspended Music playback in progress Music playback paused New text message (SMS) New multimedia message (MMS) New email message New configuration message New push message New voice mail message Normal profile activated Silent profile activated Battery power level Current time 6 Correct disposal of batteries in this product (Applicable in the European Union and other European countries with separate battery return systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. @@@@ • Otherwise, the phone may be damaged. • To save energy, unplug the travel adapter when not in use.

The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use. Instructional icons Note: notes, usage tips, or additional information Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages, followed by Create message)] > Square brackets: phone keys; for example:] (represents the Power/End key) [Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey) Access menus To access your phone's menus, 1. In Idle mode, press <Menu> to access Menu mode. • You may need to press the Confirm key to access Menu mode depending on your region or service provider.

• When you are using the smart home screen, you cannot use the Confirm key to access Menu mode. Answer a call 1. When a call comes in, press []. 2. To end the call, press [].

Adjust the volume To adjust the volume of the ringtone 1. In Menu mode, select Settings → Sound profiles. 2. Scroll to the profile you are using. If you are using the silent profile, you are not allowed to adjust the volume of the ringtone. → 2. Insert the battery and replace the back cover. Insert a memory card (optional) Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type). [< Battery Charge the battery 1. Plug the supplied travel 2.

When charging is adapter into the multifunction finished, unplug jack. the travel adapter. • Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone. • Frequent writing and erasing of data will shorten the life span of memory cards. 2. Use the Navigation key to scroll to a menu or option. 3. Press <Select>, <Save>, or the Confirm key to confirm the highlighted option.] to 4.

Press <Back> to move up one level; Press [return to Idle mode. • When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider. • Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software. Turn your phone on or off To turn your phone on,].

1. Press and hold [2. Enter your PIN and press <OK> (if necessary). To turn your phone off, repeat step 1 above. 3.

Press <Edit> → Volume. 4. Scroll to Call alert. 5. Scroll left or right to adjust the volume level and press <Save>. To adjust the volume of voice during a call While a call is in progress, press the Navigation key up or down to adjust the volume. In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode. 1. Remove the back cover.

2. Insert a memory card with the gold-coloured contacts facing down. Memory card Make a call 1. In Idle mode, enter an area code and a phone number.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3750 user guide](http://yourpdfguides.com/dref/5526695)

<http://yourpdfguides.com/dref/5526695>

2. Press [] to dial the number. 3. To end the call, press [To AC power outlet 3. Push the memory card in the memory card slot until it locks in place. 4. Replace the back cover. Change your ringtone 1. In Menu mode, select Settings → Sound profiles. 2.

Scroll to the profile you are using. If you are using the silent profile, you are not allowed to change the ringtone. Use the smart home screen The smart home screen allows you to access applications, contacts, and calendar events or view the clock from Idle mode. When you are using the smart home screen, the Navigation key does not work as shortcuts. Enter text To change the text input mode • Press and hold [] to switch between T9 and ABC modes. Depending on your region, you may be able to access an input mode for your specific language. • Press [] to change case or switch to Number mode. • Press [] to switch to Symbol mode. • Press and hold [] to select an input mode or change the input language. T9 mode 1. Press the appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word. ABC mode Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode Press an appropriate alphanumeric key to enter a number. Symbol mode Press an appropriate alphanumeric key to enter a symbol. • To move the cursor, press the Navigation key. • To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear> • To insert a space between characters, press [0]. • To enter punctuation marks, press [1]. Send and view messages To send a text message or multimedia message 1. In Menu mode, select Messages → Create message. 2. Enter a destination number and scroll down.

3. Enter the message text. □ Enter text For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4. 4. Press <Options> → Add multimedia and add an item. 5. Press the Confirm key to send the message. To view a text or multimedia messages 1. In Menu mode, select Messages → Inbox.

2. Select a text or multimedia message. 3. Press <Edit> → Voice call ringtone. 4. Select a memory location (if necessary). 5. Select a ringtone. To switch to another profile, select it from the list. To add items to the smart home screen 1.

In Menu mode, select Settings → Display → Smart home. 2. Press <Edit>. 3. Select the items to display on the smart home screen. For the shortcuts toolbar, you can add or delete the shortcuts as desired. Press <Options> → Edit shortcuts. 4. Press <Options> → Save. 5.

Press the Confirm key. You can change the idle screen to another style. @@@@2. Scroll left or right to a call type. 3.

Scroll up or down to a number or name. @@@@3. Select a number type (if necessary). 4. Enter contact information.

5. Press the Confirm key or press <Options> → Save to add the contact to memory. Make fake calls You can simulate an incoming call when you want to get out of meetings or unwanted conversations. To activate the fake call feature In Menu mode, select Settings → Call → Fake call → Fake call hot key. To make a fake call • In Idle mode, press and hold the Navigation key down. • When the keys are locked, press the Navigation key down four times. Activate the mobile tracker When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone. To activate the mobile tracker, 1. In Menu mode, select Settings → Security → Mobile tracker. 2.

Enter your password and select <OK>. The first time you access Mobile tracker, you will be prompted to create and confirm a password. To activate the SOS message 1. In Menu mode, select Messages → Settings → SOS messages → Sending options. 2. Press <Change> to select On. 3. Scroll down and press the Confirm key to open the recipient list. 4. Press <Options> → Search to open your contact list.

5. Select a contact. 6. Select a number (if necessary). 7.

Press the Confirm key to save the recipients. 8. Scroll down and set the number of times to repeat the SOS message. 9. Press <Back> → <Yes>.

To send an SOS message 1. With the keys locked, press [] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message. 2. To exit SOS mode, press [To view photos In Menu mode, select My files → Images → a photo file. To capture videos 1. 2. 3. 4.

In Menu mode, select Camera to turn on the camera. Rotate the phone anti-clockwise to landscape view. Press [1] to switch to the camcorder. Aim the lens at the subject and make any adjustments. 5. Press the Confirm key to start recording. 6. Press the <Stop> to stop recording. The video is saved automatically.

To view videos In Menu mode, select My files → Videos → a video file.

Key 1 2 3 4 Function Rate the current track Select a sound effect Change the repeat mode Activate or deactivate Shuffle mode We, Declaration of Conformity (R&TTE) Samsung Electronics declare under our sole responsibility that the product GSM Mobile Phone : GT-C3750 to which this declaration relates, is in conformity with the following standards and/or other normative documents. SAFETY SAR EMC RADIO EN 60950-1 : 2006+A11:2009 EN 50360 : 2001 / AC2006 EN 62209-1 : 2006 EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.

1 (11-2005) EN 301 489-17 V2.1.1 (05-2009) EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.

7.1 (10-2006) Listen to the FM radio 1. 2. 3. 4. Plug a headset into the phone. In Menu mode, select Apps → FM radio. Press the Confirm key to start the FM radio. Press <Yes> to start automatic tuning. The radio scans and saves available stations automatically.

The first time you turn on the FM radio, you will be prompted to start automatic tuning. 3. Press Confirm key to select On. 4. Scroll down and press the Confirm key to open the recipient list. 5. Press <Options> → Contacts to open your contact list. 6. Press the Confirm key to select a contact and then press <Add>. 7.

Select a number (if necessary). 8. Press the Confirm key to save the recipients. 9. Scroll down and enter the sender's name.

10. Press <Save> → <Accept>. We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC. The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies): BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK* Identification mark: 0168 The technical documentation kept at : Samsung Electronics QA Lab.



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3750 user guide](http://yourpdfguides.com/dref/5526695)

<http://yourpdfguides.com/dref/5526695>

which will be made available upon request.

(Representative in the EU) Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK* 2011.03.21
(place and date of issue) Joong-Hoon Choi / Lab Manager (name and signature of authorised person) Listen to music 1. In Menu mode, select Music → Library. 2. Select a music category → a music file. 3. Control playback using the following keys: Key Confirm Function Pause or resume playback • Left: Skip backward; Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up/Down: Adjust the volume 5. Control the FM radio using the following keys: Key Confirm Navigation Function Turn the FM radio on or off • Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold) • Up/Down: Adjust the volume Use the camera To capture photos 1.

In Menu mode, select Camera to turn on the camera. 2. Rotate the phone anti-clockwise to landscape view. 3. Aim the lens at the subject and make any adjustments. 4. Press the Confirm key to take a photo. The photo is saved automatically. Activate and send an SOS message In an emergency, you can send SOS messages to your family or friends for help. Navigation * It is not the address of Samsung Service Centre.

For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. .



[You're reading an excerpt. Click here to read official SAMSUNG GT-C3750 user guide](http://yourpdfguides.com/dref/5526695)

<http://yourpdfguides.com/dref/5526695>