

Manual abstract:

Handle and dispose of batteries and chargers with care • Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device. • Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices. • Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated. • Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating. Protect the device, batteries, and chargers from damage • Avoid exposing your device and batteries to very cold or very hot temperatures. • Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.

• Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage. • Never use a damaged charger or battery. Caution: Follow all safety warnings and regulations when using your device in restricted areas Turn off your device where prohibited Comply with all regulations that restrict the use of a mobile device in a particular area. Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices. Do not use your device near a pacemaker • Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker. • If you must use your device, keep it at least 15 cm away from the pacemaker. • To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker. • Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas. • Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft. Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information. Warning: Prevent electric shock, fire, and explosion • Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider. • Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. • This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.

Do not use damaged power cords or plugs, or loose electrical sockets Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord Do not bend or damage the power cord Do not use your device while charging or touch your device with wet hands Do not short-circuit the charger or the battery Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips: • Use a hands-free device. www.samsung.com Printed in Korea GH68-36507A English (EU). 03/2012. Rev. 1.1 Do not drop or cause an impact to the charger or the battery Do not charge the battery with chargers that are not approved by the manufacturer •

Get to know your device and its convenience features, such as speed dial and redial.

These features help you reduce the time needed to place or receive calls on your mobile device. • Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.

• Let the person you are speaking with know you are driving.

Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous. • Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely. •

Dial sensibly and assess the traffic.

Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. • Use your device to call for help. • Use your device to help others in emergencies. • Do not turn on your device if it is wet. • Then, dry the device with a towel and take it to a service centre. • Do not store your device on slopes If your device falls, it can be damaged. Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C • Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C. • Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).

• Store the battery at 0 °C to 40 °C. Do not store your device with such metal objects as coins, keys and necklaces • Your device may become deformed or malfunction. • If the battery terminals are in contact with metal objects, it may cause a fire. Do not store your device near magnetic fields • Your device may malfunction or the battery may discharge from exposure to magnetic fields. • Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields. • Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time. Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers • The battery may leak. • Your device may overheat and cause a fire. Do not drop your device or cause impacts to your device • The screen of your device may be damaged. • If bent or deformed, your device may be damaged or parts may malfunction.

Do not use your device or applications for a while if the device is overheated Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1200 user guide](http://yourpdfguides.com/dref/4546164)

<http://yourpdfguides.com/dref/4546164>

If your device has a camera flash or light, do not use a flash close to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes. Use caution when exposed to flashing lights • While using your device, leave some lights on in the room and do not hold the screen too close to your eyes. • Disconnect chargers from power sources when not in use. • Use batteries only for their intended purposes.

• Speak directly into the mouthpiece. • Do not touch the device's internal antenna. • Always turn the volume down before plugging the earphones into an audio source and your device with a pattern, password, or PIN. • Doing this may violate copyright laws. The SAR limit for mobile devices is 2.

0 W/kg. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system. Correct disposal of this product (Waste Electrical & Electronic Equipment) (Applicable in the European Union and other European countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product and its electronic accessories should not be mixed with other commercial wastes for disposal. The lower the power output of the device, the lower its SAR value. If you use an unapproved accessory, ensure that the accessory does not contain any metal components and that it positions the device at least 1.5 cm away from the body. Phone layout Confirm key Select the highlighted menu option or confirm an input; In Idle mode, access Menu mode Depending on your service provider or region, the key may perform differently Install th to return to Idle mode. • When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider. 4. Select Call ringtone. 5.

Select a ringtone. Number mode Press an appropriate alphanumeric key to enter a number. Symbol mode Press an appropriate alphanumeric key to enter a symbol. • To delete characters one by one, press <Clear>. To delete words quickly, press and hold <Clear>.

• To insert a space between characters, press [0]. 2. Enter your PIN and press <OK> (if necessary). Select Volume. Scroll to Call alert. Scroll left or right to a call type. Scroll up or down to a number or name. Press the Confirm key to view details of the call or [] to dial the number. Make a call 1. In Idle mode, enter an area code and a phone number. 2. Press [] to dial the number. 3. To end the call, press []. To adjust the volume of voice during a call While a call is in progress, press the Navigation key up or down to adjust the volume.

In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode. Enter text To change the text input mode • Press and hold [] to switch between T9 and ABC modes. Depending on your region, you may be able to access an input mode for your specific language. • Press [] to change case or switch to Number mode. • Press [] to switch to Symbol mode. • Press and hold [] to select an input mode or change the input language. To turn your phone off, repeat step 1 above. Add a new contact The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select Contacts → Management → Save new contacts to → a memory location.

Make fake calls You can simulate an incoming call when you want to get out of meetings or unwanted conversations. To activate the fake call feature In Menu mode, select Settings → Applications → Call → Fake call → Fake call hot key → On. 2. Select Create contact. 3.

Select a number type (if necessary). 4. Enter contact information. Skip to step 8. 6.

Select a contact. 7. Select a number (if necessary). 8. When you are finished setting contacts, press the Confirm key to save the recipients. 9. Scroll down and enter the sender's name. 10. Press the Confirm key → <Accept>. 5.

Select a contact. 6. Select a number (if necessary). 7. When you are finished selecting contacts, press the Confirm key → Save to save the recipients. 8. Scroll down and set the number of times to repeat the SOS message. 9. Press <Save> → <Yes>. To send an SOS message 1.

With the keys locked, press [] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message. 2. To exit SOS mode, press []. Declaration of Conformity (R&TTE) We, Samsung Electronics declare under our sole responsibility that the product GSM Mobile Phone : GT-E1200 to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY EN 60950-1 : 2006 +A1 : 2010 SAR E N 50360 : 2001 / AC 2006 EN 62209-1 : 2006 EN 62209-2 : 2010 EN 62311 : 2008 EMC E N 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2005) RADIO EN 301 511 V9.

0.2 (03-2003) We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC. which will be made available upon request. (Representative in the EU) Samsung Electronics Euro QA Lab. To activate the SOS message 1. In Menu mode, select Messages → Settings → SOS messages → Sending options. 2. Scroll left or right to On. 3. Scroll down and press the Confirm key to open the recipient list.

4. Press <Options> → Contact list to open your contact list. You can also enter phone numbers in the recipient list. Skip to step 7. Send and view messages To send a text message 1. In Menu mode, select Messages → Create message. 2. Enter a recipient number and scroll down.



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1200 user guide](http://yourpdfguides.com/dref/4546164)
<http://yourpdfguides.com/dref/4546164>

3. Enter your message text.

See "Enter text." 4. Press the Confirm key to send the message. To view text messages 1. In Menu mode, select Messages → Inbox.

2. Select a text message. Activate the torch light The torch light feature helps you see in dark places by making the display and backlight as bright as possible.

In Idle mode, press and hold the Navigation key up to activate the torch light mode. The torch light automatically turns on.

To turn off the torch light, press <Off>. To deactivate the torch light mode, press <Back>. Joong-Hoon Choi / Lab Manager (name and signature of authorised person) 3. Scroll left or right to On. 4. Scroll down and press the Confirm key to open the recipient list. * It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. .



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1200 user guide](http://yourpdfguides.com/dref/4546164)

<http://yourpdfguides.com/dref/4546164>