



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG GT-E1270. You'll find the answers to all your questions on the SAMSUNG GT-E1270 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SAMSUNG GT-E1270 User guide SAMSUNG GT-E1270 Operating instructions SAMSUNG GT-E1270 Instructions for use SAMSUNG GT-E1270 Instruction manual SAMSUNG GT-E1270

**Device layout**

**Charging the battery**

1. Plug the end of the charge cable into the wall outlet or a power supply.
2. Make the phone, disconnected from the wall outlet, and connect the other end of the charge cable to the phone.

**Turning the device on or off**

1. Press the power key.
2. Press the power key and then select the **Power** or **Off** option.

**Accessing menus**

**Entering text**

**Making or answering a call**

1. To make a call, enter a phone number and press **Call**.
2. To answer a call, press **Call**.

**Sending and viewing messages**

1. Press **Messages**.
2. Press **Compose message**.
3. Press **Message**.

**Managing contacts**

1. Press **Contacts**.
2. Press **Add**.

**Using the alarm**

1. Press **Alarm**.
2. Press **Set**.

**Listening to the FM radio**

1. Press **FM Radio**.
2. Press **FM Radio**.

**Customizing the device**

1. Press **Settings**.
2. Press **Appearance**.

**Adjusting the sound profiles**

1. Press **Settings**.
2. Press **Sound**.

**Using the mobile tracker**

1. Press **Settings**.
2. Press **Location**.

**Making false calls**

1. Press **Settings**.
2. Press **Call**.



You're reading an excerpt. [Click here to read official SAMSUNG GT-E1270 user guide](http://yourpdfguides.com/dref/5505333)

<http://yourpdfguides.com/dref/5505333>

### Manual abstract:

@@@• This product includes certain free/open source software. @07/2013. Rev. 1.1 5 Sofikeys Perform actions indicated at the bottom of the display  
Charging the battery To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The device should remain close to the electric socket while charging. To electric socket Accessing menus To access the device's menus or options, Navigation button Confirm button <Menu> <Back> [ ] Scroll to each menu. Launch a menu or an application. Open the Menu screen.

Return to the previous screen. Close the menu or application and return to the Home screen. • When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider. • Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Entering text Changing the text input mode Press [ ] Press and hold [ ] Press [ ] Press and hold [ ] T9 mode 1. Press the appropriate alphanumeric buttons to enter an entire word. 2. When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation button up or down to select an alternate word.

Change to uppercase, lowercase, or switch to number mode. Switch between T9 and ABC mode. Depending on the region, users might be able to use an input mode for specific language. Switch to symbol mode. Select an input mode or change the input language. ABC mode Press an appropriate alphanumeric button until the character appears on the display. Number mode Press an appropriate alphanumeric button to enter a number. Symbol mode Press an appropriate alphanumeric button to enter a symbol. Other features for text input Press the Navigation button Press <Clear> Press and hold <Clear> Press [0] Press [1] Move the cursor. Delete characters one by one.

Delete characters quickly. Insert a space. Enter punctuation marks. 1. Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger into an electric socket. 2. After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket. • Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause battery to explode or damage the device.

• Do not remove the battery before removing the charger. This may damage the device. Turning the device on or off Turning the device on [ ], and then enter the PIN and press Press and hold [ <OK>, if necessary. Turning the device off Press and hold [ ]. If the battery is fully discharged or removed from the device, the time and date will be reset.

Making or answering a call • To make a call, enter a phone number and press [ ]. [ • To end a call, press [ ]. • To call a recently dialled number, press [ ] to select ] again to dial the number. a number, and press [ • To make a call using the phonebook, press <Menu> → Contacts → Contact list, select a contact and press [ ]. • To answer an incoming call, press [ ].

Sending and viewing messages <Menu> → Messages Sending messages 1. Press Create message. 2. Press <Options> → Add recipients → Contact list to open the phonebook. 3. Select a contact and press <Options> → Add. Or, enter a contact number. 4. Scroll down and enter a text message. See "Entering text".

5. Press <Options> → Send. Viewing messages Press Inbox and select a message to read. Managing contacts Save data, such as names, phone numbers and personal information in the device memory or SIM card. <Menu> → Contacts Users can change the memory location by pressing <Menu> → Contacts → Management → Save new contacts to and selecting a memory location. Adding new contacts 1. Press Create contact → a memory location (if necessary). 2. Enter contact information and press the Confirm button. Editing contacts 1.

Select a contact and press the Confirm button. 2. Edit items and press the Confirm button to save. Deleting contacts Select a contact and press <Options> → Delete. Using the alarm <Menu> → Alarms Setting alarms 1.

Press <Select>. 2. Enter details and press <Save>. Stopping alarms When an alarm rings, • Press <Confirm> to stop the alarm. • Press <Snooze> to silence the alarm for the snooze period.

Deactivating alarms 1. Select an item and press <Select> 2. Set Alarm activation to Off. Listening to the FM radio <Menu> → FM Radio Activating the FM radio 1. Plug a headset into the device. 2. Press the Confirm button to turn on the FM radio. 3. Press <Yes> to start automatic tuning. Users may be asked to start automatic tuning when accessing the FM radio for the first time.

4. Control the FM radio using the following buttons: Buttons Confirm button Navigation button Function Turn the FM radio on or off. • Left/Right: Fine-tune the frequency; Search for the next available station (press and hold). • Up/Down: Adjust the volume. Adding radio stations to the favourites list 1. Plug a headset into the device. 2. Press <Options> → Add to Favourites. 3. Assign a button and press <Select>.

Customising the device Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions, and many more can be customised. <Menu> → Settings Adjusting the sound profiles <Menu> → Settings → Profiles To switch to another profile, select it from the list. Changing the ringtone Adjusting the volume of the ringtone 1.

Select a profile and press <Options> → Edit. 2. Press Volume → Call alert. 3. Adjust the volume and press <Save>.

Adjusting the volume of voice during a call While a call is in progress, press the Navigation button up or down to adjust the volume. Using the mobile tracker The mobile tracker feature helps locate and recover the device if its stolen or lost. When someone inserts a different SIM card, a tracking message will be sent to preset recipients. This feature might be unavailable due to certain features supported by the service provider. <Menu> → Settings → Security → Mobile tracker Users might have to confirm the password when accessing the mobile tracker. Activating the mobile tracker 1. 2. 3. 4. Enter password and press <OK>.

Press the Confirm button to select On. Enter recipients and sender details. Press <Save> → <Accept>. Making fake calls <Menu> → Settings → Applications → Call → Fake call Activating the fake call feature Set Fake call hot key to On. Making fake calls Press and hold the Navigation button down.



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1270 user guide](http://yourpdfguides.com/dref/5505333)

<http://yourpdfguides.com/dref/5505333>

Menu Profiles Display Time and date Phone Applications Security Network Memory Reset Description Change the alert type, ringtone, volume, etc. Change wallpaper, theme, brightness, etc. Change the time and date of the device. Change the device language, etc. Set application settings.

Set locks or change passwords. Change network profiles settings. Clear memory or check memory status. Reset the device. 1.

Select a profile and press <Options> → Edit. 2. Press Call ringtone. 3. Select a ringtone and press the Confirm button.

Changing the message alert tone 1. Select a profile and press <Options> → Edit. 2. Press Message alert tone. 3. Select a tone and press the Confirm button.

Using shortcuts <Menu> → Settings → Phone → Shortcuts Editing shortcuts 1. Select a Navigation button and press <Change>. 2. Select an application to assign and press <Save>.

Deactivating the mobile tracker 1. Enter password and press <OK>. 2. Press the Confirm button to select Off. Safety information This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found in the SAR information section of this manual. When carrying the product or using it while worn on your body, maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Warning Failure to comply with safety warnings and regulations can cause serious injury or death Do not use damaged power cords or plugs, or loose electrical sockets Unsecured connections can cause electric shock or fire.

www.sar-tick.com Do not touch the power cord with wet hands or disconnect the charger by pulling the cord Doing so may result in electrocution. • Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. They may also cause a fire or cause the battery to explode.

• Use only Samsung-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device. • Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung. Use manufacturer-approved batteries, chargers, accessories, and supplies • Prevent the battery from coming into contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage. • Never use a damaged charger or battery. Caution Failure to comply with safety cautions and regulations can cause injury or property damage • Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices. • Using an LTE data connection may cause interference with other devices, such as audio equipment and telephones. • The battery may leak. • Your device may overheat and cause a fire. Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers Do not use your device near other electronic devices Trademarks • SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics. • All other trademarks and copyrights are the property of their respective owners. Do not drop or cause an impact to the charger or the device • Never dispose of the battery or device in a fire. Never place the battery or device on or in heating devices, such as microwave ovens, stoves, or radiators. The device may explode when overheated.

Follow all local regulations when disposing of used battery or device. • Never crush or puncture the device. • Avoid exposing the device to high external pressure, which can lead to an internal rupture • Your device may malfunction or the battery may discharge from exposure to magnetic fields. • Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields. Do not store your device near magnetic fields • If you feel discomfort, such as a muscle spasm, or disoriented, stop using the device immediately and consult a physician. • To prevent eye strain, take frequent breaks while using the device. Reduce the risk of repetitive motion injuries The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device. Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio towers Radio frequencies may cause your device to malfunction. • Turn off your device in potentially explosive environments instead of removing the battery.

• Position your device within easy reach. • Rain, sleet, snow, ice, and heavy traffic can be hazardous. • Do not take notes or look up phone numbers. • Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic.

Try to plan calls when your car will be stationary. • Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region. If your device has a camera flash or light, do not use it close to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes. • While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.

• Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately. • If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device. Use caution when exposed to flashing lights • Your device may be scratched or may malfunction. • If the battery terminals come into contact with metal objects, this may cause a fire. Do not store your device with metal objects, such as coins, keys, and necklaces • Always be aware of your surroundings to avoid injury to yourself or others. • Make sure the headset cable does not become entangled in your arms or on nearby objects. Use caution when using the device while walking or moving Do not carry your device in your back pockets or around your waist You could be injured or damage the device if you fall. • Paint and stickers can clog moving parts and prevent proper operation. • If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin.

When this happens, stop using the device and consult your physician. Do not paint or put stickers on your device Do not use the device if the screen is cracked or broken Broken glass or acrylic could cause injury to your hands and face.



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1270 user guide](http://yourpdfguides.com/dref/5505333)

<http://yourpdfguides.com/dref/5505333>

Take the device to a Samsung Service Centre to have it repaired. • Avoid charging your device for more than a week, as overcharging may shorten battery life. • Over time, unused device will discharge and must be recharged before use. • Disconnect the charger from power sources when not in use. • Use the battery only for their intended purposes. • Leaving batteries unused over time may reduce their lifespan and performance. It may also cause the batteries to malfunction or explode, or cause a fire. • Follow all instructions in this manual to ensure the longest lifespan of your device and battery.

Damages or poor performance caused by failure to follow warnings and instructions can void your manufacturer's warranty. • Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damages or deterioration caused by using unapproved accessories are not. • Hold the device upright, as you would with a traditional phone. • Speak directly into the microphone.

• Do not cover the antenna area with your hands or other objects. This may cause connectivity problems or drain the battery. Internal antenna Ensure maximum battery and charger life • Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre. • Do not disassemble or puncture the battery, as this can cause explosion or fire.

• Turn off the device before removing the battery. If you remove the battery with the device turned on, it may cause the device to malfunction. • Wipe your device or charger with a towel or an eraser. • Clean the battery terminals with a cotton ball or a towel. • Do not use chemicals or detergents. Doing so may discolour or corrode the outside the device or may result in electric shock or fire. Do not disassemble, modify, or repair your device • Protect cards from strong shocks, static electricity, and electrical noise from other devices. • Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth. • Inserting a card or connecting a cable by force or improperly may result in damage to the multipurpose jack or other parts of the device.

Do not distribute copyright-protected material Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material. Ensure access to emergency services Malware and viruses To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service Do not download unknown applications. Do not visit untrusted websites. Delete suspicious messages or email from unknown senders. Set a password and change it regularly. Deactivate wireless features, such as Bluetooth, when not in use. If the device behaves abnormally, run an antivirus program to check for infection.

Run an antivirus program on your device before you launch newly downloaded applications and files. Install antivirus programs on your computer and run them regularly to check for infection. Do not edit registry settings or modify the device's operating system. When cleaning your device, mind the following Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

When using the device, mind the following Do not use the device for anything other than its intended use Your device may malfunction. Avoid disturbing others when using the device in public Allow only qualified personnel to service your device Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty. • When inserting a card or connecting a cable to your device, make sure that the card is inserted or the cable is connected to the proper side. • Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device. • Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. • Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly. Install mobile devices and equipment with caution Handle SIM cards, memory cards, or cables with care • Your device may be damaged or may malfunction. • If bent or deformed, your device may be damaged or parts may malfunction. Do not drop your device or cause impacts to your device • While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data. • When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information. • Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information. • Check your accounts regularly for unapproved or suspicious use.

If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.

@@@The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are: Maximum SAR for this model and conditions under which it was recorded Head SAR Body-worn SAR 0.457 W/kg 0.222 W/kg A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be positioned at least 1.

5 cm away from the body. Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device. For more information, visit [www.samsung.com/sar](http://www.samsung.com/sar) and search for your device with the model number.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1270 user guide](http://yourpdfguides.com/dref/5505333)

<http://yourpdfguides.com/dref/5505333>

*This EEE is compliant with RoHS. Declaration of Conformity Product details For the following Product : GSM Mobile Phone Model(s) : GT-E1270 Correct disposal of batteries in this product (Applicable in countries with separate collection systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.*

*If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system. Declaration & Applicable standards We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of: SAFETY SAR EMC RADIO EN 60950-1 : 2006 + A12 : 2011 EN 50360 : 2001 / A1 : 2012 EN 62311 : 2008 EN 62209-1 : 2006 EN 62209-2 : 2010 EN 301 489-01 V1.9.2 (09-2011) EN 301 489-07 V1.3.1 (11-2005) EN 301 511 V9.0.2 (03-2003) Correct disposal of this product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g.*

*charger, headset, USB cable) should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment. The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies): TÜV SÜD BABT, Octagon House, Concorde Way, Fareham, Hampshire, PO15 5RL, UK\* Identification mark: 0168 During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value. Representative in the EU Samsung Electronics Euro QA Lab.*

*Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK 2013.06.*

*20 (Place and date of issue) Joong-Hoon Choi / Lab. Manager (Name and signature of authorised person) \* This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. .*



[You're reading an excerpt. Click here to read official SAMSUNG GT-E1270 user guide](http://yourpdfguides.com/dref/5505333)

<http://yourpdfguides.com/dref/5505333>