



**Manual abstract:**

*Do not use your device during a thunderstorm Your device may malfunction and your risk of electric shock is increased. Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre. Handle and dispose of batteries and chargers with care • Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device. • Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices. • Never place batteries or devices on or in heating devices , such as microwave ovens , stoves , or radiators. Batteries may explode when overheated.*

*• Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating. Protect the device, batteries, and chargers from damage • Avoid exposing your device and batteries to very cold or very hot temperatures. ☐ Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries. ☐ Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.*

*• Never use a damaged charger or battery. Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices. Do not use your device near a pacemaker • Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker. ☐ If you must use your device, keep it at least 15 cm away from the pacemaker. @@@@ Contact the manufacturer to ensure the safety of your hearing aid. @@ • Always comply with regulations , instructions and signs in potentially explosive environments.*

*☐ Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas. ☐ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Turn off your device when in an aircraft Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft. Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information. User manual • Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider. ☐ Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. • This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.*

*☐ Your phone uses non-harmonised frequency and is intended for use in all European countries. The Wi-Fi can be operated in the EU without restriction indoors, but cannot be operated outdoors in France. Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips: • Use a hands-free device. ☐ Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device. ☐ Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.*

*☐ Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous. ☐ Do not take notes or look up phone numbers. @@ • Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. @@@@ ☐ Use your device to call for help. @@ ☐ Use your device to help others in emergencies. @@@@ • Store the battery at 0 °C to 40 °C.*

*Do not store your device with such metal objects as coins, keys and necklaces • Your device may become deformed or malfunction. ☐ If the battery terminals are in contact with metal objects, it may cause a fire. Do not store your device near magnetic fields • Your device may malfunction or the battery may discharge from exposure to magnetic fields. ☐ Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields. ☐ Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time. Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers • The battery may leak. • Your device may overheat and cause a fire. Do not drop your device or cause impacts to your device • The screen of your device may be damaged. ☐ If bent or deformed, your device may be damaged or parts may malfunction. Do not use your device or applications for a while if the device is overheated Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.*

*If your device has a camera flash or light, do not use a flash close to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes. Use caution when exposed to flashing lights • While using your device, leave some lights on in the room and do not hold the screen too close to your eyes. ☐ Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately. Reduce the risk of repetitive motion injuries When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks.*



**[You're reading an excerpt. Click here to read official SAMSUNG REX 80 GT-S5220R user guide](http://yourpdfguides.com/dref/5325341)**  
**<http://yourpdfguides.com/dref/5325341>**

If you continue to have discomfort during or after such use, stop use and see a physician. Ensure maximum battery and charger life • Avoid charging batteries for more than a week, as overcharging may shorten battery life. □ Over time, unused batteries will discharge and must be recharged before use. □ Disconnect chargers from power sources when not in use. • Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies • Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. □ When this happens, stop using the product and consult your physician. □ Clean the terminals of the battery with a cotton ball or a towel. • Do not use chemicals or detergents. □ Do not use a headset while driving or riding.

□ Do not disassemble, mod 0. 779 W/kg 0. @ g. □ This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This EEE is compliant with RoHS.

phone layout 1 4 4 1 Specific Absorption Rate (SAR) certification information THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organisation (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. During use, the actual SAR values for this device are usually well below the values stated above. □ The lower the power output of the device, the lower its SAR value. □ 5 cm. □ 5 cm away from the body. □ 5 cm away from the body. □ For more information, visit [www.samsung.com](http://www.samsung.com).

Com/sar and search for your device with the model number. Volume key In Idle mode, adjust the phone's volume; Make a fake call (down); Send an SOS message See "Make fake calls" See "Activate and send an SOS message" Dial key Make or answer a call; In Idle mode, retrieve logs of your calls and messages each screen will not react to touches of sharp tools, such as a stylus or pen. 3. Push the memory card in the memory card slot until it locks in place.

□ 4. Press the Back key to move up one level; Press [ return to Idle mode. Drag the slider to adjust the volume level and select Save.

□ For better audio performance, use the normal phone mode. ] to display a list of recent Enter text To change the text input mode • Select EN to change the input language. • Select T9 to switch between T9 and ABC modes.

The dot turns green in T9 mode. Press appropriate virtual keys to enter an entire word. If the correct word does not display, select an alternate word.

□ ABC mode Press an appropriate virtual key until the character you want appears on the display. □ Number mode Press an appropriate virtual key to enter a number.

□ Symbol mode Press an appropriate virtual key to enter a symbol. □ To use other features for text input • To move the cursor, select and then the virtual navigation key. Words quickly, tap and hold • When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card.

For details, contact your service provider. □ Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Scroll up or down to a number or name. 4. Select the number or name to view details of the call or ] to dial the number. Press [ Turn your phone on or off To turn your phone on, 1. □ make a call 1. □ Available widgets may vary depending on your region or service provider. answer a call 1. When a call comes in, press [ 2. Select the profile you are using. If you are using the silent profile, you are not allowed to change the ringtone.

To open a widget 1. In Idle mode, scroll left or right to a panel of the idle screen. □ To organise your widget You can organise each panel of the idle screen with your favourite widgets. At the top left of the screen to 1. To turn your phone off, repeat step 1 above. Adjust the volume To adjust the volume of the ringtone 1. Select the profile you are using. If you are using the silent profile, you are not allowed to adjust the volume of the ringtone. To switch to another profile, select it from the list. For attaching multimedia, continue with step 6.

Activate the mobile tracker When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone. The first time you access Mobile tracker, you will be prompted to create and confirm a password. Activate and send an SOS message In an emergency, you can send SOS messages to your family or friends for help. You can also enter phone numbers in the recipient list. □ 7.

□ 8. Press the Back key → Yes. To send an SOS message 1. □ To change the memory location, in Menu mode, select Contacts → More → Settings → Save new contact to → a memory location → Save. Declaration & Applicable standards We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of: SAFETY SAR EMC RADIO EN 60950-1 : 2006 + A12 : 2011 EN 50360 : 2001 / AC 2006 EN 62209-2 : 2010 EN 62479 : 2010 EN 62209-1 : 2006 EN 62311 : 2008 EN 301 489-01 V1.

In Idle mode, select Keypad and enter a phone number. Make fake calls You can simulate an incoming call when you want to get out of meetings or unwanted conversations. □ To activate the fake call feature In Menu mode, select Settings → Call → Fake call → Fake call hot key. □ To make a fake call Press and hold the Volume key down. 3. Select Mobile tracker to turn on the mobile tracker. You can also enter phone numbers including a country code (with +) in the recipient list. □ Select the recipient field → Enter manually. 3. Enter a recipient number and select Done.

And the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment. The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies): TÜV SÜD BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK\* Identification mark: 0168 Representative in the EU Samsung Electronics Euro QA Lab. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product. .



[You're reading an excerpt. Click here to read official SAMSUNG REX 80 GT-S5220R user guide](http://yourpdfguides.com/dref/5325341)  
<http://yourpdfguides.com/dref/5325341>