



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG UE32EH4003. You'll find the answers to all your questions on the SAMSUNG UE32EH4003 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG UE32EH4003
User guide SAMSUNG UE32EH4003
Operating instructions SAMSUNG UE32EH4003
Instructions for use SAMSUNG UE32EH4003
Instruction manual SAMSUNG UE32EH4003

Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

- When you press the **A** (**Information**) button, you can see the details of the programme.
 - Scroll ◀, ▶ to view information for a desired programme while watching the current channel.
 - Scroll ▲, ▼ to view information for other channels. If you want to move to the currently selected channel, press the **ENTER**  button.

English



[You're reading an excerpt. Click here to read official SAMSUNG UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)
<http://yourpdfguides.com/dref/5477788>

Manual abstract:

If you want to move to the currently selected channel, press the ENTER button. English Using Channel menu OO MENU Support Contents Home ENTER Press the CONTENT button to select the desired menu. NN When you press the CH LIST button on the remote control, Channel List screen will be displayed at once. Contents Home Channel List Guide AllShare Play Schedule Manager Explore 3D R Return T * The displayed image may differ depending on the model. NN If you want to view favourite channels you added, press the CH LIST button and use L (Ch. mode) button to move Favourites 1-5. English NN Using the control buttons with the Channel List. NN When you select the Programme View in T (Tools) menu, you can move to other channels using L (Channel) button. Watch / Information: Watches the channel you selected. English How to use Schedule Viewing in Channel List (digital channels only) When you set the Schedule Viewing in Channel List, you can only set the programme in Programme View.

1. Press the CH LIST button, then select a desired digital channel. 2. Press TOOLS button, and then select the Programme View. The programme list for that channel appears.
3. Press the / buttons to select the desired programme, then press the ENTER (Information) or INFO button. 4. Select Schedule Viewing, then press the ENTER button when done. NN If you want to cancel Schedule Viewing, follow steps 1 through 3.
select Cancel schedule. English Using Option Menu t Set each channel using the Channel List menu options (Programme View, Edit Favourites, Lock/Unlock, Edit Channel Name, Edit Channel Number, Delete, Information, Sort, Change Aerial, Edit Mode). Option menu items may differ depending on the channel status. English Programme View: Displays the programme when digital channel is selected. Select the Edit Favourites, then press the ENTER button. 2. Press the ENTER button to select Favourites 1-5, then press the OK button. NN One favourite channel can be added in several of favourites among Favourites 1-5. English Lock/Unlock: Lock a channel so that the channel cannot be selected and viewed. NN This function is available only when the Channel Lock is set to On.

Change the PIN Edit Channel Name (analogue channels only): Assign your own channel name. English Edit Channel Number: Edit the number by pressing the number buttons desired. NN Some area may not be able to support Edit Channel Name and Edit Channel Number function. Delete: You can delete a channel to display the channels you want. Information: Displays details of the selected programme. Sort (digital channels only): Changes the list ordered by channel number or channel name. Using Option Menu t Set each channel using the menu options (Edit Favourites, Lock/Unlock, Delete, Information, Deselect, Select All). 1. Press the TOOLS button in Channel List screen, then select the Edit Mode. A check box appears to the left of the channel.

2. Press the / buttons to select the desired channel, then press the ENTER button. The (c) mark indicates the channel you've selected. NN You can select more than one channel. NN Press the ENTER again to deselect the channel.
3. Press the TOOLS button, then select a function and change its settings. English Edit Favourites: Set the selected channels you watch frequently as favourites. You can add a favourite channel to any one of the groups. press the / buttons to select a group.
Lock/Unlock: Lock a channel so that the channel cannot be selected and viewed. NN This function is available only when the Channel Lock is set to On. Delete: You can delete a channel to display the channels you want. Select All: Select all the channels in the channel list. English Guide The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status. Guide Die Musik-Show DTV Air 825 NDR FERNSEHEN 19:15 - 20:40 Dani is devastated when scot makes clear his views. Mode Information k Page E Schedule 1 2 3 4 5 6 7 T * The displayed image may differ depending on the model. 2 b Green (-24 Hours): Viewing the list of programmes to be broadcasted before 24 hours.

3 { Yellow (+24 Hours): Viewing the list of programmes to be broadcasted after 24 hours. 4 } Blue (Ch. Mode): Select the type of channels you want to display on the Channel List window. When selecting the current programme, you can watch the selected programme. When selecting the future programme, you can reserve to watch the selected programme. To cancel the schedule, press the ENTER button again and select Cancel schedule. English Schedule Manager You can set a desired channel to be displayed automatically at the intended time. In addition, you can view, modify or delete a channel you have reserved to watch. Set the current time first to use this function. Using Option Menu t Set each channel using the menu options (Cancel schedule, Edit Schedule, Schedule manually, View Guide). 1.

Press the TOOLS button to select the Schedule manually. NN You can press the a (Schedule manually) directly on the Schedule Manager screen. 2. Press the / or number buttons to set the Aerial, Channel, Repeat, Date, Start Time. If you select Manual, you can set the day you want. NN The (c) mark indicates the day you've selected. Date: You can set the desired date. nN It is available when you select Once in Repeat. Start Time: You can set the start time you want. NN If you want to edit or cancel the schedule, select the reserved schedule on NN If you select the View Guide, you can see the Guide screen.
the Reserved Programmes. Press the TOOLS button, then select the Edit Schedule or Cancel schedule. English Retuning Channels Aerial (Air / Cable) t OO MENU Channel Aerial ENTER Before your television can begin memorising the available channels, you must specify the type of signal source that is connected to the TV (i.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/5477788)

[UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)

<http://yourpdfguides.com/dref/5477788>

English English Digital Channel: Change the country for digital channels. English English Analogue Channel: Change the country for analogue channels. English English Auto Tuning (depending on the country) OO MENU Channel Auto Tuning ENTERE Scans for a channel automatically and stores in the TV. NN Automatically allocated programme numbers may not correspond to actual Auto Tuning Air / Cable: Select the aerial source to memorise. If a channel is locked, the PIN input window appears. English English Search Mode (Full / Network / Quick): Scans for all channels with active broadcast stations and stores them in the TV. English English NN If you select Quick, you can set up the Network, Network ID, Frequency, Modulation and Symbol Rate manually by pressing the button on the remote control.

English English Frequency: Displays the frequency for the channel. English English Cable Search Option (depending on the country & cable channels only) Sets additional search options such as the frequency and symbol rate for a cable network search. English English Start Frequency / Stop Frequency: Set the start or stop frequency (differs in each country). English English Manual Tuning OO MENU Channel Manual Tuning ENTERE Scans for a channel manually and stores in the TV. NN If a channel is locked, the PIN input window appears. NN According to the channel source, Manual Tuning may be supported. When Aerial Source is set to Air or Cable: English English Digital Channel Tuning: Scans for a digital channel manually and stores in the TV. Press the New button to search the digital channels. When scanning has finished, a channel is updated in the channel list. English English When selecting Aerial Air: Channel, Frequency, Bandwidth English English When selecting Aerial Cable: Frequency, Modulation, Symbol Rate English English Analogue Channel Tuning: Scans for an analogue channel.

Press the New button to search the channels by adjusting the Programme, Colour System, Sound System, Channel, Search. NN Channel mode in your area have been assigned to the position numbers from P0 to P99. You can select a channel by entering the position number in this mode. English English P (programme mode): When tuning is complete, the broadcasting stations C (aerial channel mode) / S (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel. English English Transfer Channel List (depending on the country) OO MENU Channel Transfer Channel List ENTERE Imports or exports the channel map.

You should connect a USB storage to use this function. English English Import from USB: Import channel list from USB. English English Export to USB: Export channel list to USB. English English Fine Tune (analogue channels only) OO MENU Channel Fine Tune ENTERE If the signal is weak or distorted, fine tune the channel manually. NN Fine tuned channels are marked with an asterisk*.

nN To reset the fine-tuning, select Reset. English English Edit Channel Number (Disable / Enable) (depending on the country) OO MENU Channel Edit Channel Number ENTERE Use this to change channel number. When channel number is changed, channel information is not updated automatically. English English Changing the Preset Picture Mode OO MENU Picture Picture Mode ENTERE Picture Mode t Standard. Select your preferred picture type. NN When connecting a PC, you can only make changes to the Entertain and Dynamic: Suitable for a bright room. standard: Suitable for a normal environment. Natural for LED 6 series: Suitable for reducing eye strain. Movie: Suitable for watching movies in a dark room. Entertain: Suitable for watching movies and games.

NN It is only available when connecting a PC. English English Adjusting Picture Settings Samsung MagicAngle for LED 4 series 22" OO MENU Picture Samsung MagicAngle ENTERE Adjust screen viewing Angle to optimize screen quality according to your viewing position. English English Samsung MagicAngle: When viewing the screen at an angle from below or above by setting the appropriate mode for each position, you can obtain a similar picture Options Advanced Settings OO MENU Picture Advanced Settings ENTERE (available in Standard / Movie mode) You can adjust the detailed setting for the screen including colour and contrast. NN When connecting a PC, you can only make changes to Gamma and White Balance. English English Dynamic Contrast (Off / Low / Medium / High): Adjust the screen contrast. Advanced Settings Dynamic Contrast Black Tone Flesh Tone RGB Only Mode Colour Space White Balance Gamma 0 Medium Off 0 Off Native Black Tone (Off / Dark / Darker / Darkest): Select the black level to adjust the screen depth. English English Flesh Tone: Adjust the flesh tone colour. English English RGB Only Mode (Off / Red / Green / Blue): Displays the Red, Green and Blue colour for making fine adjustments to the hue and saturation. English English Colour Space (Auto / Native): Adjust the range of colours available to create the image. English English White Balance: Adjust the colour temperature for a more natural picture.

R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green, blue) darkness. R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness. Reset: Resets the White Balance to its default settings. English English Picture Options OO MENU Picture Picture Options ENTERE NN When connecting a PC, you can only make changes to the Colour Tone. English English Colour Tone (Cool / Standard / Warm1 / Warm2) NN Warm1 or Warm2 will be deactivated when the picture mode is Dynamic.

NN Settings can be adjusted and stored for each external device connected to an input on the TV.



[You're reading an excerpt. Click here to read official SAMSUNG](#)

[UE32EH4003 user guide](#)

<http://yourpdfguides.com/dref/5477788>

English Digital Noise Filter (Off / Low / Medium / High / Auto / Auto Visualisation): If the broadcast signal received by your TV is weak, you can activate the Digital Noise Filter feature to reduce any static and ghosting that may appear on the screen. When the signal is weak, try other options until the best picture is displayed. When the INFO button is pressed, the signal strength bar is displayed. When bar is green, you are receiving the best possible signal.

English HDMI Black Level (Low / Normal): Selects the black level on the screen to adjust the screen depth. Available only in HDMI mode (RGB signals). English Film Mode (Off / Auto1 / Auto2): Sets the TV to automatically sense and process film signals from all sources and adjust the picture for optimum quality. Available in TV mode, AV, Component (480i / 1080i) and HDMI (1080i). LED 4 series do not support AV, Component mode. If the screen does not seem natural, change its option to Off / Auto1 / Auto2 in Film Mode. English Motion Plus (Off / Clear / Standard / Smooth / Custom / Demo): Removes drag from fast scenes with a lot of movement to provide a clearer picture. The Info screen on your TV displays the resolution and frequency of the incoming signal (60Hz), but not the frequency the TV is generating for the image it is displaying by using Motion Plus function. If noise occurs on the screen, please set up the Motion Plus to Off. If Motion Plus is Custom, you can set up the Blur Reduction, Judder Reduction or Reset manually. If Motion Plus is Demo, you can compare the difference of on and off modes.

For LED 6 series English Blur Reduction: Adjusts the blur reduction level from video sources. Judder Reduction: Adjusts the judder reduction level from video sources when playing films. reset: Reset the custom settings. LED Motion Plus (Off / On): Removes drag from fast scenes with a lot of movement to provide a clear picture. It will be deactivated when the picture mode is set to Natural. For LED 6 series The screen may become slightly darker when you play LED Motion Plus. English Reset Picture (Yes / No) OO MENU Picture Reset Picture ENTER Resets your current picture mode to its default settings. English Changing the Preset Sound Mode Sound Mode t OO MENU Sound Sound Mode ENTER Standard: Selects the normal sound mode. music: Emphasizes music over voices. Movie: Provides the best sound for movies.

Clear Voice: Emphasizes voices over other sounds. Amplify: Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired. disabled. For LED 6 series If Speaker Select is set to External Speaker, Sound Mode is English Adjusting Sound Settings Sound Effect OO MENU Sound Sound Effect ENTER Use the up and down arrow keys to select an option, and then press ENTER. SRS TruSurround HD (Off / On) t (standard sound mode only) This function provides a virtual 5.

channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology. English SRS TruDialog (Off / On) (standard sound mode only) This function allows you to increase the intensity of a voice over background music or sound effects so that dialogue can be heard more clearly. Equaliser (standard sound mode only) Use Equaliser to customize sound setting for each speaker. Balance: Adjusts the balance between the right and left speaker. 100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.

Reset: Resets the equaliser to its default settings. If Speaker Select is set to External Speaker, Sound Effect is disabled. For LED 6 series English Broadcast Audio Options OO MENU Sound Broadcast Audio Options ENTER Audio Language t (digital channels only) Change the default value for audio languages. Audio Format NN The available language may differ depending on the broadcast. (digital channels only) When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the TV Speaker function. Audio Format option may differ depending on the broadcast. 5. Ich Dolby digital sound is only available when connecting an external speaker through an optical cable. LED 4 series do not support English Audio Description (not available in all locations) (digital channels only) This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.

English Additional Settings OO MENU Sound Additional Settings ENTER DTV Audio Level (MPEG / HE-AAC) (digital channels only): This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level. NN According to the type of broadcast signal, MPEG / HE-AAC can be adjusted between -10dB and 0dB. NN To increase or decrease the volume, adjust between the range 0 and -10 respectively. English SPDIF Output: SPDIF (Sony Philips Digital InterFace) is used to provide digital sound, reducing interference going to speakers and various digital devices such as a DVD player. Audio Format: You can select the Digital Audio output (SPDIF) format. The available Digital Audio output (SPDIF) format may differ depending on the input source. for LED 6 series NN By connecting to 5. Ich speakers in a Dolby Digital setup, maximize your interactive 3D sound experience. Audio Delay: Correct audio-video sync problems, when watching TV or video, and when listening to digital audio output using an external device such as an AV receiver (0ms ~ 250ms). NN Select Line to obtain dynamic sound, and RF to reduce the difference between loud and soft sounds at night time.

Line: Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.



[You're reading an excerpt. Click here to read official SAMSUNG UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)

RF: Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB. English Speaker Settings OO MENU Sound Speaker Settings ENTER Speaker Select (External Speaker / TV Speaker) for LED 6 series A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to External Speaker. NN When Speaker Select is set to External Speaker, the volume and TV Speaker: Off, External Speaker: On MUTE buttons will not operate and the sound settings will be limited.

TV Speaker: On, External Speaker: On NN If there is no video signal, both speakers will be mute. English Auto Volume (Off / Normal / Night) To equalize the volume level on each channel, set to Normal. Night: This mode provides an improved sound experience compared to Normal mode, making almost no noise. it is useful at night. NN To use the volume control on the source device connected to the TV, set Auto Volume to Off on the TV. Otherwise, a change to the volume control of the source device may not be applied. English Reset Sound (Yes / No) OO MENU Reset Sound ENTER Reset all sound settings to the factory defaults. English Selecting the Sound Mode t When you set to Dual I-II, the current sound mode is displayed on the screen. audio Type A2 Stereo Mono Stereo Dual NICAM Stereo Mono Stereo Dual Dual I-II Mono Stereo Dual I Dual II Mono Mono Stereo Mono Dual I Dual II Default Automatic change Dual I Automatic change Dual I to the mono. NN If the stereo signal is weak and an automatic switching, occurs, then switch NN Only activated in stereo sound signal. nN Only available when the Source is set to TV. English Connecting to the Network for LED 6 series Wired Network Connection You can attach your TV to your LAN using cable in three ways: English You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a LAN cable. see the diagram below. * It may differ depending on the model. TV Rear Panel The Modem Port on the Wall External Modem (ADSL / VDSL / Cable TV) Modem Cable LAN Cable English You can attach your TV to your LAN by connecting the LAN port on the back of your TV to a IP Sharer which is connected to an external modem.

Use LAN cable for the connection. see the diagram below. * It may differ depending on the model. TV Rear Panel The Modem Port on the Wall External Modem (ADSL / VDSL / Cable TV) IP Sharer (having DHCP server) Modem Cable LAN Cable LAN Cable English Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet using a LAN cable. see the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house. TV Rear Panel * It may differ depending on the model. The LAN Port on the Wall LAN Cable If your network requires a Dynamic IP address, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP). English Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you do not have to enter them manually. Most home networks use a Dynamic IP address.

some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway, and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer. NN You can use ADSL modems that support DHCP if your network requires a Static IP address.

ADSL modems that support DHCP also let you use Static IP addresses. NN It is not supported when the network speed is below or equal to 10Mbps. English Wireless Network Connection To connect your TV to your network wireless, you need a wireless router or modem and a Samsung Wireless LAN Adapter (WIS12ABGNX, WIS09ABGNX), which you connect to your TV's back or side panel USB port. see the illustration below. Wireless IP sharer (Wireless router having DHCP Server) Samsung Wireless LAN Adapter The LAN Port on the Wall TV Side Panel LAN Cable English Samsung Wireless LAN adapter is sold separately and is offered by select retailers and Ecommerce sites.

When you play video over a network connection, the video may not be played smoothly. NN NOTE You must use the Samsung Wireless LAN Adapter (WIS12ABGNX, WIS09ABGNX) to use a wireless network. Samsung Wireless LAN Adapter and the USB extension Cable are sold separately and are offered by select retailers and Ecommerce sites. English To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network. Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure. English If you apply a security system other than the systems listed below, it will not work with the TV. English If HIGH PURE THROUGHPUT (Greenfield) 802.11n mode is selected and the Encryption type is set to WEP or TKIP for your wireless router, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.

If your wireless router supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode. English If your router, modem, or device is not certified, it may not connect to the TV via the Samsung Wireless LAN Adapter.



[You're reading an excerpt. Click here to read official SAMSUNG](#)

[UE32EH4003 user guide](#)

<http://yourpdfguides.com/dref/5477788>

Ensure the TV is turned off before you connect the Samsung Wireless LAN Adapter. English Connection Methods: You can setup the wireless network connection like below. Auto Setup (Using the Auto Network Search function) Manual Setup WPS(PBC) The Samsung Wireless LAN Adapter may not be recognized when using a connection via a USB hub or via a USB extension cable other than the cable supplied. English Notice The picture may appear corrupted or have static for some channels when the TV is connected to the Samsung Wireless LAN Adapter. In such a case, establish a connection using one of the following methods or connect the Samsung Wireless LAN Adapter using a USB cable in a place that is not affected by radio interference. method 1 Connect using the USB right angle adapter. To connect the Samsung Wireless LAN Adapter using the USB right angle adapter, follow these steps: 1.

Connect the USB right angle adapter to the Samsung Wireless LAN Adapter. 2. Connect the other end of the right angle adapter to the USB port. * The position of port may differ depending on the model. English Method 2 Connect via an extension cable To reconnect the Samsung Wireless LAN Adapter using the extension cable, follow these steps: 1.

Connect the extension cable to the USB port. Attach the Samsung Wireless LAN Adapter to depending on the model. The back of the TV near the top, using double-sided adhesive tape. NN The Samsung Wireless LAN Adapter should be installed in an interference-free area in order to avoid interference between the adapter and tuner. * The position of port may differ English Network Settings OO MENU Network Network Settings ENTERE You can set the wired or wireless network connection.

NN For detailed settings for wired network, refer to the "Setting the Wired Network", and for detailed settings for wireless network, refer to the "Setting the Wireless Network" in this manual. English Network Status OO MENU Network Network Status ENTERE You can check the current network and Internet status. English Setting the Wired Network for LED 6 series Wired Network Setup (Auto) NN When connecting the LAN Cable, the screen pop-up appears directly to set wired network. Use the Automatic Network Setup when connecting your TV to a network that supports DHCP. To set up your TV's cable network connection automatically, follow these steps: English How to set up automatically 1. Start Cancel If you want to connect to your wireless network, plug in a Samsung Wireless LAN Adapter. NN If it fails to set automatically, check the connection of LAN port. NN If you cannot find network connection values or if you want to set connection manually, set it to Manual, refer to following How to set up manually. English Wired Network Setup (Manual) Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values To get the Network connection values on most Windows computers, follow these steps: 1. Right click the Network icon on the bottom right of the screen. 2. In the pop-up menu that appears, click Status. 3. On the dialogue that appears, click the Support tab. 4. On the Support Tab, click the Details button. The Network connection values are displayed. English How to set up manually To set up your TV's cable network connection manually, follow these steps: 1.

Follow Steps 1 through 2 in the How to IP Settings set up automatically procedure. Press the button to go to the first entry field. Use the number buttons to enter numbers and the arrow buttons to move from one entry field to another. 6. When done, select the OK.

English The check list for wired network connection failure When wired network connection failed, try to apply the following information to each issue. If it is connected, make sure that the router is turned on; if it is on, try turning it off and on again. IP auto setting failed. Try the following to set your IP address automatically or set your IP address manually by selecting IP Settings. Ensure DHCP server is enabled on router and unplug and re-plug-in the router.

Contact your Internet Service Provider for more information. English Issues Unable to connect to the network. Connected to your local network, but cannot connect to the Internet. Solutions and Explanations Check if your IP address is set correctly in IP Settings. Contact your Internet Service Provider for more information. If the problem persists, contact your Internet Service Provider to access the Internet. Network setup complete, Confirm that your router is connected to the Internet. But cannot connect to the If the problem persists, contact your Internet Service Provider to Internet. access the Internet. English Setting the Wireless Network for LED 6 series Wireless Network Setup (Auto) Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key.

The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up wireless security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the setup process. The Network function searches for available wireless networks. When done, it displays a list of the available networks. Start Cancel If you want to connect to your wired network, plug in a network cable. 4. In the list of networks, press the or button to select a network, and then press ENTERE button. NN If the wireless router is set to Hidden (Invisible), you have to select Add Network and enter the correct network name and Security key to establish the connection. English 5. If the Security screen pop-up appears, go to step 6. If you select the wireless router which does not have wireless security, go to step 7. 6. To set wireless security for the router, enter the Security key (Security or PIN).



[You're reading an excerpt. Click here to read official SAMSUNG UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)
<http://yourpdfguides.com/dref/5477788>

When you enter the Security key (Security or PIN), use the number buttons to select number/characters. Press ENTER to enter the characters. You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem. If you want to set connection manually, select the IP Settings. refer to following How to set up manually. English Wireless Network Setup (Manual) Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address. Getting the Network Connection Values To get the Network connection values on most Windows computers, follow these steps: 1.

Right click the Network icon on the bottom right of the screen. 2. In the pop-up menu that appears, click Status. 3. On the dialogue that appears, click the Support tab. 4. On the Support Tab, click the Details button. The Network connection values are displayed. English How to set up manually To set up your TV's cable network connection manually, follow these steps: 1. Follow Steps 1 through 7 in the How to set up automatically procedure.

Press the number button to go to the first entry field. Use the number buttons to enter numbers and the arrow buttons to move from one entry field to another. 6. When done, select the OK. English Wireless Network Setup (WPS(PBC)) If your router has a WPS(PBC) button, follow these steps: 1. The Network function searches for available wireless networks. When done, it displays a list of the available networks. Press the WPS(PBC) button on your router within 2 minutes. Your TV automatically acquires all the network setting values it needs and connects to your network. English The check list for wireless network connection failure When wireless network connection failed, try to apply the following information to each issue.

Try the following to set your IP address automatically or set your IP address manually by selecting IP Settings. Ensure DHCP server is enabled on router and unplug and re-plug-in the router. Check if you need to enter a security key to use the router. Contact your Internet Service Provider for more information. Solutions and Explanations Check that the router is turned on, and if it is on, try turning it off and on again.

Check if you need to enter a security key to use the router. Check if your IP address is set correctly in IP Settings. Check if you need to enter a security key to use the router. Contact your Internet Service Provider for more information. If the problem persists, contact your Internet Service Provider to access the Internet.

Connected to your local network, but cannot connect to the Internet. Network setup complete, Confirm that your router is connected to the Internet. But cannot connect to the Internet. If the problem persists, contact your Internet Service Provider to Internet. access the Internet. English If Your TV Fails to Connect to the Internet Your TV may not be able to connect to the Internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you connect to the Internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV can not connect. To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the Internet. If your Internet service provider requires an ID or password to connect to the Internet, your TV may not be able to connect to the Internet. If this is the case, you must enter your ID or password when connecting to the Internet. The internet connection may fail because of a firewall problem.

If this is the case, contact your Internet service provider. If you cannot connect to the Internet even after you have followed the procedures of your Internet service provider, please contact Samsung Electronics. English Managing the Network Connected Devices M for LED 6 series AllShare Settings OO MENU Network AllShare Settings ENTER Set whether to allow a network connected device like a smartphone or tablet to share content or control TV using an application downloaded on your mobile device. For details on set up options, refer to the "Using the DLNA Functions". English Device Name OO MENU Network Device Name ENTER Change the TV's name by keying in a name manually. A keyboard appears on the screen and you can key in a name for your TV manually using your remote control. For example, if you want to change the name to Samsung TV, press each character using the number buttons, and then select Done. English Executing initial setup Setup OO MENU System Setup ENTER Configure the channels and the time when setting up the TV for the first time or when resetting the unit. For the detailed information about setting Setup, refer to Initial Setup in User Manual. English Setting the Time Time OO MENU System Time ENTER The current time will appear every time you press the INFO button.

Clock: Setting the clock is for using various timer features of the TV. NN If you disconnect the power cord, you have to set the clock again. Clock Mode: Set up the current time manually or automatically. Auto: Set the current time automatically using the time from a digital channel. NN The aerial must be connected in order to set the time automatically.

English Manual: Set the current time manually. NN Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually. NN You can set the Date and Time directly by pressing the number buttons on the remote control. Time Zone (depending on the country): Select your time zone.

NN This function is only available when the Clock Mode is set to Auto. nN When selecting Manual in Time Zone, GMT and DST will be activated. English Using the Sleep Timer OO MENU System Time Sleep Timer ENTER Sleep Timer t: Automatically shuts off the TV after a preset period of time.



[You're reading an excerpt. Click here to read official SAMSUNG UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)
<http://yourpdfguides.com/dref/5477788>

English Setting the On / Off Timer OO MENU System Time On Timer <or> Off Timer ENTER On Timer 1 / On Timer 2 / On Timer 3: Three different on timer settings can be made. You must set the clock first. Setup: Select Off, Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer. English Source: To select the source of the content that will play when the TV turns on. You can: Select TV and have the TV display a specific air or cable channel. Select USB and have the TV play back photo or audio files from a USB device.

Select a source on your TV that you have connected a set-top box to, and have the TV display a channel from the set-top box. NN The USB device must be connected to your TV before you can select USB. English NN If you select a source other than TV or USB, you must: Have a cable or satellite set-top box attached to that source Set the set-top box to the channel you want to watch when the TV goes on Leave the set-top box turned on. NN When you select a source other than TV or USB, the Aerial and Channel options will disappear. Aerial (when the Source is set to TV): Select ATV or DTV. Channel (when the Source is set to TV): Select the desired channel. English Music / Photo (when the Source is set to USB): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically. NN NOTE If there is no music file on the USB device or the folder containing a music file is not selected, the timer function does not operate correctly. When there is only one photo file in the USB device, the slide show will not play. If a folder name is too long, the folder cannot be selected.

English Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names. It is recommended that you use a USB memory stick and a multi card reader when using On Timer. The On Timer function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized. English Off Timer 1 / Off Timer 2 / Off Timer 3: Three different off timer settings can be made.

You must set the clock first. setup: Select Off, Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer. Change the PIN using the Change PIN option. Channel Lock (Off / On): Lock channels in Channel menu to prevent unauthorized users, such as children, from watching unsuitable programme.

Available only when the Source is set to TV. English Programme Rating Lock (depending on the country): Prevent unauthorized users, such as children, from watching unsuitable programme with a userdefined 4-digit PIN code. If the selected channel is locked, the symbol will be displayed. nN The items of Programme Rating Lock differs depending on the country. Change PIN: Change your password required to set up the TV. English Eco Solution OO MENU System Eco Solution ENTER Energy Saving (Off / Low / Medium / High / Picture Off) t: This adjusts the brightness of the TV in order to reduce power consumption. If you select Picture Off, the screen is turned off, but the sound remains on. Press any button except volume button to turn on the screen. English Eco Sensor (Off / On) : To enhance your power savings; the picture settings will automatically adapt to the light in the room. NN If you adjust the Backlight, the Eco Sensor will be set to Off.

for LED 6 series Min. Backlight: When Eco Sensor is On, the minimum screen brightness can be adjusted manually. NN If Eco Sensor is On, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity. No Signal Power Off (Off / 15 min / 30 min / 60 min): To avoid unnecessary Auto Power Off (Off / On): The TV will be automatically turned off when no user operation is received for 4 hours. NN If the Auto Power Off option is set to Off, the TV will stay on even if no operations are performed on the TV. Energy consumption, set how long you want the TV to remain on if it's not receiving a signal. NN Disabled when the PC is in power saving mode. English Other Features Language OO MENU System Language ENTER Menu Language: Set the menu language. Teletext Language (depending on the country): Set a desired language for teletext. Preferred Language (Primary Audio / Secondary Audio / Primary Subtitle / Secondary Subtitle / Primary Teletext / Secondary Teletext): Select a language, which will be the default language when a channel is selected.

Primary Teletext and Secondary Teletext may not be supported in some locations. Unfortunately, you may notice reduced picture quality. Once you play it using Videos, the registration is completed. NN For more information on DivX VOD, visit <http://vod>. Select the CI Menu based on the menu PC Card.

Turn it Off if you do not want to use it. NN You must use a CAM that supports transcoding the video codec. You can install the CAM anytime whether the TV is on or off. 3. 4.

Check if you can see a picture on a scrambled signal channel. English Self Diagnosis OO MENU Support Self Diagnosis ENTER NN Self Diagnosis might take few seconds, this is part of the normal operation of the TV. Picture Test (Yes / No): Use to check for picture problems. Sound Test (Yes / No): Use the built-in melody sound to check for sound problems.



[You're reading an excerpt. Click here to read official SAMSUNG UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)

NN If you hear no sound from the TV's speakers, before performing the sound test, make sure Speaker Select is set to TV Speaker in the Sound menu. For LED 6 series NN The melody will be heard during the test even if Speaker Select is set to External Speaker or the sound is muted by pressing the MUTE button. For LED 6 series English English Signal Information (digital channels only): HDTV channel's reception quality is either perfect or the channels are unavailable. adjust your aerial to increase signal strength. Reset: Reset all settings to the factory defaults except network settings. Troubleshooting: If the TV seems to have a problem, refer to this description.

Change the PIN using the Change PIN option. NN If none of these troubleshooting tips apply, contact the Samsung customer service centre. English Software Update OO MENU Support Software Update ENTERE Software Update can be performed by downloading the latest firmware from www. Current Version-the software already installed in the TV. Installing the Latest Version By USB: Insert a USB drive containing the firmware upgrade file, downloaded from www. Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade. When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.

English Online for LED 6 series : Upgrade the software using the Internet.

nN First , configure your network. For detailed procedures on using the Network Setup, refer to the Network Settings instructions. NN If the internet connection doesn't operate properly, the connection may be broken. English By Channel: Upgrade the software using the broadcasting signal. NN If the function is selected during the software transmission period, software will be automatically searched and downloaded.

NN The time required to download the software is determined by the signal status. Alternative Software: Replace the current software with the alternative. Standby Mode Upgrade (Off / 1 hour later / 2 hours later / 00:00 / 02:00 / 12:00 / 14:00): A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

English Contact Samsung OO MENU Support Contact Samsung ENTERE View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software. English Contents Home OO MENU Support Contents Home ENTERE You can enjoy useful and various contents. English Using the 3D function for LED 6 series 3D OO MENU Picture 3D ENTERE This exciting new feature enables you to view 3D content. NN "Full HD 3D Glasses" Logo indicates compatibility between display products and 3D Glasses which are compliant with the "Full HD 3D Glasses" format, and does not indicate picture quality of display products. English Viewing TV using the 3D function IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES. Read and understand the following safety information before using the TV's 3D function. WARNING [Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea and headaches. If you experience any such symptom, stop viewing 3D TV, remove 3D Active Glasses and rest. Watching 3D images for an extended period of time may cause eye strain.

If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses and rest. English A responsible adult should frequently check on children who are using the 3D function. If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest. Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.) Do not use the 3D function or 3D Active Glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may result in injuries due to running into objects, tripping, and/or falling. English 3D Mode: Select the 3D input format. NN If you want to feel the 3D effect fully, please wear the 3D Active Glasses first, and then select 3D Mode from the list below that provides the best 3D viewing experience. NN When watching 3D images, turn on 3D Active Glasses. Displays two images next to each other.

Operation 2D 3D Side by Side Top & Bottom English NN Some file format may not be supported the "2D 3D". NN When you watch 3D images under flickering lighting such as a fluorescent lamp (50Hz ~ 60Hz) or a 3 wavelength lamp, you may notice some screen flickering. If this occurs, dim or turn off the light. 3D 2D (Off / On): Displays the image for the left eye only.

English How to watch the 3D image Method 1 NN Some 3D modes may not be available depending on the format of the image source. NN To watch in 3D, wear 3D Active Glasses and press the power button on the glasses. 1. Press the MENU button, use the \square^2 or \square^4 button to select Picture, and then press the ENTERE button. 2.

Use the \square^2 or \square^4 button to select 3D, and then press the ENTERE button. English 3. Use the \square^2 or \square^4 button to select 3D Mode, and then press the ENTERE button. 4. Using the \square or \square^p buttons, select the 3D Mode of the image you want to view. And then you can view the 3D image. 2. If you want to change 3D options (such as 3D Perspective), press the MENU button, and then select Picture. 3.



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/5477788)

[UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)

<http://yourpdfguides.com/dref/5477788>

Go to Step 3 in the Method 1, and follow the directions from that point on.

To exit the 3D mode, press the W button again. 3D Active Glasses from Samsung's previous product (IR type) or other manufacturers not be supported. When the TV is initially powered on, may take some time until the 3D display is optimized. English The 3D Active Glasses may not work properly if there is any other 3D product or electronic devices turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses. Be sure to stay within the viewing angle and optimum TV viewing distance when watching 3D pictures. Otherwise, you may not be able to enjoy proper 3D effects. The ideal viewing distance should be three times or more the height of the screen. We recommend sitting with viewer's eyes on a level with the screen. English Using the Explore 3D for LED 6 series OO MENU Support Contents Home ENTERE Press the CONTENT button to select Explore 3D.

You can enjoy the diverse 3D contents through Explore 3D. First, configure your network. For detailed procedures on using the Network Setup, refer to the Network Settings instructions. Explore 3D may not be available in all regions. English Using the Media Contents Enjoy photos, music and movie files saved on a USB Mass Storage Class (MSC) device.

1. Press the CONTENT button to select Media Play / AllShare Play for LED 6 series. 2. Press the button to select desired menu (Videos, Photos, Music), then press the ENTERE button.

Press the button to select desired device, then press the ENTERE button again. english Connecting a USB Device 1. Turn on your TV. 2. Connect a USB device containing photo, music and movie files to the USB port on the side of the TV. 3. When USB is connected to the TV, popup window appears. You can select the Videos, Photos or Music directly. It might not work properly with unlicensed multimedia files. Need-to-Know List before using Media Contents MTP (Media Transfer Protocol) is not supported.

The file system supports NTFS (Read Only), FAT16 and FAT32. Certain types of USB Digital camera and audio devices may not be compatible with this TV. Examples of MSC are Thumb drives, Flash Card Readers (USB HUB are not supported). Devices should be connected directly to the TV's USB port. Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss. The HDD (Hard Disk Drive) connected to USB is not supported. Do not disconnect the USB device while it is loading. The higher the resolution of the image, the longer it takes to display on the screen. MP3 files with DRM that have been downloaded from a non-free site cannot be played.

Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements. A USB device that requires high power (more than 500mA or 5V) may not be supported. If the TV has been no input during time set in Auto Protection Time, the Screensaver will run. The power-saving mode of some external hard disk drives may be released automatically when connected to the TV. English If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.

If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection. If a file deleted from the PC is still found when Media Contents is run, use the Empty the Recycle Bin function on the PC to permanently delete the file. Media Contents only supports sequential jpeg format. The scene search and thumbnail functions are not supported in the Videos. If the number of files and folders saved on a USB storage device is approximately over 4000, the files and folders may not appear and some folders may not be opened.

Select a desired USB device, and then press the TOOLS button. Select Safely Remove USB Device, and then wait until the selected USB device is disconnected. You can remove a USB device from the TV. Select any category, and then press the ENTERE button. 3. Select a desired USB device, and then press the TOOLS button. Select Safely Remove USB Device, and then wait until the selected USB device is disconnected. You can remove a USB device from the TV. To remove a USB device from the TV, we recommend use Safely Remove USB Device function. English Connecting to the PC through network for LED 6 series You can play pictures, music and videos saved on your PC through a network connection in the AllShare Play mode over your TV.

Web storage and out of home network connectivity are not available. If you want to use AllShare Play to play files saved on your PC over your TV, you should download AllShare PC Software and users manual from www. For more information on how to configure your network, refer to Network Connection. You are recommended to locate both TV and PC in same subnet. The first 3 parts of the IP address of the TV and PC should be the same and only the last part (the host address) should be changed. Using a LAN cable, connect between the external modem and the PC onto which the AllShare PC Software programme will be installed. You can connect the TV to the PC directly without connecting it through a Sharer (Router). Functions that are not supported when connecting to a PC through a network: The Background Music On and Background Music Setting functions. The 1/2 (REW) or FF (FF) button while a movie is playing.



[You're reading an excerpt. Click here to read official SAMSUNG UE32EH4003 user guide](http://yourpdfguides.com/dref/5477788)
<http://yourpdfguides.com/dref/5477788>