




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG UE32F4000. You'll find the answers to all your questions on the SAMSUNG UE32F4000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG UE32F4000
User guide SAMSUNG UE32F4000
Operating instructions SAMSUNG UE32F4000
Instructions for use SAMSUNG UE32F4000
Instruction manual SAMSUNG UE32F4000

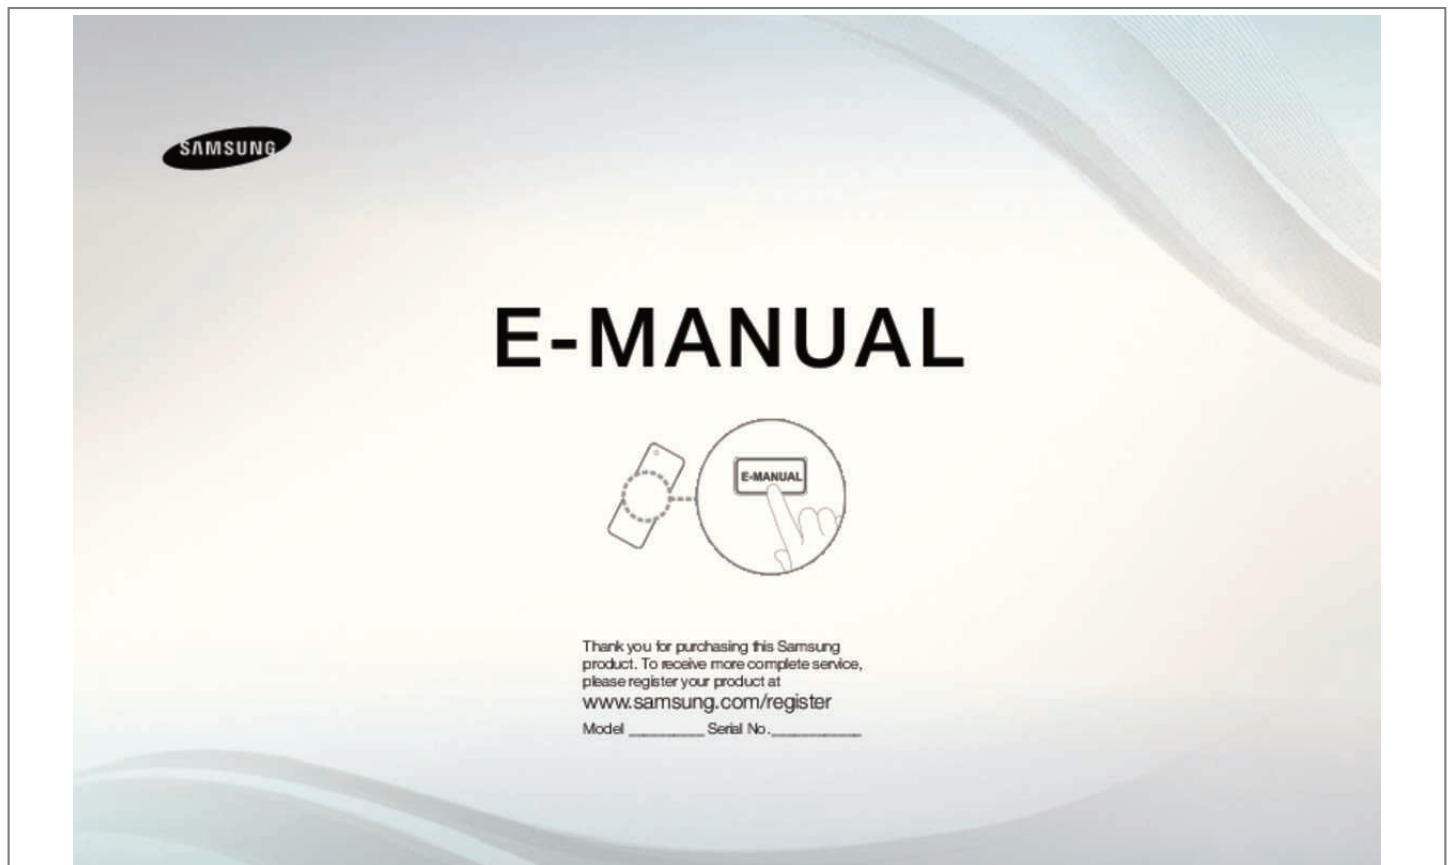

[You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)
<http://yourpdfguides.com/dref/5477789>

Manual abstract:

@@@ And then press the ENTER button, you can see the details of the programme. Scroll, to view information for a desired programme while watching the current channel. Scroll, to view information for other channels. English Memorizing channels Aerial OO MENU Broadcasting Aerial ENTER Before your television can begin memorising the available channels, you must specify the type of signal source that is connected to the TV. English Auto Tuning (depending on the country) OO MENU Broadcasting Auto Tuning ENTER NN Automatically allocated programme numbers may not correspond to actual Auto Tuning Aerial (Air / Cable): Select the aerial source to memorise. or desired programme numbers. If a channel is locked, the PIN input window appears. Search Mode: Scans for all channels with active broadcast stations and stores them in the TV. NN If you select Quick, you can set up the Network, Network ID, Frequency, Modulation and Symbol Rate manually by pressing the button on the remote control. Network: Selects the Network ID setting mode among Auto or Manual.

Network ID: When Network is Manual, you can set up Network ID using the numeric buttons. Cable Search Option (depending on the country & cable channels only) Frequency: Displays the frequency for the channel (differs in each Sets additional search options such as the frequency and symbol rate for a cable network search. Start Frequency / Stop Frequency: Set the start or stop frequency (differs in each country). English Using the Channel menu OO MENU Broadcasting Channel List ENTER Channel List The Channel List contains the channels your TV displays when you press the channel button. You can view channel information, All, TV, Radio, Data/Other, Analogue or Favourites 1-5.

Press (Mode) button to change the channel mode, or press (Sorting) button to change the channel order according to channel number or name on the list. NN When you press the CH LIST button on the remote control, Channel List screen will be displayed at once. English Channel Sorting Number / Name: Arranges the channel order according to channel number or name on the list. NN The TV displays Favourites 1-5 only if you have added favourites using Edit Favourites. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time.

Programme entries may appear blank or out of date depending on a channel status. a Red (Quick Nav): Viewing the TV programmes on the list quickly using buttons. b Green (Channel Category): Select the type of channels you want to English Schedule Manager OO MENU Broadcasting Schedule Manager ENTER You can set a desired channel to be displayed automatically at the intended time. In addition, you can view, modify or delete a channel you have reserved to watch. NN You must set the current time first using the Time Clock function in the System menu to use this function. 1. Press the Schedule on the Schedule Manager screen. Press the buttons to set each option menu. If you select Manual, you can set the day you want. Date: You can set the desired date.

Start Time: You can set the start time you want. NN If you want to edit or cancel a reserved schedule, select the reserved schedule on Schedule Manager. Then press the ENTER button and select the Edit or Delete. Press the buttons to select the desired channel, then press the ENTER button. The (c) mark indicates the channel you've selected. NN You can select more than one channel. NN Press the ENTER again to deselect the channel. English NN Using the coloured and function buttons with the Edit Channel. selected and viewed. / Unlock the channel that you locked.

a Red (Change Number): Changes channel order on the channel list. b Green (Lock / Unlock): Lock a channel so that the channel cannot be NN This function is available only when the Channel Lock is set to On. The option menu items that appear may differ depending on the channel status and type. Sorting (digital channels only): Changes the list ordered by channel number or channel name. This makes it easier to find and select the channel.

Press the buttons to select the desired channel, and then press ENTER button. 3. Choose a specific favourite list among Favourites 1-5 using b (Change Fav.) button, and then press the { (Add) button. the selected channel has been added in Favourites 1-5.

NN One favourite channel can be added in several of favourites among Favourites 1-5. English NN Using the coloured and function buttons with the Edit Favourites. Delete: Deletes the favourite channel from Favourites 1-5. The option menu items that appear may differ depending on the channel status and type. Copy to favourites: Edit the selected favourite channel in Favourites 1-5. You can add or delete from favourite list. English Locking Programme Programme Rating Lock (depending on the country) OO MENU Broadcasting Programme Rating Lock ENTER Prevent unauthorized users, such as children, from watching unsuitable programme with a user-defined 4-digit PIN code. If the selected channel is locked, the symbol will be displayed. NN The items of Programme Rating Lock differs depending on the country. English Channel Lock OO MENU Broadcasting Channel Lock ENTER Lock channels in Channel menu to prevent unauthorized users, such as children, from watching unsuitable programme.

NN Available only when the Source is set to TV. Digital Channel: Change the country for digital channels. Analogue Channel: Change the country for analogue channels.



[You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)
<http://yourpdfguides.com/dref/5477789>

English PIP settings Main picture Component, HDMI Sub picture TV Picture Picture Picture Picture Picture Picture PIP: Activate or deactivate the PIP function. Aerial: Select either Air or Cable as the input source for the sub-screen. Channel: Select the channel for the sub-screen. Size: Select a size for the sub-picture. position: Select a position for the sub-picture. Sound Select: You can choose the desired sound in PIP mode.

English Changing the Picture Options Picture Advanced Settings OO MENU Picture Picture Advanced Settings Picture ENTERE (available in Standard / Movie mode) You can adjust the detailed setting for the screen including colour and contrast.

NN When connecting a PC, you can only make changes to the White Balance and Gamma. Picture Picture Dynamic Contrast: Adjust the screen contrast. Picture Picture Black Tone: Select the black level to adjust the screen depth. Picture Picture Flesh Tone: Adjust the flesh tone colour. English Picture Picture RGB Only Mode: Displays the Red, Green and Blue colour for making fine adjustments to the hue and saturation.

Picture Picture Colour Space: Adjust the range of colours available to create the image. NN To adjust Colour, Red, Green, Blue and Reset, set Colour Space to Custom. For PDP TV / LED 6 series Picture Picture White Balance: Adjust the colour temperature for a more natural picture. R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green, blue) darkness. Picture Picture R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness.

Reset: Resets the White Balance to its default settings. English Picture Picture 10p White Balance: Controls the white balance in 10 point interval by adjusting the red, green, and blue brightness. NN Available when the picture mode is set to Movie and when the external input is set to all input. NN Some external devices may not support this function. Reset: Resets the 10p White Balance to its default settings. Picture Picture Gamma: Adjust the primary colour intensity. English Picture Picture Expert Pattern: By running the Expert Pattern function, the picture can be calibrated without a generator or filter. If the OSD menu disappears or a menu other than the Picture menu is opened, the calibration is saved and the Expert Pattern window disappears. NN While the Expert Pattern is running, sound is not outputted. For PDP TV / LED 6 series Picture Picture Motion Lighting: Reduce power consumption by brightness control adapted NN Only enabled on Component / HDMI mode.

For PDP TV English for LED TV / Cell, Brightness or Contrast, Motion Lighting will be set to English Picture Picture Picture Options OO MENU Picture Picture Picture Options Picture ENTERE NN When connecting a PC, you can only make changes to the Colour Tone. Picture Picture Colour Tone NN Warm1 or Warm2 will be deactivated when the picture mode is Picture Dynamic. NN Settings can be adjusted and stored for each external device connected to an input on the TV.

Picture Picture Digital Clean View: If the broadcast signal received by your TV is weak, you English can activate the Digital Clean View feature to reduce any static and ghosting that may appear on the screen. NN When the signal is weak, try other options until the best picture is displayed. english Auto Visualisation: When changing analogue channels, displays signal strength. Picture Picture MPEG Noise Filter: Reduces MPEG noise to provide improved picture NN Only available for analogue channels. NN When the INFO button is pressed, the signal strength bar is displayed. NN When bar is green, you are receiving the best possible signal. Picture quality.

Picture Picture HDMI Black Level: Selects the black level on the screen to adjust the screen depth. Picture NN Available only in HDMI mode (RGB signals). English Picture Picture Film Mode: Sets the TV to automatically sense and process film signals from all sources and adjust the picture for optimum quality. NN The Cinema Smooth function is only activated when HDMI 24Hz signal is inputted. For PDP TV NN Available in TV mode and external input mode which supports SD (480i / 576i) and HD (1080i) except in PC mode.

NN If the screen does not seem natural, change its option to Off / Auto1 / Auto2 in Film Mode. English Picture Picture Motion Plus Picture: Removes drag from fast scenes with a lot of movement to provide a clearer picture. NN The Info screen on your TV displays the resolution and frequency of the incoming signal (60Hz), but not the frequency the TV is generating for the image it is displaying by using Motion Plus function. NN If noise occurs on the screen, please set up the Motion Plus to Off. If Motion Plus is Custom, you can set up the Blur Reduction, Judder Reduction or Reset manually.

NN If Motion Plus is Demo, you can compare the difference of on and off modes. English for LED 6 series English Blur Reduction: Adjusts the blur reduction level from video sources. Judder Reduction: Adjusts the judder reduction level from video sources when playing films. LED Clear Motion: Removes drag from fast scenes with a lot of movement to provide a clear picture. NN It will be deactivated when the picture mode is set to Natural. NN The screen may become slightly darker when you play LED Clear Picture Motion. reset: Reset the custom settings. For PDP TV Picture Picture Black Optimiser: Realizes of the black colour deeply and expands Picture the contrast ratio. NN When connecting a PC, it will be set to off and deactivated. Media Play, PIP, Teletext) NN When the TV is operating other applications, it will be deactivated.

(ex. English Picture Picture Picture Off t OO MENU Picture Picture Picture Picture Off Picture ENTERE The screen is turned off but the sound remains on. Press any button except volume button to turn on the screen. Picture Picture Reset Picture OO MENU Picture Picture Picture Reset Picture Picture ENTERE Resets your current picture mode to its default settings. English Picture Picture Changing the Preset Sound Mode Picture Picture Sound Mode OO MENU Picture Picture Sound Picture Sound Mode Picture ENTERE Picture Picture Picture Picture Picture Picture Standard: Selects the normal sound mode. music: Emphasizes music over voices.

Movie: Provides the best sound for movies.



You're reading an excerpt. [Click here to read official SAMSUNG UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)
<http://yourpdfguides.com/dref/5477789>

Clear Voice: Emphasizes voices over other sounds. **Amplify:** Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired. **1 channel surround sound experience** through a pair of speakers using HRTF (Head Related Transfer Function) technology.

TruDialog This function allows you to increase the intensity of a voice over background music or sound effects so that dialogue can be heard more clearly. **English Equaliser** Use Equaliser to customize sound setting for each speaker. **Balance:** Adjusts the balance between the right and left speaker. **100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment):** Adjusts the level of specific bandwidth frequencies. **Reset:** Resets the equaliser to its default settings.

nN If Speaker Select is set to External Speaker, Sound Effect is disabled. **3D Audio for PDP 4900 / LED 6 series** OO MENU Sound 3D Audio ENTERE 3D audio technology provides the immersive sound corresponding to the pop-up effect of 3D video by audio depth control in perspective. **Available in only when watching 3D image.** English Speaker Settings OO MENU Sound Speaker Settings ENTERE Speaker Select t A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to External Speaker.

NN When Speaker Select is set to External Speaker, the volume and TV Speaker: Off, External Speaker: On MUTE buttons will not operate and the sound settings will be limited. **TV Speaker: On, External Speaker: On** NN If there is no video signal, both speakers will be mute. **English Auto Volume** To equalize the volume level on each channel, set to Normal. **Night:** This mode provides an improved sound experience compared to Normal mode, making almost no noise. it is useful at night. **NN** To use the volume control on the source device connected to the TV, set Auto Volume to Off on the TV. Otherwise, a change to the volume control of the source device may not be applied. **English Additional Settings** OO MENU Sound Additional Settings ENTERE **DTV Audio Level (digital channels only):** This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level. **NN** According to the type of broadcast signal, MPEG / HE-AAC can be adjusted between -10dB and 0dB. **NN** To increase or decrease the volume, adjust between the range 0 and -10 respectively.

English Digital Audio Out: Digital Audio out is used to provide digital sound, reducing interference going to speakers and various digital devices such as a DVD player. **Audio Format:** You can select the Digital Audio output format. The available Digital Audio output format may differ depending on the input source. **Audio Delay:** Correct audio-video sync problems, when watching TV or video, and when listening to digital audio output using an external device such as an AV receiver (0ms ~ 250ms). **English Dolby Digital Comp:** This function minimizes signal disparity between a dolby digital signal and a voice signal (i. **NN** Select Line to obtain dynamic sound, and RF to reduce the difference between loud and soft sounds at night time. **Line:** Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB. **RF:** Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB. **Reset Sound** OO MENU Sound Reset Sound ENTERE Reset all sound settings to the factory defaults. **English Selecting the Sound Mode** t When you set to Dual I-II, the current sound mode is displayed on the screen.

audio Type A2 Stereo Mono Stereo Dual NICAM Stereo Mono Stereo Dual Dual I-II Mono Stereo Mono Dual I Dual II Mono Mono Stereo Mono Dual I Dual II Dual I Dual I Automatic change Default Automatic change to the mono. **NN** If the stereo signal is weak and an automatic switching, occurs, then switch **NN** Only activated in stereo sound signal. **nN** Only available when the Source is set to TV. **English Executing initial setup** Setup OO MENU System Setup ENTERE Configure the channels and the time when setting up the TV for the first time or when resetting the unit. **NN** Execute the initial setup following instructions that the TV guides.

English Setting the Time Time OO MENU System Time ENTERE The current time will appear every time you press the INFO button. **Clock:** Setting the clock is for using various timer features of the TV. **NN** If you disconnect the power cord, you have to set the clock again. **Clock Mode:** Set up the current time manually or automatically. **Auto:** Set the current time automatically using the time from a digital channel.

NN The aerial must be connected in order to set the time automatically. **Manual:** Set the current time manually. **NN** Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually. **NN** You can set the Date and Time directly by pressing the number buttons on the remote control. **Time Zone (depending on the country):** Select your time zone. **Time Offset (depending on the country) for PDP 4900 Series :** Adjusts the time when your TV receives the time information via Internet. Set the right time by selecting an offset. **NN** This function is only available when the Clock Mode is set to Auto. **nN** When selecting Manual in Time Zone, GMT and DST will be activated.

NN The current time will be set through a network, if the TV fails to receive the time information including the broadcast signal from TV stations. (ex: Watching TV via set-top box, Satellite receiver, or etc) **English Using the Sleep Timer** OO MENU System Time Sleep Timer ENTERE Sleep Timer t: Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes) **NN** Use the buttons to select a period of time, and then press ENTERE.



You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide

<http://yourpdfguides.com/dref/5477789>

to cancel the Sleep Timer, select Off. **English** Setting the On / Off Timer **OO** **MENU** **System** **Time** **On Timer** **<or>** **Off Timer** **ENTER** **On Timer**: You can set up three separate On Timer configurations. (On Timer 1, On Timer 2, On Timer 3) Setup: Select Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun or Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer. **English Source**: To select the source of the content that will play when the TV turns on. You can: Select TV and have the TV display a specific air or cable channel. Select USB and have the TV play back photo or audio files from a USB device.

Select a source on your TV that you have connected a set-top box to, and have the TV display a channel from the set-top box. **NN** The USB device must be connected to your TV before you can select USB. **English** **NN** If you select a source other than TV or USB, you must: go on Leave the set-top box turned on. **NN** When you select a source other than TV or USB, the Aerial and Channel options will disappear. aerial (when the Source is set to TV): Select ATV or DTV.

Have a cable or satellite set-top box attached to that source Set the set-top box to the channel you want to watch when the TV Channel (when the Source is set to TV): Select the desired channel. **English Music / Photo** (when the Source is set to USB): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically. If there is no music file on the USB device or the folder containing a music file is not selected, the timer function does not operate correctly. When there is only one photo file in the USB device, the slide show will not play. If a folder name is too long, the folder cannot be selected.

Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names. **English** It is recommended that you use a USB memory stick and a multi card reader when using On Timer. The On Timer function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized. **Off Timer**: You can set up three separate Off Timer configurations. (Off Timer 1, Off Timer 2, Off Timer 3) Setup: Select Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun or Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer. **English** **Economical Solutions** **Eco Solution** **OO** **MENU** **System** **Eco Solution** **ENTER** **Energy Saving**: This adjusts the brightness of the TV in order to reduce power consumption. **Eco Sensor for PDP TV / LED 6 series**: To enhance your power savings; the picture settings will automatically adapt to the light in the room. **NN** If you adjust the Backlight for LED TV / Cell Light for PDP TV, the Eco Sensor will be set to Off.

Backlight for LED TV / Min Cell Light for PDP TV: When Eco Sensor is On, the minimum screen brightness can be adjusted manually. **English** **NN** If Eco Sensor is On, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity. **English** **No Signal Power Off**: To avoid unnecessary energy consumption, set how long you want the TV to remain on if it's not receiving a signal. **NN** Disabled when the PC is in power saving mode. **Auto Power Off**: The TV will be automatically turned off when no user operation is received for 4 hours. **NN** If the Auto Power Off option is set to Off, the TV will stay on even if no operations are performed on the TV. **English** **Other Features** **Menu Language** **OO** **MENU** **System** **Menu Language** **ENTER** Set the menu language. **Auto Protection Time** **for LED TV** **OO** **MENU** **System** **Auto Protection Time** **ENTER** If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen. **English** **Screen Burn Protection for PDP TV** **OO** **MENU** **System** **Screen Burn Protection** **ENTER** To reduce the possibility of screen burn, this unit is equipped with Pixel Shift screen burn prevention technology.

Pixel Shift moves the picture slightly on the screen. The Time function setting allows you to programme the time between movement of the picture in minutes. Your TV also has the following additional screen burn protection functions: **Pixel Shift Auto Protection Time** **Scrolling Side Grey** **English** **Pixel Shift**: Using this function, you can set the TV to move pixels minutely on the PDP screen in a horizontal or vertical direction to minimize after images on the screen. **NN** Available Pixel Shift Settings and Optimum Settings Item Horizontal Vertical Time (minute) 0~4 0~4 1~4 min TV / HDMI 4 4 4 min **NN** The Pixel Shift value may differ depending on the monitor size (inches) **Auto Protection Time**: If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen. and mode.

NN This function is not available in the Screen Fit mode. **English** **Scrolling**: This function removes after-images on the screen by illuminating all **Side Grey**: When you watch TV with the screen ratio set to 4:3, using the Side Grey function can prevent damage to the edges of the screen by adjusting the white balance on the extreme left and right sides. The pixels on the PDP according to a pattern. Use this function when there are after images or symbols on the screen, especially when you displayed a still image on the screen for a long time. **NN** The after-image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after-images on the screen.



You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide

<http://yourpdfguides.com/dref/5477789>

If the after-image is not removed after you apply the function, repeat the function again. **English** **General** **OO MENU** **System** **General** **ENTER** **Game Mode**: When connecting to a game console such as PlayStation[®] or Xbox[®], you can enjoy a more realistic gaming experience by selecting game mode. **NOTE** **Precautions and limitations for game mode** **To disconnect the game console and connect another external device, set Game Mode to Off in the setup menu. slightly.** **If you display the TV menu in Game Mode, the screen shakes** **Game Mode is not available in TV mode.** **After connecting the game console, set Game Mode to On. Unfortunately, you may notice reduced picture quality.** **English** **If Game Mode is On:** **Picture Mode is set to Standard and Sound Mode is set to Movie.** **Panel Lock**: Lock or unlock all the keys on the panel.

Boot Logo: Display Samsung logo when the TV is turned on. **Change PIN** **OO MENU** **System** **Change PIN** **ENTER** **Change your password required to set up the TV. Change the PIN using the Change PIN option.** **English** **DivX[®] Video On Demand** **OO MENU** **System** **DivX[®] Video On Demand** **ENTER** Shows the registration code authorized for the TV. If you connect to the DivX web site and register with 10-digit registration code, you can download the VOD activation file. Once you play it using Videos, the registration is completed. **For more information on DivX[®] VOD, visit http://vod.** **English** **Using the Source List** **Source List** **OO MENU** **Applications** **Source List** **ENTER** **When you press the SOURCE button, Source screen will be displayed at once.** **You can only choose external devices that are connected to the TV.** **For the detailed information, refer to** **Changing the Input Source** **in User** **English** **Connecting a USB Device 1.**

Turn on your TV. 2. Connect a USB device containing photo, music and movie files to the USB port on the side of the TV. 3. When USB is connected to the TV, popup window appears.

You can select the Photos, Videos or Music directly. **English** **It might not work properly with unlicensed multimedia files.** **Need-to-Know List before using Media Contents** **MTP (Media Transfer Protocol) is not supported.** **Supported file systems are FAT and exFAT.** **Devices should be connected directly to the TV's USB port.** **SAMSUNG is not responsible for any data file damage or data loss. The HDD (Hard Disk Drive) connected to USB is not supported. Do not disconnect the USB device while it is loading.** **the maximum supported JPEG resolution is 15360 x 8640 pixels.** **Select a desired USB device, and then press the TOOLS button.** **You can remove a USB device from the TV.** **3.** **4. Press the** **button to select the desired file in the list, then press the ENTER button or** **(Play) button.** **english** **Playing the selected files 1.**

Press the **button** to select Options at the top of each main screen and select Play Selected. **The check box appears to the left of the selected files.** **Press ENTER button again to deselect the file.** **You can select or deselect all files pressing the Select All / Deselect All.** **English** **Playing the Photos / Videos / Music** **During playing a file, press the** **button to select the desired menu.** **When the option menu is not displayed, press the TOOLS button or ENTER button.** **playback.** **You can also use** **buttons on the remote control during** **If you press the INFO button during playback, you can view the playback information.** **English** **Playback menu Button // Operation Previous / Next Start Slide Show / Stop Slide Show Play / Pause // Previous / Next Rewind / Fast forward** **Photos** **Mini Player* Mini Player* Videos Music** **When setting the Background Music to Mini Player in Photos, these buttons appear.** **English** **Setting menu** **Photos Button Slideshow Settings Zoom Rotate Background Music / Mini Player Settings Operation** **You can set the Speed and Effects during the slide show.** **You can zoom into images in full screen mode. you can rotate images in full screen mode. You can set background music when watching a slide show. / You can control simple playback menus. Picture Mode / Sound Mode: You can adjust the picture or sound setting.**

Information: You can see detailed information about the played file. **English** **During the slide show, all files in the file list will be displayed in order.** **When you press the** **(Play) button (or** **button** **Options** **Slide Show)** **in the file list, slide show will be started immediately.** **During the slide show, you can adjust the slide show speed using** **(REW) or** **(FF) button.** **Supported Photo Formats** **For the details, refer to** **Specifications** **in User Manual.**

English **Videos Button Search Operation Search Titles: You can move the other file directly. Search Time Bar: You can search the video using** **and** **button at one minute interval or entering the number directly.** **It may not be supported depending on the input source. Repeat Mode Picture Size** **You can play movie files repeatedly. You can adjust the picture size to your preference. Subtitle Settings: You can play the video with subtitles. This function only works if the subtitles are the same file name as the video. Picture Mode / Sound Mode: You can adjust the picture or sound setting. Audio Language: You can change the audio language if the video has more than one language. Information: You can see detailed information about the played file.**

Settings **English** **If video time information is unknown, play time and progress bar are not displayed.** **In this mode, you can enjoy movie clips contained on a Game, but you cannot play the Game itself.**



[You're reading an excerpt. Click here to read official SAMSUNG](http://yourpdfguides.com/dref/5477789)

[UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)

<http://yourpdfguides.com/dref/5477789>

Supported Subtitle / Video Formats NN For the details , refer to Specifications in User Manual. English English Music Button Repeat Shuffle Sound Mode Operation You can play music files repeatedly. You can play the music randomly. You can adjust the sound setting. NN Only displays the files with supported music file extension. Other file extensions are not displayed, even if they are saved on the same USB device. sound menu. (An over-modulated music file may cause a sound problem.

) NN If the sound is abnormal when playing music files, adjust the Equaliser in the Supported Music Formats NN For the details, refer to Specifications in User Manual. English Setting the Encoding language Set the encoding language if the text is not supported. 1. Press the button to select Options at the top of music main screen and select Encoding. English English Using the 3D function for PDP 4900 / LED 6 series Viewing TV using the 3D function IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES.

Read and understand the following safety information before using the TV's 3D function. WARNING [Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea and headaches. If you experience any such symptom, stop viewing 3D TV, remove 3D Active Glasses and rest. Watching 3D images for an extended period of time may cause eye strain. If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses and rest.

English A responsible adult should frequently check on children who are using the 3D function. If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest. Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.) Do not use the 3D function or 3D Active Glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may result in injuries due to running into objects, tripping, and/or falling. before using 3D function. 3D Active Glasses from Samsung's previous product (IR type) or other manufacturers not be supported. When the TV is initially powered on, may take some time until the 3D display is optimized. English The 3D Active Glasses may not work properly if there is any other 3D product or electronic devices turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.

Be sure to stay within the viewing angle and optimum TV viewing distance when watching 3D pictures. Otherwise, you may not be able to enjoy proper 3D effects. The ideal viewing distance should be three times or more the height of the screen. We recommend sitting with viewer's eyes on a level with the screen. If you can not play 3D videos in some of the BD players, take out the disk from player and put it again, or restart the BD player. English 3D OO MENU Picture 3D ENTERE This exciting new feature enables you to view 3D content. NN "Full HD 3D Glasses" Logo indicates compatibility between display products and 3D Glasses which are compliant with the "Full HD 3D Glasses" format, and does not indicate picture quality of display products. source. NN Some 3D modes may not be available depending on the format of the image NN When you watch 3D images under flickering lighting such as a fluorescent lamp (50Hz ~ 60Hz) or a 3 wavelength lamp, you may notice some screen flickering. If this occurs, dim or turn off the light.

English 3D Mode If you want to feel the 3D effect fully, please wear the 3D Active Glasses first, and then select 3D Mode from the list below that provides the best 3D viewing experience. Displays two images next to each other. displays one image above another. Off 2D 3D Side by Side Top & Bottom NN 3D Mode is set to Off automatically when you access Media Play or e-Manual functions. NN 3D Mode is set to memorised configuration value automatically, when changing the input source.

3D 2D: Displays the image for the left eye only. English Viewing the e-Manual e-Manual OO MENU Support e-Manual ENTERE You can read the introduction and instructions about the TV features stored in your TV. NN For the detailed information about e-Manual Screen, refer to How to use the e-Manual in User Manual. English Using the Self Diagnosis Self Diagnosis OO MENU Support Self Diagnosis ENTERE Self Diagnosis might take few seconds, this is part of the normal operation of the TV. Picture Test: Use to check for picture problems.

Sound Test: Use the built-in melody sound to check for sound problems. NN If you hear no sound from the TV's speakers, before performing the sound test, make sure Speaker Select is set to TV Speaker in the Sound menu. NN The melody will be heard during the test even if Speaker Select is set to External Speaker or the sound is muted by pressing the MUTE button. English Signal Information (digital channels only): HDTV channel reception quality is either perfect or the channels are unavailable. adjust your aerial to increase signal strength. Reset: Reset all settings to the factory defaults except network settings. Change the PIN using the Change PIN option. English Updating the Software Software Update OO MENU Support Software Update ENTERE The Software Update menu lets you upgrade your TV's software to the latest version. Current version: This is the software version already installed in the TV. NN When software is upgraded, video and audio settings you have made will return to their default settings.

We advise you to write down your settings so that you can easily reset them after the upgrade. English Update now By USB: Insert a USB drive containing the firmware upgrade file, downloaded from www.



[You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)
<http://yourpdfguides.com/dref/5477789>

NN Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade. NN If the function is selected during the software transmission period, the software will be automatically searched and downloaded. NN The time required to download the software is determined by the signal status. Auto update: A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is complete. English Changing the Use Mode Use Mode OO MENU Support Use Mode ENTER Select the Use Mode suitable for your place. If you select Store Demo, some functions will not work, and the picture settings will be reset every 30 minutes. English Viewing the Contact Samsung Contact Samsung OO MENU Support Contact Samsung ENTER View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software. English Using the Sports Mode Sports Mode t OO MENU Applications Sports Mode ENTER This mode provides optimized condition for watching sports games.

NN When the sports mode is on, the picture and sound modes are set to Stadium automatically. disable. NN If you turn the TV off while watching Sports Mode, the Sports Mode will be English Using the Satellite System for LED 6170 series Auto Tuning OO MENU Broadcasting Auto Tuning ENTER When Aerial Source is set to Satellite Channel Type: Select the Channel Type to memorise. Satellite: Selects the satellite to scan. The option may differ depending on country.

Scan Mode: Select a scan mode for the selected satellite. Re-initialise: Selects the scanning mode of the selected satellite. nN This function is available after connecting to satellite aerial and set the channels. Search Mode: Sets search mode using up/down buttons. English Manual Tuning OO MENU Broadcasting Channel Settings Manual Tuning ENTER Scan Satellite Transponder: Selects the transponder using the up/down buttons. NN Information on a satellite and its transponder is subject to change depending on the broadcasting conditions.

NN When setting is completed, move to Search and press the ENTER button. Then channel scan is run normally. Satellite Selection: You can choose the satellites for this TV. LNB Power: Enables or disables the power supply for the LNB.

Satellite: Selects the satellite for receiving digital broadcasts. Transponder: Selects a transponder from the list or adds a new transponder. DiSEqC Mode: Selects DiSEqC mode for the selected LNB. Lower LNB Oscillators: Sets the LNB oscillators to a lower frequency. Upper LNB Oscillators: Sets the LNB oscillators to a higher frequency. Tone 22 kHz: Selects the Tone 22 kHz depending on the LNB type. For a universal LNB it should be Auto. NN This function may not support depending on the country. Positioner Type: Sets the positioned type between DiSEqC 1. 2 and USALS(Universal Satellite Automatic Location System).

My Longitude: Sets the longitude for my location. My Latitude: Sets the latitude for my location. Satellite Longitude Settings: Sets the longitude of user defined satellites. English User Mode: Sets the position of satellite aerial according to each satellite. If you store the current position of satellite aerial according to a certain satellite, when the signal of that satellite is needed, the satellite aerial can be moved to pre-populated position.

Satellite: Selects the satellite to set the position for. Transponder: Selects a transponder from the list for signal reception. Moving Mode: Selects the movement mode between discrete and continuous movement. Step Size: Adjusts the step size degrees for the aerial rotation. it is available when Moving Mode is set to Step.

English Go To Stored Position: Rotates the aerial to the stored satellite position. Aerial Position: Adjusts and stores the aerial position for the selected satellite. English Installer Mode: Sets limits to the scope of movement of satellite aerial or reset the position. Store Current Position: Stores the current position as the selected positioner Limit. Go to zero: Moves the aerial to the reference position. Reset positioner limit: Allows the aerial to rotate over the full arc. Reset all settings: All satellite settings will be reset to the initial values. Limit Position: Selects the direction of the positioner Limit. Aerial Position: Adjusts and stores the aerial position for the selected English Using the Wireless Network for PDP 4900 series Using wireless IP sharer (router or modem), you can connect your TV to the wireless network. NN For detailed settings for wireless network connection, refer to the User Manual.

NN NOTE To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network. Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure. English You need to change the wireless router's security settings to AES. In mode is selected and the Encryption type is set to WEP for your wireless router, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.



[You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)
<http://yourpdfguides.com/dref/5477789>

⌘ If your wireless router supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode. ⌘ English ⌘ If your router, modem, or device is not certified, it may not connect to the TV via the ⌘ Samsung Wireless LAN Adapter⌘. ⌘ Connection Methods: You can setup the wireless network connection like below.

⌘ Auto Setup (Using the Auto Network Search function) ⌘ Manual Setup ⌘ WPS(PBC) ⌘ Wi-Fi Direct ⌘ English ⌘ Ensure the TV is turned off before you connect the Samsung Wireless LAN Adapter. ⌘ The Samsung Wireless LAN Adapter may not be recognized when using a connection via a USB hub or via a USB extension cable other than the cable supplied. ⌘ You must use the ⌘ Samsung Wireless LAN Adapter⌘ (WIS12ABGNX, WIS09ABGNX) to use a wireless network. Samsung Wireless LAN Adapter and the USB extension Cable are sold separately and are offered by select retailers and Ecommerce sites. ⌘ English How to connect the Samsung Wireless LAN Adapter 1 Connect using the USB right angle adapter.

2 Connect via an extension cable 1 2 ⌘ NN The picture may appear corrupted or have static for some channels when ⌘ the TV is connected to the Samsung Wireless LAN Adapter. In such a case, connect the Samsung Wireless LAN Adapter using a USB cable in a place that is not affected by radio interference. NN The position of port may differ depending on the model. English ⌘ ⌘ Network Status OO MENU⌘ ⌘ Network ⌘ Network Status ⌘ ENTERE You can check the current network and Internet status. ⌘ ⌘ Network Settings OO MENU⌘ ⌘ Network ⌘ Network Settings ⌘ ENTERE Set the network connection to use AllShare⌘.

⌘ NN The Internet can't be used other than content sharing via AllShare⌘. ⌘ English ⌘ ⌘ Auto Network Setup Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up wireless security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the setup process. The Network function searches for available wireless networks. When done, it displays a list of the available networks. 3. In the list of networks, press the ⌘ or ⌘ button to select a network, and then press ENTERE button. NN If the wireless router is set to Hidden (Invisible), you have to select Add Network and enter the correct network name and Security key to establish the connection. 4.

If the Security screen pop-up appears, go to step 6. The wireless router which does not have wireless security, go to step 7. ⌘ English 5. Enter the security key using ⌘/⌘/⌘/⌘ buttons, and then select Done. NN You can also enter numbers by pressing the number buttons you used to set up your router or modem. NN You should be able to find the Pass Phrase on one of the set up screens 6. NN If you want to set connection manually, select the IP Settings. refer to ⌘ following ⌘ How to set up manually⌘. NN If you select Change Network, you can select other wireless networks. ⌘ English How to set up WPS(PBC) If your router has a WPS(PBC) button, follow these steps: 1.

The Network function searches for available wireless networks. When done, it displays a list of the available networks. Press the WPS(PBC) button on your router within 2 minutes. Your TV automatically acquires all the network setting values it needs and connects to your network. ⌘ English ⌘ ⌘ Manual Network Setup Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

NN You can find the network connection values in control panel of Windows computers. How to set up manually To set up your TV⌘s cable network connection manually, follow these steps: 1. select the IP Settings on network connection screen. NN When it fails to connect the network automatically, the IP Settings is available to select. Move to each field using ⌘/⌘/⌘/⌘ buttons.

Enter the network connection values, and then select OK. ⌘ English The check list for wireless network connection failure When wireless network connection failed, try to apply the following information to each issue. ⌘ Try the following to set your IP address automatically or set your IP address manually by selecting IP Settings. ⌘ Ensure DHCP server is enabled on router and unplug and re-plug-in the router. ⌘ Check if you need to enter a security key to use the router. ⌘ Contact your Internet Service Provider for more information. Connected to your local network, but cannot connect to the Internet. Solutions and Explanations ⌘ Check that the router is turned on, and if it is on, try turning it off and on again. ⌘ Check if you need to enter a security key to use the router. ⌘ Check if your IP address is set correctly in IP Settings.

⌘ Check if you need to enter a security key to use the router. ⌘ Contact your Internet Service Provider for more information. ⌘ If the problem persists, contact your Internet Service Provider to access the Internet. ⌘ English Network setup complete, ⌘ Confirm that your router is connected to the Internet. But cannot connect to the ⌘ If the problem persists, contact your Internet Service Provider to Internet. access the Internet. English ⌘ ⌘ Using the Wired Network UK only ⌘ Wired Network Connection You can attach your TV to your LAN using cable in three ways: ⌘ Connecting the LAN port on your TV to an external modem ⌘ Connecting the LAN port on your TV to a IP Sharer which is connected to an ⌘ external modem ⌘ Connecting the LAN port on your TV directly to a network wall outlet ⌘ NN To use this way, wall outlet is attached to a modem or router elsewhere in your house.



[You're reading an excerpt. Click here to read official SAMSUNG UE32F4000 user guide](http://yourpdfguides.com/dref/5477789)
<http://yourpdfguides.com/dref/5477789>