



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO DMP-P7. You'll find the answers to all your questions on the SANYO DMP-P7 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO DMP-P7
User guide SANYO DMP-P7
Operating instructions SANYO DMP-P7
Instructions for use SANYO DMP-P7
Instruction manual SANYO DMP-P7

SANYO

INSTRUCTION MANUAL

DMP-P7

Clock Radio with dock for iPod

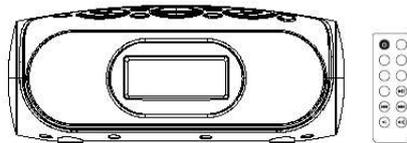

iPod is a trademark of Apple Inc., registered in the US and other countries.



[You're reading an excerpt. Click here to read official SANYO DMP-P7 user guide](http://yourpdfguides.com/dref/3241770)

<http://yourpdfguides.com/dref/3241770>

Manual abstract:

, registered in the US and other countries. **PRECAUTIONS** Please take good note of the following instructions: The unit must be connected to the power voltage which is the same as the local area. If not, there is a danger of "burning" the unit that causes a fire. Do not expose to the temperature higher than 35°C. Avoid installation near heaters or in areas subjected to direct sunlight. Ensure good air circulation. Protect the unit from dust, moisture and water. Avoid strong magnetic fields, e.g. near TVs or Speakers for other units.

Avoid using strong chemical agents to clean. Do not grease or oil components, running mechanisms, etc. The CD player is designed to be maintenance free. Take the unit to approved service point for servicing. **CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN** This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit. **CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL** **CAUTION:** The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product. The normal ventilation of the product shall not be impeded for intended use.

Do not place naked flame sources, such as lighted candles, should be placed on the apparatus. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. Do not place the product in closed bookcases or racks without proper ventilation. @@@@Excessive sound pressure from earphones and head hearing loss. The apparatus shall not be exposed to dripping or splashing. @@If not, please consult your dealer. **1 SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT** This equipment has been designed and manufactured to meet European safety standards but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured. **DO** read the operating instructions before you attempt to use the equipment. **DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between piece of equipment) are properly made in accordance with the supplied instructions. Switch off and withdraw the mains plug when making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation, or safety of your equipment. **DO** be careful with glass panels or doors on equipment. **DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged, in any way - switch off, withdraw the mains plug and consult your dealer. **DON'T** remove any fixed cover as this may expose dangerous voltages. **DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people. **DON'T** listen to headphones at high volume, as such use can permanently damage your hearing. **DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to rain or moisture. Above all **NEVER** let anyone, especially children, push anything into holes, slots or any other openings in the case. This could result in a fatal electric shock. **NEVER** guess or take chances with electrical equipment of any kind. It is better to be safe than sorry! Note : If energy saving lamps (Fluorescent) are used in the same room as the unit, erratic operation may occur.

2 Controls and Indicators 1. 2. 3. 4. 5.
6. 7. 8. 9. 10. 11. 12. 13. 14. 15.

Speaker LCD Display SKIP / FORWARD/BACKWARD 1 2 Buttons AUX Button Dock ALARM 1 Button WAKE Button VOLUME UP/DOWN Buttons SLEEP Button ST/MONO Button ALARM 2 Button SNOOZE/DIMMER Button iPod PLAY/PAUSE Button BAND/RADIO Button POWER Button 5 4 3 6 + - 8 7 9 15 14 13 12 11 10 16. 17. 18. 19. 20. 21. 22. Battery compartment AC Cord AUX OUT Jack CLOCK Button AM Loop Antenna Socket AUX IN Jack FM Antenna Wire 16 17 18 19 20 21 22 5 Getting Started Thank-you for choosing the SANYO DMP-P7 Dual alarm clock PLL radio with iPod. Designed specifically to work with your docking iPod, this system provides high quality audio and radio performance that brings out the best in your music. An auxiliary input enables connection of a non-iPod.

Please read this instruction book carefully before operating the DMP-P7, and keep it for future reference. iPod Inserts Your clock radio comes with removable inserts to ensure your iPod fits properly in the dock on the top of the system. Due to new iPod models, new inserts subject to availability. Thin iPods Insert iPod 3 Gen iPod 3 Gen iPod 4 Gen iPod Photo 10-15 GB 20 GB 20 GB 30 GB Thick iPods Insert iPod 3 Gen iPod 3 Gen iPod 4 Gen iPod Photo iPod Photo 30 GB 40 GB 40 GB 60 GB Nano Insert iPod Nano iPod Nano 2 GB 4 GB To place an insert: 1. 2.

3. 4. Select the insert for your iPod. Using the correct insert ensures the proper fit for your iPod. Gently press the iPod insert into the dock. Carefully place your iPod into the dock. (The iPod must not be in a case or "skin"). To remove/replace an insert, first remove your iPod, then grip the insert and pull gently upwards. Install AM loop antenna Plug the AM loop antenna into the connector located on the back of the unit for AM band radio operation. For best reception, please move the AM antenna 12" away from the unit and iPod. 3 Getting Started Install/Replace Backup Battery The clock radio uses a backup battery system to provide continuous alarm operation and clock settings in the event of a power failure. If the Backup Battery has been installed and a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit, but the current time and alarm time settings will be temporarily maintained. Otherwise, you must reset the time and alarm settings. 1. Please make sure the AC cord is connected.

Otherwise all settings may be lost during battery replacement. 2. Open the battery compartment cover located on the bottom of the unit. 3. Insert 2 "AA" batteries, checking that the polarity (+ and - ends of the batteries) matches the drawing inside the battery compartment. We recommend the use of alkaline batteries for longer life. Different types of batteries or new and used batteries are not to be mixed. 4. Close the compartment cover. Batteries information: Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



[You're reading an excerpt. Click here to read official SANYO DMP-P7 user guide](http://yourpdfguides.com/dref/3241770)

<http://yourpdfguides.com/dref/3241770>

Maintenance Place the unit on a level surface away from sources of direct sunlight or excessive heat. Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture. Clean your unit with a soft cloth moistened only with mild soap and water.

Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit. Before Operation Turning the power on and off - Press the / STANDBY button to turn on the power, the display lights. - To turn the power off, press the / STANDBY button again. @@@@1. The battery door is located on the back end of the unit.

2. @@3. Insert a "CR2025" 3-volt lithium battery. Make sure the polarity (the + and - side of the battery) is correct. 4. @@@@24. 25. 26. 27. 28.

@@Switches the receiver between FM stereo and mono modes. Mono reduces the noise heard when listening to weak FM stations. iPod and plays track. In play mode, press to pause. @@In radio mode, press to tune stations. HOLD to scan radio stations. Lowers volume level Raises volume level 30. iPod PLAY/PAUSE Button Button 31. Button 32. 33.

VOLUME - Button 34. @@@@Then press the CLOCK Button again to confirm 12H or 24H mode setting. 2. The clock display at the centre will flash. @@@@The year display at the lower right will flash.

@@Press the CLOCK Button to confirm year setting. 4. The date display at the lower right will flash. @@@@The unit can set two Alarm Time. 2. @@@@3. @@A corresponding Wake Icon will light up for the selected Wake sound. To select Buzzer Hi or Low 4. @@Then select AL-L or AL-H by pressing SKIP or repeatedly. @@The alarm time and wake to mode are set. Note: Once you set the alarm time, the alarm will be automatically armed. The Alarm Icon and Wake Icon will appear to indicate the alarm i To turn off the unit, press the POWER Button (or POWER ON/OFF Button on the remote control) to turn it off. 10 Storing preset stations The unit enables you to program 10 stations of FM and 10 stations of AM band. 1. Press the SKIP FORWARD or BACKWARD Button on the clock radio (or or Button on the remote control) to tune to the station you wish to store.

2. Press the PROG Button once on the remote. 3. Press the PRESET Button repeatedly on remote to select a preset number to store the station. 4. Press the PROG Button again to store station in chosen preset. RECALLING PRESET STATION Press the PRESET Button on remote control repeatedly to select the desired station. Alarm Operation NOTE: TO WAKE TO IPOD, YOUR IPOD MUST BE PROPERLY DOCKED AND OFF (NOT IN PLAY MODE) OR NO ALARM WILL SOUND. 1. Set the alarm time per Setting Alarm time.

To preview the alarm time, just press the ALARM 1 Button or ALARM 2 Button once. 2. You can change the sound mode you wish to wake to at any time by pressing the WAKE Button. 3. Press the ALARM 1 Button or ALARM 2 Button again to arm or disarm the alarm.

4. When the alarm is sounding, press the POWER Button on the clock radio (or POWER ON/OFF Button on the remote control) to turn the alarm OFF. The alarm will come on again the next day at the same time. 5. To stop the alarm from coming on the following day, press the ALARM 1 Button or ALARM 2 Button to turn it OFF.

The Alarm Icon and Wake Icon will disappear to indicate the alarm is disarmed. If the alarm is not turned off after it sounds it will play for approximately 1 hour then turn off automatically. 6. This cycle will repeat every 24 hours unless the controls are changed. Note: When you select Wake To iPod, please make sure your iPod has enough songs to play for 1 hour, otherwise please set the iPod repeat mode to ON. Note: If you select Wake To iPod but no iPod is present or there is no music on the iPod at alarm time, the clock radio will automatically switch to buzzer alarm. 11 Sleep Operation 1. When the clock radio is off or while listening to your iPod or the radio, press the SLEEP Button to enter sleep mode. The unit will automatically turn off after the selected time. Sleep mode has a Gentle Sleep feature which gradually lowers the volume.

2. You can adjust the sleep timer from 120, 90, 60, 30, 15 minutes by pressing the SLEEP Button again. Pressing the SLEEP Button while sleep is set to 30 minutes will turn off the unit. 3. When the display changes back to show the real time, pressing the SLEEP Button once will show the sleep time remaining. Pressing it again will change sleep time to the next lowest increment. 4. Clock radio has independent volume setting for sleep for sleep mode so you can adjust the sleeping volume without affecting the alarm volume. Press the VOLUME UP or DOWN (or press Volume+ and VolumeButton on the remote control) to adjust sleep volume. The sleep volume will remain at that level the next time the you enter sleep mode until controls are changed.

5. To stop listening at any time, press the POWER Button (or POWER ON/OFF Button on the remote control). Snooze/Dimmer Operation 1. Press the SNOOZE/DIMMER Button on the clock radio after the alarm sounds. The alarm will go off and will come on again in approx. 9 minutes. You may repeat this cycle several times during the 1 hour alarm cycle. 2. During normal operation, press the SNOOZE/DIMMER Button to control the brightness of the LCD display. AUX Out Operation You can connect the clock radio to another line-level device such as an amplifier or recording device through the AUX OUT Jack located at the back of the unit.

The volume setting on the clock radio does not affect the line level. Adjust volume level using the volume control on the device you connect to. 12 Troubleshooting Symptom Possible Problem Solution Plug the AC cord into a wall outlet. Plug another device into the same outlet to confirm the outlet is working Make sure the dock insert is the proper fit for your iPod Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock. Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock. Upgrade software on your iPod. @@@@Then reseal it in the dock. @@Please refer to your iPod manual for details.

Plug the AM loop antenna connector to the jack on the back of the unit Move the AM loop antenna away from the main unit and rotate it for best reception Decrease the volume If the iPod original sound source (MP3) is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD, (via the aux socket). Replace current battery with new battery Point the Remote Control toward the clock radio, move within 10 feet of the unit. Turn unit off for a while or lower volume The signal from the aux out jack needs amplification. Use powered speakers/monitors or other amplified audio device. AM loop antenna is not connected to the unit AM band radio is very noisy Sound is distorted AM loop antenna isn't located properly Volume level is set too high Sound source is distorted Remote Control didn't work Battery weak Remote Control is not pointed toward to the clock radio Unit gets warm after extended play at high volume Can't hear speakers attached to aux out jack This is normal Speakers lack power source SPECIFICATIONS GENERAL Power requirement AC DC DC AC Unit 240V ~ 50Hz 3V "AA" size/UM-3 x 2 pcs for Tuner MEMORY back up CR2025 3V lithium battery for Remote control handset 18 Watts 206 (W) x 195 (D) x 85 (H)mm Power consumption Dimension RECEIVER SECTION Receiving bands Tuning range AUDIO SECTION Power output Speaker impedance AUX input sensitivity AM/FM AM 522 - 1620KHz, 9KHz/STEP FM 87.



[You're reading an excerpt. Click here to read official SANYO DMP-P7 user guide](http://yourpdfguides.com/dref/3241770)

<http://yourpdfguides.com/dref/3241770>

5 - 108MHz, 50KHz/STEP 2 Watts per channel 4 ohms 1000 mV 1 PC 1 PC 3 PC 1 PC 1 PC 1 PC 1 PC ACCESSORIES Power AC cord Instruction Manual
Insert Remote Control handset with battery AM loop antenna Patch card 3.5 & 3.5mm plug cable Specifications subject to change without notice. 14
77-20AR60100520 (English) SANYO Electric Co.
, Ltd. Made in China .



[You're reading an excerpt. Click here to read official SANYO DMP-P7 user guide](http://yourpdfguides.com/dref/3241770)

<http://yourpdfguides.com/dref/3241770>