



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO DMP-P8. You'll find the answers to all your questions on the SANYO DMP-P8 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO DMP-P8
User guide SANYO DMP-P8
Operating instructions SANYO DMP-P8
Instructions for use SANYO DMP-P8
Instruction manual SANYO DMP-P8

SANYO

INSTRUCTION MANUAL

DMP-P8

Clock Radio With iPod Dock

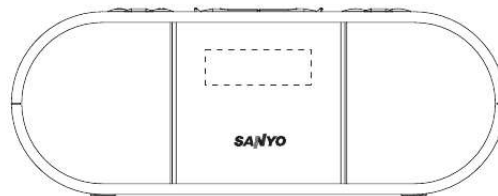

iPod is a trademark of Apple Inc., registered in the US and other countries.



[You're reading an excerpt. Click here to read official SANYO DMP-P8 user guide](http://yourpdfguides.com/dref/3241771)

<http://yourpdfguides.com/dref/3241771>

Manual abstract:

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 2-3 PREPARATION FOR USE

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 4 LOCATION OF CONTROLS AND INDICATORS .

.....
.....
.....
.....

..... 5-7 REMOTE CONTROL BATTERY

.....
.....
.....
.....
.....
.....
.....
.....

8 OPERATION INSTRUCTIONS

.....
.....
.....
.....
.....
.....
.....

.. 9-15 . CARE AND MAINTENANCE

.....
.....
.....
.....
.....
.....
.....

16 TROUBLESHOOTING

.....
.....

.....
.....
.....
.....

.....
.....
.....

... 16-17 TECHNICAL INFORMATION

.....
.....
.....

.....
.....
.....

18 -1- Important Safeguards Signal Word Definitions DANGER - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. This symbol appears only in the most extreme situations. WARNING - Indicates a potentially hazardous situation which could result in death or serious injury. @@@@REFER accompanying the VOLTAGE"INSIDE SERVICING TO QUALIFIED product. THE PRODUCT. SERVICE PERSONNEL. READ ALL INSTRUCTIONS BEFORE USE Always follow basic safety precautions when using electrical products, especially when children are present. WARNING - To reduce the risk of fire,electric shock,or serious personal injury : Ensure the unit is plugged into an AC240V~50Hz outlet. The use of incorrect outlets could cause the unit to malfunction or catch fire. · Do not allow children to operate unit without adult supervision. · Always ensure the product is unplugged from the electrical outlet before relocating or cleaning it. -2- · Keep the power cord and product away from heated surfaces. · The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. · Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet; do not pull on the power cord. · Do not put any stress on the power cord where it connects to the product as the power cord could fray and break. · Do not plug/unplug the product into/from the electrical outlet with a wet hand. · Do not operate the product if it has a damaged or cut power cord or adapter, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped in or exposed to water. · Place the unit where there is good air circulation. · This product has no user-serviceable parts.

Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform the servicing; take the product to the electronics repair shop of your choice for inspection and repair. · No naked flames sources, such as candles, should be placed on the product. CAUTION - To reduce the risk of personal injury or product/property damage: · This product is intended for indoor, non-industrial, non-commercial use; do not use the product outdoors. · Do not mount this product on a wall or ceiling. Battery Handling and Usage: Warning: Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions. · Follow the battery manufacturer's safety and usage instructions. · Keep batteries away from children and pets. · Do not mix a new and a used battery or mix batteries of different chemistries or sizes.

· Insert the batteries observing the proper polarity (+/-) as indicated inside the battery compartment. Failure to properly align the battery polarity can cause personal injury and/or property damage. · If the unit is not to be used for an extended period of time, remove the batteries from the unit. -3- · Never throw batteries into a fire. Do not expose batteries to fire or other heat sources. Preparation For Use UNPACKING AND SET UP · Carefully remove all the accessories from the display carton. Verify that you have all the necessary accessories before you dispose of the display carton. · Remove all packing materials from the individual components. Remove any descriptive labels that may be attached to the front panel of the main unit. Do not remove any labels or stickers on the back panels of the main unit or the speakers.

· Unwind the AC power cord on the back of the unit and extend the cord to its full length. POWER SOURCE · This system is designed to operate on 240V AC 50Hz. · Connecting this system to a power supply that is not 240 V ~ 50 Hz could result in damage to the unit. The main plug is used as the disconnect device. @@This is a safety feature to reduce the possibility of electric shock.

@@Do not use an adapter to make the plug fit into your outlet. @@@@1. Slide out the battery holder from the remote control case. (Push tab "A" towards the middle first, see diagram). 2.

@@@CAUTION: Danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type. 3. Insert the battery holder into the battery compartment. @@@@to enter Clock set mode. @@@@The hour digit will begin flashing. @@Press MODE button to confirm. 4) While hour is confirmed, minute digit will begin flashing. @@@@and the hour digit will begin flashing. Press TUNE/SKIP button to set the hour.

@@Press "ALARM 1" button to confirm. @@@@But the volume of Buzzer will not change. If the wake up mode is set to iPod playback with no iPod connected, it will become Buzzer alarm. B. Set Alarm 2 Press and hold ALARM 2 button on the top panel for 2 sec. and repeat the above 1), 2) & 3) steps in Set Alarm 1 to set ALARM 2. - 10 - Operating Instructions C. Snooze Function After alarm is ON, you can press SNOOZE and ALARM1 / ALARM2 buttons on the top panel or remote control to temporarily deactivate the alarm which will activate again after 9 minutes lapse. To switch it off, you can press ALARM1 / ALARM2 button. D.

Sleep Function When unit is power on, Press SLEEP button on the top panel or remote control, 2:00 and sleep indication will ON. Press SLEEP button again to change and select from 2:00 to 1:30, 1:00, 0:30, 0:20, 0:10 or 0:05. Select "oFF" means no sleep function. While the sleep function is activated, press SLEEP button once and the remained sleep time will be shown. Press SLEEP button again to select another sleep times.

) Listening to Your iPod And Radio/ iPod Charging IMPORTANT! In order to prevent unwanted distortion during iPod playback, it is recommended that you set the EQ in your iPod to the "Off" position. Go to the Main Menu in your iPod and then select the Settings Menu, select the EQ Setting, and make sure that

the EQ function is set to "Off" (Main Menu > Settings Menu > EQ Setting > Select "Off") . Note : We have also included one flat adaptor with no opening at all. This serves as a dust cover that can be inserted in the docking station if no iPod will be connected to this unit for an extended period of time. Remove this dust cover before use.

- 11 - Operating Instructions A. LISTEN TO iPod 1) Press STANDBY/SOURCE button on the top panel or remote control to Power on the unit. To select iPod mode, press STANDBY/ SOURCE button again until the "iPod" icon is shown on the top of display.



[You're reading an excerpt. Click here to read official SANYO DMP-P8 user guide](#)

<http://yourpdfguides.com/dref/3241771>

2) While the "iPod" mode is on, plug the iPod player to the dock and it will switch from play mode to pause mode or from pause mode to play mode. If the unit is not connected to an iPod player, the background light will remain on, plug the iPod player to the dock station and press PLAY to continue playback. 3) Press PLAY/PAUSE button on top panel or remote control to control play and pause function. 4) Press TUNE/SKIP button on top panel or remote control to select previous or next song. 5) Press the VOLUME + / VOLUME - button on top panel or remote control to adjust the VOLUME level of this unit as desired. Control iPod menu by REMOTE CONTROL only Press MODE button on the remote control, the iPod will go to the previous menu. Press IPOD UP/ IPOD DOWN button on the remote control to select up or down of the iPod menu; then press the ENTER button to enter selected menu.

B. Listen To FM/AM Radio NOTE: Unwound and extended antenna to its full length. It may be necessary to vary the direction of this wire antenna until you find the position that provides the best reception for your favourite FM stations. - 12 - Operating Instructions 1) Press STANDBY/SOURCE button on the top panel or remote control to Power on the unit. To select FM or AM radio, press STANDBY/ SOURCE button until "FM" or "AM" icon is shown on the top of display. 2) FM/AM frequency will show on the display. 3) Tune to the desired frequency as follows: a) Automatic Tuning i) Press and hold type battery and always remove the battery if the unit is not to be used for an extended period of time. - 15 - Care And Maintenance Care of the cabinet If the cabinet becomes dusty wipe it with a soft, dry dust cloth. Do not use any wax, polish sprays, or abrasive cleaners on the cabinet. Caution: Never allow any water or other liquids to get inside the unit while cleaning.

Please make sure the unit is unplugged from the power source when cleaning. Troubleshooting Before taking the unit to be repaired, please check the following table when a problem occurs. Consult your dealer or service center if the problem cannot be solved by the following information. NOTE: Warrantee will be void if you try to repair the unit yourself. Problem Power System does not turn on or does not respond to the remote control.

Remedy Strange noises - unit does not work properly. - Make sure AC mains is connected to the wall outlet properly and it has power. @@Reconnect and try again. Check batteries and mains power supply. @@- Batteries low.

@@- Make sure iPod is connected properly. - Make sure the proper cradle for your iPod is fitted to the unit. - Pause mode may be activated; press the Play/Pause button again. - Make sure the iPod is switched on. @@- Make sure the FM antenna is extended. Switch to FM mono mode if signal is weak and this feature is provided. - try rotating the unit. - Move the unit away from other operating electrical equipment such as motorized appliances, transformers, televisions, and microwave ovens. - Please be aware that the structure of some buildings can block radio waves. - Insert new batteries.

- Aim from straight in front to the remote sensor. Radio Poor FM reception. Poor AM (MW) reception. Remote control No functions or short range. - 17 - Technical Information AC Power AM FM DC Backup Output Power Power Consumption : AC 240 ~ 50Hz : 522 - 1620kHz : 87.5 - 108 MHz : 3 V (2 "AA" size batteries) : 2 x 3.5 W : 13 W - 18 - .



[You're reading an excerpt. Click here to read official SANYO DMP-P8 user guide](http://yourpdfguides.com/dref/3241771)

<http://yourpdfguides.com/dref/3241771>