



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO DP19647. You'll find the answers to all your questions on the SANYO DP19647 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO DP19647 User guide SANYO DP19647 Operating instructions SANYO DP19647 Instructions for use SANYO DP19647 Instruction manual SANYO DP19647

CONNECTING A VCR OR DVD TO THE DTV

VIDEO (ANALOG) JACKS

- 1 Connect a Composite cable to the VIDEO1 (Yellow, White, and Red AV jacks).
- 2 Connect DVD to the TV S-Video In Jack, if available on your external equipment.
- 3 Use S-VIDEO jack connection (outside Video jack connection) (VIDEO2).

IMPORTANT FACTS:
Don't be fooled by the phrase "Available in High Definition." Composite jacks offer only 480i (SD) resolution.
To view available High Definition (HD) programs, you must connect your HD equipment to the Component jacks.

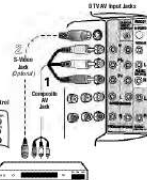


CONNECTING A MULTICHANNEL RECEIVER TO THE DTV

DIGITAL AUDIO OUT JACK

- 1 Connect a Multichannel Receiver to the TV Digital Audio Output as shown.

Note: Only if Digital Audio is available on the Digital Audio Output only when selected as part of a Digital Source input.

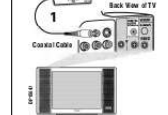


CONNECTING A STEREO AMPLIFIER TO THE DTV

AUDIO OUT (ANALOG) JACKS


- 1 Connect a Stereo Amplifier to the TV Audio Outputs as shown.

Note: Do not connect external speakers directly to the DTV.

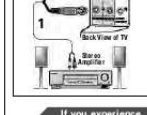

If you experience problems, please call **1-800-877-5032, We Can Help!**

REMOTE CONTROL OPERATION

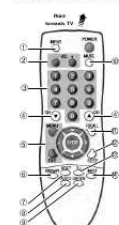

- 1 Input Key—Press to select the program source to watch: TV, Video 1, Video 2, or Video 3.
- 2 Volume Key—Press to adjust.
- 3 Channel Key—Press to select a channel. Example: Press 8 then 0 to select channel 8 (Cable CH).
- 4 Channel Scanning (CH & Y) Key—Press to scan through the channels in memory.
- 5 Menu/Navigation Key—Press to enter the menu.
- 6 Enter & Up/Down Key—Press to move the cursor up and down within the menu.
- 7 Enter & Left/Right Key—Press to move the cursor left and right within the menu.

- 8 Enter Key—Press to select an option from the menu system, when required.
- 9 Exit Key—Press to exit from the menu system.
- 10 FX Shape Key—Use to change the video display format. Available options depend on signal received and the product's aspect ratio. Note: Channel display appears on a full screen. Check Aspect Ratio of broadcast. Then press FX Shape key to change setting.
- 11 Reset Key—Press this key twice to restore factory settings. The TV will automatically reset Channel Search and clear all customized settings. Note: Channel scan memory (database list of digital and analog channels) will be replaced if cleared. Channel settings can be made again using the menu options.
- 12 Audio Key—Press to select the desired audio mode (if available).
- 13 Caption Key—Scrolling in text information transmitted along with the picture, and sound so it can be read on the TV screen. Press CAPTION to select mode options: Digital CC1, CC2, or Analog CC1, CC2, or QuickCap. QuickCap switches captions on and off with the Audio function. Digital Caption can be changed using the menu settings.
- 14 Mute Key—Press to mute the sound.
- 15 Recall Key—Press to switch between the last two selected channels.
- 16 Sleep Key—Press this key when the "0" key to set the Sleep Off Time. Sleep can be set to 0 min to 90 min in 30 min. Use the Sleep Time control when it is turned on (power button on).
- 17 On Key—Press for Analog Cable channel above 99. Press 0 key, then press the number from numbers 0-9 to select channel.
- 18 Info Key—Press to display the Digital and Analog TV Source information. The former indicates the following program, the selected program name, signal strength, channel number, Source CL, and audio information.

ENGLISH

LCD Owner's Manual

Part No. UCW191529

Please call us at **1.800.877.5032** if you need assistance with your **DTV We Can Help!**


FIRST-THINGS-FIRST (REQUIRED INITIAL SETUP)

- 1 Install batteries in remote control (2AA, not included)

PRECAUTIONS

Do not use the remote control for a long time. The battery will be drained. To extend the battery life, do not use the remote control for a long time.

- 2 Connect Signal to the TV's Integrated Analog / Digital System Antenna Input Terminal

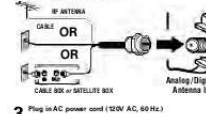

- 3 Plug in AC power cord (120V AC, 60 Hz.)

- 4 Press the POWER key (before screen evaluation)

- 5 Perform "All Channel Search" The All Channel Search will search for other digital and analog channels, and saving cable channels. The DTV will receive cables or other channels, but not at the same time. If after two searches the DTV still fails to detect any channels, the DTV will have to find.

Note: If EXIT is pressed, the DTV will stop Channel Search and turn to (Video1) without changing any channels in the Channel Menu database.

Trademark Information: Manufactured under license from Daily Laboratories. "Daily" is a trademark of Daily Laboratories.

CONNECTING A DVD OR GAME TO THE DTV

VIDEO 2 / 3 (COMPONENT VIDEO IN JACKS)

- 1 Connect a Component cable to the VIDEO2 / 3 Green, Blue, and Red video jacks.
- 2 Connect an Audio Cable to the VIDEO2 / 3 White and Red audio jacks.
- 3 View the program.

Note: VIDEO2 and VIDEO3 jacks have identical functions. Composite video devices can be operated in either or both jacks.

OPERATING TIP:

You DO NOT need to leave the TV to Channel 2 or 4 to view DVD programs.



Model Nos.
DP15647
DP19647


Visit us at www.sanyo.com for more information about these models.



The tuner in the DTV can receive:
1. Digital and/or Analog CHAN-Search channel #8 selection.
2. Single- or Channel-Mode channel.
Note: You must search for CH-SEARCH channels using the "Digital Cable Search" menu option.
3. The output from a VCR or jacks.
Digital signals from a Set Top Box (STB) should be received through the Component jacks.
The DTV can receive ANY television that RF signal being broadcast.
Note: Channels ALL Channel Search.
Note: Channels ALL Channel Search.
All Channel Search (Analog & Digital)



Specifications:
Power Requirement: Source AC 120V 60Hz
Power Consumption: DP15647: 40 watts
DP19647: 50 watts

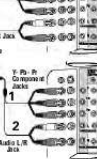

[You're reading an excerpt. Click here to read official SANYO DP19647 user guide](http://yourpdfguides.com/dref/3297191)
<http://yourpdfguides.com/dref/3297191>

Manual abstract:

OPTIONAL Connect DVD to the TV S-Video In Jack, if available on your external equipment. AS Model Nos. 2 S-Video Jack (Optional) Part No.: Note: S-Video jack connection overrides Video jack connection (VIDEO1). Press INPUT to select Video1 to view the VCR or DVD program. Remote Control 1 Composite AV Jack 1.800.877.5032 if you need assistance with your new HDTV. DP15647 DP19647 Visit us at www.sanyoctv.com for more information about these models. **IMPORTANT FACTS: We can Help! FIRST-THINGS-FIRST Don't be fooled by the phrase "Available in High-Definition."** Composite jacks offer only 480i (SDTV) resolution. To view available High-Definition (HD) programs, you must connect your HD equipment to the Component jacks.

3 VCR or DVD (REQUIRED INITIAL SETUP) 1 CONNECTING A STEREO AMPLIFIER TO THE DTV AUDIO OUT (ANALOG) JACKS Install batteries in remote control (2AA, not included) PRECAUTIONS CONNECTING A MULTICHANNEL RECEIVER TO THE DTV DIGITAL AUDIO OUT JACK To ensure safe operation, please observe the following precautions: Replace both batteries at the same time. Do not use a new battery with a used battery. Risk of explosion, if battery is replaced by an incorrect type. Do not expose the Remote Control Unit to moisture or heat. 1 Connect a Multichannel Receiver to the TV Digital Audio Output as shown.

Note: Dolby® Digital 5.1 audio is available at the Digital Audio Output only when received as part of a Digital Antenna signal. 1 Connect a Stereo Amplifier to the TV Audio Out jacks as shown. 2 Connect Signal to the TV's Integrated Analog / Digital 75 ohm Antenna Input terminal RF ANTENNA CABLE Note: Do not connect external speakers directly to the DTV. The Tuner in this DTV can receive: 1. Digital and /or Analog Off-Air Signals from an RF antenna. OR 2. Analog or ClearQAM cable channels. Note: You must search for ClearQAM channels using the "Digital Cable Search" menu option. OR 3.

The output from a VCR or cable box. Multichannel Receiver Back View of TV OR OR 1 Coaxial Cable 1 Back View of TV Stereo Amplifier CABLE BOX or SATELLITE BOX Analog/ Digital Antenna In If you experience problems, please call 3 4 5 Plug in AC power cord (120V AC, 60 Hz.) Press the POWER key. (Follow on-screen instructions) Digital signals from a Set-Top Box (STB) should be received through the Component In jacks. @@@@If after two searches the DTV still fails to detect any channels, the DTV will tune to Video1. Initial on-screen ALL Channel Search REMOTE CONTROL OPERATION Point towards TV 1-800-877-5032, We Can Help! « Enter Key--Press to select an option from the menu system, when required. Exit Key--Press to exit from the menu system. PIX Shape Key--Use to change the video display format. Available options depend on signal received and the broadcast's aspect ratio. Note: Cannot display picture on a full screen.

Check Aspect Ratio of broadcast. Then press PIX Shape key to change setting. Reset Key--Press this key twice to restore factory settings. @@@@If desired, personal settings can be made again using the menu options. Audio Key--Press to select the desired audio mode (if available).

Caption Key--Captioning is text information transmitted along with the picture and sound so it can be displayed on the TV screen. Press CAPTION to select mode options: Digital CCI ~ CC6, or Analog CCI ~ CC4, OFF, or QuikCap. (QuikCap switches captions on and off with the Mute function.) Digital Captions can be changed using the menu settings. @@@@Volume Keys--Press VOL + to adjust.

Number Keys--Press two keys to select a channel. Example: Press 0 then 6 to select channel 6. @@@@Menu Navigational Keys: Menu--Press to display on-screen menu. @@@@Connect an Audio Cable to the VIDEO2 / 3 White and Red audio jacks. @@@@12 Sleep Key--Press this key then the "0" key to set the Sleep Off Timer. Time can be set in 30-minute increments up to 3 hours. Note: The Sleep Timer cancels when the TV is turned off or if a power failure occurs. Note: VIDEO2 and VIDEO3 jacks have identical functions. Compatible video devices can be connected to either or both jacks. 13 1 Key--For Analog Cable channels above 100, press this key, then press the other two numbers.

14 Info Key--Press to display the Digital and Analog Full Banner information. The banner contains the following: program title, station ID, program rating, signal strength, channel number, tuner ID, and audio information. OPERATING TIP: You DO NOT need to tune the TV to Channel 3 or 4 to view DVD program. Remote Control 1 2 3 Audio L/R Jack ON-SCREEN MENU OPERATION MENU NAVIGATIONAL MAP All Channel Search Digital Cable Search Digital Add-on Search Analog Antenna Signal Channel Scan Memory Digital Caption No Yes No Yes No Yes Cable VHF/UHF Delete? Add? Font Size Font Style Background Color ONE-YEAR LIMITED PARTS AND LABOR WARRANTY THIS LIMITED PARTS AND LABOR WARRANTY IS VALID ONLY ON SANYO TELEVISIONS PURCHASED AND USED IN THE UNITED STATES OF AMERICA, CANADA, AND PUERTO RICO, EXCLUDING ALL OTHER U.S. TERRITORIES AND PROTECTORATES. @@@@How to Make a Claim Under This Warranty Please call 1-800-877-5032. @@@@For customer assistance, call toll free 1-800-877-5032. @@@@To access these options, you must first tune the DTV to a digital or analog channel. "Not available" will be displayed on the screen if an unavailable menu option is selected.

Press the MENU key to display the Main menu. Use the CURSOR LM keys to highlight menu item. Use the CURSOR adjust menu item. 1 · DP15647: NASE/G/H / DP19647: NATE/TF Foreground Color Background Opacity Foreground Opacity V-Guide Picture/Sound Menu Language Off On Auto Manual English Español Français Off Low High Adjust Color Tint Contrast Brightness Sharpness Tone 1 2 3 4 5 <> keys to select or Press ENTER to activate setting, if needed. When you have finished making adjustments, press the EXIT key to return to normal TV viewing.

· US1D · GXCA Energy Saver Note: For menu items that have sub menus, follow on-screen instructions to select and make adjustments. ALL Channel Search DTV Cable or Add-On Search Searching for digital cable channels will take about 10 minutes, please be patient. Picture / Sound Manual Adjustment For your protection in the event of theft or loss of this product, please fill in the information requested below and KEEP IN A SAFE PLACE FOR YOUR OWN PERSONAL RECORDS. @@@@It is designed and manufactured to meet rigid U.L.

@@@@@@@@The channels received are based on the transmitting towers. @@@@NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. IMPORTANT SAFETY INSTRUCTIONS Important Safety Instructions for LCD DTV 1.



[You're reading an excerpt. Click here to read official SANYO](#)

[DP19647 user guide](#)

<http://yourpdfguides.com/dref/3297191>

Read these instructions. 2. Keep these instructions. 3. Heed all warnings.

4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with dry cloth. 7. Do not block any ventilation opplay "Add?" V-Guide (Parental Control) Note: This feature is designed to comply with the United States of America's FCC V-Chip regulations. Therefore, it may not function with broadcasts that originate in other countries. Use this feature to supervise the television viewing of young children.

This TV can be set to automatically block programs with content you deem as inappropriate for your children to view. Movie Rating TV Rating Content Rating OPERATING TIP: You can block portions of a TV rating by choosing one or more of the Content ratings (D, L, S, and V). By blocking just the L and S content ratings of TV-14, for example, TV-14 rated programs with a D and/or V content rating could still be viewed. VIEWING ANGLES (BRIGHTNESS) BLOCKED RATINGS (Lock symbol) USING THE DETACHABLE TV TILT STAND To change the viewing angle of your TV, position your hand on the top and hold the stand firmly, then tilt the LCD screen forward or backward. @@@@Do not use hard objects such as hard cloth or paper.

@@@@Use the Tilt feature to adjust the vertical angle for optimum viewing. Important Note: Place DTV face down on a padded or cushioned surface to protect the screen and finish. 1 LCD PANEL LAMPS CONTAIN MERCURY. DISPOSE OF PROPERLY. WALL MOUNTING: VESA standard interface 100 x 100.

) Note: Wall Mounting kit is not supplied. LCD Mounting screws measurements: M4 Diameter, Length--10mm (maximum). Remove two (2) screws from the metal bracket. CAUTION: Hold the stand firmly as you remove the last screw. 2 Carefully remove the DTV stand. .



[You're reading an excerpt. Click here to read official SANYO](#)

[DP19647 user guide](#)

<http://yourpdfguides.com/dref/3297191>