



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO DP47840. You'll find the answers to all your questions on the SANYO DP47840 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO DP47840
User guide SANYO DP47840
Operating instructions SANYO DP47840
Instructions for use SANYO DP47840
Instruction manual SANYO DP47840


N8VE/US1Y

SANYO

Owner's Manual Table of Contents	4
Manual del usuario Tabla de contenido	22
Manuel d'instructions Table des matières	40

47"

1080p HDTV LCD
TV HD 1080p de LCD
TV HD 1080p ACL

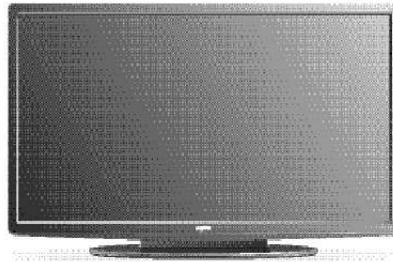

DP47840

© 2011 Sanyo Manufacturing Corporation

Part No./No. de parte/ N° de pièce: 1JG01 P0376-



[You're reading an excerpt. Click here to read official SANYO DP47840 user guide](http://yourpdfguides.com/dref/3857739)
<http://yourpdfguides.com/dref/3857739>

Manual abstract:

Clean only with dry cloth. Do not block any ventilation openings. install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit fully into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time. refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Selection 810-21 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrodes. 16. @@@@ 18.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. 19. When the MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. @@@@If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. CAUTION: FCC Regulations state that improper modifications or unauthorized changes to this unit may void the user's authority to operate the unit. HDMI, the HDMI Logo and HighDefinition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

As an Energy Star® Partner, Sanyo Manufacturing Corporation has determined that this product meets the Energy Star® guidelines for energy efficiency. This Class B digital apparatus complies with Canadian ICES-003. Please read before operating your HDTV! pROTECTING THE LCD SCREEN CAUTION:

The screen can be damaged if it is not maintained properly. Do not use hard objects such as hard cloth or paper to clean the screen. Do not use excessive pressure when cleaning the screen; excessive pressure can cause permanent discoloration or dark spots. Handling by two or more people is recommended. Never touch the screen when handling. "The American Academy of Pediatrics discourages television viewing for children younger than two years of age" Use a firm and flat surface when positioning your HDTV. (Not included) To ensure safe operation, please observe the following precautions: · replace both batteries at the same time. Do not use a new battery with a used battery.

@@ Do not expose the Remote Control unit to moisture or heat. @@Do not position the unit in a confined area. Allow adequate space for proper ventilation. @@@@ NOTE: Keep your indoor antenna at least 3 ft. Away from the television set and any other electronic equipment.

@@ Wall mounting of the HDTV must be performed by a skilled person. @@The tuner in this HDTV can receive: · Digital and Analog off air signals from an antenna · An all digital AV interface that can accept uncompressed video signals up to 1080p for the very best picture possible. Green (Y), blue (Pb), and red (Pr) Video inputs plus the white and red Audio inputs. Yellow (Video), plus white and red (Audio) input jacks. HDMI (DVI) INPUT1 can be used to hookup a DVI device with the use of an appropriate DVI to HDMI cable or adapter.

Use HDMI INPUT1, 2 & 3 to hookup HD digital devices such as a Blu-ray player, HD Cable Box, HD Satellite Receiver or Video-game System. USB input jack is used to connect a USB mass storage device to watch digital images (JPEG only). COMPOSITE connections are used to hookup your analog equipment such as a VCR or an older DVD player. @@@@ Holding down the key displays the Input List. @@@@ Channel L M keys--Scan through the channels in the memory database. @@@@ Use the CURSOR LM keys to select an AV input. @@NOTE: At least one input must and will remain checked. @@Use the CURSOR LM keys to select the type of connection you'll use in VIDEO INPUT 2. Press ENTER, a blue mark will appear next to the selected option. Display the On Screen menu and use the CURSOR LM keys to select Setup.

Choose between English, Spanish and French for your On Screen menu's display language. Captioning is textual information transmitted along with the picture and sound. Turning Captioning ON (by pressing the CAPTION key during normal TV viewing) causes the HDTV to open these captions (digital or analog) and superimpose them on the screen. Use the CURSOR LM and keys to modify Font, Background, and Foreground of digital caption text. Energy Saver settings control the LCD backlight brightness to reduce power consumption. Level 2: Low power consumption. Level 3: Lowest power consumption. press ENTER on the desired level. NOTE: ECO key may also be used as a shortcut to modify the Energy Saver settings. @@@@ When room lighting is bright, parameters are affected opposite.

Use the CURSOR LM keys to select On or OFF and press ENTER. @@NOTES: By factory default, this feature is set to ON. @@ Use the CURSOR LM keys to select On or OFF and press ENTER. @@@@ Therefore, it may not function with broadcasts that originate in other countries. NOTE: Blocking a rating will automatically block all higher ratings.



[You're reading an excerpt. Click here to read official SANYO DP47840 user guide](http://yourpdfguides.com/dref/3857739)
<http://yourpdfguides.com/dref/3857739>

Press the EXIT key to close the V-Chip menu. for V-Chip (TV) ratings select TV and press ENTER. Use the CURSOR L M keys to select a rating and press ENTER. Use the CURSOR L M keys to set the rating&or FN) key while pressing the appropriate function key (F5, F7, F8, etc) should cycle through different display modes between the laptop and the HDTV. Modes may include displaying only on the laptop screen, on both the laptop and the HDTV, or displaying only on the HDTV.

NOTE: Fn key and function key symbols on the laptop's keyboard may vary from one brand to another. View pictures on your HDTV with the use of a USB mass storage device (not included. NOTE: A thumbnail hide icon will appear if a picture cannot be decoded or if no thumbnail data is available. Once in Full View mode: Use the CURSOR keys to change picture. In the Slideshow Setup menu you may turn the Shuffle and Quick Change options ON or OFF. Press ENTER on Start Slideshow from the Thumbnail View Screen or from the full view options menu to start the slideshow from the current picture.

@@@@@To ensure proper warranty application, keep the original-dated-sales receipt for evidence of purchase. Return the defective TV to the retailer along with the receipt and the included accessories, such as the remote control. The defective TV will be exchanged for the same model, or a replacement model of equal value, if necessary. @@@@ hOW TO MAKE A CLAIM UNDER THIS WARRANTY Please call 1-800-877-5032.

@@@@@For customer assistance, call toll free 1-800-877-5032. This warranty expresses specific contractual rights; retail purchasers may have additional statutory rights which vary from state to state. Your Sanyo HDTV is registered at the time of purchase, please keep sales receipt for future reference. For your protection in the event of theft or loss of this product, please fill in the information requested below and KEEP IN A SAFE PLACE FOR YOUR OWN PERSONAL RECORDS. Use el CURSOR LM para mover la barra de selección por todos los canales habilitados y deshabilitados, o use la tecla CH LM para saltarse los deshabilitados. MISE EN GARDE : pour éviter le risque de choc électrique, faites correspondre la lame large de la fiche à la fente large de la prise, puis enfichez à fond. .



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3857739)

[DP47840 user guide](http://yourpdfguides.com/dref/3857739)

<http://yourpdfguides.com/dref/3857739>