

Manual abstract:

THIS LIMITED WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER, AND DOES NOT APPLY TO PRODUCTS USED FOR INDUSTRIAL OR COMMERCIAL PURPOSES. FOR ONE YEAR from the date of purchase, Sanyo Manufacturing Corporation will replace any defective TV. To insure proper warranty exchange, keep the original sales receipt for evidence of purchase. Return the defective TV to the retailer along with the receipt and the included accessories, such as the remote control. The defective TV will be exchanged for the same model, or a replacement model of equal value, if necessary.

@@@ You made an excellent choice for Performance, Styling, Reliability, and Value. @@@@ Weekdays 7:30 AM 7:00 PM Central Time Saturday 7:30 AM 4:00 PM Central Time This warranty expresses specific contractual rights; retail purchasers may have additional statutory rights which vary from state to state. (EFFECTIVE: August 1, 2002) ENERGY STAR "As an ENERGY STAR® Partner, Sanyo Manufacturing Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency." POSITIONING THE TV Do not position the TV in a confined area. Allow space for normal air circulation around electronic parts.

AS CHILD SAFETY Sanyo is committed to making home entertainment safe and enjoyable. Always use an appropriate table or stand when positioning your TV. Use appropriate brackets, braces, or straps to anchor your furniture in place. But NEVER screw anything directly to the television. Do not place televisions on dressers, shelves, desks, carts, etc.

where curious or excited children could pull, push, or otherwise cause the unit to fall and cause personal injury. AS For your protection in the event of theft or loss of this product, please fill in the information requested below and KEEP IN A SAFE PLACE FOR YOUR OWN PERSONAL RECORDS. Model No.

Date of Purchase _____ Serial No. @@@@ It is designed and manufactured to meet rigid U.L. @@@@ NO USER-SERVICEABLE PARTS INSIDE. @@@@

. . . . 20-inches Flat Screen PICTURE RESOLUTION Antenna Input

*.
.
.*

. . 260 Lines Video Input

*.
.
.*

. 400 Lines ANTENNA INPUT

. . . UHF/VHF/CATV 75 POWER REQUIREMENT

. . . 120VAC 60Hz POWER

*.
.
.*

. 60 watts HORIZONTAL DIM. (Width)

. . 23.1 in. (588mm) VERTICAL DIM. (Height)

. 18.3 in. (466mm) DEPTH DIM. (Thickness)

. 19.4 in. (493mm) WEIGHT (Approx.)

. . . . 53.5 lbs. (24.3 Kg.) SOUND (2 Speakers)

. Size: 5x9 cm AMPLIFIER

. . . Built-in with 1W/ch AUDIO/VIDEO INPUT JACKS

. . . Video/Audio Input (FRONT/REAR)

.

.S-Video Input (Rear) CAUTION: FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it. IMPORTANT NOTE: Spent or discharged batteries must be recycled or disposed of properly in compliance with all applicable laws. For detailed information, contact your local County Solid Waste Authority. WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE ADHERE TO ALL WARNINGS ON THE PRODUCT AND IN THE OPERATING INSTRUCTIONS. BEFORE OPERATING THE PRODUCT, PLEASE READ ALL OF THE SAFETY AND OPERATING INSTRUCTIONS. RETAIN THIS LITERATURE FOR REFERENCE. Follow all instructions..

. Positioning the appliance 1. Do not place your appliance on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the appliance, may result if it should fall. Your salesperson can recommend approved carts and stands or shelf and wall mounting instructions. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn. 2. Slots and openings in the cabinet and in the back or bottom are provided for ventilation. To ensure reliable operation of the appliance and to protect it from overheating, these openings must not be blocked or covered.

The openings should never be covered with a cloth or other material, and the bottom openings should not be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This appliance should never be placed near or over a radiator or heat register. @ @3. Do not expose the appliance to rain or use near water . . . @ @ @ @ @ @ @ @ This plug will fit into the power outlet only one way. This is a safety feature. @ @ @ @ Do not defeat the safety purpose of this polarized plug. @ @6.

@ @2. 3. 4. 5. Install batteries in remote control (2 AAA, not included).

Connect signal. (See illustration below.) Plug in AC power cord. Press the POWER key to turn on TV. Follow on-screen instructions.

Cleaning 7. Before cleaning, unplug the unit from the wall outlet. @ @ @ @ @ @ @ @ If the power cord or plug is damaged or frayed. B. If liquid has been spilled into the appliance. C. If the appliance has been exposed to rain or water. D. If the appliance has been dropped or the cabinet has been damaged. E.

If the appliance exhibits a distinct change in performance. F. @ @ @ @9. @ @ @ @10. @ @11. @ @ @ @12. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. @ @ @ @ Audio /Video Input Jacks (AV2) Connect external video equipment here. @ @ @ @ @ @ @ @ @ @ Recall Key--Press to switch between the last two channels you selected. Display Key--Press once to display the channel number.

Press twice to display the channel number continuously. Press again to remove the channel number. channel. Example: Press 0 then 6 to select channel 6. For cable channels 100 through 125, press and hold the 1 key until C1 appears.

Then press the other two numbers. Mute Key--Press once to suppress the volV-GUIDE X NC17 R MPAA Movie Ratings ~R TV Parental Guidelines PG13 PG G B B B U U U me. Press again to restore volume to previous level. Caption Key--Captioning is text information transmitted along with the picture and sound so it can be displayed on the TV screen. 1.

Press CAPTION. 2. Press 0 (zero) to select options: OFF, Caption1, Caption2, Text1, Text2, or QUIKCAP. Notes: Quikcap switches captions on and off with the Mute function. @ @2. 3. 4. Press V-GUIDE. Press the + key to switch V-Guide ON (or OFF). Press the + key again.

Then use the L / M keys to highlight rating. @ @ @ @ Sleep Timer will switch off the TV automatically. Note: The Sleep Timer cancels when the TV is turned off or if a power failure occurs. Setting TV Ratings 5. Highlight TV Parental Guidelines. 6. Press the + key again. Then use the L / M keys to highlight rating. 7. Press the MENU key to change rating (BU).

TVMA B TV14 B MPAA Movie Ratings TVPG B TV Parental Guidelines ~T V- G B T TVY7 U TV-Y U Content V-GUIDE Press MENU key to BLOCK Use LM, + keys to select Press V-GUIDE key to exit Setting Content-Based Rating 8. Follow steps 5 and 6 and highlight Content.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3261063)

[DS20930 user guide](http://yourpdfguides.com/dref/3261063)

<http://yourpdfguides.com/dref/3261063>

9. Press the MENU key to display the Content options menu. 10.

Use the L / M keys to highlight a category: D-Suggestive Dialog, L-Adult Language, S-Sexual Situation, V-Violence, or FV-Fantasy Violence. 11. Press the + key. Then use the L / M keys to highlight a rating. 12.

Press the MENU key to change rating (BU). 13. Use the L / M keys to highlight another content rating. Repeat steps 10 through 12 to block or unblock rating.

14. Press the V-GUIDE key to exit. V-GUIDE TVMA B TV14 B MPAA Movie Ratings TVPG B TV Parental Guidelines TV-G B TV-G TVY7 U TV-Y U
-Content Content USING BACK A/V (AV2) JACKS Switch off TV and external equipment before connecting cables. (Cables are not supplied.) 1. Connect a VCR, DVD Player, or other external equipment to the TV as shown below.

Note: Using the S-Video jack overrides the rear Video Jack. Press MENU key to set Use LM, + keys to select Press V-GUIDE key to exit D-Suggestive Dialog L-Adult Language S-Sexual Situations V-Violence FV-Fantasy Violence Press MENU key to Block Use LM, + keys to select Press V-GUIDE key to exit What you will need: -TV14 B TVPG B DVD Player A/V JACKS IN VIDEO VIDEO L- AUDIO-R L- AUDIO-R AV Cable - 1 Audio Cable - 1 S-Video Cable - 1 OUT AUDIO OUT CONNECT A VCR OR DVD AUDIO VIDEO UHF/VHF/CATV INPUT 75 VCR OUTPUT S-VIDEO OUT L R VIDEO OUT .



[You're reading an excerpt. Click here to read official SANYO](#)

[DS20930 user guide](#)

<http://yourpdfguides.com/dref/3261063>