



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO GXDB REMOTE. You'll find the answers to all your questions on the SANYO GXDB REMOTE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO GXDB REMOTE  
User guide SANYO GXDB REMOTE  
Operating instructions SANYO GXDB REMOTE  
Instructions for use SANYO GXDB REMOTE  
Instruction manual SANYO GXDB REMOTE

**GXDB Remote Basic Operation Guide**

Check Battery Installation information in owner's manual first.  
For controlling other devices see the Remote Control Programming sheet.

Allow the remote to function with your Sanyo HDTV. Power On or power Off your HDTV.

**MENU** Displays the on-screen menu.

Move the cursor in the menu screens. Select highlighted menu options.

**RESET** Press twice to restore your HDTV to its original factory settings.

**VOL** Set the loudness level of the audio output.  
+ to increase  
- to decrease

**MUTE** Sets the volume level to 0. Restores the volume to the previous level before muting.

**INPUT** Switch from one Video Input source to another. **NOTE:** Hold for three seconds to open the Input List menu.

**ASPECT** Selects the desired audio mode (when available).

**PICTURE** Choose between available aspect ratio options: Pix1 thru Pix7 and Pix-Auto (for digital channels) to enable or disable image stretch.

**PICTURE MODE** Cycle through the pre-determined picture modes.

**SOUND MODE** Cycle through the pre-determined sound modes.

**INFO** Display channel banner information.

**EXIT** Exit the current on-screen menu and return to normal TV-viewing.

**XACT** Activate Xact functions when Xact camera connected via HDMI.

**RECALL** Switch back and forth between the last two selected channels.

**CH** Scan through the channels in the HDTV's memory database.  
▲ for a higher channel  
▼ for a lower channel

**0 through 9** Tune to a channel directly. Ex: Press 0 then 6 for channel 6. **NOTE:** Press and hold the 1 key to activate the first of three digits for channels 100 and higher.

**USB** Switch directly to the USB input.

**CC/CAPTION** Enable / disable digital caption options: CC1-CC6 (digital) or CC1-CC4 (analog).

**SLEEP** Displays SLEEP timer. Pressing "0" key sets the Off Timer.

**ON TIMER** Displays the Switch On Time banner.

**HELP** Displays the On-screen Help menu with common problems and solutions.

For assistance call the toll free number 1.800.877.5032 or visit our website at [www.sanyoctx.com](http://www.sanyoctx.com)

Part No. 1.UGP19329.



[You're reading an excerpt. Click here to read official SANYO GXDB REMOTE user guide](http://yourpdfguides.com/dref/3335420)  
<http://yourpdfguides.com/dref/3335420>

**Manual abstract:**

*Basic Operation Guide Allow the remote to function with your Sanyo HDTV. Power On or power Off your HDTV. Display channel banner information. Displays the on-screen menu. ENTER OK Move the cursor in the menu screens. Select highlighted menu options. Exit the the current on-screen menu and return to normal TV viewing. ENTER Press twice to restore your HDTV to its original factory settings. OK XACTI MENU W T Activate Xacti functions when Xacti camera connected via HDMI. T RESET XACTI MENU W Set the loudness level of the audio output. RESET LIST Switch back and forth RECALL between the last two selected channels. Scan through the channels in the HDTV's memory database. for a higher channel for a lower channel + to increase to decrease Sets the volume level to 0. Restores the volume to the previous level before muting. RECALL through Tune to a channel directly.*

*@@@@@@@@@@@@@@@@ para canal más alto para canal más bajo RECALL al Accesar directamente un canal. Ejem.: 0 y 6 para el canal 6.*

*NOTA: Presione unos segundos la tecla 1 para activar el primer número de canales como el 100 y más altos. Cambiar entre una y otra de las entradas de Video.*

*NOTA: Mantenga presionada por 3 seg. para mostrar la Lista. USB AUDIO Seleccionar el modo de audio disponible. Accesar directamente la entrada USB. USB Seleccionar entre las relaciones de aspecto disponibles de PIX SHAPE Pix1~Pix7 y Pix-Auto (para canales digitales). Habilitar / deshabilitar los CC subtítulos digitales: CC1 CC6 (en digital) o CC1CC4 CAPTION (en análogo) CC PIX SHAPE PICTURE AUDIO SOUND CAPTION HELP SLEEP ON TIMER Desplegar contador SLEEP La tecla "0" configura el SLEEP tiempo de apagado. Seleccionar entre las diferentes configuraciones de PICTURE imagen predeterminadas. .*



**[You're reading an excerpt. Click here to read official SANYO GXDB REMOTE user guide](http://yourpdfguides.com/dref/3335420)**  
**<http://yourpdfguides.com/dref/3335420>**