



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO ICR-B29. You'll find the answers to all your questions on the SANYO ICR-B29 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO ICR-B29  
User guide SANYO ICR-B29  
Operating instructions SANYO ICR-B29  
Instructions for use SANYO ICR-B29  
Instruction manual SANYO ICR-B29

**SANYO**

**INSTRUCTION MANUAL  
ISTRUZIONI PER L'USO**

**Digital Voice Recorder  
Registratore vocale digitale**

**ICR-B29  
ICR-B31  
ICR-B34**

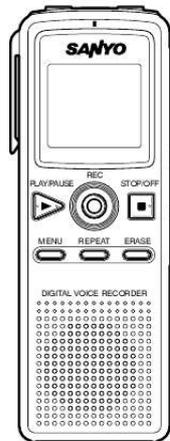

ENGLISH	1
DEUTSCH	14
FRANÇAIS	28
NEDERLANDS	41
SVENSKA	54
ITALIANO	67
ESPAÑOL	81



[You're reading an excerpt. Click here to read official SANYO ICR-B29 user guide](http://yourpdfguides.com/dref/3810307)

<http://yourpdfguides.com/dref/3810307>

**Manual abstract:**

Do not use where there are extremes of temperature (below 5°C or exceeding 35°C). Earphone Connect an earphone (not supplied) to the socket for monitoring the content being recorded or for private listening. If the operation of the unit or display is not normal, 1. Press the RESET switch for at least 30 seconds using a small ball-point pen, etc. @@The display lights and the unit is in the stop mode. To turn the power off, press the STOP/OFF button in the stop mode. @@@@It may cause the unit malfunction. - Remove the batteries if the unit will not be used for a month or longer. - Dispose of all used batteries safely and in accordance with all applicable laws. Auto power off function If you do not use the unit for 3 minutes, the power will be automatically turned off. Lock function This function avoids accidental button activation during recording or playback. Press the MENU button for at least 2 seconds to set LOCKED the lock mode. "LOCKED" flashes briefly and " " remains lit. - If you press any other button while the unit is in the lock mode, "LOCKED" flashes and the button will not function. Press the MENU button for at least 2 seconds again to release the lock mode.

Beep Beep sound can be heard whenever you press any button except during playback and recording (See page 7). Date and time setting With this function, you can always read on the display the recording date and time of your recorded messages (See page 8). @@@@Only the related indicator is lit and all other indicators go off. @@@@ (For more detail, refer to the following explanations. @@@@ @@@@ When dictation stops for about 3 seconds, recording stops.

ONE (or ALL) a: Setting play mode a ONE: To play a specific file. a ALL: To play all files in a folder. @@@@ @@@@ Recording starts with new file number. @@@@ Set the play mode (ONE/ALL) before you start playback (see page 7). @@@@ Press the button again immediately to skip back to the beginning of the previous file. Introscan Plays back the first 3 seconds of each file in a folder. Press the REPEAT button during play at the beginning of the section you want to repeat (Point A). The section between points A and B is played repeatedly. 3. To return to normal play, press the REPEAT button again.

While "DELETE" is flashing, press the ERASE button for at least 2 seconds. the selected file in the folder is erased. All the file numbers after the file that was erased are reduced by one. While "DELETE" is flashing, press the ERASE button for at least 2 seconds. While the display is flashing, press the ERASE button for at least 2 seconds. all files in all folders are erased. If you do not want to erase, press the STOP/OFF button. Display is blank - Check that the batteries are inserted proper polarity and not exhausted. Buttons do not respond - Make sure the lock function is not activated. Cannot record - Make sure memory is not full.

- You have recorded 99 files in one folder. Try record in a new folder. - Check the total files are not exceeding 200. No sound - Make sure the volume is not set to 0. - Make sure you have selected folder with recorded messages.

@@@@@ This set complies with the EMC Directive 89/336 and with the LVD Directive 73/23. IMPORTANT INFORMATION Because its products are subject to continuous improvement, SANYO reserves the rights to modify product designs and specifications without notice and without incurring any obligation. .



[You're reading an excerpt. Click here to read official SANYO ICR-B29 user guide](http://yourpdfguides.com/dref/3810307)

<http://yourpdfguides.com/dref/3810307>