



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO LCD-32XR9DA. You'll find the answers to all your questions on the SANYO LCD-32XR9DA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO LCD-32XR9DA
User guide SANYO LCD-32XR9DA
Operating instructions SANYO LCD-32XR9DA
Instructions for use SANYO LCD-32XR9DA
Instruction manual SANYO LCD-32XR9DA

The SANYO logo, consisting of the word "SANYO" in a bold, sans-serif font with a stylized vertical line through the letter 'Y'.

INSTRUCTION MANUAL

LCD-32XR9DA

LCD TV



Before connecting, operating or adjusting this product, please read the manual completely.
Please keep this manual for future reference.



[You're reading an excerpt. Click here to read official SANYO LCD-32XR9DA user guide](http://yourpdfguides.com/dref/3241851)
<http://yourpdfguides.com/dref/3241851>

Manual abstract:

! Ensuring the television is not overhanging the edge of the supporting furniture. ! Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support. ! Not standing the televisions on cloth or other materials placed between the television and supporting furniture. ! Educating children about the dangers of climbing on furniture to reach the television or its controls. Table of Contents Important Safety Precautions.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....1 Important Notice....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....3 Preparations....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....

.....
.....
.....

...4 Identification of Controls

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..6 Connections.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

9 Basic Operations.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
....13 Memorizing the Channels .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

....16 Channel and Program Selection.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

20 Picture Adjustment

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....21 Sound Adjustment.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..22 System Setup

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.24 Rating and Lock Setup

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....30 Screen setup for D-SUB (PC) Mode .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..31 Hotel Mode Setup ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...32 Troubleshooting.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

b. When a liquid is spilled on the product or when objects have fallen into the product. c. When the product has been exposed to rain or water. d. When the product does not operate properly as described in the operating instructions. Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician. e. If the product has been dropped or the cabinet has been damaged in any way. f. When the product displays an abnormal condition or exhibits a distinct change in performance. Any noticeable abnormality in the product indicates that the product needs servicing. 12. Replacement parts---In case the product needs replacement parts, make sure that the service person replaces parts specified by the manufacturer, or those with the same characteristics and performance as the original parts.

Use of unauthorized parts can result in fire, electric shock and/or other danger. 13. Safety checks---Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition. 14. Wall or ceiling mounting---When mounting the product on a wall or ceiling, be sure to ask a authorized service personnel to carry out setup. This is a safety feature. 1 Important Safety Precautions (Continued) 15. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product.

When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer. 16. Careful move---When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall from the trolley.

Never attempt to move the TV unless the AC power cord has been disconnected. 17. Lightning---Unplug this apparatus during lightning storms or when unused for long periods of time. For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges. 18. Do not use this apparatus near water---for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. Do not use immediately after moving from a low temperature to high temperature environment, as this causes condensation, which may result in fire, electric shock, or other hazards. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. 19. Clean only with dry cloth---Unplug this product from the wall outlet before cleaning.



[You're reading an excerpt. Click here to read official SANYO LCD-32XR9DA user guide](http://yourpdfguides.com/dref/3241851)
<http://yourpdfguides.com/dref/3241851>

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 20. Ventilation---Do not block any ventilation openings.

Install in accordance with the manufacturer instructions. The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed. 21.Heat sources---Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 22.Panel protection---The display panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects.

Be careful not to be injured by broken glass pieces in case the display panel breaks. 23.Pixel defect---The display panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

Warning: For continued safety, apparatus with class I construction shall be connected to a mains socket outlet with a protective earthing connection. 2 Important Notice About Temperature Do not use in hot and cold rooms (locations) ! When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal. ! Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the screen to malfunction.

! Storage temperature: 0°C to +50°C ! Working temperature: 5°C to +40°C About After-Image The extended use of fixed image program material can cause a permanent after-image on the screen. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible screen deterioration can be limited by observing the following steps: A. Reduce the brightness/contrast setting to a minimum viewing level. B. Do not display the fixed image for extendelug into a conveniently located AC outlet. Note: = should be operated only from the type of power source indicated on the marking label. This product = the AC cord from power outlet when not using for a long period of time. Always unplug 5 Identification of Controls Main Unit (front view/side view) 6 Main Power on/off Switch Remote Sensor Power Indicator CH+ CHVOL+ VOLMENU SOURCE 1 2 3 4 5 1. CH+/Press these two buttons to directly change the TV channel.

In OSD menu, press these buttons to choose the OSD items. 2. VOL+/Press the VOL+ or VOL- button to directly increase or decrease the sound volume level; In OSD menu, press these buttons to adjust the value or setting of each item. 3. MENU Press this button to access Menu main page. 4. SOURCE To access input source select menu. 5. STANDBY SWITCH Press this button to turn the unit ON from STANDBY mode. Press it again to turn the set back to STANDBY.

6. POWER SWITCH Switch this switch ON first before you use the STANDBY switch to power the unit up. Note Functions of CH+/-, VOL+/-, MENU, SOURCE and are also provided to the remote control. This operation manual provides a description based on operating functions with the remote control. 6 Identification of Controls (Continued) Main Unit (rear view) 1 2 3 4 5 6 7 8 9 1.

HDMI 1/2/3 interface To connect with those equipments with HDMI or DVI interface, for example, Set-top box or DVD player. (A HDMI-to-DVI adapter cable is required when you are connecting a DVI-equipped device to this TV.) 2. D-SUB input Connect to the D-SUB/AUDIO output jack on your computer. 3.

COMPONENT 1/2 inputs Connect to the audio and component output jacks of a DVD player or Set-Top Box. 4. Headphone jack Connect to your headphones. 5. AV inputs (Video, Audio L, R) Receive video/audio signal from external sources such as VCR or DVD player. 6. AV outputs(Video, Audio L, R) Connect to your VCR to record programs. 7. RS232 interface For service use . The user cannot operate the unit through this terminal.

8. Antenna input Connect to your cable system or outdoor antenna. 9. S/PDIF digital audio out terminal(coaxial) Connect to the digital audio input of a digital audio component. 7 Identification of Controls (Continued) Remote Control Unit 1 POWER: Switches the TV power on or Standby. 2 TV/Radio: Switches between TV and Radio mode. (DTV only) 1 2 3 EPG: Displays the Electronic Program Guide (DTV only). 14 15 16 4 FAV.LIST: Displays the favorite channel list. 5 FAV+/ FAV: Selects the favorite channel.

6 0 9 number buttons: Press to enter channel numbers or input password. 3 4 5 7 ZOOM: Selects the screen size. 8 MENU: Displays the main menu screen. /6 /3 /4 /OK: 9 5 Press the arrows to navigate through the 6 menus or adjust an item. Press OK to confirm a selection or enter a sub-menu.

10 MUTE: Mutes the sound. 7 17 11 INFO: Displays the information banner. 12 VOL+/-: Increases or decreases the volume. 13 S.MODE: Selects sound mode.

14 STEREO: Selects bilingual, stereo or mono (ATV only), or audio track(DTV only). 8 18 9 15 FREEZE: To freeze current picture. 16 SLEEP: Sets the sleep timer. 19 20 21 22 10 11 12 13 23 24 25 26 27 17 RECALL: Returns to the previous channel. 18 EXIT: Exits the menu screen. 19 SOURCE: Displays input source menu. 20 LIST: Displays the channel list. 21 CH / : Changes channel up and down. 22 P.MODE: Selects picture mode.

Below is teletext control buttons: 28 29 30 31 23 Colored buttons (RED/GREEN/YELLOW/BLUE): Direct 24 25 26 27 28 29 30 31 access to the colored items or corresponding pages. (Teletext) TTX: Used to enter or exit teletext mode. (Teletext) Subtitle: Displays the subtitle (DTV only), or the teletext subpage (ATV only). Size: Press this button several times to display the upper, then the lower part of the screen and then return to the normal size teletext page. (Teletext) Index: Press this button to view the main index page.(Teletext) Reveal: To reveal or hide the concealed information. (Teletext) Hold: To stop or resume sub-page acquisition. (Teletext) Update: Press the button to view the updated teletext page. (Teletext) Mix: Press the button to display the Teletext on the screen with transparent background while viewing the TV program simultaneously. (Teletext) 8 Connections Cautions before connecting Carefully check the terminals for position and type before making any connections.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241851)

[LCD-32XR9DA user guide](http://yourpdfguides.com/dref/3241851)

<http://yourpdfguides.com/dref/3241851>

The illustration of the external equipment may be different depending on your model. Loose connectors can result in image or color problems. Make sure that all connectors are securely inserted into their terminals. Refer to the operating manual of the external device as well. When connecting an external device, turn the power off to avoid any issues.

Connecting digital coaxial audio TV REAR Coaxial cable OR HiFi System S/PDIF IN (Coaxial) Audio Processor For a full Home Theater sound experience, you must connect your Hi-Fi or Audio processor to the S/PDIF OUT(Coaxial) terminal on the TV rear. Note The S/PDIF OUT terminal only can output digital TV program's audio. 9 Connections (Continued) Connecting a Camcorder TV REAR or Camcorder Cables are often color-coded to connectors. Connect red to red, white to white, etc. How to connect: To playback Camcorder AV cable "PlayStation" Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and camcorder.

1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 AV, then press OK to confirm. or6 to select 3. Turn on your camcorder and set it to output mode. (For details, refer to your camcorder user manual.) 4. Insert the tape into the camcorder and press Play button.

Note The operations of the camcorder may be different and is dependant on your model. Please read the user manual of your camcorder to confirm operation. Connecting an HDMI device TV REAR Device with HDMI output HDMI cable How to connect a device using HDMI Connection: Connect the HDMI cable between the HDMI1, HDMI2 or HDMI3 interface on the unit and HDMI output on the device. To play from the device using HDMI: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 HDMI1/HDMI2/HDMI3 correspondingly, then press OK to confirm. or6 to select 3. Turn on your device and set it to the correct mode.

See the device's user guide for more information. Note If the external device has DVI output only, use a DVI to HDMI adapter cable to connect to the HDMI terminal. Connect the audio cable to the D-SUB AUDIO IN jack on the TV rear. 10 Connections (Continued) Connecting Component Video TV REAR Component video cable Device with component video Audio cable Cables are often color-coded to connectors. Connect red to red, white to white, etc.

To connect a device using component video: Connect the Component Video cable between the Y, Cb/Pb, Cr/Pr input jacks on the unit and Y, Cb/Pb, Cr/Pr output jacks on the device. Connect the Audio cable between the AUDIO input jacks on the unit and AUDIO output jacks on the device. To play component video from an external device: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens.

2. Press 5 Component1/Component2 correspondingly, then press OK to confirm. or6 to select 3. Turn on your external device and set it to the correct mode.

See the device's user guide for more information. Connecting a Computer TV REAR D-Sub cable (analog RGB) To monitor port (15-pin D-Sub) To audio output jack How to connect: Audio cable (stereo mini plugs) Connect a D-Sub cable between the D-SUB jack on the computer and the D-SUB input jack on the unit. Connect an Audio cable between the AUDIO output on the computer and AUDIO input jack on the unit. To play video from a computer 1. Turn on your TV, then press SOURCE button. The Input Source menu opens.

2. Press 5 D-SUB, then press OK to confirm. or6 to select 3. Turn on your computer, and adjust the display properties as required. 11 Connections (Continued) Connecting a VCR (for Recording) TV REAR VCR for Recording S-VIDEO AV cable How to connect: Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and VCR. To record program 1. Turn on your TV, select a program you wish to record. 2. Turn on your VCR, insert a videotape for recording. 3.

Press the Record button to begin recording. Note ! Only analog TV programs and AV input source can be output through the AV output jacks. Connecting Headphones Insert the plug of the headphone into the TV's Headphone jack. When using headphones, adjust the headphone volume so as to avoid excessive levels, as hearing damage may result. TV REAR Headphones 12 Basic Operations Main Menu Overview List of main menus to help you with operations PICTURE menu SOUND menu Picture Sound Time Option Lock Channel Picture Sound Time Option Lock Channel Picture Mode Contrast Brightness Color Sharpness Tint Prev Page Select User 75 45 50 50 0 Next Page Move Menu Sound Mode Treble Bass Balance Auto Volume Spatial User 50 50 0 Off Off Return Select Move Menu Return TIME menu OPTION menu Picture Sound Time Option Lock Channel Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Off Off Off VIC GMT+10 Allow Update System Update Time Hearing Impaired SPDIF Audio Preference On 03:00 On Auto Dolby Digital Select Move Menu Return Select Move Menu Return LOCK menu Picture Sound Time Option Lock Channel Picture CHANNEL menu Sound Time Option Lock Channel Lock Tuning Set Password Block Program Parental Guidance Restore Factory Default Off Auto Tuning DTV Manual Tuning ATV Manual Tuning No Block Programme Edit Select Move Menu Return Select Move Menu Return To navigate through the OSD main menu 1 2 3 4 With the power on, press MENU and the main menu screen displays.

Press 3 menu. Press 6 menu. or4 to select to access the Within the menu, press 5 ,6 ,3 through the options or adjust or4 navigate an option. Press OK to confirm a selection or enter a sub-menu. Press MENU to return to previous menu.

Press EXIT to exit the menu screen directly. Or you may wait for a few seconds and the on-screen menu will disappear from the screen automatically. Note = items may be different when the unit works in different mode, and menu items that are not selectable are grayed out. Some menu = menu has more than one page, please use 5through. The Picture or 6 to scroll = The illustrations and on-screen displays in this manual are for explanation purpose (some are enlarged, others cropped) and may vary slightly from the actual ones. 13 Basic Operations (Continued) Turning On/Off the Power Turning On Insert the power cord into the wall outlet. Press the Power Switch on the unit to power on. If the unit is in standby mode, press Power button on the unit or the remote control to turn on the unit, and you will be ready to use its features. Turning Off With the power on, press the Power button on the unit or on the remote control to turn off the unit, and put the unit in standby mode. To cut off the power completely, press the Power Switch directly.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241851)

[LCD-32XR9DA user guide](http://yourpdfguides.com/dref/3241851)

<http://yourpdfguides.com/dref/3241851>

First Time Setup The first time you use the TV, you need to set up the TV. 1 Make sure that: ! You have installed the batteries in the remote control. ! You have connected the TV to an antenna or cable TV outlet. ! You have connected the power cord. Energy Save Mode 2 3 4 Press POWER to turn on the TV. After a few seconds the Energy Save Mode screen opens. Press 3 or 4 Standard/Energy Save or to select Store/Dynamic. Press OK to confirm the selection. To use this TV for displaying in a store, please select [Store/Dynamic]. [Standard/Energy Save] mode is recommended for normal home use.

Standard/Energy Save Store/Dynamic Navigate OK Confirm Installation Guide Now the Installation Guide screen will display. Highlight Auto Tuning item, and press OK to access. Language Auto Tuning English OK Start Exit Exit 5 Press 3 or 4 Start item, and then Press OK to to highlight begin the auto channel search. Installation Guide Australia Country Selection English Language Auto Tuning Start Cancel Exit Note = The Language and Country Selection items is defaulted and cannot be adjusted. OK Start Exit 14 Basic Operations (Continued) Selecting the Input Signal Source 1 2 Press SOURCE button.

Press 6 the input source. Options include: or 5 to select ! DTV -- Watch the DTV signal. ! ATV -- Watch the ATV signal. ! AV -- Watch the signal from the AV input terminals. ! Component 1 -- Watch the signal from the COMPONENT 1 input terminals.

! Component 2 -- Watch the signal from the COMPONENT 2 input terminals. ! D-SUB -- Watch the signal from the D-SUB input jack. ! HDMI 1 -- Watch the signal from the HDMI 1 input jack. ! HDMI 2 -- Watch the signal from the HDMI 2 input jack. ! HDMI 3 -- Watch the signal from the HDMI 3 input jack.

Press 3 confirm the selection. ,4 or OK to Input Source DTV ATV AV Component 1 Component 2 D-SUB HDMI 1 HDMI 2 HDMI 3 Move Select 3 Displaying the Information Banner Press the INFO button to display the information banner. The information banner displays current status information such as the channel number and signal source. Depending on the mode, different information is displayed. In DTV mode, more information will be displayed.

Below is an example banner in DTV mode. In DTV mode, the information banner may contain: ! Channel number and name. ! Current time. ! Current program name, start and end play times. ! Next program name and start and end play times. ! TV or Radio. ! Audio mode, audio track. ! Signal strength for current channel. ! Signal resolution. ! Subtitle, teletext.

2 ABC TV Sydney DTV SD MPEG British Isles: A Natural History Fri, Feb 27 2008 11:05 English Subtitle 576i Teletext Reserved for future use Alan Titchmarsh continues his epic journey around the British Isles and discovers why they are so diverse. 11:08 12:00 Next Note = OSD is only served as an example, and it is in DTV mode. The above = banner content varies, depending on the broadcaster and your settings. Information 15 Memorizing the Channels When you turn on the TV for the first time, you should perform an auto channel search to set up stations on your TV. Note: Be sure to select the proper input source (ATV/DTV) before operation.

Auto Channel Search You should perform an auto channel search to search for all channels available and stores them in memory. And before you start Auto Tuning, it is necessary to select a country firstly. 1 2 3 4 5 Press MENU and the main menu screen displays. Press 3 Channel menu, press 6 menu. or 4 to select to access the Highlight Auto Tuning item, and press 4 or OK to access.

Picture Sound Time Option Lock Channel Auto Tuning DTV Manual Tuning Selection Country ATV Manual Tuning Programme Edit Start Cancel Australia Now a confirmation box appears on the screen. Press 3 or 4 to highlight Start item, and then press OK to begin the auto channel search. (If you want to cancel, press 4 to select Cancel item, and use OK to confirm.) Then the TV begins memorizing all ATV/DTV channels available in your area. During the process, you can press MENU to skip the search, or EXIT to stop. Note Select Move Menu Return Channel Tuning 2 %... ATV DTV :2 :0 78.50MHz TV Programme(s) Programme(s) Programme(s) Radio :0 = In the confirmation box, the Country Selection item is defaulted to be Australia Press <Menu> to skip.

Press <Exit> to exit. and cannot be adjusted. Manual Searching for DTV programs If desired digital programs cannot be searched by Auto Tuning, you can make use of DTV Manual Tuning to search programs manually. Picture Sound Time Option Lock Channel Auto Tuning 1 2 3 In Channel menu, press 6 DTV

Manual Tuning or 5 to select item, then press 4 or OK to access. Highlight VHF CH (or UHF CH) item, press 3 to or 4 button select your desired channel number. DTV Manual Tuning ATV Manual Tuning Programme Edit Select Move Menu Return Press OK to begin the manual DTV channel search. At the bottom of the menu screen the DTV Signal strength bar is displayed. You can make use of it to check how strong your DTV signal is and whether you need to adjust your antenna or digital cable input. The higher the signal strength is, the less likely you are to experience picture degradation. DTV Manual Tuning VHF CH 6 Please select channel then Press OK to search Bad Normal Good 4 Then all the digital programs available in this channel will be searched and stored.

During the process, you can press MENU or EXIT to exit the search. Menu Exit Select 16 Memorizing the Channels (Continued) Manual Searching for ATV programs If desired analog programs cannot be searched by Auto Tuning, you can make use of ATV Manual Tuning to search programs manually. Picture Sound Time Option Lock Channel Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit 1 2 3 4 In Channel menu, press 6 ATV Manual Tuning or 5 to select item, then press 4 or OK to access. Highlight Storage To item, press 3 to select a channel or 4 button position in which you want to store.

Use 6 Search item, press 3 the or 5 to select or 4 to begin manual ATV channel search.

Press 4 , the unit searches towards higher frequency; Press 3 , the unit searches towards lower frequency. The search stops when a program is found and this program will be stored in current channel, then press the RED button to save. During the process, If you want to stop the search , please press EXIT button.

Select Move Menu Return ATV Manual Tuning Storage To Color System Audio System Current CH Search Fine-Tune Frequency Exit SAVE 1 PAL BG 1 445.25 MHz Select Manual Fine Tuning Fine Tuning is not necessary under normal conditions.

However, in area of inferior broadcast conditions where adjustment is necessary for a better picture and sound effect, use Fine Tune. ATV Manual Tuning 1 2 3 Navigate to ATV Manual Tuning submenu, highlight Current CH item, press 3 a channel you want to perform fine or 4 to select tune.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-32XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241851>

Press 6 to select Fine-Tune item, and then use 3 to or4 button fine tune until the best possible picture and sound are obtained. During the process, press EXIT to exit, and RED button to save the effect. Note Storage To Color System Audio System Current CH Search Fine-Tune Frequency Exit SAVE 1 PAL BG 1 445.25 MHz Select = only for analog TV program. Fine Tune is Setting Audio System Normally it is unnecessary to set audio system. However, if abnormal sound occurs, you may try to adjust the audio system. ATV Manual Tuning Storage To Color System Audio System 1 PAL BG 1 1 2 3 Navigate to ATV Manual Tuning submenu, press 5 or6 to highlight the Audio System item. Press 3 the proper audio system.

Press RED button or4 to select to save. Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. Current CH Search Fine-Tune Frequency Exit SAVE 445.25 MHz Select 17 Memorizing the Channels (Continued) Labeling Channels If required, you can give a name to the programs. Picture Sound Time Option Lock Channel 1 2 3 4 5 Press MENU and the main menu screen displays. Press 3 Channel menu, press 6 menu. or4 to select to access the Press 6 Programme Edit item, press 4 or5 to select or OK to open the Programme Edit menu. Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit Select Move Menu Return Within the program list, press 6 a channel you want to or5 to select edit, press GREEN button to start to label. Then a name symbol appears alongside.

Use 6 character to input, use 3 the cursor. or5 to select or4 to move To delete the inputting, please press RED button. After finishing inputting, press OK to confirm. The maximum length of label is 5 characters. Repeat the above steps to set up more channel labels.

@@@! @@@@! If the program list has more than one page, you can press 6 the page. or5 to scroll Repeat the above steps to set more favorite programs. To exit, press EXIT button. @@@@! Press EXIT to quit the list. @@@@! Press YELLOW button again to finish the sorting. @@@@! The order of the = no MOVE item in DTV mode. @@@@! Press RED button again to finish the delete. Repeat the above steps for more channels you want to delete. @@@@! To return to TV program, press TV/Radio button again. @@@@! Press RECALL again to switch back to the currently tuned channel. Note = will not work if no channel has been changed after TV is turned on. RECALL Method 3-- Using 0 9 and OK button Press the 0 9 number buttons to input a channel number, then wait for some seconds or press OK to go directly to that channel. When selecting, the TV will indicate the channel through the information banner. Note = 9 number buttons, you can not select analog channels in DTV mode, or digital channels in ATV mode. By using 0 = When in Radio mode, you can press TV/Radio button to switch to TV mode.

= one-digit or two-digit channel number, you can press OK to go directly to the channel without waiting. If you input Method 4-- Using channel list Press LIST button to display the channel list. Use 5 a channel and then press or6 to select OK button. Note = If the channel list has more than one page, you may press 5 the page upward or or6 to scroll downward. TV TV TV TV Channel List 1 S-03 2 C-42 3 S-04 4 C-04 Move OK Select Favourite List Method 5--

Using favorite channel list After you have created the favorite channel list, you can press FAV.LIST button to display the favorite channel list. Use 5 a channel and then press OK button. or6 to select Note = You can directly press FAV+/ FAV button to cycle among the favorite channels. TV TV TV TV 1 S-03 2 C-42 3 S-04 4 C-04 Move OK Select 20 Picture Adjustment Customizing the Picture 1 2 3 4 Press MENU and the main menu screen displays. Press 3 Picture menu, press 6 menu.

or4 to select to access the Within the menu, press 5 through the page upward or downward, or 6 to scroll and press 5 navigate through the options or adjust an option. ,6 ,3 ,4 to Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. Picture Sound Time Option Lock Channel Picture Sound Time Option Lock Channel Picture Mode Contrast Brightness Color Sharpness Tint Prev Page Select User 75 45 50 50 0 Next Page Move Menu Color Temperature Aspect Ratio Noise Reduction Light Sensor Light Status Screen Prev Page Cool 16:9 Off On Dark Next Page Move Menu Return Select Return Option Picture Mode Description Selects a desired picture mode. You can select from Standard, Dynamic, Mild and User.

Standard: Select for a standard picture. Dynamic: Select for a bright and vivid picture. Mild: Select for a finely detailed picture. User: The picture quality you set. Note: To quickly change the picture mode, press the P .

MODE button on the remote control repeatedly. Contrast Brightness Color Sharpness Adjusts image contrast. Adjusts screen brightness for easier viewing of dark picture such as night scenes and black hair. Adjusts color saturation. Adjusts image sharpness and displays a sharp image. Tint Adjusts tint for image. Note: The Tint item is only for NTSC system. Color Temperature Selects one of three automatic color adjustments. Sets to Warm to enhance hotter colors such as red, or set to Cool to see less intense colors with more blue. You can select from Warm, Cool and Normal.

Aspect Ratio You can select the aspect ratio (display proportions) according to your video signal type or personal preference. You can select from 16:9, Zoom1, Zoom2 , Auto and 4:3. 16:9: Displays a 16:9 picture. Zoom1: Enlarges the picture to fill the full screen. Zoom2: Enlarges the picture, the top and bottom portions may be cropped. Auto: Displays picture automatically in proper ratio. 4:3: Displays a 4:3 picture. Note: You can press the ZOOM button repeatedly to select a desired aspect ratio. When selecting Zoom1/Zoom2, you may use 5 the picture upward or downward, or press4 or 6 to move or 3 to zoom in or out the picture. For the sake of protecting the screen, please do not display the image in 4:3 mode for extended periods of time.

Select from Low/Middle/High to reduce noise in the picture, commonly called snow. Noise Reduction Select Off to turn off this function. Light Sensor Select On to enable the automatic brightness control. The light sensor measures the room brightness which allows the TV to automatically adjust the picture brightness, based on the ambient room light conditions. Note: Be sure not to put anything around the sensor, as its function may be affected.

When Light Sensor is turned On, the ambient room light status will appear at the bottom of the Light Status menu. You can check the light status to know whether it is dark or normal or bright. 21 Sound Adjustment Adjusting the Volume Using the volume buttons (VOL+ and VOL) Press the VOL + or VOL- to increase or decrease the volume. Using the Mute Press the MUTE button to temporarily turn off all sound.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241851)

[LCD-32XR9DA user guide](http://yourpdfguides.com/dref/3241851)

<http://yourpdfguides.com/dref/3241851>

To restore the sound, press the MUTE button again.

Adjusting the Sound 1 2 3 4 Press MENU and the main menu screen displays. Picture Sound Time Option Lock Channel Press 3 Sound menu, press 6 menu. or4 to select to access the Within the menu, press 5 or 6 to navigate through the options, press3 an option. or4 to adjust Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. Description Sound Mode Treble Bass Balance Auto Volume Spatial User 50 50 0 Off Off Select Move Menu Return Option Sound Mode Selects a desired sound mode. You can select from Standard, Music, Movie, Sports and User. Standard: Select for normal programs. Music: Select for a music program. Movie: Select for a movie program.

Sports: Select for a sports program. User: The sound quality you set. Note: To quickly change the sound mode, press the S.MODE button repeatedly. Treble Bass Balance Auto Volume Adjusts Treble (high sounds). Adjusts Bass (low sounds) Adjusts volume balance (left and right volumes). Select On to equalize overall volume levels across all channels. Select Off to turn off the auto volume control. Select On to turn on the surround sound effect. The benefits of surround sound are enormous.

You can be completely enveloped in sound, just as if you were at a concert hall or cinema. Select Off to turn off surround sound. Spatial 22 Sound Adjustment (Continued) Stereo/Bilingual Selection (for analog channels) You can quickly select sound multiplex mode by using the STEREO button on the remote control. NICAM Broadcast Selection This enables the selection of the reception mode when receiving a NICAM signal. To let you enjoy NICAM broadcasting, this TV set receives NICAM system stereo, bilingual, and monaural broadcasts.

Stereo When the TV set is receiving a stereo broadcast, press the STEREO button to select Stereo or Mono. When Mono is selected, the TV sound is output monaurally. Bilingual When the TV set is receiving a bilingual program, press the STEREO button to select NICAM DUAL A or NICAM DUAL B. IGR (German stereo system) Broadcasts This enables the selection of the reception mode when receiving an IGR signal. To let you enjoy IGR broadcasting, this TV set receives IGR system stereo and bilingual broadcasts.

Stereo When the TV set is receiving a stereo broadcast, press the STEREO button to select Stereo or Mono. When Mono is selected, the TV sound is output monaurally. Bilingual When the TV set is receiving bilingual program, press the STEREO button to select DUAL A or DUAL B. Audio Track Selection (for digital channels) The digital-TV transmission system is capable of simultaneous transmission of many audio tracks (for example, simultaneous translations of the program into foreign languages, or different commentators for sport events). You can press STEREO button to select the audio track. Note = The availability of these additional "multi-tracks" depends upon the broadcaster. 23 System Setup System Setup You may change system settings such as Hearing impaired, SPDIF Audio Preference, etc. by making use of Option menu. , 1 2 3 4 Press MENU and the main menu screen displays. Press 3 Option menu, press 6 menu.

or4 to select to access the Within the menu, press 5 navigate through the options ,6 ,3 ,4 to or adjust an option. Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. Select Move Menu Picture Sound Time Option Lock Channel Allow Update System Update Time Hearing Impaired SPDIF Audio Preference On 03:00 On Auto Dolby Digital Return Option Allow Update Description Press 3 On to allow system update. /4 to select Select Off to turn off the function. Note: You should first set this item to On before performing system update time function. Press 4 or OK to display the System Update Time screen, then set On time. When the TV is in standby mode, the TV will automatically turn on at the preset time and detect OTA, then start system update.

Press 3 On to display the subtitles (if available) for the hearing impaired. /4 to select Select Off to turn off the function.

Selects the digital audio output mode for S/SPDIF. You can select Auto or PCM. Auto: Output audio signal by the rule: If current audio track is in Dolby Digital format, then Dolby Digital format will be selected. If current audio track is in MPEG, then PCM format will be selected. PCM: Output audio signal by PCM format.

System Update Time Hearing Impaired (Only for digital programs) SPDIF (Only for digital programs) Note: To select Auto is recommended. Audio Preference (Only for digital programs) Selects the audio track to output. You can select MPEG or Dolby Digital. MPEG: If the program has MPEG and Dolby Digital tracks, select MPEG to output MPEG track in preference. Dolby Digital: If the program has MPEG and Dolby Digital tracks, select Dolby Digital to output Dolby Digital track in preference.

Note ! Manufactured under license from Dolby Laboratories. ! Dolby and double-D symbol are trademarks of Dolby Laboratories. 24 Rating and Lock Setup Password Setup The Password setup sub-menu is used to set a new system password or to change an existing system password. By default, the system password is 0000 and you may change it. To access Parental Guidance, to lock or unlock channels, to view locked channels, etc., the system password is required. To create a new password Picture Sound Time Option Lock Channel 1 2 3 4 5 Press MENU and the main menu screen displays. Press 3 /4 menu, press 6 menu. to select Lock to access the Now a password is required to input. Use number buttons to input the correct password (the default password is 0000).

Lock Tuning Set Password Block Program Off Please enter Password English--Off No Block Parental Guidance Restore Factory Default Press 5 Set Password item, and then press 4 or6 to select or OK button to access its submenu. Use the number buttons to input a new password (4- digit). Picture Select Move Menu Return Sound Time Option Lock Channel Input the new password again. Now the new password has been created successfully. Lock Tuning Set Password Block Program Off Please enter Password New English- - - Confirm Parental Guidance ---Off No Block Note ! Be sure to write down your password and retain it for future use. If you do forget the password, the unit provides a super password "2580". Please DO NOT let your children know the super password. Restore Factory Default Select Move Menu Return Block Program Setup The Block Program function blocks any channels that you do not want to watch or that you do not want your children to watch. Picture Sound Time Option Lock Channel 1 2 3 4 5 Navigate to the Lock menu and input the correct password to access. Use 5 or6 to highlight Block Program item, press 4 or OK to access.

Now the Block Program screen opens. Use 5 the or6 to select channel you want to lock, then press GREEN button to set lock to the channel.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-32XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241851>

A lock symbol appears alongside the locked channel. Repeat the above steps for each program you wish to lock. Press MENU to return to previous menu.

Press EXIT to exit the menu screen directly. Then the Block Program comes into effect for the Locked channel. Note Lock Tuning Set Password Block Program Parental Guidance Restore Factory Default Off No Block Select Move Menu Return Block Program TV TV 20 S-48 21 S-51 22 S-56 OK Select LOCK ! To view a locked channel, just input the password. ! To cancel channel lock, use password to enter into the Lock menu, and call up Block Program screen, then use GREEN button to unlock the channel, and the lock symbol will disappear. 25 Rating and Lock Setup (Continued) Parental Guidance Setup (DTV only) Parental Guidance blocks programs according to their classification so that children can not view certain programs.

Picture Sound Time Option Lock Channel Lock Tuning Set Password Block Program Off 1 2 3 Navigate to the Lock menu and input the correct password to access. Press 5 or 6 Parental Guidance item. to highlight the Parental Guidance Restore Factory Default No Block Select Move Menu Return Use 3 or 4 your desired to select rating. Use the "Block All" setting to completely block all viewing. The menu can still be accessed to unblock all programs. G (General Audiences): Content not offensive to most viewers. PG (Parental Guidance Suggested): Content is such that parents may not want their children to view the program. M (Mature Audience): Suitable for mature audience. MA (Mature Adult Audience): May contain mature themes, profane language, graphic violence, and sexual situations. AV (Adult Audience): Strong violence.

Block All Block G and above Block PG and above Block M and above Block MA and above Block AV and above Block R and above No Block 4 Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. R (Restricted viewing): Not for children under age 17. Strong elements of sex and/or violence. Lock Tuning Setup Making use of Lock Tuning you can protect some TV settings from being accidentally changed. 1 2 3 Navigate to the Lock menu and input the correct password to access. Now the Lock Tuning item will be highlighted automatically. Use 3 or turn off the Lock Tuning. or 4 to turn on Once you turn on Lock Tuning, all items in Channel Menu can not be accessed by the user without the correct password. To cancel, use password to enter into Lock Menu and set Lock Tuning item to OFF.

Picture Sound Time Option Lock Channel Lock Tuning Set Password Block Program Parental Guidance Restore Factory Default Off No Block Select Move Menu Return Restoring Factory Default Running this function to reset all settings to its original factory condition. 1 2 3 Navigate to the Lock menu and input the correct password to access. Picture Sound Time Option Lock Channel Lock Tuning Press 5 the Restore Factory Default item, press 4 or 6 to select Set Password Block Program or OK to activate the function. Parental Guidance Are you sure? Off Off English Yes No No Block Now the screen will display a dialog box for you to confirm your operation. Use 3 between YES or NO item, and or 4 to toggle press OK to confirm your operation.

Note Restore Factory Default Select Move Menu Return ! This function will clear most of your customized settings. So make sure you do want to reset all settings to its original factory condition before you perform this operation. 26 Timer Setup Time Zone Selection To obtain local time, you should first set local time zone. and it depends on your local station whether has broadcast time zone information. 1 2 3 Press MENU and the main menu screen displays.

Press 3 Time menu, press 6 or 4 to select to access. Press 5 Time Zone item, and then press or 6 to select select the appropriate one. Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer 3 Auto Sleep or 4 to Time Zone 28/Sep /2008 15:30 Off Off Off Off VIC GMT+10 Current Time Setup Make use of this function can set the current time for the TV. Select Move MENU Return 1 2 3 Navigate to the Time menu, press 6 to access. Press 5 Clock item, Press 4 or 6 to select or OK to access the submenu. Within the menu, use 5 or 6 Date, Month, Year, to highlight the Hour or Minute item, and use 3 the values. or 4 to adjust When finished, use 5 or 6 to select Close and press OK to confirm the setting. Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off 28 Date Off Sep Month Year Off 2008 15 Hour Off 30 Minute GMT+10 VIC Close Note ! Before setting Off timer and On timer, please set the Clock for the TV. Select Move MENU Return On Timer Setup With On Timer function On, the TV will automatically turn on at the preset time. 1 2 3 4 5 Navigate to the Time menu, press 6 to access.

Press 5 On Time item, Press 4 or 6 to select or OK to access the submenu. Now the Activate item will be highlighted automatically, press 3 On . (If you want to cancel setting, please choose or 4 to select Off) Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep 28/Sep /2008 15:30 Off Activate On Off 00 Hour Off 00 Minute 00 Volume Off DTV Mode GMT+10 VIC 22 ABC TV Close Move MENU Press 5 Hour or Minute item, and press 3 Time Zone or 6 to select or 4 to adjust the value. After setting On Timer, you can press 5 navigate , 6 , 3 or 4 to through the following three options and adjust the options . Description Sets desired volume for the On program. Selects one source to be viewed through On timer. Selects a broadcasting program for On timer. Select Return Option Volume Mode Program Number 6 7 When finished, use 5 Close item and press OK to confirm the setting. or 6 to select

Press to switch the TV to standby mode. At the preset time, the TV will auto turn on and broadcast the preset program at the preset volume.

27 Timer Setup (Continued) Off Timer Setup With Off Timer function On, the TV will automatically turn off at the preset time. 1 2 3 4 Navigate to the Time menu, press 6 to access. Press 5 Off Time item, press 4 or 6 to select or OK to access the submenu. Now the Activate item will be highlighted automatically, press 3 On . (If you want to cancel setting, please choose Off) or 4 to select Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Activate Off On 00 Hour Off 00 Minute Off VIC GMT+10 Close Press 5 Hour or Minute item, and press 3 or 6 to select or 4 to adjust the value.

When finished, use 5 Close and press OK to confirm or 6 to select the setting. Note Select Move MENU Return ! Once you have set On timer or Off timer function, the unit will perform it everyday at the preset time.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241851)

[LCD-32XR9DA user guide](http://yourpdfguides.com/dref/3241851)

<http://yourpdfguides.com/dref/3241851>

Sleep Timer Setup Sleep timer lets you select the amount of time before your TV turns itself off automatically. This setting is cleared when the TV is turned off. Picture Sound Time Option Lock Channel 1 2 3 Navigate to the Time menu , press 6 to access.

Press 5 Sleep Timer item. or6 to select Press 3 the amount of the time; to turn off the timer, or4 to select please select Off. Note Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Off Off Off VIC GMT+10 Select Move MENU Return ! You may directly press SLEEP button on the remote control to set sleep timer. ! After you have set sleep timer, when the last 30 seconds have come up, the Power Off screen will appear to remind you after how many seconds the TV will power off. You can press any button to quit. Auto Sleep Setup When there is no signal input for a certain time, the unit will turn off automatically. Picture Sound Time Option Lock Channel 1 2 3 Navigate to the Time menu, press 6 to access. Press 5 Auto Sleep item. or6 to select Press 3 On or Off. or4 to select Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Off Off On VIC GMT+10 Select Move MENU Return 28 EPG Operation EPG The Electronic Programme Guide (EPG) makes it possible for users to see details about the programme they are watching, other programmes and even a schedule of the next 7 days.

The information available includes the number and name of the channel, the name and type of programme, the start and end time, and a summary. Thus viewers can easily select the programmes they want to see. Operation 1 2 Press the EPG button to open the EPG (Electronic Program Guide). In the EPG window (as shown on the right), several channels' current and upcoming program's information will be displayed. Press YELLOW button to highlight the date bar, use 3 the proper date, and then or4 to select press YELLOW button again to exit. Use 5 navigate among the channels ,6 ,3 or4 to and program events, and press INFO button to get more detailed information (if available) about the programme you choose. If you want to switch between TV and Radio programmes, please press TV/Radio. PROGRAMME GUIDE 28 Jul 2008 15:03 DTV 7 7 Digital 70 7 HD Digital 71 7 Digital 1 72 7 Digital 2 73 7 Digital 3 15:00 BLUE HEELERS BLUE HEELERS BLUE HEELERS BLUE HEELERS BLUE HEELERS DTV 72 7 Digital 2 15:00 - 16:00 BLUE HEELERS 28 Jul 16:00 No information No information No information No information No information EXIT Info TV/Radio OK DATE 3 Press OK to tune to the channel you have selected. To clear the EPG window, press EXIT button or EPG button. Note ! The EPG will only work when you are receiving digital channels. ! To enable EPG to work properly, it is suggested to set the appropriate time zone. 29 Teletext & Subtitle Teletext What Is Teletext? Your System receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and sports information, stock exchange prices and programme previews are among the many services available. To Turn On/Off Teletext Select a TV channel providing the Teletext program. Press TTX button to display the teletext.

Press TTX button again to switch back to TV screen. Teletext control button list !5 /6 button Used to scroll page upward or downward. ! 0 9 button Directly select any page by using 0 - 9. ! Colored buttons (RED/GREEN/YELLOW/BLUE) Colored areas are displayed at the bottom of the screen. The 4 colored buttons are used to access the items or corresponding pages.

! Hold button Certain pages contain sub-pages which are automatically displayed successively. This button is used to stop or resume sub-page acquisition. ! Reveal button Press the button to reveal the concealed information such as games solutions. Press the button again to hide the information. ! Size button Press this button several times to display the upper, then the lower part of the screen and then return to the normal size teletext page. ! Index button In teletext mode, press this button to display the index page. ! Mix button Press the button to display the Teletext on the screen with transparent background while viewing the TV program simultaneously. ! Update button Press the button to view the updated teletext page. Subtitle When watching digital programs, press Subtitle button to display the subtitle. 1 2 If the program has subtitle, simply press Subtitle button to display subtitle.

Press Subtitle again to cancel the subtitle. When watching analog programs, press this button to display the teletext subpage. 30 Screen Setup for D-SUB(PC) Mode Before adjusting the screen, make sure that you select the correct source (D-SUB). Screen Setup 1 2 3 4 5 Press MENU and the main menu screen displays. Press 3 the Picture menu, press 6 menu. or4 to select to access the Within the menu, press 5 through the page upward or downward until you select the Screen or 6 to scroll item, then press 4 or OK to access. Press 5 navigate through the options or adjust an option. To confirm, press OK. ,6 ,3 ,4 to Press MENU to return to previous menu. Press EXIT to exit the menu screen directly.

Picture Sound Time Option Lock Channel Picture Sound Time Option Lock Channel Color Temperature Aspect Ratio Noise Reduction Screen Cool 16:9 Off Auto Adjust Horizontal Pos. Vertical Pos. Size Phase 50 50 0 60 Prev Page Select Next Page Move Menu Return Select Move MENU Return Option Auto adjust Horizontal Position Vertical Position Size Phase Description Selects and activates to start auto adjustment. The set automatically adjusts the image settings, such as position and phase. Moves the image on the screen left or right.

Moves the image on the screen up or down. Adjust the horizontal width of the image on the screen. Improves the focusing of a stable image. 31 Hotel Mode Setup Hotel Mode Setup 1 2 3 4 Press SOURCE button. The Input Source menu opens.

Press number buttons: [1, 4, 7] to access the Hotel Mode screen. Within the menu, press 5 navigate through the options ,6 ,3 ,4 to or adjust an option. Press OK to save the setting. Press MENU or EXIT to exit the menu screen directly. Hotel Mode Channel Preset Lock Volume Max AV Lock Panel Lock Press < OK > to save Off 100 Off Off Option Channel Preset Lock Description Press 3 On to lock the Channel menu and Lock Tuning item in Lock menu. /4 to select Select Off to release. Press 3 maximum volume (30 -100) for the unit. /4 to set the Press 3 On to lock the input source of the unit to AV. /4 to select Select Off to return to normal operation. Note: When the item is set to On, the Channel menu and Lock Tuning item will be grayed out and unselectable.

Volume Max AV Lock Note: If AV Lock is set to On, options except AV in the Input Source menu will be grayed out and unselectable.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-32XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241851>

Panel Lock Press 3 On or Off. /4 to select When the Panel Lock is set to On, buttons on the control panel on the main unit are not active. To restore, please set it to Off. Note! When you press keys:[1, 4, 7] to call up Hotel Mode screen, please make sure to finish the inputting when the Input Source menu is still visible. 32 Troubleshooting If, after reading these operating instructions, you have additional questions related to the use of your television, please call the services center in your local area. Before calling service, please check the symptoms and follow suggested solutions. Remote Control Problem Remote control does not operate Possible Solutions! The batteries could be weak. Replace the batteries. ! Check the orientation of the batteries.

! Make sure the power cord is plugged in. Video and Audio Problem No picture (screen not lit), No sound Possible Solutions! Make sure the power cord is plugged in. ! Press POWER on the TV or on the remote control. ! Try another channel; it could be station trouble. ! Select a proper picture mode.

! Adjust the brightness in the video setting. ! Check the antenna connections. ! Adjust the color saturation in the video setting. ! Check the antenna connections. ! Try another channel; it could be station trouble.

! Adjust the antenna. ! @@! @@! The sound may be muted. Press MUTE again to cancel. ! Make sure the stereo mode is set to stereo or mono. !

@@@ These channels may be locked. Please unlock them (see <Rating and Lock Setup> section). ! These channels may be set skipped in the channel list. You may set it to not skipped or select them with 0-9 number buttons. Lost password Some items can't be accessed TV cabinet creaks ! You may use the super password (2580). ! If a setting option appears in gray, this indicates that the settings option is unavailable in current input mode.

! When the TV is in use, there is a natural rise in temperature, causing the cabinet to expand or contract and may be accompanied by a slight creaking noise. This is not a malfunction. Some settings (such as volume setting, etc.) may not be memorized when the TV loses power or you press main Power Switch to turn off the TV. Control buttons do not operate ! After you make some settings or adjustments, and within 30 seconds you turn off the TV by main Power Switch or the TV loses power, then the settings you have made within 30 seconds may not be memorized. But you can use Power button to switch the TV to standby mode before cutting off the power, then the settings can be memorized. ! Disconnect the power cord and wait for a few seconds. Then re-plug the power cord and turn on the unit again. Note If your problem is not solved, turn your unit off and then on again. Cautions: Never attempt to repair a defective TV yourself.

34 Specifications Type: Display Size diagonal: Power Supply: Power Consumption: Dimensions(mm): Unit Weight(kg): TV System: LCD TV 80cm AC220-240V 50/60Hz 100W 776 (W) x 546 (H) x 255 (D) 11.5 Analogue: CCIR(PAL-B/G, NTSC(AV)) Digital: DVB-T(2K/8K OFDM) Note ! Design and specifications are subject to change without notice. 35 Assembling the stand and removing the stand column(Optional) If the stand is provided, please read these instructions thoroughly before attempting this installation. You must install your TV into the stand in order for it to stand upright on a cabinet or other flat surface. If you intend to mount your TV on a wall or other vertical surface, you must remove the stand column.

Cautions: Make sure that you handle your TV very carefully when attempting assembly or removal of the stand. If you are not sure of your ability to do this, or of your ability to use the tools necessary to complete this job, refer to a professional installer or service personnel. The manufacturer is not responsible for any damages or injuries that occur due to mishandling or improper assembly. When using a table or bench as an aid to assembly, make sure that you put down a soft cushion or covering to prevent accidental scratching or damage to your TV's finish. The speaker is not intended to support the weight of your TV.

Do not move or handle your TV by the speaker. This can cause damage to your TV that is not covered by the manufacturer's warranty. Before attempting assembly or removal of the stand, unplug the AC power cord. To install the stand: 1. Remove the stand from the box and place it on a table or bench. You must pay attention to the direction of the stand. The wide portion of the stand should go towards the front of the TV. 2. Lay your TV flat (screen down) on the edge of a table or bench. Make sure that you put down a soft cushion or cloth so that your TV is not scratched.

3. Insert the stand column into the stand socket, move the column steadily until the Locators on the column align with the locating grooves on the stand. And align the holes in the stand with the holes in the stand column, then secure the stand to the column with four M5 screws(provided). Locators Locating grooves Stand M5 screws To remove the stand from the TV, perform these steps in reverse order. 36 To remove the stand column: 1. Lay your TV flat (screen down) on a table or bench. Make sure that you put down a soft cushion or cloth so that your TV is not scratched. 2. Remove the four screws holding the stand column to your TV, then remove the stand column. Stand column Remove four screws NOTE: The appearance of this product in these illustrations may differ from your actual product, and is for comparative purposes only.

37 5944035360 Ver. 1.0 .



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-32XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241851>