



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO LCD-42K40TD. You'll find the answers to all your questions on the SANYO LCD-42K40TD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO LCD-42K40TD
User guide SANYO LCD-42K40TD
Operating instructions SANYO LCD-42K40TD
Instructions for use SANYO LCD-42K40TD
Instruction manual SANYO LCD-42K40TD

SANYO

INSTRUCTION MANUAL

LCD-32K40TD
LCD-42K40TD

LCD TV



[You're reading an excerpt. Click here to read official SANYO LCD-42K40TD user guide](http://yourpdfguides.com/dref/3220768)
<http://yourpdfguides.com/dref/3220768>

Manual abstract:

@@@ Not standing the televisions on cloth or other materials placed between the television and supporting furniture. Educating children about the dangers of climbing on furniture to reach the television or its controls. Warning: To prevent the spread of fire, keep candles or other open flames away from this product at all times. 2 TO THE OWNER Before operating this LCD TV, read this manual thoroughly and operate the LCD TV properly. This LCD TV provides many convenient features and functions. Operating the LCD TV properly enables you to manage those features and maintains it in better condition for a considerable time. Improper operation may result in not only shortening the product-life, but also malfunctions, fire hazard, or other accidents. If your LCD TV seems to operate improperly, read this manual again, check operations and cable connections and try the solutions in the "Troubleshooting" section on page 45 of this booklet. If the problem still persists, contact the dealer where you purchased the LCD TV or the service center. Safety Precaution

WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

1 Install the LCD TV in a proper position. If not, it may result in a fire hazard. 1 Provide appropriate space on the top, sides and rear of the LCD TV cabinet for allowing air circulation and cooling the LCD TV. Minimum clearance must be maintained. If the LCD TV is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Do not cover the ventilation slot on the LCD TV. Heat build-up can reduce the service life of your LCD TV, and can also be dangerous. LCD TV from the power outlet. SIDE and TOP 10 cm REAR 6 cm 10 cm 10 cm 1 If the LCD TV is not to be used for an extended time, unplug the READ AND KEEP THIS OWNER'S MANUAL FOR LATER USE. 1 Handle the LCD TV carefully when installing it and do not drop.

1 Locate set away from heat, excessive dust, and direct sunlight. Caution In Installing 1 For correct installation and mounting it is strongly recommended to use a trained, authorized dealer. Failure to follow correct mounting procedures could result in damage to the equipment or injury to the installer. NOTE : When LCD TV is not used for a long period of time, unlighted dots may be observed. This is caused by characteristic of the LCD TV. If this occurs, turn the LCD TV on and leave it on about 1 hour. These dots will gradually disappear. CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

T H I S S Y M B O L I N D I C A T E S T H A T D A N G E R O U S V O L T A G E C O N S T I T U T I N G A R I S K O F E L E C T R I C S H O C K I S P R E S E N T W I T H I N T H I S U N I T . T H I S S Y M B O L I N D I C A T E S T H A T T H E R E A R E I M P O R T A N T O P E R A T I N G A N D M A I N T E N A N C E I N S T R U C T I O N S I N T H E O W N E R ' S M A N U A L W I T H T H I S U N I T . 3 SAFETY INSTRUCTIONS All the safety and operating instructions should be read before the product is operated. Read all of the instructions given here and retain them for later use. Unplug this LCD TV from AC power supply before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. Follow all warnings and instructions marked on the LCD TV. For added protection to the LCD TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage due to lightning and power line surges.

Do not expose this unit to rain or use near water... for example, in a wet basement, near a swimming pool, etc..

. Do not use attachments not recommended by the manufacturer as they may cause hazards. Do not place this LCD TV on an unstable cart, stand, or table. The LCD TV may fall, causing serious injury to a child or adult, and serious damage to the LCD TV. Use only with a cart or stand recommended by the manufacturer, or sold with the LCD TV.

Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturers. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn. Slots and openings in the back and bottom of the cabinet are provided for ventilation, to insure reliable operation of the equipment and to protect it from overheating. The openings should never be covered with cloth or other materials, and the bottom opening should not be blocked by placing the LCD TV on a rug, or other similar surface. This LCD TV should never be placed near or over a radiator or heat register. This LCD TV should not be placed in a built-in installation such as a book case unless proper ventilation is provided. Never push objects of any kind into this LCD TV through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the LCD TV. Do not place items such as vases containing liquid on top of the LCD TV.

Do not install the LCD TV near the ventilation duct of air-conditioning equipment. This LCD TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized dealer or local power company. Do not overload wall outlets and extension cords as this can result in fire or electric shock. Do not allow anything to rest on the power cord. Do not locate this LCD TV where the cord may be damaged by persons walking on it. Do not attempt to service this LCD TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. Unplug this LCD TV from wall outlet and refer servicing to qualified service personnel under the following conditions: a. When the power cord or plug is damaged or frayed. b. If liquid has been spilled into the LCD TV. c. If the LCD TV has been exposed to rain or water. d.

If the LCD TV does not operate normally by following the operating instructions. Adjust only hose controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the LCD TV to normal operation. e. If the LCD TV has been dropped or the cabinet has been damaged. f.

When the LCD TV exhibits a distinct change in performance-this indicates a need for service. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or injury to persons. Upon completion of any service or repairs to this LCD TV, ask the service technician to perform routine safety checks to determine that the LCD TV is in safe operating condition.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-42K40TD user guide](#)

<http://yourpdfguides.com/dref/3220768>

4 TABLE PREPARATION.....

.....
.....
.....
.....

....7 PART NAMES AND FUNCTIONS 7 CONNECTING LCD TV.....

.....
.....

.....9 CONNECTING AC POWER CORD 9 INSTALLING STAND 9 PREVENTING THE TV FROM FALLING OVER...

.....
.....
.....
.....

....9 CONNECTING OUTDOOR AERIAL 10 CONNECTING A COMPUTER 10 CONNECTING VIDEO EQUIPMENT 11 BEFORE OPERATION.....

.....
.....
.....

12 OPERATION OF REMOTE CONTROL 12 OPERATION RANGE 13 REMOTE CONTROL BATTERIES INSTALLATION 13 MAIN MENU OVERVIEW 14 BASIC OPERATION.....

.....
.....
.....

....15 TURNING ON/OFF LCD TV 15 SELECTING INPUT SOURCE 15 DISPLAYING INFORMATION BANNER 15 MUTE 16 ECO 16 SURROUND 16 VOLUME CONTROL 16 SOUND MODE 16 SLEEP TIMER 16 STILL 16 PICTURE MODE 17 AUDIO SWITCH 17 CHANNEL AND PROGRAMME SELECTION 18 WIDE 19 SPORTS 19 SUBTITLE 20 RADIO MODE 20 EPG(DTV Only) 20 T E L E T E X T

.....
.....
.....

. 2 2 OPERATION OF REMOTE CONTROL 22 TEXT / TV 23 TEXT REVEAL 23 TEXT CANCEL 23 TEXT INDEX 23 TEXT SUBCODE 24 TEXT SIZE 24 TEXT HOLD 24 TEXT RED/GREEN/YELLOW/BLUE 24 TV SETTING..

.....
.....
.....

..25 25 AUTO TUNING DTV MANUAL TUNING 26 ATV MANUAL TUNING 26 SETTING COLOUR SYSTEM 27 SETTING SOUND SYSTEM 27 FINE TUNING 27 SKIP 27 PROGRAMME EDIT 28 CHANNEL RENAME 28 SETTING FAVOURITE CHANNEL 29 SKIP CHANNEL 29 MOVE CHANNEL 30 DELETE CHANNEL 30 PICTURE MENU...

.....
.....
.....

.31 SOUND MENU....

.....
.....
.....

32 TIME MENU.....

.....
.....
.....

...33 TIME ZONE 33 CURRENT TIME SETUP 33 OFF TIMER SETUP 33 ON TIMER SETUP 34 SLEEP TIMER SETUP 35 DAYLIGHT SAVING 35 SETUP MENU.....

.....
.....
.....

.....
....36 SYSTEM SETUP 36 AUTO UPDATE 37 AUTO UPDATE TIME 37 MODEL INFORMATION 37 MANUAL UPDATE 38 LOCK MENU.....

....
.....

....39 LOCK SYSTEM 39 CHANGE PASSWORD 39 BLOCK PROGRAMME 40 PARENTAL GUIDANCE(DTV Only) 40 SCREEN SETUP FOR PC MENU.

....
.....

.....
41 PC SETUP 41 DEALER MODE.....

....
.....

.....
42 APPENDIX.....

.....
....
.....

.....
....

..44 CLEANING LCD TV 44 FUNCTION OF PRODUCT SAFETY FEATURE 44 IMPORTANT INFORMATION 44 TROUBLE SHOOTING 45 TECHNICAL SPECIFICATIONS 46 CONFIGURATION OF VGA TERMINAL 48 MAC ADAPTER (Not Supplied) 48 SIGNAL MODE COLUMN (Recommended) 48 UNINSTALLING STAND BASE 50 is registered trademark of HDMI Licensing, LLC. Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

5 Feature and Design Picture | High Definition LCD Panel LCD-32K40TD 1366 x 768 pixel HD LCD Panel with high contrast ratio and wide viewing angle. LCD-42K40TD 1920 x 1080 pixel Full HD LCD Panel makes perfect reproduction of 1080p/1080i HD contents in pixel-to-pixel. This LCD panel also provide high contrast ratio and wide viewing angle. Indoor Sports Emphasize red and skin colour, clarify the figures in the dark, and surrounded cheers, sound of bumping bodies. Clear voice of an announcer. | EPG Use to view Channel/Programme's information(in a week), programme's brief introduction, Reserve set. (see pages 20-21) | Ambient light sensor | VIZON Engine VIZON Engine, SANYO High Quality Image Processing Technology reproduces clear, dynamic, natural and realistic picture along with HD LCD Panel Technology. The AI (Automatic Image Control) circuit compensates picture contrast and brightness level dynamically and reproduces bright and high-contrast picture. (see page 31) Ambient light sensor automatically adjusts picture brightness to provide more relaxing view for your eyes. (see pages 16 and 36) Your favorite channel list can be made.

(see page 18) | Favorite List | Dynamic AI | STORE Mode Picture mode will be Dynamic and ECO mode will be OFF in STORE MODE. (see page 36) Sound | DOLBY DIGITAL Compatibilty | DVB Broadcast signal DOLBY DIGITAL Dolby® Digital is a highly sophisticated and versatile audio encoding/decoding technology. Dolby Digital technology can transmit mono, stereo (two-channel), or up to 5.1-channel surround sound (discrete* multichannel audio). | Bass Expander This TV can receive DVB-t and anlog broadcast signal | HDMI HDMI provides complete transmission of digital image and sound signals without any quality deterioration. DVI can be connected to HDMI. (see page 12) | PC Input Bass Expander reinforces bass effect to improve overall sound quality. (see page 32). Personal Computer/Laptop can be connected with automatic resolution adjustment. | Terminals Feature | Sports Mode Just by pressing the button, sport mode optimizes picture and sound settings suitable for each sport program.

(see page 19) OFF Normal setting. Football Emphasize bright scene and the surrounded cheers. Winter Sports Reduce white saturation of snow. Emphasize primary colours of the skiing suit ,mid and high range of sound. Marine Sports Emphasize blue sky, blue ocean and the sound of waves.

HDMI for BluRay Player etc. D-SUB 15-pin for PC input etc. Component Video for DVD S-Video/Video for VCR/DVD Others | Wall Mounting It's designed for 2K40TD PREVENTING THE TV FROM FALLING OVER Carry out the steps given below to stabilize the TV that it will be safe in the event of a disaster such as an earthquake, and so that it will not fall over during normal use. Use the marketed bands and screws C to fasten the TV securely to the TV stand etc.

Screw C Mounting screw C Band Mounting screw C Band Mounting screw C Mounting screw C 9 AUDIO PC IN HDMI 1 (DVI) CONNECTING LCD TV CONNECTING OUTDOOR AERIAL Cable used for connection (This cable is not supplied with this LCD TV.

) · Aerial Cable NOTE: For all aerial circuit problems, please consult your local dealer. Aerial Cable Outdoor Aerial AV1 IN V L HDMI 2 HDMI 3 R S-VIDEO CONNECTING A COMPUTER Cables used for connection (These cables are not supplied with this LCD TV.) · PC/VGA Cable (D-SUB 15pin) · HDMI Cable: HDMI Input · MAC Adapter (in the case of connecting Macintosh computer) · Audio Cable [Mini Plug (L/R)] NOTE: When connecting the cables, AC

Power Cords of both LCD TV and external equipment should be disconnected from AC outlet. Turn LCD TV and peripheral equipment on before your computer is switched on. Laptop type AV2 IN / DVD IN L R Y(V) CB/PB CR/P V MONITOR OUT L AUDIO R IBMcompatible computers or Macintosh computers (VGA / SVGA / XGA) Desktop type PC IN HDMI 1 (DVI) AV2/ HDMI 2 HDMI 3 PC Input MAC Adapter Monitor Output Audio Output (stereo)

AV1 IN V L R Audio Input (stereo) PC INPUT S-VIDEO HDMI Input HDMI Output Digital AV Equipment Note: You can connect the DVI source to HDMI input terminal by using the DVI to HDMI converter. 10 CONNECTING LCD TV CONNECTING VIDEO EQUIPMENT Cables used for connection (These cables are not supplied with this LCD TV.) · Video Cable(RCA X1), S-Video Cable, Audio Cable (RCA X2) : Video 1 or Video 2 · Video Cable(RCA X3),

Audio Cable (RCA X2) : DVD (Component Video) · Video Cable(RCA X1), Audio Cable (RCA X2) : Monitor Outputs · HDMI Cable X 3 : HDMI Input · Coaxial Cable X 1 : S/P DIF Output NOTE : When connecting the cable, A C Power Cords of both LCD TV and external equipment should be

disconnected from AC outlet. Component Video Source (example) Connect Hi-Fi or Audio processor to the S/PDIF OUT(Coaxial) terminal on the TV rear.



[You're reading an excerpt. Click here to read official SANYO
LCD-42K40TD user guide
http://yourpdfguides.com/dref/3220768](http://yourpdfguides.com/dref/3220768)

HiFi System Audio Processor R, L, V S-Video Coaxial cable Audio cable (RCA x 2) S-Video Cable S-Video output Video Source (example) RL Composite Video and Audio Output Audio Amplifier Audio Speaker (stereo) Video and Audio cable (RCA x 3) Audio cable (RCA X 2) Video Cassette Recorder Video Disc Player External monitor CR/PR, CB/PB, Y Video cable (RCA x1) DVD Player DVD video equipment. (such as DVD player or high-definition TV source) External Audio Equipment DVD (RCA X 3) HDMI cable HDMI cable Digital AV Equipment HDMI cable MONITOR OUT Note : The MONITOR OUT terminal can output audio from all input source and video from ATV, DTV, AV1; and the video from AV2, PC and HDMI can not be outputted.

11 BEFORE OPERATION OPERATION OF REMOTE CONTROL INPUT button POWER ON/OFF button INFO button STILL button MUTE button SPORTS button A-B button ECO button SLEEP TIMER button MENU button BACK button CHANNEL RECALL button 0-9 NUMBER buttons POINT // / buttons OK button VOLUME (-) button VOLUME (+) button EPG button (DTV only) FAV-LIST button GREEN button RED button LIST button TXT/TV button TV/Radio button (DTV only) SUBTITLE button (DTV only) CHANNEL UP () button CHANNEL DOWN () button FAV / FAV button YELLOW button BLUE button PICTURE MODE button SOUND MODE button SURROUND button WIDE button Note: In different mode, some buttons have different functions. (For details, please refer to page 22.) 12 BEFORE OPERATION OPERATION RANGE Point Remote Control toward LCD TV (Infrared Remote Receiver) whenever pressing the buttons. Maximum operating range for Remote Control is about 16.4' (5m) in front, about 30° to the left or the right, about 15° for up or down. Infrared Remote Receiver 30 30 5m REMOTE CONTROL BATTERIES INSTALLATION 1 Remove the battery compartment cover . 2 Insert two size AAA batteries (1.5V) according to "+" and "-" polarity markings inside the battery compartment. 3 Close the battery compartment cover. To insure safe operation, please observe the following precautions: Use (2) AAA, alkaline batteries.

Replace two batteries at the same time. Do not use a new battery with a used battery. Avoid contacting with water or liquid. Do not expose the Remote Control to moisture, or heat. Do not drop the Remote Control.

If a battery has leaked on the Remote Control, carefully wipe case clean and install new batteries. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Do not expose batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like. 15 15 13 BEFORE OPERATION MAIN MENU OVERVIEW List of main menus to help you with operations PICTURE MENU SOUND MENU 0 TV SETTING MENU TIME MENU TV SETTING Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit BACK MENU OK LOCK MENU SETUP MENU To navigate through the main menu.

1 2 3 4 With the power on, press MENU button and the main menu screen displays. Press or button to select menu. Press button to access the menu. With the menu, press, or button to navigate through the options or adjust an option. Press OK button to confirm a selection or enter a sub-menu. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Note: Some menu items may be different when the LCD TV works in different mode, and menu items that are not selectable are grayed out. PICTURE menu and SOUND menu have more than one pages, please use or button to scroll through. The illustrations and on-screen displays in this manual are for explanation purpose (some are enlarged, others cropped) and may vary slightly from the actual ones.

14 BASIC OPERATION TURNING ON / OFF LCD TV 1 2 3 Complete the peripheral connections before turning on LCD TV. (Please refer to "CONNECTING LCD TV".) Connect LCD TV's AC Power Cord into an AC outlet. Press POWER ON/OFF button on Side Control of LCD TV or on Remote Control to turn it ON. The POWER indicator will light up (blue). Press POWER ON/OFF button again to shift it to stand-by status, the POWER indicator will become red. SELECTING INPUT SOURCE 1 2 Press INPUT button. Press or to select the input source. Options include: DTV---Watch the DTV signal. ATV---Watch the ATV signal.

AV1---Watch the signal from the AV1 input terminal. AV1-S---Watch the signal from the S-VIDEO input terminal. AV2---Watch the signal from the AV2 input terminal. AV2-DVD---Watch the signal from the DVD input terminal. HDMI1---Watch the signal from the HDMI1 input terminal. HDMI2---Watch the signal from the HDMI2 input terminal. HDMI3---Watch the signal from the HDMI3 input terminal. PC---Watch the signal from the PC input terminal. 3 4 Press, or OK button to confirm the selection. Press BACK button to exit the input source menu.

Note: Input source menu will disappear if no operation for 5 seconds and the LCD TV will enter the selected input mode automatically. DVI and HDMI share the HDMI jack. DISPLAYING INFORMATION BANNER Press INFO button to display the information banner. The information banner displays current status information such as the channel number and signal source. Depending on the mode, different information is displayed. In DTV mode, more information will be displayed. Below is an example banner in DTV mode. 22 In DTV mode, the information banner may contain: Channel number and name. Current time. Current programme name, start and end play time.

Next programme name and start and end play time. TV or Radio. Audio mode, audio track Signal resolution. Subtitle, teletext. Note: The above OSD is only served as an example, and it is in DTV mode. Information banner content varies, depending on the broadcaster and your settings. 15 BASIC OPERATION MUTE Should you wish to mute the sound, press MUTE button. To switch the sound back on, press MUTE button again or press VOLUME(+/-) buttons on Side Control or on Remote Control. ECO ECO mode is environmentally friendly mode by adjusting the screen-end power TV unit to reduce power consumption. Press ECO button on Remote Control to set "ECO Off", "ECO On" or "ECO Sensor".

And it will attain the best power consumption when "ECO On" is selected. SURROUND Press SURROUND button on Remote Control to set "Surround Off" or "Surround On". VOLUME CONTROL To adjust the volume value desired by pressing VOLUME(+/-) buttons on Remote Control or on Side Control. The volume dialogue box will appear on the screen for a short while. VOLUME(+) button to increase volume, and VOLUME(-) button to decrease volume. SOUND MODE Select sound level by pressing SOUND MODE button on Remote Control. Standard Music Theater News Personal Normal sound state preset on LCD TV.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3220768)

[LCD-42K40TD user guide](http://yourpdfguides.com/dref/3220768)

<http://yourpdfguides.com/dref/3220768>

Select this mode for music programme. Select this mode for film programme. Select this mode for talk programme.

Select this mode for user to call out the preset sound adjustment in SOUND menu. SLEEP TIMER Press SLEEP TIMER button repeatedly to select "Off", "10min", "20min", "30min", "60min", "90min", "120min", "180min" or "240min", shown as Picture 1. Once SLEEP TIMER has been set, TIMER indicator is light, and the timer will display on the screen to start countdown for 1 minute, shown as Picture 2. And the LCDTV will shift to Stand by status. Sleep Timer : Off Picture 1 Picture 2 STILL Press STILL button to switch the still function On or Off. To cancel "Still" function: Press STILL/ INPUT/ BACK/ POWER/ CHANNEL UP or DOWN button to cancel the function. Note: When the still function is On, the picture freezes. However, the sound is not affected. If source disconnected, it will display "No Signal". It is released automatically for no operation in 3 minutes.

STILL : On 16 BASIC OPERATION PICTURE MODE Select image level by pressing PICTURE MODE button on Remote Control. Personal User presets picture adjustment in PICTURE MODE. Standard Natural and splendid picture level preset on this LCD TV. Vivid Natural brightness and vivid colour. Dynamic Bright and dynamic picture. It is suitable for nice playback, such as DVD programme. Soft Inhibit strong contrast and colour, it is beneficial for eye protection. Note: Press ECO button on Remote Control to select "ECO ON". While in ECO status, press PICTURE button to select any of options of "ECO Personal", "ECO Standard", "ECO Vivid", "ECO Dynamic" and "ECO Soft". PICTURE button AUDIO SWITCH The LCD TV can be received NICAM, A2 and Monaural sound systems.

Press A-B button to select the respective mode. NICAM sound system NICAM Monaural broadcast is received Press A-B button to select any options of NICAM MONO and Mono. NICAM Stereo broadcast is received Press A-B button to select any options of NICAM STEREO and Mono. NICAM Dual sound broadcast is received Press A-B button to select any options of NICAM DUAL A, NICAM DUAL B, NICAM DUAL A+B and Mono. A2 sound system A2 Stereo sound broadcast is received Press A-B button to select any options of Stereo and Mono. A2 Dual sound broadcast is received Press A-B button to select any options of DUAL A, DUAL B and DUAL A+B. MONO sound system Monaural broadcast is received Press A-B button to display Mono. Note: A-B button is only active in DTV/ATV mode. NICAM and A2 sound system are only active in ATV mode. 17 BASIC OPERATION CHANNEL AND PROGRAMME SELECTION Please note: your new LCD TV is capable of receiving both radio and TV broadcasts.

And for TV reception, your new LCD TV is capable of receiving both traditional analogue channels and digital channel. When watching digital TV programme and you want to listen to radio programme, simply press TV/Radio button to switch. To return to TV programme, press TV/Radio button again. (When watching analogue TV programme, TV/Radio button does not work.) The TV allows channel and programme selection in the following ways: Method 1 Using CHANNEL UP () or CHANNEL DOWN () button Press CHANNEL UP () or CHANNEL DOWN () button to cycle among all available channels. The skipped channels can not be selected by CHANNEL UP () or CHANNEL DOWN () button. Note: By using CHANNEL UP () or CHANNEL DOWN () button, you can not select analogue channels in DTV mode, or digital channels in ATV mode. Method 2 Using CHANNEL RECALL button Press CHANNEL RECALL button to switch to the previous channel. Press CHANNEL RECALL button again to switch back to the current channel. Method 3 Using 0-9 and OK buttons Press 0-9 NUMBER buttons to input a channel number, then wait for a few seconds or press OK button to go directly to that channel.

Note: By using 0-9 NUMBER buttons, you can not select analogue channels in DTV mode, or digital channels in ATV mode. When in Radio mode, you can press TV/Radio button to switch to TV mode. If you input one-digit or two-digit channel number, you can press OK button to go directly to the channel without waiting. Method 4 Using channel list Press LIST button to display the channel list. Use or button to select a desired channel and then press OK button. No operation for a moment (the duration can be set) or press BACK button to exit menu operation. Note: If the channel list has more than one pages, you may press CHANNEL UP () or CHANNEL DOWN () button to scroll the page upward or downward. Heart mark () indicates the programme has been set as favourite programme. Method 5 Using favourite channel list After you have created the favourite channel list, you can press FAV-LIST button to display the favourite channel list. Use or button to select a channel and then press OK button.

No operation for a moment (the duration can be set) or press BACK button to exit menu operation. Note: You can directly press FAV / FAV button to cycle among the favourite channels. 18 BASIC OPERATION WIDE Select screen size among "16:9", "4:3", "Auto", "Zoom1" and "Zoom 2" by pressing WIDE button on Remote Control. Note: "Auto" can only be selected in DTV mode. When selecting Zoom1/ Zoom2, you may use or button to move the picture upward, downward, or press or button to zoom in or out the picture.

16:9 4:3 16:9 Displays a 16:9 picture. 4:3 Displays a 4:3 picture. Auto (DTV only) Displays picture automatically in proper ratio. Zoom1 Enlarges the picture to fill the full screen. Zoom2 Enlarges the picture.

the top and bottom portions may be cropped. Auto (DTV only) ZOOM1 ZOOM2 SPORTS SPORTS mode is combination of picture and Sound settings specially designed for Sports program. In SPORTS mode, picture and audio is optimized to obtain maximum viewing experience. Select sports mode among "Off", "Football", "Winter Sports", "Marine Sports" and "Indoor Sports" by pressing SPORTS button repeatedly on Remote Control Off Turn off the sports mode to return to normal picture. Football Emphasize vivid green of the grass. High contrast, deep black for the bright scene. Emphasize surrounded cheers Winter Sports Reduce white saturation of snow. Emphasize primary colours of the skiing suit by slightly reducing contrast and brightness and slightly. Emphasize mid and high range of sound. Marine Sports Emphasize blue sky and blue ocean.

Emphasize the sound of waves. Indoor Sports Emphasize red and skin colour and clarify the figures in the dark. Emphasize surrounded cheers and sound of bumping bodies. Clear voice of an announcer. 19 BASIC OPERATION SUBTITLE 1 2 In DTV mode, press SUBTITLE button to display the menu like Picture 1.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-42K40TD user guide](#)

<http://yourpdfguides.com/dref/3220768>

Press or button to select English, then press OK button to confirm. In ATV and AV mode, if the played program has subtitle content, press SUBTITLE button to display "TTX Subtitle On", press it again to display "TTX Subtitle Off". However, if the played program has no subtitle content, press SUBTITLE button to display "No TTX Subtitle" shown as Picture 2. In the other modes, including HDMI mode and PC mode, press SUBTITLE button to display "No TTX Subtitle". Press BACK button to return to previous menu.

Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Picture 1 3 4 No TTX Subtitle Picture 2 RADIO MODE (DTV Only) 1 2 3 Press TV/Radio button to switch TV/Radio mode. When switching to Radio mode, OSD will display as Picture 1. In Radio MODE, press CHANNEL UP () or CHANNEL DOWN () button to switch Radio program. In Radio MODE, press INFO button to display as Picture 2. When OSD is disappeared, the screen will display "AUDIO ONLY" which will skip randomly on the screen. 38 SBS Radio 1 RADIO 38 SBS Radio 1 RADIO Picture 1 38 SBS Radio 1 38 SBS Radio 1 No Information No Information No Program Information No Program Information Note: In Radio mode, WIDE/ECO/ STILL/ SUBTITLE models are effective. Picture 2 EPG (DTV Only) Use to view Channel/Programme's information(in a week), programme's brief introduction, Reserve set. Formula 1 ING Australian Grand Prix Formula 1 ING Australian Grand Prix To view Channel/Programme's information(in a week) 1 2 3 Press EPG button to display the OSD as Picture 1, including current time, programme's name/time/list, and programmer information in different time, etc. Press or button to select any programme, press OK button to switch to the selected programme.

Press or button to view/select programme information in different periods in one day. To view the programme schedule in a week. Firstly, press or button to select one programme as picture 1. Then press YELLOW button to display the screen menu as Picture 2. Press or button to change the date. Press YELLOW button to return the screen menu as Picture 1. Press MENU button to exit EPG. Picture 2 Picture 1 20 BASIC OPERATION Formula 1 ING Australian Grand Prix Formula 1 ING Australian Grand Prix To set Reserve 1 2 3 4 Press EPG button to display the OSD as Picture 1, press , or button to select one programme, then press BLUE button to enter into Reserve menu as Picture 2. In the Reserve menu, press , , or button to set Programme, Hour, Minute, Mode, Date, Month and Week. After setting Reserve, press OK button to enter into the menu as Picture 3, and the Reserve information will be saved in the Schedule LIST in this menu.

5 programmes can be saved at most. When 5 programmes have been saved in Schedule LIST, if pressing blue key to set Reserve in Picture 1's menu, the screen will display "Schedule List Full", shown as Picture 4. When the Schedule List is full, if Reserve set is still needed, must enter into the Schedule List as Picture 3, press or button to select the programme which has been set as Reserve, and press RED button to delete. When the TV is ON, if the reserved programme starts in 15sec, it will start to count down as Picture 5. Press or button to select Yes, and press OK button to switch to the reserved channel. Press or button to select No, and press OK button to stop switching to the reserved channel, the count time OSD will disappear. If there is no operation, TV will switch to the reserved channel when the count time is over. Picture 1 5 Picture 2 Formula 1 ING Australian Grand Prix Note: The different programmes in same time cannot be set as Reserves, or the screen will display "Time Overlapped". In stand by mode, if the Reserve time is coming, TV will power on and switch to the reserved channel. If the ON TIMER and the Reserve are set as the same time, Reserve will be operated first.

If the ON TIMER is earlier than Reserve time, ON TIMER will be operated first, then operate Reserve when Reserve time is coming. If the Reserve time is earlier than ON TIMER, the ON TIMER will not be operated after Reserve has been operated. After Reserve enactment is executed, If no operation in 2 hours, LCD TV will be off automatically. When the time set as Reserve is coming soon, TV will display the Reserve. When time is up, TV will switch to the channel set as Reserve automatically.

All programmes in Schedule List will be removed after Auto Tuning or reset TV. DTV programmes and Radio programmes can be switched by pressing TV/Radio button. Picture 3 Picture 4 Picture 5 To view programme's brief introduction In the Menu as Picture 1, press , , or button to select one programme, and press INFO button to enter into the information as Picture 6, and brief introduction of the programme will be displayed. Picture 6 21 TELETEXT OPERATION OF REMOTE CONTROL POWER ON/OFF button TEXT REVEAL button TEXT HOLD button TEXT CANCEL button TEXT INDEX button TEXT SUBCODE button TEXT SIZE button SUB PAGE DOWN () button SUB PAGE UP () button NUMERIC buttons VOLUME (-) button VOLUME (+) button PAGE UP () button PAGE DOWN () button TEXT RED button TEXT GREEN button TXT/TV button TEXT BLUE button TEXT YELLOW button Note: In different mode, some buttons have different functions. (For details, please refer to page 12.

) 22 TELETEXT TELETEXT Your system receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and sports information, stock exchange prices and programme previews are among the many services available. TEXT/ TV Press TXT/TV button to select teletext. The display on the screen will flow like below when repeatedly press TXT/TV button. TV mode: TV -> TEXT mode -> MIX mode -> TV AV mode: AV -> TEXT mode -> MIX mode -> AV Note: TEXT mode: TEXT screen is displayed. MIX mode: TV/AV (broadcast image) screen and the contents of TEXT (superimposed) are displayed simultaneously. CANCEL mode: TEXT/MIX MODE is canceled temporarily and broadcast image is displayed. When TEXT/TV button is pressed during CANCEL mode, the operation of CANCEL will be interrupted and the display of TEXT will appear on the screen. TEXT REVEAL Press REVEAL button to reveal hidden items on the text page. Some pages such as quiz pages have the answers hidden.

The button may have to be held to keep the answer on the screen, or press again to remove the answer. In REVEAL OFF, this indication is not given. REVEAL button does not work except a text function. (The recall button usually operates.) TEXT CANCEL When press TEXT CANCEL button in TEXT or MIX mode, the TV picture appears on the screen. CANCEL mode will be canceled if the button pressed once again. CANCEL mode is also canceled by TXT/TV button. TEXT INDEX Press INDEX button to select the teletext index page in TEXT, MIX or CANCEL mode.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3220768)

[LCD-42K40TD user guide](http://yourpdfguides.com/dref/3220768)

<http://yourpdfguides.com/dref/3220768>

23 TELETEXT TEXT SUBCODE 1 2 Press the TEXT SUBCODE button, "110/.
.." will be displayed (e.g. the current page is 110).

Press the NUMERIC buttons(0-9) to enter the sub page. For example, to select sub page 4, press NUMERIC buttons 0-0-0-4, and "110/0004" will be displayed. TEXT SIZE Press TEXT SIZE button to enlarge the top half of the text page. Press TEXT SIZE button again to enlarge the bottom half of the text page. Press TEXT SIZE button again to return to the normal size page.

Normal -> top half enlargement -> bottom half enlargement -> normal Note: During the top half enlargement or the bottom half enlargement mode, if a page request is performed by [0] - [9] buttons and TEXT INDEX button, it will become the normal mode and a page will be requested. If HOLD ON / OFF is performed during the top half enlargement mode, it will still at the top half enlargement mode. (A HOLD symbol displays.) If HOLD ON / OFF is performed during the bottom half enlargement mode, it will still at the bottom half enlargement mode. (A HOLD symbol does not display.) TEXT HOLD Press TEXT HOLD button to stop page request and updating. will appear instead of the page number. HOLD ON: The symbol Update of TELETEXT is forbidden. It stops on the TEXT screen display now. HOLD OFF: A status display will be page number display.

TELETEXT page data is updated. The present page is re-requested. (header roll) A screen is updated by reception of the UPDATE signal. A screen is eliminated by reception of an ERASE signal. TEXT HOLD button does not work except a text function. TEXT RED/ GREEN/ YELLOW/ BLUE Coloured areas are displayed at the bottom of the screen. The 4 coloured buttons are used to stop or resume sub-page acquisition. 24 TV SETTING Auto Channel Search is performed automatically when TV is first powered on or after resetting. Note: Be sure to select the proper input source (ATV/DTV) before tuning operation.

AUTO TUNING You should perform an auto channel search to search for all channels available and store them in memory.

1 2 3 Press MENU button and the main menu screen will be displayed. Press or button to select TV SETTING menu. Press button to access the menu. Auto Tuning item will be highlighted, and pressor OK button to access. Now a confirmation box appears on the screen as Picture 1.

Press or button to select Yes, and then press OK button to start Auto Tuning. ATV search firstly, then DTV and Radio, shown as Picture 2. During tuning, press Back button to skip the current tuning and start another one. Or press MENU button to exit the tuning. As Pictures 3 and 4 shown, you can press or button to select Yes and then press OK button to access the operation.

After Auto Tuning, the LCD TV will memorize all ATV/DTV channels available. The Saving display will be shown on the screen like Picture 5 for 5 seconds. And then the first position in the programme list will be on. Picture 3 Picture 1 4 Picture 2 5 Note: At the first power on and just after plug and play channel set-up, operating mode selection menu will appear, shown as picture 6. Press or button to select and press OK button for Standard/Energy Save or Store/Dynamic. Then the pop up menu disappears. Recommending Standard/Energy Save mode for normal home viewing. The password for Block Programme will be cleared after auto tuning. Picture 4 Picture 5 Picture 6 25 TV SETTING DTV MANUAL TUNING 1 2 3 4 In TV SETTING menu, Press or button to select DTV Manual Tuning, then press or OK button to access. Press or button to select your desired channel.

Press OK button to begin the manual DTV channel search. @@You can repeat step 2 to search other channels. Press BACK button to return to previous menu. @@Storage To item will be highlighted. @@@@Press BACK button to return to previous menu. Press MENU button to exit the menu screen directly. Press button, the LCD TV will search towards higher frequency. @@@@ Pressor button to select a channel position in which you want to skip. Press or button to select Skip item. Press or button to select Yes.

Press RED button to save. @@Note: Channel move/rename is only useful in ATV mode. @@@@Programme Edit item will be highlighted as picture 1. Press or OK button to access, shown as picture 2. @@Press or button to rename the channel, shown as Picture 4.

Repeat steps 3-4 to rename other channels. Press BACK button to return to previous menu. @@@@ Press BACK button to return to previous menu.

@@Press FAV-LIST button to display the menu as Picture 2. @@@@ Heart mark () indicates the programme has been set as favourite programme. Whether in ATV or DTV mode, while the favourite programme has been set, the setting will be saved when AC power off, Stand-by mode and Channel switching.

Picture 2 SKIP CHANNEL 1 2 3 4 Navigate to Programme Edit submenu, press or button to select the Channel desired to skip. Press BLUE button, the Channel will be marked as SKIP, shown as right picture. Press BLUE button again and the SKIP marker will disappear. The Channel set as SKIP will not appear when pressing CHANNEL UP() or CHANNEL DOWN() button. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. 29 TV SETTING MOVE CHANNEL 1 2 3 Navigate to Programme Edit submenu, press or button to select ATV Channel desired to move. Press YELLOW button, the Channel will be marked as MOVE, shown as right Picture. Then press or button to move the channel upward or downward to a desired new position.

Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Note: The order of the DTV channels is automatically assigned and cannot be changed by user. There is no MOVE item in DTV mode. DELETE CHANNEL 1 2 3 Navigate to Programme Edit submenu, press or button to select any Channel desired to delete. Press RED button, the Channel will be marked as DELETE, shown as right picture. Press RED button again to finish the delete. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. 30 PICTURE MENU PICTURE 1 2 3 4 Press MENU button and the main menu screen displays.

Press or button to select PICTURE menu, Press button to access the menu. Within the menu, press or to scroll through the page upward or downward, and press , , or to navigate through the options or adjust an option. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Option Picture Mode Contrast Brightness Colour Sharpness Tint Colour Temp Red Green Blue Wide Mode Description To select a desired picture mode.

You can select Personal, Standard, Vivid, Dynamic and Soft. The details, please refer to page 17.



[You're reading an excerpt. Click here to read official SANYO LCD-42K40TD user guide](http://yourpdfguides.com/dref/3220768)
<http://yourpdfguides.com/dref/3220768>

To adjust image contrast. To adjust screen brightness for easier viewing of dark picture such as night scenes and black hair. To adjust colour saturation. To adjust image sharpness and display a sharp image. To adjust tint for image. To select one of four automatic colour adjustments. You can select Normal, Warm, Cold or Personal. To adjust red tone. To adjust green tone. To adjust blue tone. To select the wide mode (display proportions) according to your video signal type or personal preference. You can select 16 : 9, 4 : 3, Auto, Zoom 1 or Zoom 2. The details, please refer to page 17.

Note: Auto can only be selected in DTV mode. To reduce noise in the picture. You can select Low, Normal, High, Auto or Off. To adjust contrast and colour parameters until the display looks good. You can select On or Off to turn on or turn off this function. To improve picture contrast. You can select On or Off to turn on or turn off this function. Noise Reduction Dynamic AI Dynamic Contrast Note: "Contrast", "Brightness", "Colour", "Sharpness", "Tint" are adjustable in Picture Mode "Personal" only. "Tint" only active in NTSC/NTSC4.43 Colour System.

"Red", "Green", "Blue" are adjustable in Colour Temp "Personal" only. 31 SOUND MENU SOUND 1 2 3 4 Press MENU button and the main menu screen displays. Press or button to select SOUND menu, Press button to access the menu. 0 Within the menu, press or to scroll through the page upward or downward, and press , , or to navigate through the options or adjust an option. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. 0 Option Sound Mode Treble Bass Balance Auto Volume Surround Bass Expander Description To select a desired sound mode. You can select Standard, Music, Theater, News and Personal. The details, please refer to page 14. To adjust Treble (high sounds).

To adjust Bass (low sounds). To adjust volume balance. To select On to equalize overall volume levels across all channels. To select Off to turn off the auto volume control. To select On to turn on the surround sound effect. To select Off to turn off the function. To select On to turn on the bass expander effect. To select Off to turn off the function. Note: Before adjust "Treble" and "Bass", please set Sound Mode to "Personal". 32 TIME MENU TIME ZONE (Only DTV) To obtain local time, you should first set local time zone, and it depends on your local station whether it has broadcast time zone information.

1 2 3 Press MENU button and the main menu screen displays. Press or button to select TIME menu, Press button to access the menu. Press or to select Time Zone item, press or to select the appropriate one. CURRENT TIME SETUP 1 2 3 4 Navigate to the Time menu, press button to access. Press or button to select Current Time Setup item as Picture 1, press or OK button to access the submenu. Within the menu, use or button to highlight the Date, Month, Year, Hour or Minute item, and press or button to adjust the values, shown as Picture 2. When finished, use or button to select Close and press OK button to confirm the setting. Picture 1 Note: Before setting Off Timer and On Timer, please set the current time for the LCD TV. When it has signal in DTV mode, the setting of Current Time is locked. Current Time setting will be removed while AC Power off.

Picture 2 OFF TIMER SETUP While Off Timer has been set, The LCD TV will automatically turn off at the preset time. 1 2 4 5 6 Navigate to the Time menu, press button to access. Press or button to select Off Timer item, press or OK button to access the submenu. Now the Repeat item will be highlighted automatically, press or button to select Off, Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Sun. Press or button to select Hour or Minute item, press or button to adjust the value.

When finished, use or button to select Close and press OK button to confirm the setting. Picture 1 Picture 2 Note: While AC Power off, the setting will be removed, except for DTV mode. Once OFF TIMER has been set, the timer will display on the screen to start count time for 1 minute, and TV will shift to Stand by status, shown as Picture 2. While OFF Timer is set, the Timer indicator will be light in TV ON status. 33 TIME MENU ON TIMER SETUP With On Timer has been set, the LCD TV will automatically turn on at the preset time.

1 2 3 4 5 Navigate to the Time menu, press button to access. Press or button to select On Timer item, press or OK button to access the submenu. Now the Active item will be highlighted automatically, shown as right picture. Press or button to select Off, Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Sun. Press or button to select Hour or Minute item, press or button to adjust the value. After setting On Timer, you can press , , or button to navigate through the following three options and adjust the options. Option Volume Mode Program Description Sets desired volume for the On programme. Selects one source to be viewed through On timer. Selects a broadcasting program for On timer. 6 7 When finished, use or button to select Close and press OK button to confirm the setting.

Press POWER ON/OFF button to switch the LCD TV to standby mode. At the preset time, the LCD TV will automatically turn on and broadcast the preset program at the preset volume. Note: While AC Power off, the setting will be removed, except for DTV mode. While On Timer is set, the Timer indicator will be light in Stand-by status. On Timer setting will be removed while AC Power off. If Off Timer and On Timer are set as the same time, the Off Timer setting is available while the LCD TV is On, and On Timer setting is available when the LCD TV is off. After On Timer is executed, if no operation in 2 hours, the LCD TV will be off automatically. 34 TIME MENU SLEEP TIMER SETUP Sleep timer lets you select the amount of time before your LCD TV turns itself off automatically. 1 2 3 Navigate to the Time menu, press button to access. Press or button to select Sleep Timer item, shown as Picture 1.

Press or button to select the amount of the time, if you want to turn off the timer, please select Off. Once Sleep Timer has been set, TIMER indicator is light, and the timer will display on the screen to start count time for 1 minute, and the LCD TV will shift to Stand by status, shown as Picture 2. Picture 1 Picture 2 Note: Sleep Timer setting will be removed while power off. DAYLIGHT SAVING (Only DTV) Use to set daylight saving time. 1 2 Navigate to the Time menu, press button to access.

Press or button to select Daylight Saving item. Press or button to select On or Off. When Daylight saving time is set as On, LCD TV will adjust to daylight saving time, and the displayed time will add 1 hour, shown as Picture 2. When Daylight saving time is set as Off, LCD TV will display normal time, shown as Picture 1.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD-42K40TD user guide](#)

<http://yourpdfguides.com/dref/3220768>

Picture 1 Note: Daylight Saving is only active in DTV mode.

The item can be set only if it can receive the information of Daylight Saving Time. The item is displayed in grey and cannot be set if it can receive the information of Daylight Saving Time. Picture 2 35 SETUP MENU SYSTEM SETUP You may change system settings such as S/P DIF, Audio Preference, etc. by making use of Setup menu. 1 2 3 4 Press MENU button and the main menu screen displays. Pressorbutton to select Setup menu, Press button to access the menu. Within the menu, press or to scroll through the page upward or downward, and press , , or button to navigate through the options or adjust an option. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Option ECO Description ECO mode is environmentally friendly mode by adjusting the screen status to reduce power consumption.

In this mode, you can select Off, On or Sensor. When ECO is set "On", it will attain the best power consumption. To set the bright of the blue illumination. You can select Light or Dark. To select the digital audio output mode for S/P DIF. You can select Auto or PCM. To select the audio output mode. You can select MPEG or Dolby D. Illumination S/P DIF Only for digital programs. Audio Preference Only for digital programs.

OSD Duration To set the display time of the MENU while no operation on the LCD TV. You can select 5sec, 10sec, 15sec, 20sec, 25sec, 30sec or 60sec. To select Operating Mode. You can select Standard/Energy Save mode or Store/Dynamic mode. Recommending Standard/Energy Save mode for normal home viewing.

Standard/Energy Save: Normal initial setting in Standard/Energy Save mode. Picture mode will be Standard and ECO mode will be Sensor. When you adjust picture settings or others, these will be stored in the last status memory. Store/Dynamic: Picture mode will be Dynamic and ECO mode will be Off in Store/Dynamic MODE. After someone adjust Picture mode, Picture settings and ECO mode, when 30 minutes is elapsed without any operation, picture settings will return automatically to the initial setting.

Operating Mode 36 SETUP MENU AUTO UPDATE Within SETUP menu, press or to scroll through the page upward or downward until you select Auto Update, shown as Picture 1. Then pressorbutton to select On or OFF. On: To allow system update automatically. Off: To turn off Auto Update function. Note: You should first set this item to On before performing system update function. The LCD TV will be updated automatically according to the preset time. If you are watching TV, and the preset time is coming, the screen will be displayed as Picture 2. Pressorbutton to select NO, then press OK button or wait for a minute, it will be come back the present status. Pressorbutton to select YES, then press OK button or wait for a minute, the system will update automatically. And the details, please refer to "MANUAL UPDATE" on page 36.

The LCD TV also will be auto updated according to the preset time in standby status. The Power indicator will be turned blue from red during the processing and the screen will black out. If press POWER button on Remote Control, it will stop updating. Picture 1 Picture 2 AUTO UPDATE TIME 1 2 3 Within SETUP menu, press or to scroll through the page upward or downward until you select the Auto Update Time. Press button or OK button to display the right picture. Press or button to select Hour or Minute item, pressorbutton to adjust the value. After setting, press or button to select Close and press OK button to confirm the setting. After setting, press or button to select Close and press OK button to confirm the setting. Note: This item will be in grey and cannot be selected if Auto Update is set Off. The default setting of Auto Update Time is 04:00.

For convenience of watching TV, Auto Update Time can be set the interval that LCD TV is not be used. SETUP Auto Update Auto Update Time Manual Update Model Information 04 : 00 MODEL INFORMATION 1 2 Within SETUP menu, press or to scroll through the page upward or downward until you select the Model Information. Press button or OK button to enter Model Information menu. The information of Model Name, Hardware Model, Hardware Version, Software Model and Software Version, shown as right picture. BACK MENU OK Note: All items in Model Information menu can not be set.

37 SETUP MENU MANUAL UPDATE 1 2 Within SETUP menu, press or to scroll through the page upward or downward until you select the Manual Update. Press button or OK button to display Picture 1. Press or button to select Yes, the system will enter the following steps automatically: Step 1: Searching for update of software, shown as picture 2. Note: If no information has been searched, the message of "NO Update of software. The TV will reboot. Please wait." will be displayed on the screen. Press BACK button in the proceeding, it will stop searching. And the message of "Searching for update has been cancelled. The TV will reboot. Please wait." will be displayed on the screen. Only BACK button is active during the processing. Step 2: Downloading the software, shown as picture 3. Note: Due downloading time is over 35 minutes or the receiving data has some mistake.

The message "Software downloading has been FAILED. The TV will reboot. Please wait." will be displayed on the screen. Press BACK button in the proceeding, it will stop downloading. The message "Software downloading has been cancelled. The TV will reboot. Please wait." will be displayed on the screen. Only BACK button is active during the processing.

Step 3: Updating the software, shown as picture 4. Note: Please do not shut off AC power during the processing. No button could be active during the processing. Step 4: Completed to update the software, shown as picture 5. Note: If software updating has been failed, the display of the screen will be like as Picture 6.

Picture 6 Picture 3 Picture 1 Picture 2 Picture 4 Picture 5 38 LOCK MENU LOCK SYSTEM 1 2 Press MENU button and the main menu screen displays. Pressorbutton to select LOCK menu, Press button to select Lock System, and Password is required, shown as Picture 1. Picture 1 3 When the 4 character Password is entered, the Menu will be displayed as Picture 2. Press or button to select On or Off. The system will be locked when selecting On.

To cancel the lock, shift it to Off. Once the system is locked, the Password will be required when any operation in TV setting menu, shown as Picture 3. 4 Picture 2 Note: The default password is 0000. If you enter wrong password, it will display the warning "Wrong Password". Re-enter correct Password when the wrong password warning disappear. Picture 3 CHANGE PASSWORD 1 2 3 Navigate to the LOCK menu and input the correct password to access. LOCK Use or button to highlight Change Password item.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3220768)

[LCD-42K40TD user guide](http://yourpdfguides.com/dref/3220768)

<http://yourpdfguides.com/dref/3220768>

Press or OK button to enter into the menu as Picture 1. Enter a new password for a four-digit number, then enter into the menu as Picture 2, re-enter the new password to confirm and the password change successful, shown as Picture 3. Lock System Please enter Password LOCK Change Password Block Programme _____ Lock System Parental Guida New Please enter Password Change Password Confirm LOCK _____ Block Programme _____ Parental Guida New Lock System Confirm Please enter Password _____ Change Password MENU OK BACK Block Programme _____ Parental Guida New BACK Confirm MENU Picture OK ____ 1 ____ MENU ____ * If you set the new password for less than four-digit numbers, please press OK button to confirm.

BACK OK LOCK Lock System Change Password Block Programme Parental Guida New Lock System Please enter Password LOCK Please enter Password _____ 4 5 When entering into LOCK menu or switching to the block channel, the new password will be required after changing Password. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Change Password Confirm Block Programme Parental Guida New LOCK Lock System Confirm ____ Password Please enter ____ Change Password MENU OK BACK Block Programme Parental Guida New BACK MENU ____ OK ____ Confirm BACK Picture OK 2 MENU LOCK Please enter Password LOCK Please enter Password Lock System Change Password Block Programme Parental Guida New Lock System Change Password Confirm Block Programme Parental Guida New LOCK Note: Be sure to write down your password and retain it for future use. Lock System Confirm Please enter Password Change Password OK MENU BACK Programme Block Parental Guida New BACK MENU Confirm OK BACK MENU OK Picture 3 39 LOCK MENU BLOCK PROGRAMME The Block Programme function blocks any channels that you do not want to watch or that you do not want your children to watch. 1 2 3 Navigate to the LOCK menu and input the correct password to access. Press or button to highlight Block Programme item, shown as picture 1. Press or OK button to access. Now the Block Programme menu is displayed. Press or button to select the channel you want to block, shown as Picture 2, then press GREEN button to set lock to the channel. A lock symbol appears alongside the locked channel, shown as Picture 3. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Then the Block Programme comes into effect for the Locked channel. Picture 1 4 Picture 2 Note: To cancel channel lock, use password to enter into the LOCK menu, and call up Block Programme menu, press or button to select the channel you want to unlock, then use GREEN button to unlock the channel, and the lock symbol will disappear.

Picture 3 PARENTAL GUIDANCE (DTV only) Parental Guidance blocks programmes according to their classification so that children can not view certain programs. 1 2 3 Navigate to the LOCK menu and input the correct password to access. Use or button to highlight Parental Guidance item. Press or button to select your desired rating, shown as right picture. You can select Block All, Block G and above, Block PG and above, Block M and above, Block MA and above, Block AV and above, Block R and above or No Block.

Use the "Block All" setting to completely block all viewing. The menu can still be accessed to unblock all programs. G (General Audiences): Content not offensive to most viewers. PG (Parental Guidance Suggested): Content is such that parents may not want their children to view the programme. M (Mature Audience): Suitable for mature audience. MA (Mature Adult Audience): May contain mature themes, profane language, graphic violence, and sexual situations. AV (Adult Audience): Strong violence R (Restricted viewing): Not for children under age 17. Strong elements of sex and/or violence. 4 Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly.

Then the Block Programme comes into effect for the Locked channel. 40 SCREEN SETUP FOR PC MODE PC SETUP Before adjusting the screen, make sure that you select the correct source (PC). 1 2 3 4 5 Press MENU button and the main menu screen displays. Press or button to select Picture menu, Press button to access the menu. Within the menu, press or to scroll through the page upward or downward until you select PC Setup, then press or OK button to access. Press , or button to navigate through the options and adjust the options. To confirm, press OK button. Press BACK button to return to previous menu. Press MENU button or no operation for a few seconds (the duration can be set) to exit the menu screen directly. Option Auto Adjust H-Position V-Position Size Phase Description The LCD TV automatically adjusts the image settings, such as position and phase.

To move the image on the screen left or right. To move the image on the screen up or down. Adjust the horizontal width of the image on the screen Improve the focusing of a stable image. 41 DEALER MODE DEALER MODE TO DISPLAY DEALER MODE: Press and hold Menu button on Side Control, and then press INFO button on remote control to display Dealer mode menu. The Dealer Mode has 11 different modes: VOLUME LOCK, TUNING LOCK, START MODE, OSD, RC, AC POWER, MUSIC MODE, NO SIGNAL OFF, PC CONTROL, BAUD RATE and RESET.

STANDBY 9600bps 1 2 3 Press and hold Menu button on Side Control, and press INFO button on remote control to display Dealer mode menu. Press , or button to navigate through the options and adjust the options. Press menu button to exit menu operation. Option VOLUME LOCK TUNING LOCK START MODE Description To limit the maximal volume. It's necessary to set up the maximum volume before VOLUME LOCK ON.

The way to prevent user from executing the Tuning function. The LCD TV will automatically enter to the setting mode while being turned on. You can select OFF, DTV, ATV, AV1 (AV1-S), AV2 (AV2-DVD), HDMI-1, HDMI-2, HDMI-3, PC in START MODE. When it is set "OFF", it will keep the mode before being turning off. When it is set OFF, corresponding OSD cannot display on the screen while operating. You can set "NORMAL", "PROHIBIT" or "SEPARATE" in RC MODE. Use this feature to set Remote Control mode including Power ON/OFF function. NORMAL Set Remote Control to normal function. PROHIBIT When RC is disabled, only Side-panel button can be used. SEPARATE POWER button still can be functioned to Power ON/OFF.

FAV button to Power OFF in all modes including Teletext mode. FAV button to Power ON in all mode including Teletext mode. You can set "STAND", "LAST" or "ON" in AC POWER MODE. Use this feature to set TV condition when AC power cord is plug-in.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3220768)

[LCD-42K40TD user guide](http://yourpdfguides.com/dref/3220768)

<http://yourpdfguides.com/dref/3220768>