



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO LCD22VT10DVD. You'll find the answers to all your questions on the SANYO LCD22VT10DVD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO LCD22VT10DVD
User guide SANYO LCD22VT10DVD
Operating instructions SANYO LCD22VT10DVD
Instructions for use SANYO LCD22VT10DVD
Instruction manual SANYO LCD22VT10DVD

SANYO

INSTRUCTION MANUAL

LCD-22VT10DVD(C)

LCD TV WITH DVD PLAYER

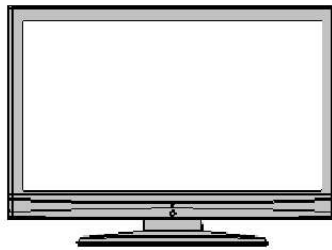

Before connecting, operating or adjusting this product, please read the manual completely.
Please keep this manual for future reference.



[You're reading an excerpt. Click here to read official SANYO LCD22VT10DVD user guide](http://yourpdfguides.com/dref/3241856)
<http://yourpdfguides.com/dref/3241856>

Manual abstract:

.....
.....
.....
.....
.....
.....
.....
.....

2 Safety Precautions

.....
.....
.....

... 3 Power Source .

.....
.....
.....
.....

.. 3 Power Cord ...

.....
.....
.....
.....

..... 3 Moisture and Water .

.....
.....
.....
.....
.....

... 3 Cleaning.....

.....
.....
.....

..... 3 Heat and Flames

.....
.....
.....

... 3 Lightning ..

.....
.....

.....
.....
.....
.....

.....
..... *3 Replacement Parts*

.....
.....
.....
.....

..... *3 Servicing*

.....
.....
.....
.....

.....
.....
.....
.....

3 Waste Disposal

.....
.....
.....

.....
.....
.....

3 Disconnecting the Device

.....
.....
.....

..... *3 Headphone Volume*

.....
.....
.....
.....

..... *3 Installation*.....

.....
.....
.....

.....
.....
.....
.....

..... *3 LCD Screen*

.....
.....
.....

.....
.....
.....
.....

..... *3 Warning*

.....

.....
.....

.....
.....
.....
.....

..... 4 Overview of the Remote Control ...

.....
.....
.....

..... 5 LCD TV and Operating Buttons

.....
.....
.....

..... 6 Viewing the Connections- Back Connectors

.....

6 Viewing the Connections - Side Connectors

..... 7 Aerial Connection

.....
.....
.....
.....

.....
.....

. 7 Power Connection

.....
.....
.....
.....

..... 8 Using Side USB Input

.....
.....
.....

.....
.....
.....

. 8 USB Memory Connection

.....
.....
.....

..... 8 Connecting the LCD TV to a PC....

.....
.....
.....

..... 8 Connecting to a DVD Player.....

.....
.....
.....
.....

8 Using Side AV Connectors

.....
.....
.....

..... 9 Using Other Connectors ...

.....
.....

... 9 Connecting Other Equipment via Scart ..

.....

..... 9 Inserting Batteries in the Remote Control Handset 9 Switching the TV On/Off

.....
.....

10 To Switch the TV On

.....

..... 10 To Switch the TV Off ...

.....
.....
.....

..... 10 Input Selection ...

.....
.....

.....
.....
.....

. 10 Basic Operations

.....
.....

. 10 Operation with the Buttons on the TV

..... 10 Operation with the Remote Control ...

.....
.....

.... 10 Initial Settings

.....
.....
.....

.....
.....

11 Information Banner

.....

.....
.....
.....

... 12 Electronic Programme Guide (EPG).....

.....
.....

12 Programme Options.....

.....
.....
.....
.....

.. 13 Analogue Teletext

.....
.....
.....

.....
.....

.. 13 Widescreen ...

.....
.....
.....
.....
.....

.. 13 Digital TV Menu System ...

.....
.....

.....
.....
.....

. 13 Channel List

.....
.....
.....
.....

.....
.....

13 Navigating the Entire Channel List

.....

.... 13 Moving the channels in the channel list

.....

. 14 Deleting the Channels in the Channel List

... 14 Renaming channels

.....
.....
.....
.....

..... 14 Adding Locks to Channels

.....
.....
.....

..... 14 Setting Favourites ...

.....
.....

..... 16 Language Settings .

.....
.....
.....

... 18 Language Settings

.....
.....
.....
.....

..... 18 Installation...

.....
.....
.....

.....
.....
.....
.....

.... 18 Media Browser (in DTV mode)

.....
.....

..... 20 Video Playback .

.....
.....
.....
.....

.....
.....

... 21 Analogue TV Menu System ..

.....

.....
.....
.....

.. 21 Picture Menu.....

.....
.....
.....
.....

.....
.....

21 Sound Menu

.....

.....
.....
.....
.....

..... 22 Feature Menu ..

.....
.....
.....

.....
.....

.....
..... 23 Install Menu .

.....
.....
.....
.....

.....
.....
.....

... 24 Install Menu in AV Modes

.....
.....
.....

..... 24 Program Table

.....
.....
.....
.....

.....
.....

. 24 Source Menu

.....
.....
.....
.....
.....

..... 25 PC Mode Menu System..

.....
.....
.....

.....
.....

... 25 PC Position Menu ..

.....
.....
.....
.....

... 25 Displaying TV Information

.....
.....
.....

..... 26 Mute Function .

.....
.....
.....

.....
.....
.....
.....

.... 26 Picture Mode Selection.....

.....
.....
.....

.....
.....
26 Freezing Picture
.....

.....
.....
.....
.....

..... 26 Zoom Modes....
.....
.....
.....

.....
.....
.....
.....

... 26 Teletext
.....
.....
.....

.....
.....
.....
.....

..... 27 Tips ..
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 28 Appendix A: PC Input Typical Display Modes.
..... 29 Appendix B: AV and HDMI Signal Compatibility (Input Signal Types)....

.....
.....
.....
.....

.. 29 Appendix C: Supported File Formats for USB Mode...

.....
.....
.....
.....
.....

.....
.....
.....
. 30 Specifications

.....

Heat and Flames The set should not be placed near to open flames and sources of intense heat such as an electric heater. Ensure that no open flame sources, such as lighted candles, are placed on top of the TV. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. *LCD Screen* The LCD panel is a very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product. English - 3 - Warning Do not leave your TV in standby or operating mode when you leave your house. When you use the wall mount kit (optional) with the LCD TV, we would definitely recommend to plug all your cables into the back of the LCD before mounting to the wall. English - 4 - Overview of the Remote Control 1. Standby 2.

Image size 3. Sleep timer 4. Numeric buttons 5. Return / Exit (in DTV mode) / Index page (in TXT mode) 6. Cursor up / Page up (in TXT mode) 7. Cursor left 8. Programme up (Page down in DTV mode) 9. Programme down (Page up in DTV mode) 10. Mono-Stereo / Dual I-II / Current language (in DTV mode) (*) 11. Previous Programme / Swap 12.

Electronic programme guide (in DTV mode) 13. Info / Reveal (in TXT mode) 14. Picture mode selection 15. Source selection 16. Red / Sound menu / Change channel list (in DTV mode) 17. Green / Picture / Subtitle on-off (in DTV mode) (*) 18. Yellow / Feature / Current language (in DTV mode) (*) 19. Menu on-off 20. Blue / Install menu / Selects DVB-T or DVB-C channels (in DTV mode) 21. OK / ChannInputs are used for connecting audio signals of external devices.

Connect the audio cable between the AUDIO INPUTS on the TV and the AUDIO OUTPUT jacks on your device. Note: If you connect a device to the TV via the VIDEO INPUT, you should also connect your device with an audio cable to the AUDIO INPUTS of the TV to enable audio. *Aerial Connection* · Connect the aerial or cable TV plug to the AERIAL INPUT socket located at the rear of the TV. English - 7 - Anti-theft Protection Your Tv has an anti-theft lock hole for theft protection. You can use an optional lock to physically fix the TV when using in a public place or at home. The anti-theft lock should be purchased separately if desired. The locking method might be different depending on the type of the lock purchased. Please refer to the lock's instruction manual for proper use. *USB Memory Connection* · Plug your USB device to the USB input of the TV. IMPORTANT: The TV supports only FAT32 disk formatting. NTFS format is not supported. Connecting the LCD TV to a PC For displaying your computer's screen image on your LCD TV, you can connect your computer to the TV set. · Power off both computer and display before making any connections. · Use 15-pin D-sub display cable to connect a PC to the LCD TV. · When the connection is made, switch to PC source.

See "Input selection" section. · Set the resolution that suits your viewing requirements. Resolution information can be found in the appendix parts. *Power Connection* IMPORTANT: The TV set is designed to operate on 220-240V AC, 50 Hz. · After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.

· Plug the power cable to the mains socket outlet. *Using Side USB Input* · You can connect USB devices to your TV by using the USB input of the TV. This feature allows you to display/play JPG, video and MP3 files stored in a USB stick. · It is possible that certain types of USB devices (e.g. MP3 Players) may not be compatible with this TV. · You may back up your files before making any connections to the TV set in order to avoid any possible data loss. Note that manufacturer will not be responsible for any file damage or data loss. · Do not pull out USB module while playing a file. CAUTION: Quickly plugging and unplugging USB devices, is a very hazardous operation.

Especially, do not repeatedly quickly plug and unplug the drive. This may cause physical damage to the USB player and especially the USB device itself. *SIDE VIEW USB MEMORY* Connecting to a DVD Player If you want to connect a DVD player to your LCD TV, you can use connectors of the TV set. DVD players may have different connectors. Please refer to your DVD player's instruction book for additional information. Power off both the TV and the device before making any connections. Note: Cables shown in the illustration are not supplied. · If your DVD player has an HDMI socket, you can connect via HDMI. When you connect to DVD player as illustrated below, switch to HDMI source. See, "Input Selection" section.

· Most DVD players are connected through COMPONENT SOCKETS. Use a component video cable to connect video input. For enabling audio, use a component audio cable as illustrated below. When the connection is made, switch to YPbPr source. See, "Input selection" section. · You may also connect through the SCART socket. Use a SCART cable as shown below. English - 8 - Note: These three methods of connection perform the same function but in different levels of quality. It is not necessary to connect by all three methods. connection.

You should also set SPDIF Out option in the Sound menu as On. *Using Side AV Connectors* You can connect a range of optional equipment to your LCD TV. Possible connections are shown below. Note that cables shown in the illustration are not supplied. · For connecting a camcorder, connect to the VIDEO IN socket and the AUDIO SOCKETS. Do not connect the camcorder to VIDEO IN socket at the same time since it can cause noise in the picture. For selecting the related source, see the section "Input selection" in the following parts. · To listen the TV sound from headphones, connect to the HEADPHONE jack of the TV. *Connecting Other Equipment via Scart* Most devices support SCART connection. You can connect a; DVD recorder, a VCR or a decoder to your LCD TV by using the SCART socket.

Note that cables shown in the illustration are not supplied. Power off both the TV and the devices before making any connections. For more information, refer to your device's own instruction book. *Inserting Batteries in the Remote Control Handset* Using Other Connectors You can connect a range of optional equipment to your LCD TV. Possible connections are shown below. Note that cables shown in the illustration are not supplied. · To connect external speakers, use an audio cable. Do not reverse the AUDIO LEFT and AUDIO RIGHT jacks. Turn on the LCD TV and external speaker set after all connections are made. Refer to your speaker set's manual for further queries.

· For connecting a to a device that has SPDIF support, use an appropriate SPDIF cable to enable sound · Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241856)

[LCD22VT10DVD user guide](http://yourpdfguides.com/dref/3241856)

<http://yourpdfguides.com/dref/3241856>

· Insert two AAA/R3 or equivalent type batteries inside. Place the batteries in the right directions and replace the battery cover. English - 9 - Note: You can mark desired source options by pressing the OK button. Therefore, when SOURCE button is pressed, only the marked source options will be available (except for the TV source).

Note: Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries. Remote range is approximately 7m/23ft. Switching the TV On/Off To Switch the TV On · Connect the power cord to the 220-240V AC 50 Hz. · To switch on the TV from standby mode either: · Press the " " button, P+ / P- or a numeric button on the remote control.

· Press the -P/CH or P/CH+ button on the TV. The TV will then switch on. Note: If you switch on your TV via PROGRAMME UP/DOWN buttons on the remote control or on the TV set, the programme that you were watching last will be reselected. By either method the TV will switch on. Basic Operations You can operate your TV using both the remote control and onset buttons. Operation with the Buttons on the TV Volume Setting · Press " " button to decrease volume or button to increase volume, so a volume level scale (slider) will be displayed on the screen. Programme Selection · Press "P/CH +" button to select the next programme or "P/CH -" button to select the previous programme. Viewing Main Menu · Press " / " buttons at the same time to view main menu. In the Main menu select submenu using "P/CH -" or "P/CH +" buttons and enter the sub-menu using " " or " " buttons. To learn the usage of the menus, refer to the menu system sections.

To Switch the TV Off · Press the " " button on the remote control or press the STANDBY switch, so the TV will switch to standby mode. · To power down the TV completely, unplug the power cord from the mains socket. Note: When the TV is switched to standby mode, standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active. AV Mode · Press the "SOURCE" button in the control panel on the TV to switch between AV modes. Operation with the Remote Control · The remote control of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV. · Functions of the menu system are described in the following sections. Input Selection Once you have connected external systems to your TV, you can switch to different input sources. · Press SOURCE button on your remote control for directly changing sources. or, · Select "Source" option from the main menu by using " " or " " button.

Use then " " or " " button to highlight an input and press " " button to select. Volume Setting · Press V+ button to increase the volume. Press V- button to decrease the volume. A volume level scale (slider) will be displayed on the screen. English - 10 - Programme Selection (Previous or Next Programme) · Press "P -" button to select the previous programme.

· Press "P +" button to select the next programme. Programme Selection (Direct Access) · Press numeric buttons on the remote control to select programmes between 0 and 9. The TV will switch to the selected programme. To select programmes between 10 - 499 (for IDTV) or 10-199 (for analogue), press the numeric buttons consecutively. The limit of the delay time is 3 seconds.

· Press directly the programme number to reselect single digit programmes. Note: Country selection will not be available for UK. Press OK to continue. After then, the active antenna selection OSD appears on the screen: By pressing " " or " " buttons, set active antenna mode as on or off. Initial Settings Before selecting a language in first time installation, power saving menu will be displayed. You should first define power save mode options to advance. If an active antenna is connected to your TV, you can select this option as On. Antenna power should be "Off" when standard antenna is used instead of the active antenna. See "Configuration Menu" in the following sections for more information. Press OK button on the remote control to continue and the following message will be displayed on the screen: Press OK button to activate power save mode.

Press Right button to activate Store Mode. You can save energy by selecting power save mode option. · To select the "Yes" or "No" option, highlight the item by using " " or " " buttons and press OK button. The IDTV will automatically tune to the transmission channels, searching for digital terrestrial TV broadcasts and displaying the names of channels found. This process will take a few minutes. To cancel searching, you can press MENU button at any time during the process. The following OSD will be displayed during the automatic search: @@Note: If you want to do Power Save Mode selection again later, you should perform First Time Installation. Please see First Time Installation. (Refer to Page19) The message "Welcome please select your language!" is displayed in all language options sequentially in the OSD. By pressing the " " or " " buttons highlight the language you want to set and press OK button. You can get information about the menu usage by pressing INFO button. Press INFO button again to exit the help menu. @@By pressing " " or " " buttons, select the country you want to set and press OK button. After Automatic Search is completed, the following message will be displayed, asking for sorting option. If you select "YES", programme list will be sorted English - 11 - according to LCN (logical channel number).

Select "NO" for using frequency sort. (This feature is available for only Germany, Austria and Italy country option) · The information banner can also be displayed by pressing the INFO button at any time while watching the TV. Pressing INFO button again removes the banner. After this operation, the following menu will appear on the screen, asking for analog channel search: If the selected channel is locked, you must enter the correct four digit key to view the channel. In this case, a dialog box asking for the lock key will be displayed: To search for analogue channels, select "Yes".

TV switches to the analogue TV mode. A menu will be displayed to search for analogue channels. Set Language item by pressing " " or " " button. @@Press " " or " " button to highlight TXT. Language.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD22VT10DVD user guide](#)

<http://yourpdfguides.com/dref/3241856>

Set TXT Language by using " " or " " button. To cancel, press the BLUE button. Electronic Programme Guide (EPG) Some, but not all, channels send information about the current and next events. Please note that event information is updated automatically. If there are no event information data available for channels, EPG will be displayed with blanks.

· Press EPG button to view the EPG menu. · Press " " or " " buttons to navigate through channels. · Press " " or " " buttons to navigate through the programme list. When finished, press OK or RED button to continue and the following OSD will be displayed: After automatic tuning is finalized, a programme list will appear on the screen. In the programme list you will see the programme numbers and names assigned to the programmes. If you do not accept the locations and/or the names of the programmes, you can change them in Program table. For details, see the section, "Program table". RED button (Shrink): makes the info boxes smaller. GREEN button (Expand): makes the info boxes larger. YELLOW button (Prev.

Day): displays the programmes of previous day. BLUE button (Next day): displays the programmes of the next day. INFO (Details): displays the programmes in detail. OK (View / Timer): shows the highlighted channel / sets the reminder for future programmes. Numeric buttons (Jump): go to preferred channel directly via numeric buttons.

SWAP: Jump to current broadcast. 0 (SEARCH): activates "Guide Search" window General Operation Press the "SOURCE" button on the remote control and select DTV/USB to switch the TV set to digital terrestrial television broadcasting. Information Banner · Whenever you change the channel using the P + or P - button or numeric buttons, the TV displays the broadcast picture along with an information banner at the bottom of the screen. This will remain on the screen for approximately a few seconds. English - 12 - the normal broadcasting, there are also channels with just digital teletext broadcasting.

· The aspect ratio (picture shape) when watching a channel with just digital teletext broadcasting is the same as the aspect ratio of the picture viewed previously. · When you press the TELETEXT () button again, the digital teletext screen will be displayed. Analogue Teletext Press "0" button to view Guide Search menu. Using this feature, you can search the programme guide database in accordance with the genre selected or with name match. Use of teletext and its functions are identical to the analogue text system. Please do refer to the "TELETEXT" explanations. Widescreen Depending on the type of the broadcast being transmitted, programmes can be viewed in a number of formats. Press the SCREEN button repeatedly to change screen format. When Auto is selected, the format being displayed is determined by the picture being broadcast. Programme Options In EPG menu, press the OK button to enter the "Programme Options" menu.

Using this option, you can switch to the selected channel. Over Air Download To ensure that your IDTV always has the most upto-date information, please ensure that, after use, it is set to standby mode. At 3 A.M. each day, the IDTV automatically searches for any updates which may be broadcast and will download this to your IDTV automatically. This operation will normally take approximately 30 minutes. PLEASE NOTE: Menu size changes depending on the chosen image size. Digital TV Menu System · Press MENU button and DTV main menu will be displayed. Displaying Subtitles With digital terrestrial broadcasting (DVB-T), some programmes are broadcast with subtitles. Note: You can enable subtitles by pressing the (For UK**) or GREEN (for EU*) button.

Channel List Using " " or " " buttons on the remote control in main menu, make sure that the first item, Channel List, is highlighted and press the OK button to display the Channel List. You can use following buttons for Move, Delete and Lock functions. · Channel List is the place where the channels are managed.

YELLOW: Tags/untags the selected channel. BLUE: Tags/untags all channels.

Digital Teletext (For UK only**) · Press the TELETEXT () button. · The digital teletext information appears. · Operate it with the coloured buttons, /// buttons and OK button. The operation method may differ depending on the contents of the digital teletext. Follow the instructions displayed on digital teletext screen.

· When "Press "SELECT" button or similar message appears on the screen, press the OK button. · When the TELETEXT () button is pressed, the TV returns to television broadcasting. · With digital terrestrial broadcasting (DVB-T), in addition to digital teletext broadcasting together with Navigating the Entire Channel List · Press " " or " " keys for selecting the previous or next channel. · You can press page down. or buttons to move page up or English - 13 - · To watch a specific channel, highlight it using " " or " " buttons and then press OK button, while the "Select" item on Channel List menu is highlighted via " " or " " buttons. Moving the channels in the channel list · Press " " or " " buttons to select the channel that will be moved. · Press " " or " " buttons to select the "Move" item on Channel List menu and press OK to confirm. Renaming channels To rename a specific channel, the channel must be highlighted via pressing " " or " " buttons and then highlight the "Edit Name" item by pressing " " or " " buttons. Press "OK" button to activate rename feature. Note: If you enter the same programme number of the channel that you want to move, "

...services will be replaced. Do you want to continue?" OSD will be displayed. Press OK to confirm or select "No" to cancel. Note: The following screen will be displayed when want to move or delete channels that are sorted by LCN (logical channel number) service. Now pressing " " or " " buttons moves to the previous/ next character. Pressing " " or " " buttons toggles the current character, i.e. , 'b' character becomes `à' on and `c' on . Pressing the numeric buttons 0...9' replaces the highlighted character with the characters printed above the key one by one as the button is pressed.

Press the MENU button to cancel the editing or OK button to save the new name. Select "YES" to continue. Select "NO" to cancel (LCN feature is available for only Germany, Austria, Switzerland and Italy country options). Adding Locks to Channels Channel Locking provides a password-protected access to channels selected by parents.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD22VT10DVD user guide](#)

<http://yourpdfguides.com/dref/3241856>

In order to lock a channel you should know the Parental Lock password (default value is set to 0000 in the factory and can only be changed from the Configuration menu).

By pressing " " or " " buttons, highlight the channel to be locked and select the "Lock" option by pressing " " or " " buttons. Then press the OK button and a password box is displayed: Deleting the Channels in the Channel List · Press " " or " " buttons to select the channel that will be deleted. · Press " " or " " buttons to select the "Delete" item on Channel List OSD. Setting Favourites Press "OK" button to delete the highlighted channel in the channel list. Then the message below appears on the screen. To set a favourite you should highlight the "Favourites" item at the bottom of the Channel List menu. Then press OK button and Edit Favourite List menu appears on the screen. English - 14 - Start: Starting time is entered via the Left/Right or the numeric buttons. End: Ending time is entered via the Left/Right or the numeric buttons. Duration: Displays the duration of the recording.

Duration item will be automatically displayed after the starting and ending times are entered. Change / Delete: permits or prohibits any modifications for other users. Adding a Channel to a Favourites List By pressing " " or " " buttons, highlight the channel that you want to add to the favourite list. By pressing OK button, the highlighted channel is added to Favourite List. F icon indicates that a channel is added to Favourite List. You can save the adjustments by pressing the GREEN key or cancel the process by pressing the RED button. You can edit the list via GREEN key and delete with the RED button. Common Interface Press MENU button to display the main menu and use the " " or " " buttons to highlight the "Common Interface" line and press OK button. It is required to subscribe to a pay channel company to view the pay channels of the Digital Terrestrial broadcasting. Obtain the Conditional Access Module (CAM) and the viewing card by subscribing to a pay channel company, then insert those to the Television using the following procedure.

· Switch off the TV and unplug from the mains. · Insert the CAM, and then the viewing card to the slot. · The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted. · Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated.

· Some CAMs may require the following set up. Please set the CAM by entering the DIGITAL TV menu, Common Interface then pressing OK button. (CAM set up menu is not displayed when it is not required.) · To see the viewing contract information: · Enter DIGITAL TV; press MENU button, then highlight Common Interface and press OK button. Removing a Channel from a Favourite List · Highlight the channel that you want to remove from the favourite list and press OK button to remove.

You can press OK button again to re-adding a channel. · To activate Favourites, go to the Configuration menu and select Favourite mode. Use " " or " " to set Favourite mode as on. To cancel Favourites, set Favourite Mode to Off. Hint: Pressing INFO button can help you for displaying information in IDTV.

Program Guide This section is same with the instructions given in the General Operations page. Please see Electronic Programme Guide (EPG) section in the General Operations part. Timers To display timers window, activate the item from the main menu. To add a timer, press the YELLOW button on the remote control. Then "Add Timer" window appears.

Channel: " " or " " keys will navigate the user through the TV or Radio list. Date: Starting date is entered via the Left/Right or the numeric buttons. · When no module is inserted, "No Common Interface module detected" message appears on the screen. · Refer to the module instruction manual for details of the settings. NOTE: Insert or remove the CI module only when the TV is in STANDBY mode or SWITCHED OFF. TV Setup You can use this item to display the TV functions. English - 15 - The digital TV Setup menu screen is accessed from the main menu. Press the MENU button to display the main menu and use or buttons to highlight "TV Setup". Press OK button to display TV Setup menu screen. You can find detailed information for all menu items in "Analogue TV Menu System" section.

· Use " " or " " buttons to highlight Parental Control. Press OK button to enter Parental Control menu. A dialog box asking for the lock key is displayed: Setup The adjustments in this menu are given as the following: There is only one key which is set to "0000" initially. Enter lock key. If wrong lock key is entered, the "WRONG PIN" message will be displayed on the screen and the TV returns to the previous menu.

If the PIN is correct, the Parental Control menu including following items will be displayed: Configuration You can configure the settings of your TV. Select Configuration from Setup menu and press OK to view this menu. Press the RETURN button on the remote control to exit. Maturity Lock (**) (**) If you set Country option as UK in the first time installation, Maturity Lock option will not be visible. When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, the TV will not display the related video-audio.

Menu Lock Use " " or " " buttons to set Menu Lock. Here, you can set/reset locking function for the main menu or the installation menu to restrict access. If the menu lock is disabled, there will be free access to the menu system. Disabled: All menus are unlocked. Favourite Mode Use this function to enable or disable favourite mode. Press " " or " " button to set this function as on or off. Scan Encrypted Scan Encrypted Channel feature will always be ON after performing first time installation. When this setting is on, search process will locate the encrypted channels as well. If it is set as OFF manually, encrypted channels will not be located while in automatic search or manual search. Use " " or " " button to select Scan Encrypted and then press " " or " " button to set this setting as On or Off.

All Menus: All menus are accessible only with the correct lock key. So the user cannot add, delete, rename or move the channels and cannot set the timers.

Installation Menu: Installation menu is locked, so the user cannot add channels. Changes will be updated after exiting Configuration Menu. Set PIN Use " " or " " buttons to go to "Set PIN" option.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD22VT10DVD user guide](#)

<http://yourpdfguides.com/dref/3241856>

Press OK to display the "Set PIN" window. Use numeric buttons to enter new pin number you will need to input your new pin a second time for verification purposes. The factory default pin number is 0000, if you change the pin number make sure you write it down and keep it safe. Parental Control · Some channels broadcast material which you do not want younger members of the family to watch. Any channel can be 'locked' so that it cannot be selected for viewing unless a four-digit PIN code is entered.

In this way any channel not suitable for younger viewers can be prohibited. · This function enables or disables the menu protection system and allows the PIN code to be changed. Time Settings(**) (**): Time setting will not be available for UK. In the configuration menu, highlight the Time Settings item by pressing " " or " " buttons. Press OK and Time Settings sub menu will be displayed on the screen: English - 16 - Dolby Digital In the Configuration Menu, highlight the Dolby D item by pressing " " or " " buttons.

Use the " " or " " buttons to set the Dolby Digital as On or Off. If the Use " " or " " buttons to highlight the Time Zone Setting. Time Zone Setting is set using " " or " " buttons. It can be set to AUTO or MANUAL. When AUTO is selected, Current Time and Time Zone options will not be available to be set.

If MANUAL option is selected as the Time Zone Setting, Time Zone can be altered: · By pressing " " or " " buttons select Time Zone. Use " " or " " buttons to change the Time Zone between GMT-12 or GMT+12. Current Time on the top of the menu list will then change according to the selected Time Zone. channel that you are watching supports Dolby Digital and Dolby Digital Plus, you can turn this setting on. Hard of Hearing (*) Use " " or " " button to select Hard of Hearing and then press " " or " " button to set this setting as On or Off. If the broadcaster enables any special signal concerning the audio, you can set this setting as On to receive such signals. (*) Hard of Hearing function will not be available for UK. Channel List Use " " or " " buttons to go to Channel List option. Use or buttons to toggle Channel List Mode. If you select "TV Only", with the " " or " " buttons, you navigate through only TV channels.

If you select "Radio Only", with the " " or " " buttons, you navigate through only radio channels. If you select "Text Only", with the " " or " " buttons, you navigate through only text channels. If you choose "Show All" all channels can be navigated. To save the recent changes and exit; press the MENU button. Receiver Upgrade Over Air Download (OAD) To ensure that your TV always has the most up to date information, use this setting. Please ensure that the TV is set to standby mode. The TV automatically powers up at 3.00 A.M. each day and searches for any new information which may be broadcast and will download this to your receiver automatically.

This operation will normally take approximately 30 minutes. If you have an important recording to be carried out at 3.00 A.M. and you do not want to interrupt it, disable auto OAD search by performing the following: · Press MENU button and using the " " or " " buttons to choose Setup and press OK button. · Highlight Configuration menu with " " or " " keys and press OK. · Use " " or " " buttons to choose "RECEIVER UPGRADE" and press OK button. · Using the " " or " " button change "Automatic scanning" from Enabled to Disabled. Digital Audio Out Use this setting to define digital audio out signal type. Use " " or " " buttons to set Digital audio out as AC3 or PCM.

If your selected channel includes AC3 sound stream, you should connect your TV to external equipment by using Spdif out of your TV for enabling the sound output. If you have no external sound equipment, please select Digital Audio Out as "PCM" by using " " or " " button. A/V Delay You can use this setting when there is an AV synchronization problem in the received broadcast. Press " " or " " button to change the delay. · Highlight "Scan for upgrade" menu with " " or " " keys and pres OK to commence upgrade. Audio Description Audio description refers to an additional narration track for blind and visually impaired viewers of visual media. You can use this feature, only if the broadcaster supports that additional narration track. Use " " or " " buttons to select an item. Then use " " or " " buttons to set. Audio Description This function enables or disables the audio description feature by pressing the " " or " " buttons.

· After the search progress is completed, the message " Completed searching for upgrade. No new software was found" appears on the screen if no new software is found. English - 17 - Preferred Language By pressing the " " or " " buttons the preferred audio description language is being changed. This setting can be used, only if it is available. Use " " or " " buttons to highlight the menu item that will be adjusted and then press " " or " " button to set. · Audio Language is used for selecting the soundtrack of a channels. Primary settings are the first priority when multiple choices are available on a broadcast. Secondary settings are the alternatives when the first options are not available. · Guide Language: If the received EPG data includes the selected guide language, EPG data language will be changed accordingly. · Teletext language sets the desired teletext language.

Media Subtitle: In order to display subtitles properly, use this setting to select a movie subtitle language. By pressing " " or " " button, select the desired language option. Standby Search (*) (*) This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland. Use " " or " " button to select Standby Search and then press " " or " " button to set this setting as On or Off. If you change Standby Search to Off, this function will be unavailable.

To use Standby search please make sure that you select Standby Search as On. Active Antenna (*) Use " " or " " buttons to highlight Active Antenna option. When antenna power option is set as On by pressing " " or " " button, +5V will be transmitted to the antenna output. This feature enables the use of active antenna.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD22VT10DVD user guide](#)

<http://yourpdfguides.com/dref/3241856>

Note: Antenna power should be "Off" when standard antenna is used instead of the active antenna.

Installation The Installation menu is mainly intended to help you for creating a Channel Table in most efficient way. Select Installation from the main menu by pressing " " or " " buttons. Language Settings In this menu the user can adjust the preferred language. Select "Language" item in the Setup menu and press OK button. Then language settings menu will be displayed. Automatic Channel Scan Automatic channel scan is started by pressing OK button while Automatic channel scan item is highlighted. The following message appears on the screen: You can set the desired language options by using " /" " and " /" " buttons. Note: If the Country option is set to Denmark, Sweden, Norway or Finland, the Language Settings menu will function as described below: Highlight Yes or No by using " " or " " buttons and press OK button to confirm. If Yes is selected, automatic search starts. Selecting No cancels automatic search.

After search is completed for digital channels, a message asking whether to search for analogue channels appears on the screen: Language Settings . Highlight Yes and press OK button to search for analogue channels. The following menu appears on the screen for analogue channel search: English - 18 - First Time Installation The user can use this item to load default settings, which were loaded to the receiver at the factory. @ @ @ @ @ @ @ @ Select a region by using " " or " " button. When finished, press OK or RED button to continue. @ @ @ @ @ @ Press Right button to activate Store Mode. You can save energy by selecting power save mode option. @ @ @ @ @ @ @ @ @ @ @ @ Next, active antenna mode selection OSD will appear on the screen. Use " " or " " to set and press OK to continue. See the section, "Initial Settings" for more information.

@ @ @ @ @ @ @ @ Use this setting to clear channels stored. @ @ @ @ @ @ @ @ @ @ Play (GREEN) : Play all media files in the folder starting with the selected one. Pause/Resume (YELLOW button): Pauses or resumes playback. Stop (RED) : Stop the playing file. Previous/Next (/) : Jumps to previous or next file to play.

Shuffle (INFO) : Plays the files randomly. If shuffle mode is enabled, previous/next functions will also jump to the tracks randomly. Loop (BLUE) : Plays the selected file repeatedly. Media Browser (in DTV mode) Whenever you plug a USB flash disk to your TV, the following message will be displayed on the screen: Viewing JPEG Files Select YES or NO by pressing " " or " " button and "OK" button to continue. You can also select Media Browser item from the main menu by using " " or " " buttons.

Press OK to view Media Browser contents. You can play audio and photo files from a USB flash disk. Note: Some USB compliant devices may not be supported. Note: Movie Sense and Pixellence features cannot be set while in Media Browser mode. Note: If you plug USB stick in analogue mode, the TV will automatically switch to digital TV mode. Note: If the USB stick is not recognized after Power off/on or First Time Installation, first plug the USB device out and power off/on the TV set. Plug the USB device again. Jump (0...

9) : jump to selected file using the numeric buttons. OK : view the selected picture in full screen. Play / Slideshow (GREEN) : start to slideshow with all pictures in the folder. Slideshow Options Press OK to browse, "MENU" to quit. Playing Audio Files: Pause (YELLOW) : Pause the slideshow. Continue (GREEN) : Continue with the slideshow. Previous/Next (file of slideshow. Rotate (buttons. / /) : Jump to previous or next) : Rotate the picture using up/down EXIT : Back to file list. Shuffle (RED) : Shows the files randomly and icon turns the continuous in current folder and highlighted icon. If during a slideshow the shuffle mode is enabled, the next pictures will be chosen randomly English - 20 - (If the loop function is not enabled, the slideshow will stop at the end. If the loop function is enabled, after the slideshow ends, it will start again and again). Loop (GREEN) : Slideshow goes on continuously and icon turns the highlighted icon. Info : Activate the operations bar. Note: Hue option can only be visible when the TV receives an NTSC signal. Colour Temp Press " " or " " button to select Colour Temp. Press " " or " " to choose from one of these options: Cool, Normal and Warm. Note: · Setting Cool option gives white colours a slight blue stress. · Setting Warm option gives white colours a slight red stress. · For normal colours, select Normal option. Video Playback Play (Red button) : Starts the video playback. Stop (Blue button) : Stops the video playback. Pause (OK button) : Pause the video playback. Rewind (Cursor Left) : Goes backward. Forward (Cursor Right) : Goes forward. Menu (MENU button) : Sets subtitle/Audio. You can set subtitles by using OK button before starting the playback or by using MENU button during the playback. Press RETURN (Exit) button to switch back to previous menu. Noise Reduction If the broadcast signal is weak and the picture is noisy, use Noise Reduction setting to reduce the noise amount. Press " " or " " button to select Noise Reduction.

Press " " or " " to choose from one of these options: Low, Medium, High or Off. Film Mode Analogue TV Menu System Picture Menu Films are recorded at a different number of frames per second to normal television programmes. Press " " or " " button to select Film Mode. Press " " or " " button to set this feature On or Off. Turn this feature on when you are watching. films to see the fast motion scenes clearly. Game Mode Select Game Mode by pressing " " or " " button. Use " " or " " button to set Game Mode as On or Off. When Game Mode is set to On, specific game mode settings, which are optimized for better video quality, will be loaded. Also; Picture Mode, Contrast, Brightness, Sharpness, Colour and Colour Temp settings will be invisible and disabled while Game Mode is on.

Mode For your viewing requirements, you can set the related mode option. Press " " or " " button to select Mode. Press " " or " " button to choose from one of these options: Cinema, Dynamic and Natural. Note: When power save mode is activated, picture mode will be set to Natural and will not available to be changed. If Store Mode is activated, picture mode will be set to Dynamic and it will be available to be changed.

Note: Picture mode selection button on the remote control will have no function while Game Mode is on. Picture Zoom Select Picture Zoom by pressing " button. " " or " " Use " " or " " buttons, to change picture zoom to Auto, 16:9, 4:3, Panoramic, 14:9, Cinema, Subtitle or Zoom.



[You're reading an excerpt. Click here to read official SANYO](#)

[LCD22VT10DVD user guide](#)

<http://yourpdfguides.com/dref/3241856>

Store Press " " or " " button to select Store. Press " " or OK button to store the settings.

"Stored..." will be displayed on the screen. Brightness/Contrast/Colour/Sharpness/ Hue Press " " or " " button to select the desired option. Press " " or " " button to set the level. English - 21 - Reset Press " " or " " button to select Reset. Press " " or " " or OK button to reset the picture modes to factory default settings. Press " " or " " button to select Balance. Press " " or " " button to change the level of the balance.

Balance level can be adjusted between -32 and + 32. Sound Menu Headphone Press " " or " " button to select Headphone. Press " " button to view the headphone menu. Note: Headphone will be disabled when SPDIF option is set to on. Headphone sub-menu options are described below: Volume Press " " or " " button to select Volume. Press " " button to increase headphone volume level. Press " " button to decrease headphone volume level. Headphone volume level can be adjusted between 0 and 63. Sound Mode Volume Press " " or " " button to select Volume. Press " " or " " button to change the level of the Volume.

Press " " or " " button to select Sound Mode. Using " " or " " button, you can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode. Equalizer Press " " or " " button to select Equalizer. Press " " button to view equalizer menu. AVL Automatic Volume Limiting (AVL) function adjusts the sound to obtain fixed output level between programmes (For instance, volume level of advertisements tend to be louder than programmes).

Press " " or " " button to select AVL. Press " " or " " button to set the AVL as On or Off. Spdif Out Press " " or " " button to select Spdif Out. Press " " or " " button to set the Spdif Out. as On or Off.

Note: If Spdif Out is set to On, headphone will be disabled. Effect If you are watching a mono broadcast, set Effect on to obtain a better sound effect which will be more stereolike. If the current sound system is stereo, switching this effect on will give a more spatial effect. Press " " or " " button to select Effect. Press " " or " " button to set as On or Off. Press " " or " " button to change the preset. In equalizer menu, the preset can be changed to Music, Movie, Speech, Flat, Classic and User. Select the desired frequency by pressing " " or " " button and increase or decrease the frequency gain by pressing " " or " " button. Press the "MENU" button to return to the previous menu. Note: Equalizer menu settings can be changed only when the Equalizer Mode is in User.

Store Press " " or " " button to select Store. Press " " or OK button to store the settings. "Stored..." will be displayed on the screen. Balance This setting is used for emphasizing left or right speaker balance. English - 22 - Feature Menu Menu Background Press " " or " " button to select Menu Background. You can set menu background level by pressing " " or " " button. Power Save Mode You can reduce energy consumption by using this feature.

Press Up or Down button to select Power save mode. You can set Power save mode as On or off by pressing Left or Right button. When power save mode is activated, picture mode will be set to Natural and Backlight setting will be Minimum. These settings will not available to be changed. If you select Power Save Mode as Off, picture mode will be set to Dynamic and Backlight setting will be Maximum.

Then you can change these settings as desired. Sleep Timer Press " " or " " button to select Sleep Timer. Use " " or " " button to set the Sleep Timer. The timer can be programmed between Off and 120 minutes in steps of 10 minutes. If Sleep Timer is activated, at the end of the selected time, the TV goes automatically to standby mode.

Backlight This setting controls the backlight level. Select Backlight by pressing " " or " " button. Press " " or " " button to set Backlight to Auto, Medium, Maximum or Minimum. When power save mode is activated, backlight setting will be set to Minimum and it will be unavailable to be changed. If you select Power Save Mode as Store, backlight will be set to Maximum. Then you can change these settings as desired. Child Lock Press " " or " " button to select Child Lock. Use " " or " " button to set the Child Lock On or Off. When On is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons will not work.

Hence, if one of those buttons is pressed, Child Lock On will be displayed on the screen when the menu screen is not visible. Menu Timeout To set a specific display timeout for menu screens, set a value for this option. Press " " or " " button to select Menu Timeout. Use " " or " " button to change menu timeout to 15 sec, 30 sec or 60 sec. Language Press " " or " " button to select Language. Use " " or " " button to select the Language. Teletext Language Press " " or " " button to select Teletext Language. Use " " or " " button to change Teletext Language to West, East, Turk/Gre, Cyrillic, Arabic or Persian. Default Zoom While zoom mode is set as AUTO, the TV will set the zoom mode in accordance with the signal of the broadcast. If there is no WSS or aspect ratio information, the TV will then use this setting to adopt.

Press " " or " " button to select Default Zoom. You can set Default Zoom to Panoramic, 16:9, 4:3 or 14:9 by pressing " " or " " button. Ext Out Press " " or " " button to select Ext Out. Use " " or " " button to set the Ext Out as On or Off. Note: For copying from a DVD or VCR device, you should choose desired source from source menu and turn "On" to EXT Out from feature menu.

Ext Out should be On in order to use Timers function in the DTV mode. Blue Background If the signal is weak or absent, the TV will automatically change to a blue screen. To enable this, set Blue Background to On. By pressing " " or " " button, select Blue Background. Press " " or " " button to set Blue Background as On or Off.

HDMI PC Full Mode If you want to view PC screen in HDMI mode by using external connection, HDMI PC FULL MODE option should be On to adjust the screen ratio correctly.



[You're reading an excerpt. Click here to read official SANYO LCD22VT10DVD user guide](http://yourpdfguides.com/dref/3241856)
<http://yourpdfguides.com/dref/3241856>

This item might be inactive in some resolutions. English - 23 - Note: If you connect an HDMI device and switch the TV to HDMI mode, this feature will be visible (except for 1080i/1080P resolution). Install Menu in AV Modes The following screen appears in the install menu when the TV is in AV modes. Note that limited options will be available. Switch to TV mode for viewing complete version of the Install menu. Install Menu Program Press " " or " " button to select Program. Use " " or " " button to select the program number. You can also enter a number using the numeric buttons on the remote control. There are 200 programme storage between 0 and 199.

Colour System Press " " or " " button to select Colour System. Use " " or " " button to change the colour system to PAL, SECAM, PAL60, AUTO, NTSC 4,43 or NTSC 3,58. Store Press " " or " " button to select Store Program. Press " " or OK button to store the settings. "Stored..." will be displayed on the screen.

Band Band can be selected either C or S. Press " " or " " button to set Band.

Channel Channel can be changed by " " or " " button or numeric buttons. Program Table Select Program Table by pressing " " or " " button. Press " " to display Program Table: Colour System Press " " or " " button to select Colour System. Use " " or " " button to change the colour system to PAL, PAL 60, SECAM or AUTO. Sound System Press " " or " " button to select Sound System.

Press " " or " " button to change the sound system to BG,DK, I, L or L'. Fine Tune Press " " or " " button to select Fine Tune. Press " " or " " button to adjust the tuning. Search Press " " or " " button to select Search. Use " " or " " button to start programme searching.

You can also enter the desired frequency using the numeric buttons while Search item is highlighted. Store Press " " or " " button to select Store. Press " " or OK button to store the settings. "Stored..." will be displayed on the screen. By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except for the AV modes). By cursor action, programme selection is done automatically.

Name To change the name of a programme, select the programme and press the RED button. English - 24 - The first letter of the selected name will be highlighted. Press " " or " " button to change that letter and " " or " " button to select the other letters. By pressing the RED button, you can store the name.

Move Select the programme which you want to move by navigation buttons. Press the GREEN button. By navigation buttons move the selected programme to the decided programme space and press the GREEN button again. Delete To delete a programme, press the YELLOW button. Pressing the YELLOW button again erases the selected programme from the programme list, and the following programmes shift one line up. APS (Auto Programming System) When you press the BLUE button for starting automatic tuning, Auto Programming System menu will appear on the screen: In source menu, highlight a source by pressing " " or " " button and switch to that mode by pressing " " button.

Source options are: TV, DTV/USB, DVD, EXT-1, FAV, HDMI, YPbPr and PC-VGA. Note: Once you have connected optional equipment systems to your TV, you should select the required input to view pictures from that source. PC Mode Menu System See "Connecting the LCD TV to a PC" section for connecting a PC to the TV set. For switching to PC source, press "SOURCE" button on your remote control and select PC input. You can also use "Source" menu to switch to PC mode.

Note that PC mode menu settings are available only while the TV is in PC source. PC Position Menu Select the first icon by pressing " " or " " button. PC Position menu appears on the screen: Country Press " " or " " button to select your country. If you want to exit from A.P.

S. function, press the BLUE button. When you press OK or RED button for starting automatic tuning, all stored programmes will be erased and the TV will search for available channels. During the search, the following OSD will be displayed: Whenever you press the BLUE button, APS function stops and Program Table appears on the screen. If you wait until the end of APS, Program Table will be displayed with the programmes found and located.

Autoposition If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically. This setting therefore automatically optimizes the display. Source Menu Press " " or " " button and select the sixth icon. Then press " " or OK button. Source menu appears on the screen: English - 25 - Select Autoposition item by using " " or " " buttons.

Press OK or " ", " " button. Warning: Please ensure auto adjustment is performed with a full screen image to ensure best results. To cancel mute, there are two alternatives; the first one is pressing the " " button and the second one is increasing the volume level. Picture Mode Selection By pressing PRESETS button, you can change Picture Mode settings in accordance with your viewing requirements. Available options are Dynamic, Natural and Cinema. Note: This feature cannot be set while in PC mode. H (Horizontal) Position This item shifts the image horizontally to right hand side or left hand side of the screen. Select H Position item by using " " or " " button. Use " " or " " button to adjust the value. V (Vertical) Position This item shifts the image vertically towards the top or bottom of the screen.

Select V Position item by using " " or " " button. Use " " or " " button to adjust the value. Freezing Picture You can freeze the picture on the screen by pressing the "OK" button on the remote control. Press the "OK" button to freeze picture. Press again to quit freeze mode (Note: Not available in "ATV" mode).

Phase Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method. Select Phase item by using " " or " " buttons. Use " " or " " button to adjust the value.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241856)

[LCD22VT10DVD user guide](http://yourpdfguides.com/dref/3241856)

<http://yourpdfguides.com/dref/3241856>