



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO LED-46XR10FH. You'll find the answers to all your questions on the SANYO LED-46XR10FH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO LED-46XR10FH
User guide SANYO LED-46XR10FH
Operating instructions SANYO LED-46XR10FH
Instructions for use SANYO LED-46XR10FH
Instruction manual SANYO LED-46XR10FH

The SANYO logo, consisting of the word "SANYO" in a bold, sans-serif font with a stylized vertical line through the letter 'Y'.

INSTRUCTION MANUAL

LED-46XR10FH

LED-LCD TV

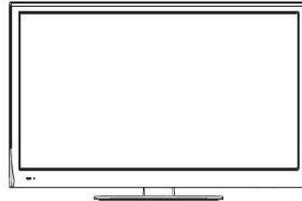

Before connecting, operating or adjusting this product, please read the manual completely.
Please keep this manual for future reference.



[You're reading an excerpt. Click here to read official SANYO LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)
<http://yourpdfguides.com/dref/3241859>

Manual abstract:

! Ensuring the television is not overhanging the edge of the supporting furniture. ! Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support. ! Not standing the televisions on cloth or other materials placed between the television and supporting furniture. ! Educating children about the dangers of climbing on furniture to reach the television or its controls. 3

Warning: To prevent the spread of fire, keep candles or other open flames away from this product at all times. Important Safety Precautions Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. But IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your TV product, please read the following precautions carefully before using the product.

1. Read these instructions---All operating instructions must be read and understood before the product is operated. 2. Keep these instructions---These safety and operating instructions must be kept in a safe place for future reference. 3.

Heed all warnings---All warnings on the product and in the instructions must be observed closely. 4. Follow all instructions---All operating instructions must be followed. 5. Attachments---Only use attachments/accessories specified by the manufacturer.

Do not use attachments not recommended by the manufacturer. Use of improper attachments can result in accidents. 6. Power source---This product is intended to be supplied by a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. 7. Power cord protection---Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 4 NOTE: where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. 8.

Overloading---Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock. 9. Entering of objects and liquids---Never insert an object into the product through vents or openings. High voltages are present in the product, and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product. 10. Servicing---Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 11. Damage requiring service---If any of the following conditions occurs, unplug the power cord from the AC outlet, and request a qualified service person to perform repairs.

a. When the power cord or plug is damaged. b. When a liquid is spilled on the product or when objects have fallen into the product. c. When the product has been exposed to rain or water. d. When the product does not operate properly as described in the operating instructions. Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.

e. If the product has been dropped or the cabinet has been damaged in any way. f. When the product displays an abnormal condition or exhibits a distinct change in performance. Any noticeable abnormality in the product indicates that the product needs servicing. 12. Replacement parts---In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger. 13. Safety checks---Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.

14. Wall or ceiling mounting---When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer. This is a safety feature. Important Safety Precautions (Continued) 15. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer. 16.

Careful move---When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall from the trolley. Never attempt to move the TV unless the AC disconnected. power cord has been SOURCE MENU CH VOL 17. Lightning---Unplug this apparatus during lightning storms or when unused for long periods of time.

For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges. 18. Do not use this apparatus near water---for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Do not use immediately after moving from a low temperature to high temperature environment, as this causes condensation, which may result in fire, electric shock, or other hazards. 19. Clean only with dry cloth---Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 20. Ventilation---Do not block any ventilation openings. Install in accordance with the manufacturer instructions. The vents and other openings in the cabinet are designed for ventilation.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241859)

[LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)

<http://yourpdfguides.com/dref/3241859>

Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product.

Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for builtin installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed. 21.Heat sources---Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. SOURCE MENU CH VOL SOURCE MENU CH VOL 5 SOURCE MENU CH VOL SOURCE MENU CH VOL SOURCE MENU CH VOL 22.Panel protection---The display panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case the display panel breaks. 23.Pixel defect---The display panel is a very high technology product, giving you finely detailed pictures.

Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product. WARNING: For continued safety, apparatus with class I construction shall be connected to a mains socket outlet with a protective earthing connection. SOURCE MENU CH VOL Important Notice About Temperature Do not use in hot and cold rooms (locations) ! When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.

! Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the screen to malfunction. ! Storage temperature: 0°C to 50°C ! Working temperature: 5°C to 40°C About After-Image The extended use of fixed image programme material can cause a permanent afterimage on the screen. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible screen deterioration can be limited by observing the following steps: A.

Reduce the brightness/contrast setting to a minimum viewing level. B. Do not display the fixed image for extended periods of time. C. Turn the power off when not in actual use. 6 Important Information Regarding Use of Video Games, Computers, Captions or Other Fixed Image Displays. ! Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the screen. Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode. CAUTIONS: ! The permanent after-image on the screen resulting from fixed image use is not an operating defect and as such is not covered by the warranty. ! This product is not designed to display fixed images for extended periods of time.

Cleaning and Maintenance To clean this unit, wipe with a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution. ! Use eyeglass cleaner to remove stubborn dirt from the screen. ! Never use alcohol, paint thinner or benzine to clean this unit. ! Before using a chemically treated cloth, read the instructions that came with the cloth carefully. Identification of Controls Main Unit (front/side view) 1. Remote sensor/Light sensor Receives signals from the remote control. Do not block. The light sensor will measure the room brightness, do not put anything around the sensor. 2.

Power indicator Lights blue when in operating mode. SOURCE MENU CH VOL 12 SOURCE MENU CH VOL + 3 4 ^ 5 6 7 6. CH^/ Press these two buttons to directly change the TV channel; In menu operations, these buttons serve as up/down buttons. 7. VOL+/ Press the VOL+ or VOL button to directly increase or decrease the sound volume level; In menu operations, these buttons serve as right/left buttons.

8. Power Switch 8 Main Unit (back view) S/PDIF 1 2 3 USB HDMI 3 L AUDIO R AV OUT 4 VIDEO L AUDIO R AV IN 5 VIDEO RS-232 HDMI 1 MUSIC/AUDIO D-Sub PC IN HDMI 2 Y L AUDIO R PR PB COMPONENT IN RF 6 7 8 9 10 11 12 ^ Note: Buttons on the TV control panel (CH^, VOL+/-, MENU, SOURCE, POWER) are touch buttons. First the batteries match the + and symbols in the battery compartment. 3 Replace the cover. Battery precautions: Improper use of batteries can result in a leakage of chemicals and/or explosion.

Be sure to follow the instructions below. -batteries with their terminals corresponding to the (+) and (-) Place indications. · Different · Do not types of batteries have different characteristics. Do not mix batteries of different types. 9 mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals. · batteries as soon as they are non-operable. Chemicals that leak Remove from batteries can cause a rash. If chemical leakage is found, wipe with a cloth. · of batteries in a proper manner.

Dispose · If the remote control is not used for an extended period of time, remove the batteries. · The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. Aiming the remote control Use the remote control by pointing it towards the remote sensor on the front of your TV. Objects between the remote control and the remote sensor may prevent proper operation. Cautions regarding use of remote control · expose the remote control to shock. In addition, do not expose the Do not remote control to liquids, and do not place in an area with high humidity. · install or place the remote control under direct sunlight. The heat Do not may cause deformation of the unit. · The remote control may not work properly if the remote sensor window of the main unit is under direct sunlight or strong lighting. In such a case, change the angle of the lighting or the TV set, or operate the remote control closer to the remote sensor window.

30 30 5m Connections Cautions Before Connecting = When connecting an external device to the TV, make sure that the TV and the device are turned off. = plugs on the ends of cables to make sure that they are the correct type before you try plugging them into jacks Check the on the TV. =that all plugs are securely inserted into the jacks. Loose connections can result in image or color problems. Make sure = The illustration of the external device may be different depending on your model.

= operating manual of the external device as well. Refer to the Antenna Connection · one end of your antenna cable to the RF jack on the back of Connect the TV, then connect the other end of the cable to the antenna wall jack.



[You're reading an excerpt. Click here to read official SANYO](#)

[LED-46XR10FH user guide](#)

<http://yourpdfguides.com/dref/3241859>

Note: 10 75-ohm coaxial cable (round cable) = It is recommended that the 75-ohm coaxial cable be used to eliminate interference and noise which may occur due to radio wave conditions. = cable should not be bundled with the power cord and the like. The antenna = is not installed properly, contact your dealer for assistance.

If the antenna Power Connection Connect the power cord to a power outlet. Household power outlet AC cord Note: = should be operated only from the type of power source indicated This product on the marking label. = Always unplug the AC cord from power outlet when not using for a long period of time. = This illustration is for reference only. The AC plug may be different on different models. Connections(Continued) Connecting a USB device Insert your USB device into the USB port. To play from the USB device: To USB port TV Side 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2.

Press 5 USB, then press OK to confirm. or6 to select Never remove the USB device or turn off the TV while using the USB device. Connecting Headphones To connect headphones: Insert the plug of the headphone into the TV's Headphone jack. When using headphones, adjust the headphone volume so as to avoid excessive levels, as hearing damage may result. TV Side Headphones Connecting a MP3 player MP3 player Insert MP3 player headphone plug into the MUSIC jack on the back of the TV. Be sure to insert fully, otherwise it may not sound right. 11 To listen to music from MP3 player through TV TV Rear RS-232 HDMI 1 MUSIC/AUDIO D-Sub PC IN HDMI 2 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2.

Press5 Music, then press OK to confirm. or6 to select 3. Turn on your MP3 player and begin playing music. Refer to the instructions that came with the MP3 player. Connecting a digital sound system For a full Home Theater sound experience, you must connect your digital sound system to the S/PDIF OUT(Coaxial) terminal on the TV rear.

TV Side Coaxial cable Note: ! The S/PDIF OUT jack only can output digital TV program's Digital sound system audio. ! The headphone output and S/PDIF OUT share the same jack. So when you want to use S/PDIF, please disconnect your headphone, and vice versa. S/PDIF IN (Coaxial) Or Connections(Continued) Connecting an HDMI device How to connect an HDMI device: Connect the HDMI cable between the HDMI jack on the TV (HDMI1 and HDMI2 located at TV rear, while HDMI3 at TV side) and HDMI output jack on the device. Note: If your device has an HDMI connection, we recommend you use that to get the best quality possible.

RS-232 HDMI 1 MUSIC/AUDIO D-Sub PC IN HDMI 2 TV REAR HDMI device To play from the HDMI device: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 HDMI1 or HDMI2 or HDMI3 or6 to select correspondingly, then press OK to confirm. 3. Turn on the HDMI device and set it to the correct mode. Refer to the instructions that came with the HDMI device. Note: If the external device has DVI output only, use a DVI to HDMI adapter cable to connect to the HDMI terminal. Connect the audio cable to the PC IN AUDIO jack on the TV rear.

HDMI cable Connecting a component video device 12 TV REAR Component video device Component video cable Audio cable To connect a component video device: Connect the Component Video cable between the Y, Cb/Pb, Cr/Pr input jacks on the TV and Y, Cb/Pb, Cr/Pr output jacks on the device. Connect the Audio cable between the AUDIO input jacks on the TV and AUDIO output jacks on the device. To play from the component video device: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 Component, then press OK to or6 to select confirm. 3. Turn on your external device and set it to the correct mode. See the device's user guide for more information.

Component cables often have red, green, and blue colorcoded video connectors and red and white audio connectors. Match the colors when making connections. Connecting a computer RS-232 HDMI 1 MUSIC/AUDIO D-Sub PC IN HDMI 2 To connect a computer: Connect a VGA cable between the VGA jack on the computer and the VGA input jack on the unit. Connect an Audio cable between the AUDIO output on the computer and AUDIO input jack on the unit. To play video from the computer: 1.

Turn on your TV, then press SOURCE button. The Input Source menu opens. To audio output jack TV REAR 2. Press 5 D-SUB, then press OK to confirm. or 6 to select 3.

Turn on your computer, and adjust the display properties as required. Note: The MUSIC and PC IN share the same audio jack. So when you want to connect PC, please disconnect your MP3 player, and vice versa. To monitor port (15-pin D-Sub) D-Sub cable Audio cable Connections(Continued) Connecting an AV device for playback VCR To connect an AV device (such as VCR, camcorder, or game console) : Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the TV and AV device. Camcorder VIDEO L AUDIO R AV cable TV Side Game console To play the AV device: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 AV, then press OK to confirm. or6 to select Cables are often color-coded to connectors.

Connect yellow to yellow, red to red, white to white. 3. Turn on your VCR, insert a videotape and press the Play button. Connecting a VCR for recording TV Side L AUDIO IN R To connect a VCR for recording Connect an AV cable to the AV OUT jacks on the back of your TV and to the AV IN jacks on the back of the VCR. 13 VIDEO IN To record a program: AV cable 1. Turn on your TV, then select the programme you want to record. 2. Turn on your VCR, then insert a videotape. 3. Press RECORD on your VCR to start the recording.

Note: Only TV and AV programs can be recorded. VCR for recording First Time Configuration/Basic Operations Turning on your TV for the first time The first time you use the TV, you need to configure your TV: Energy Save Mode To use this TV for displaying in a store, please select [Store/Dynamic]. [Standard/Energy Save] mode is recommended for normal home use. To configure your TV: 1 Make sure that you have inserted the batteries in the remote control, have connected your antenna to the TV, and have connected the AC power. Standard/Energy Save Store/Dynamic Select OK OK 2 Press the Power Switch on the TV.

3 Press POWER to turn on the TV. After a few seconds the Energy Save Mode screen opens. Installation Guide OSD Language Channel Tuning English 4 Press 3 Standard/Energy Save or or4 to select Exit OK Start Exit Store/Dynamic, press OK to confirm. (For normal home use, please select Standard/Energy Save.) Channel Tuning 2 %.

.. ATV 78.50MHZ ATV 5 Now the Installation Guide screen appears with Channel Tuning highlighted. Press OK to begin the auto tuning for all available ATV/DTV channels.



[You're reading an excerpt. Click here to read official SANYO](#)

[LED-46XR10FH user guide](#)

<http://yourpdfguides.com/dref/3241859>

It may take several minutes, please wait until it is finished. During searching, the screen will display a report about found stations. When complete, it will go to digital programme position one. Now channel list has been created and you can start to watch TV. : 2 Programme(s) : 0 Programme(s) 14 DTV Radio : 0 Programme(s) Press <Menu> to skip.

Press <Exit> to exit. Turning the TV on or off To turn the TV on or off: 1 Plug the power cord into an AC power outlet. Press Power Switch on the TV. 2 Now the set is in standby mode. Wait some seconds until the power indicator lights Power Switch up, then press POWER to turn on the TV. (Be sure to wait some seconds before pressing POWER button. If you promptly press POWER button then the TV may not respond or act wrongly.) 3 Press button again to turn off the TV and put the TV in standby mode. To cut off the power completely, press Power Switch on the TV. Warning: When the TV is in standby mode, power is still flowing into the TV.

For the sake of energy saving and safety issue, please press Power Switch to completely cut off the power. After you turn off the TV, you should wait at least 5 seconds (the power indicator goes out) before you turn it on again. Note: If the TV does not receive a broadcast signal for several minutes, the TV goes into standby mode. Basic Operations (Continued) Selecting the input source Input Source DTV ATV AV Component D-SUB HDMI1 HDMI2 HDMI3 USB MUSIC

Move Select To select the input source: 1 Press SOURCE button. The Input Source list appears.

or 5 to select to confirm your 2 Press 6 the input source, then press OK or 4 choice. The TV switches to the selected source. Programme Selection DTV DTV DTV DTV DTV DTV DTV DTV DTV Digital programme selection After you have tuned the TV, you have several ways to select DTV programmes. Be sure to select DTV through the Input Source menu (See the above steps for source selection). When watching digital programme and you want to listen to radio, simply press TV/RADIO button to switch.

To return to TV program, press TV/RADIO button again. (When watching analogue programme, the TV/RADIO button does not work.) ! Press CH^ or CH Move OK Select can not be selected. ! Press the number buttons to directly select any channel you want, then wait for the Favourite List DTV DTV DTV DTV TV TV TV channel to change. Note: Button presses must be within three seconds of each other. ! Press LIST to display the Channel List, then press 6 or 5 to select a channel, and 2 ABC TV Sydney 22 ABC TV 350 CH1 353 CH4 1 S-03 2 C-42 4 C-04 OK then press OK. ! After you have created the favorite channel list, you can press FAV.LIST button to display the favorite channel list. Use 5 a channel and then press OK. or 6 to select Or you can directly press FAV+/- FAV button to cycle among the favorite channels.

Select Move ! To go to the previous channel viewed, press RECALL. Channel List TV TV TV TV 1 S-03 2 C-42 3 S-04 4 C-04 Analogue programme selection Be sure to select ATV through the Input Source menu (See the above steps for source selection). ! Press CH^ or CH can not be selected. Move OK Select ! Press the number buttons to directly select any channel you want, then wait for the channel to change. Note: Button presses must be within three seconds of each other. ! Press LIST to display the Channel List, then press 6 or 5 to select a channel, and Favourite List DTV DTV DTV TV TV TV 2 ABC TV Sydney 22 ABC TV 350 CH1 353 CH4 1 S-03 2 C-42 4 C-04 OK then press OK. ! After you have created the favorite channel list, you can press FAV.LIST button to display the favorite channel list. Use 5 a channel and then press OK. or 6 to select Or you can directly press FAV+/- FAV button to cycle among the favorite channels.

Select Move ! To go to the previous channel viewed, press RECALL. ^^ Channel List 2 ABC TV Sydney 20 ABC HDTV 21 ABC 22 ABC TV 350 CH1 351 CH2 352 CH3 353 CH4 354 CH5 355 CH6 to go to the next or previous channel. The skipped channels 15 to go to the next or previous channel. The skipped channels Basic Operations (Continued) Adjusting the volume To adjust the volume: ! Press the VOL+/- to increase or decrease the volume. ! Press the MUTE button to temporarily turn off the sound.

To restore the sound, press the MUTE button again. Press the INFO button to display the information banner. The information banner displays current status information such as the channel number and signal source. Depending on the mode, different information is displayed. In DTV mode, more information will be displayed.

Left figure is an example banner in DTV mode. Displaying the Information Banner 16 In DTV mode, the information banner may contain: ! Current channel number and name. ! Current time. ! Current programme name, start and end play times. ! Next programme name and start and end play times. ! TV or Radio. Note: = OSD is only served as an example, and it is ! Audio mode, audio track. The above in DTV mode. ! Signal strength for current channel. = banner content varies, depending on the Information ! Signal resolution.

broadcaster and your settings. ! Subtitle/teletext availability. ! Video format of the current programme (SD/HD). ! Parental rating (G, PG, M, MA, etc.) Using the EPG (Electronic Programme Guide) The Electronic Programme Guide (EPG) makes it possible for digital only EPG 22 Sep 2010 09:00 20 22 Sep 08:47- 09:05 22 Sep 09:05 - 10:00 22 Sep 10:00 - 10:32 22 Sep 10:32 - 11:31 22 Sep 11:31 - 12:03 22 Sep 12:03 - 12:33 Prev. Day 2 ABC TV Sydney British Isles: A Natural History British Isles: A Natural History Designers: Agriculture Midday Report Parkinson Men Behaving Badly The Lenny Henry Show 22 users to see details about the programme they are watching, other programmes and even a schedule of the next 7 days (if available). The information available includes the number and name of the channel, the name of programme, the start and end time, and a summary. Thus viewers can easily get information about future programmes. To use EPG 1 INFO EXIT Press the EPG button to open the EPG. In the EPG window (as shown on the left), current channels' now and upcoming program's information will be displayed.

At upper screen, the channel number/name is shown, you can use 3 a channel whose information or 4 to select you want to know. At the bottom screen, this selected channel's now and future programme events are listed. Use 5 or 6 among the programme events to navigate (To quickly navigate among the list, press RED button to go to previous day list and GREEN button to next day list), and press INFO button to get more detailed information (if available) about the programme you choose. To close the EPG, press EXIT or EPG button. Next Day 2 EPG 22 Sep 2010 09:00 2 ABC TV Sydney British Isles: A Natural History 22 Sep 2010 08:47 09:05 Alan Titchmarsh continues his epic journey around the British Isles and discovers why they are so diverse, beautiful and extreme.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241859)

[LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)

<http://yourpdfguides.com/dref/3241859>

INFO EXIT 3 Note: ! The above OSD is only served as an example. The availability of EPG information depends upon the broadcaster. ! To enable EPG to work properly, it is suggested to set the appropriate time zone. Basic Operations (Continued) On-screen menu overview PICTURE menu PICTURE SOUND menu SOUND TIME OPTION LOCK CHANNEL PICTURE SOUND TIME OPTION LOCK CHANNEL Picture Mode Contrast Brightness Colour Sharpness Tint User 75 45 50 50 50 Sound Mode Treble Bass Balance Auto Volume Surround Sound User 52 50 0 Off Off SELECT MOVE MENU RETURN SELECT MOVE MENU RETURN TIME menu OPTION menu PICTURE SOUND TIME OPTION LOCK CHANNEL PICTURE SOUND TIME OPTION LOCK CHANNEL Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 01/Jan /2011 15:30 Off Off Off Off NSW/ACT GMT+10 OSD Language Hearing Impaired S/PDIF Output Audio Preference Judder Adjustment Audio Only English Off AUTO Dolby Digital Off Normal SELECT MOVE MENU RETURN SELECT MOVE MENU RETURN 17 LOCK menu PICTURE SOUND TIME OPTION LOCK CHANNEL PICTURE CHANNEL menu SOUND TIME OPTION LOCK CHANNEL Lock System Set Password Block Programme Parental Guidance Restore Factory Default Allow Update Off Auto Tuning DTV Manual Tuning ATV Manual Tuning No Block Off Programme Edit File System SELECT MOVE MENU RETURN SELECT MOVE MENU RETURN Note: · Depending on the signal tuned, you may see different menu options on your screen. The above main menus are illustrated under TV mode. · items that are not selectable are grayed out. If without special indication, this manual is described under TV mode. Menu · The illustrations and on-screen displays in this manual are for explanation purposes (some are enlarged, others cropped) and may vary slightly from the actual ones. Using the OSD menu to operate the OSD (on-screen display) menu: ! Press MENU to call up the OSD main menu. The screen will now display PICTURE menu. ! Press 3 more times to select menu, press 6 or 4 one or to access. PICTURE, SOUND, TIME, OPTION, LOCK, CHANNEL menu can be selected. ! From the menu, press 5 6 3 or adjust. Press OK to 4 to navigate confirm an entry or selection. ! To return to previous menu, press MENU.

! To close the menu, press EXIT. Memorizing the Channels Note: If the Lock System is On, Auto Tuning/DTV manual tuning/ATV manual tuning can not be operated without password. For details, please see <Setting Child and Rating Locks> section. Auto Tuning Auto Tuning will completely re-tune the TV and can be used to update the channel list. TIME OPTION LOCK CHANNEL PICTURE SOUND Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System It is recommended that Auto Tuning is run periodically to ensure that all new services are added. All current channels and settings, e.g. locked channels, will be lost. Note: As new services are broadcast, it will be necessary to retune the TV in order to view them. SELECT MOVE MENU RETURN 1 2 3 4 Go to Input Source menu and select ATV or DTV first. Press MENU. Press 3 CHANNEL menu, press or 4 to select 6 to access. Highlight Auto Tuning item, and press 4 or OK to access. Now a pop-up screen opens with Australia as default country and Start is highlighted. Now simply press OK to begin the auto tuning. (If you want to cancel, press 4 to select Cancel and press OK.) All ATV/DTV channels available in your area will be searched and stored into memory. Please wait until the searching is complete. PICTURE SOUND TIME OPTION LOCK CHANNEL Auto Tuning DTV Manual Tuning selection Country ATV Manual Tuning Programme Edit Start File System Cancel Australia 18 SELECT MOVE MENU RETURN 5 DTV manual tuning - digital only - During the process, if you want to skip, press MENU. To exit searching, press EXIT.

This feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known. PICTURE SOUND TIME OPTION LOCK CHANNEL 1 2 3 Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System In CHANNEL menu, press 6 DTV Manual or 5 to select Tuning, then press 4 or OK to access. Highlight UHF CH item, press 3 to select your or 4 button desired multiplex number. Press OK to begin the search for that multiplex. At the bottom of the menu screen the DTV Signal strength bar is displayed. You can make use of it to check how strong your DTV signal is and whether you need to adjust your antenna. The higher the signal strength is, the less likely you are to experience picture degradation. SELECT MOVE MENU RETURN DTV Manual Tuning UHF CH 23 Please select channel then Press OK to search DTV Radio Bad Normal 4 2 Good SELECT 4 EXIT MENU When the multiplex is found, any channels that are not currently in the channel list will be added and the channel information will be updated. During the process, you can press MENU or EXIT to exit the search. Memorizing the Channels & Programme Edit ATV manual tuning - analogue only Use the Manual Tuning operation if desired channels can not be preset by Auto Tuning or if you would like to preset channels to specific position numbers one by one.

PICTURE SOUND TIME OPTION LOCK CHANNEL 1 2 In CHANNEL menu, press 6 ATV Manual or 5 to select Tuning, then press 4 the setting menu. or OK to access From ATV Manual Tuning setting menu, press 6 or 5 to select an item, press 3 item as shown below. or 4 to set the A. Storage To: Position selection. Press 3 to select or 4 button the position you want to store. Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System SELECT MOVE MENU RETURN ATV Manual Tuning Storage To System Current CH Search Fine-Tune Frequency 11 B. System: Sound system selection. If certain channel's sound is abnormal, it may be that the sound system setting is wrong. In this case, select another sound system. C. Current CH: Selects current channel using 3 or 4. D. Search: Channel search operation. Press 4 the band or 3 the band. to search up to search down BG C-02 445. 25 MHz Press 3 until your desired channel is displayed. or 4 repeatedly E. Fine-Tune: Manual fine tuning. Press 3 picture and sound are obtained. or 4 until better F.

Frequency: Shows current frequency, it can not be adjusted. (During the process, you can press EXIT to exit the operation.) 19 EXIT SAVE SELECT 3 Adding or changing a channel label - analogue only - Press RED button to save your settings. If a channel is not already labeled, you can label the channel to make it easier to identify. You can also relabel a channel that is already labeled. 1 PICTURE SOUND TIME OPTION LOCK CHANNEL Press MENU. Press 3 CHANNEL menu, press or 4 to select 6 to access. Press 6 Programme Edit, press 4 or 5 to select or OK to open the Programme Edit menu and a programme list is displayed.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241859)

[LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)

<http://yourpdfguides.com/dref/3241859>

Within the programme list, press 6 a channel you or5 to select want to label, press GREEN button to start to label. A cursor appears at the edit field.

Use 6 a character, use 3 the cursor. or5 to select or4 to move When finished, press OK to confirm. The maximum length of label is 5 characters. Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System 2 3 MOVE MENU SELECT RETURN Programme Edit TV TV TV TV 1 S-03 2 C-42 3

S-04 4 C-04 4 5 DEL NAME MOVE SKIP Fav.List Repeat the above steps to label more channels. Note: The labels of DTV channels are automatically assigned and cannot be changed by user. Programme Edit (Continued) Setting up a favourite channel list You can create a favourite channel list so you can quickly browse through your favourite channels by pressing FAV.LIST, then selecting a channel from the favourite channel list. PICTURE SOUND TIME OPTION LOCK CHANNEL Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System 1 2 Navigate to the CHANNEL menu, press 5 or6 to select Programme Edit, press 4 or OK to open the Programme Edit menu. SELECT MOVE MENU RETURN Favourite List DTV DTV DTV DTV TV TV TV Use 6 your favourite program, use FAV.

LIST or5 to select button to mark the selected programme as favourite (a favourite symbol appears). To cancel the favourite mark, just press FAV.LIST button again and the symbol disappears. If the programme list has more than one page, you can press 6 or5 to scroll the page. Repeat the above steps to set more favorite programs.

Press EXIT button to close the menu. Now you can press FAV.LIST button to display the favorite list, or5 through the favorite programs and press 6 to browse press OK to access the channel. Or you can directly use FAV+/FAV- to cycle among the favorite channels in the current source. 2 ABC TV Sydney 22 ABC TV 350 CHI 353 CH4 1 S-03 2 C-42 4 C-04 OK 3 4 5 Move Select 20 Reorder/rearrange channels - analogue only - ATV channels can be arranged in your favourite order.

1 PICTURE SOUND TIME OPTION LOCK CHANNEL Navigate to the CHANNEL menu, press 5 or6 to select Programme Edit, press 4 or OK to open the Programme Edit menu. Use 6 a channel you want to move. or5 to select Press YELLOW button and a move symbol appears alongside the selected channel in the list, then use 6 the or5 to move channel upward or downward to a desired new position. Press YELLOW button again to finish the moving. Repeat the above steps to move more programs. Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System 2 3 MOVE MENU SELECT RETURN Programme Edit TV TV TV TV 4 MOVE 1 S-03 2 C-42 3 S-04 4 C-04 Note: = If the Programme Edit menu has more than one page, you may press 5 the page upward or downward. or6 to scroll DEL NAME MOVE SKIP Fav.List = the DTV channels is automatically assigned and cannot be The order of changed by user. Programme Edit (Continued) to watch can be selected by CH^ / CH . You can still tune to the skipped channel by using the number buttons.

OPTION LOCK CHANNEL PICTURE SOUND TIME Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System 1 2 Navigate to the CHANNEL menu, press 5 or6 to select Programme Edit, press 4 or OK to open the Programme Edit menu. Press 6 your unwanted channel, press BLUE or5 to select button and a skip symbol appears alongside the selected channel in the list, which means this channel will be skipped. (To cancel the skip setting, press BLUE button again and the symbol disappears.) Repeat the above steps to set more programs to skip. Press EXIT to close the menu. Now when you press CH^ these unwanted channels will be skipped. SELECT MOVE MENU RETURN Programme Edit TV TV TV TV 4 SKIP Fav.List DEL NAME MOVE Note: If the Programme Edit menu has more than one page, you may press5 the page upward or downward. or6 to scroll Deleting channels You can delete your unwanted channels from the channel list. @@Picture Mode -- Selects the picture mode.

@@Dynamic (a bright and vivid picture, recommended for store use. @@Press again to restore. Note: ! @@Therefore do not freeze the picture for a long time. ! In some mode, the FREEZE function can not work. .

Standard (a standard picture) . Mild (a soft picture) . User (user customized picture). Note: You can also press P .MODE to select the picture mode. ! Contrast -- Adjusts the contrast. ! Brightness -- Adjusts the brightness. ! Colour -- Adjusts the colour saturation. ! Sharpness -- Adjusts the sharpness. ! Tint -- Adjusts the image tint. (Only for NTSC system) ! Colour Temperature -- Selects the colour temperature. @@! Aspect Ratio -- Selects the aspect ratio of the picture. You can select: . 16:9 -- Shows a full-screen picture in 16:9 mode. .

4:3 -- Shows picture in 4:3 display mode. @@Auto -- Selects the correct aspect ratio automatically. . Zoom1 -- Enlarges the picture vertically. The top and bottom may be cropped. . Zoom2 -- Enlarges picture both horizontally and vertically. The edges may be cropped. . @@Note: You can also press ZOOM to select the aspect ratio.

! @@You can select Low, Middle, High, or Off. ! Light Sensor -- Select On to enable the automatic brightness control. @@@@! @@@@! @@! @@! @@! @@! @@Select Low for darker screen, Normal for brighter screen. (Available when RGB signal is input through HDMI jack). ! Screen (D-SUB only) -- Adjusts the computer image.

Adjusting the Sound Adjusting the sound PICTURE SOUND TIME OPTION LOCK CHANNEL To adjust the sound: 1 Press MENU. The on-screen menu opens. 2 Press 3 SOUND menu, press 6 or 4 to select to access. User 52 50 0 Off Off Sound Mode Treble Bass Balance Auto Volume Surround Sound or 5an option, press 3 the to highlight or 4 to adjust 3 Press 6 option. You can select: ! Sound Mode -- Selects the sound mode.

You can select: . Standard (for normal programs) . Music (for musical programs) . Movie (for movies) . Sports (for sports programs) . User (for user setting sound mode). Note: You can also press S.MODE on the remote control to select the sound mode. ! Treble -- Adjusts Treble (high sounds). ! Bass -- Adjusts Bass (low sounds) ! Balance -- Adjusts the balance between the left and right audio channels.

! Auto Volume -- Turns on to equalize the overall volume levels for all channels. ! Surround Sound -- Turns the Surround sound effect on or off. ! Visual Impairment -- Sets the mix of visually impaired audio with regular audio. When available, visually impaired audio includes audio descriptions of on-screen action. Enable this by setting Mode to On, also you can adjust the volume from this menu. SELECT MOVE MENU RETURN Press 6 or 5 to scroll the menu PICTURE SOUND TIME OPTION LOCK CHANNEL Visual Impairment: Mode Volume On 10 SELECT MOVE MENU RETURN 23 4 To close the menu, press EXIT button. Stereo and Bilingual transmissions For ATV programmes If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time you change channels, disappearing after a few seconds.



[You're reading an excerpt. Click here to read official SANYO](#)

[LED-46XR10FH user guide](#)

<http://yourpdfguides.com/dref/3241859>

If the broadcast is not in stereo, the word Mono will appear. Stereo ..

. Press STEREO button to select Stereo or Mono. Bilingual ...

Bilingual transmissions are rare. If they are transmitted, the word DUAL will display. Choose the desired channel number, and if the word DUAL appears, press STEREO to select NICAM DUAL A, NICAM DUAL B, Mono (NICAM broadcast), or DUAL A or DUAL B (German stereo/bilingual broadcast). For DTV programmes The digital-TV transmission system is capable of simultaneous transmission of many audio tracks (for example, simultaneous translations of the programme into foreign languages, or different commentators for sport events). You can press STEREO button and then use 6 or 5 to select the audio track.

Audio Languages MPEG English English Dolby D L R Note: The availability of these additional "multitracks" depends upon the broadcaster. Adjusting Basic Settings Adjusting basic settings To adjust basic settings: 1 Press MENU. The on-screen menu opens. PICTURE SOUND TIME OPTION LOCK CHANNEL OSD Language Hearing Impaired S/PDIF Output Audio Preference Judder Adjustment Audio Only English Off AUTO Dolby Digital Level 1 Normal 2 Press 3 OPTION menu, press 6 or4 to display to access. or 5 option, press 3 the to select an or4 to adjust 3 Press 6 option. 4 To close the menu, press EXIT button.

SELECT MOVE MENU RETURN From OPTION menu you can select and adjust the following: Language -- Selects on-screen menus language. In this model, only ENGLISH is available. OSD Hearing Impaired (digital only) -- Selects On to display the subtitles (if available) for the hearing impaired. S/PDIF Output (digital only) -- Selects the digital audio output mode for S/PDIF.

You can select AUTO or PCM. 24 . AUTO: This mode outputs Dolby Digital or PCM to the digital audio output jack (S/PDIF) providing it is being broadcast.

. PCM: Select this when a 2ch digital stereo amplifier is connected to the TV. When you select a Dolby Digital or MPEG audio track, the sound is converted to the PCM (2ch) format and output. Audio Preference (digital only) -- Selects the audio track to output. You can select MPEG or Dolby Digital*. . MPEG: If the programme has MPEG and Dolby Digital tracks, select MPEG to output MPEG track in preference.

. Dolby Digital*: If the programme has MPEG and Dolby Digital tracks, select Dolby Digital to output Dolby Digital track in preference. * Manufactured under license from Dolby Laboratories. Dolby and double-D symbol are trademarks of Dolby Laboratories. Judder Adjustment -- When viewing programs, picture problems such as Blur and Judder may occur, and different programs have different amount of Judder.

The Judder Adjustment option will help you correct this picture problem by reducing the amount of judder on your TV. You can select the required level that suits your taste, select Off to turn off this feature. . Level 1: Select for news programs or similar programs. .

Level 2: Select for movie or general programs. . Level 3: Select for sports programs. Note: Judder Adjustment is not effect in D-SUB, HDMI (of VESA signal), or USB (only in some format, such as RMVB) mode. Sometimes it will be turned off automatically when some OSD displays on the screen, then restore automatically when the OSD disappears. Audio Only -- When listening to radio programs, or listening to MP3 music (under MUSIC source or USB music play), you can set Audio Only to Power Saving for energy save. The backlight will turn off automatically after some seconds. Select Normal then the backlight works normally. Setting Clock & Timer Setting TV clock To set TV clock For DTV programs, the clock displays the current time using time data received from your TV service provider. This information is based on a digital channel and does not need to be set manually, but you need to select your time zone firstly.

For ATV programs, if the clock is not set, you may set the clock manually. To set OFF timer/ON timer, you should set the clock first. PICTURE SOUND TIME OPTION LOCK CHANNEL Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 01/Jan /2011 15:30 Off Off Off Off NSW/ACT GMT+10 SELECT MOVE MENU RETURN 1 Press MENU. Press 3 or4TIME menu, to display press 6 to access. 2 A. For DTV programs, you need to select your time PICTURE SOUND TIME OPTION LOCK CHANNEL Clock Off Time On Time Sleep Timer Auto Sleep Time Zone Date Month Year Hour Off NSW/ACT GMT+10 Minute Close -- -- -- -- -Off Off Off 01 Jan 2011 15 30 zone. Press 5 Time Zone, use 3 or6 to select or4 to select your local area time zone. Then the clock will be automatically set by the TV signal source, based on the time zone you selected. B. For ATV programs (and the clock is not set), press 5 Clock, press4 or6 to select or OK to access its setting menu.

Within the menu, use 5 or6 the Date, to highlight 25 Month, Year, Hour or Minute item, and use 3 or4 to adjust the values. When finished, use 5 Close and press OK or6 to select to confirm the setting and close this sub-menu. SELECT MOVE MENU RETURN 3 To close the menu, press EXIT button. Setting Off timer PICTURE SOUND TIME OPTION LOCK CHANNEL To set OFF timer You can set OFF timer to switch the TV to standby at a specified time. Once you set OFF timer, it will effect every day.

or4TIME menu, to display 1 Press MENU. Press 3 On 00 00 Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 01/Jan /2011 15:30 Off Activate Off Hour Off Off Minute press 6 to access. 2 Press 5 Off Time, press 4 or6 to select or OK to access its setting menu. NSW/ACT GMT+10 Close 3 Now the Activate item is highlighted automatically, SELECT MOVE MENU RETURN press 3 On to turn on the function (To or4 to select cancel the function, select Off). or6 to select 4 After Activate is set to On, press 5 Hour or Minute, press 3 the value.

or4 to adjust or6 to select 5 When finished, use 5 Close and press OK to confirm the setting and close this sub-menu. 6 To close the menu, press EXIT button. Setting Clock & Timer (continued) Setting Sleep timer PICTURE SOUND TIME OPTION LOCK CHANNEL To set Sleep timer Sleep timer lets you select the amount of time before your TV turns itself off automatically. This setting is cleared when the TV is turned off. or4TIME menu, to display 1 Press MENU. Press 3 press 6 to access. Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 01/Jan /2011 15:30 Off Off Off Off NSW/ACT GMT+10 2 Press 5 Sleep Timer. or6 to select RETURN timer, please select Off. Note: ! You can directly press SLEEP button on the remote control to set sleep timer. ! After you have set sleep timer, when the last 60 seconds comes, the Power Off screen will appear to remind you after how many seconds the TV will power off.

You can press any button to quit. SELECT MOVE MENU or4 to select 3 Press 3 the amount of time; to turn off the Setting Auto Sleep PICTURE SOUND TIME OPTION LOCK CHANNEL To set Auto Sleep Auto Sleep will bring the TV to standby automatically when there is no signal input (except USB and Music source) for a certain time.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241859)

[LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)

<http://yourpdfguides.com/dref/3241859>

Clock Off Time On Time 01/Jan /2011 15:30 Off Off Off On NSW/ACT GMT+10 1 Press MENU. Press 3 or 4 TIME menu, to display press 6 to access. or 6 to select 2 Press 5 Auto Sleep. or 4 to select 3 Press 3 On to turn on Auto Sleep. (To cancel the function, select Off.) 26 Sleep Timer Auto Sleep Time Zone
SELECT MOVE MENU RETURN 4 To close the menu, press EXIT button. Setting ON timer PICTURE SOUND TIME OPTION LOCK CHANNEL Clock Off
Time On Time Sleep Timer Auto Sleep Time Zone 01/Jan /2011 15:30 Off Activate Off Hour Off Minute Off Volume NSW/ACT GMT+10 Source Channel
Close On 00 00 30 DTV 10 To set ON timer ON timer feature allows you to set the TV to turn on automatically to a preset channel or source at a certain time
and at certain volume. Once you set ON timer, it will effect every day.

1 Press MENU. Press 3 or 4 TIME menu, to display press 6 to access. or 6 to select or OK to 2 Press 5 On Time. Press 4 access the submenu. SELECT MOVE
MENU RETURN 3 Now the Activate item is highlighted automatically, press 3 On to enable ON timer (To or 4 to select cancel, select Off).
or 6 the item list adding the details of the on timer by using to go through 4 After Activate is set to On, press 5 3 selections. or 4 to make !Hour/Minute: Sets the
desired time to turn on the TV. !Volume: Sets the volume level for the On Timer program. !Source: Sets the source to be viewed when the TV turns on.
!Channel: Sets the channel that will be tuned when the TV turns on.

5 6 When finished, use 5 Close item and press OK to close the sub-menu. or 6 to select Press EXIT button to close the main menu. Press to switch the TV to
standby mode. At the preset time, the TV will auto turn on and broadcast the preset programme at the preset volume. Setting Child and Rating Locks You can
prevent your children from watching TV by locking the TV and using age ratings. To enable child lock and rating feature, you must set Lock System to On
through LOCK menu. Also you can set Lock System to On to lock auto tuning/manual tuning to protect some TV settings from being accidentally changed. To
cancel child and rating lock, you can directly set Lock System to Off. Setting or changing the child lock password To set or change the child lock password
From LOCK menu you can set a new child lock password or to change an existing child lock password. By default, the password is 0000 and you should
change it.

To access LOCK menu, to lock or unlock channels, to view locked channels, etc., the child lock password is required. or 4 LOCK menu, to display 1 Press
MENU. Press 3 press 6 to access. PICTURE SOUND TIME OPTION LOCK CHANNEL Lock System Set Password Off Please enter password Block
Programme Parental Guidance Restore Factory Default Allow Update ---No Block Off 2 Now a password is required to input. Use number MENU
SELECT MOVE RETURN buttons to input the correct password (the default password is 0000). or 6 to select 3 Press 5 Set Password, and then press 4 or OK
button to access its submenu. PICTURE SOUND TIME OPTION LOCK CHANNEL Lock System Set Password Off Please enter password New Confirm 4 Use
the number buttons to input a new password (4digit). Input the new password again. Now the new password has been created successfully.

Note: Be sure to write down your password and retain it for future use. If you do forget the password, the unit provides a super password "2580". Please DO
NOT let your children know the super password. 27 Block Programme Parental Guidance Allow Update Restore Factory Default ---No Block ---Off SELECT
MOVE MENU RETURN Locking the TV programmes To lock or unlock the TV programmes Locking the TV programs prevents your children from viewing
any channels which you do not want them to watch. To use lock feature, you have to enable the Lock System.

CHANNEL PICTURE SOUND TIME OPTION LOCK Lock System Set Password Block Programme Parental Guidance Restore Factory Default Allow
Update On 1 Navigate to the Lock menu and input the correct password to access. No Block Off 2 Now the Lock System item will be highlighted
automatically. Use 3 On to enable the lock or 4 to select system. SELECT MOVE MENU RETURN or 6 to highlight 3 Use 5 Block Programme item, press 4 or
OK to access. Block Programme DTV OK 2 ABC TV Sydney 20 ABC HDTV 21 ABC2 22 ABC TV 350 CHI
351 CH2 352 CH3 353 CH4 354 CH5 355 CH6 Select LOCK 4 Now the Block Programme screen opens with a programme list displayed.

Use 5 the or 6 to select programme you want to lock, then press GREEN button to set lock to it. A lock symbol appears alongside. (To unlock, press GREEN
button again.) Select other programs and press GREEN button to set lock to them . 5 Press MENU to return to previous menu. Press EXIT to exit the menu
screen directly. Then the lock comes into effect and these locked programmes are blocked. To viewed locked programmes, just input the password. To disable
the lock system, set Lock System to Off and all locked programmes can be viewed. Setting Child and Rating Locks (continued) Setting parental ratings
PICTURE SOUND TIME OPTION - digital only - LOCK CHANNEL Lock System Set Password Block Programme Parental Guidance Restore Factory
Default Allow Update On No Block Off To set and enable parental ratings Some digital broadcasters rate their programmes according to age.

You can set your TV to display only programmes with age ratings higher than your child's age. Before setting parental ratings, you have to enable the lock
system. 1 Use password to access LOCK menu, highlight Lock System and use 3 On to enable the lock or 4 to select system. or 6 the Parental Guidance, to
highlight 2 Press 5 use 3 an age rating. All programmes or 4 to select beyond the selected age rating will be blocked. You can select: ! Block All ! Block G and
above ! Block PG and above ! Block M and above ! Block MA and above ! Block AV and above ! Block R and above ! No Block SELECT MOVE MENU
RETURN G (General Audiences): Content not offensive to most viewers. PG (Parental Guidance Suggested): Content is such that parents may not want their
children to view the programme. M (Mature Audience): Suitable for mature audience. MA (Mature Adult Audience): May contain mature themes, profane
language, graphic violence, and sexual situations. AV (Adult Audience): Strong violence.

28 R (Restricted viewing): Not for children under age 17. Strong elements of sex and/or violence. 3 Press MENU to return to previous menu. Press EXIT to
close the menu directly. Restoring factory default PICTURE SOUND TIME OPTION LOCK CHANNEL Lock System Set Password Block Programme
Parental Guidance Allow Update Are you sure? Off To restore factory default Caution: When you restore factory default, all settings including password will
be cleared and reset to default (the password is reset to 0000).



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241859)

[LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)

<http://yourpdfguides.com/dref/3241859>

So make sure you do want to reset the settings to its original factory condition before you perform this operation. Yes No Block No Off 1 Navigate to the Lock menu and input the correct password to access. or6 to select 2 Press 5 the Restore Factory Default Restore Factory Default SELECT MOVE MENU RETURN item, and then press 4 or OK. A message appears prompting you to confirm again. or4 to select 3 Use 3 between YES (to reset) or NO (to cancel) item, and press OK to confirm.

4 Press MENU to return to previous menu. Press EXIT to close the menu directly. Setting Allow Update PICTURE SOUND TIME OPTION LOCK CHANNEL To set Allow Update When the TV is in standby mode, the TV will automatically work at the preset time and detect OTA, then start system update. Lock System Set Password Block Programme Parental Guidance Restore Factory Default Allow Update Off Activate Hour Minute Close MENU 1 Navigate to the Lock menu and input the correct On 00 00 password to access. No Block Off or6 to select 2 Press 5 the Allow Update item, press 4 or OK to access its setting menu. press 3 On to enable the function (To or4 to select cancel, select Off). or6 Hour/Minute item and use 3 to go through or4 time. to set update 4 After Activate is set to On, press 5 SELECT MOVE RETURN 3 Now the Activate item is highlighted automatically, 5 When finished, use 5 Close and press OK to close the sub-menu. To exit, press EXIT button. or6 to select Making Use of Time Shift Function Checking File System before Time Shift Time Shift function is the recording of DTV programme to an external memory device (portable hard disk or USB device) to be viewed at a later time more convenient to the user.

But before operation you must pay attention to the following notes: ! Before Time Shift, you need to check the File System successfully. ! Do not disconnect the memory device from the TV while time shifting, or the data will be lost. ! When Time Shifting, a directory will be automatically created at the external memory device to temporarily save the data. ! The data cannot be played on any other product or computer. ! The recorder once in time shift mode will continue recording what you are watching and overwrite any information already on the memory device. ! If malfunction, then information already on the memory device may lose. So please back up your memory device data. ! The file system only supports FAT and FAT32. It is recommended to use external memory device in FAT32 file system, otherwise a disk formatting is required and all data will lose. ! The external memory device must have enough free space (at least 512MB) for time shift.

Recording capacity varies depending on the memory device's file system, for the FAT32 file system the maximum capacity is 4GB. ! When Time Shifting, the external memory device need to write and read data simultaneously. So during the process it may occur slight picture/sound pause or standstill depending on the memory device's speed and stability. ! After Time Shift, you can connect the memory device to your PC to delete temporary data or format a partition to completely clear those unnecessary data. ! Certain types of memory device (such as some USB devices) may not be compatible with this TV.

To check File System before Time Shift PICTURE SOUND TIME OPTION LOCK CHANNEL 1 2 Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit File System Connect your USB device or portable hard disk to the USB port on TV side firstly. Navigate to CHANNEL-File System menu to check file system. (Press MENU, then use 3 CHANNEL menu, press 6 or4 to select to 29 access. Press 5 or6File System, then press 4 to highlight to access.) Now do the following to check file system.

A. Select Disk: From File System menu, highlight Select Disk, press 4 to access. Use 3 a disk, then move the highlight to OK box and press or4 to select OK to confirm. (To cancel, select EXIT to exit). B. Check File System SELECT MOVE Menu RETURN File System Select Disk Check File System USB Disk Speed Select Disk Disk OK C: EXIT C: Start EXIT EXIT OK OK MENU Return Move Select From File System menu, highlight Check File System, press 4 to start checking. It may take several minutes, please wait. When finished, if SUCCESS appears at the Check File System line then you can start time shift function. (At File System menu bottom screen, USB Disk state and speed information will appear, they can not be adjusted) File System Select Disk Check File System USB Disk Speed HD support C: SUCCESS Pass 5112KB/s EXIT EXIT OK OK MENU Return Move Select Note: ! If your external memory device is not in FAT32 file system, then during the process of File System checking, a message appears prompting you to start to create disk partition. If you want to proceed, operate according to on-screen instructions to format the disk.

! After File System checking, if "SD Fail" appears on the screen, that indicates this external memory device is not suitable to be used for time shift, please replace with other one and try it again. If "SD Support" appears, that means this external device is suitable to time shift SD program, but not HD program. If "HD Support" appears, then both SD and HD programs are OK. Making use of Time Shift function digital only After successful File System check, you can use Time Shift function now. Press T.SHIFT button to start time shifting. The live programme stops at the current state. At the bottom screen, an information box will appear for your help. After some time, this information box will be minimized in size and glitter on the screen. To restore, please press OK.

Current time Now you can use below buttons to operate: ! ! ! : PLAY/PAUSE button : STOP button. / : Fast forward/fast reverse / : Previous/next Duration Teletext & Subtitle What Is Teletext? Your System receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing.

News, weather and sports information, stock exchange prices and programme previews are among the many services available. To Turn On/Off Teletext Select a TV channel providing the Teletext program. Press TTX button to display the teletext. Press TTX button again to switch back to TV screen. Teletext control button list 15 /6 button Used to scroll page upward or downward. ! 0 9 button Directly select any page by using 0 - 9. ! Coloured buttons (RED/GREEN/YELLOW/BLUE) Coloured areas are displayed at the bottom of the screen. The 4 coloured buttons are used to access the items or corresponding pages.

! Hold button 30 Certain pages contain sub-pages which are automatically displayed successively. This button is used to stop or resume sub-page acquisition. ! Reveal button Press the button to reveal the concealed information such as games solutions.



[You're reading an excerpt. Click here to read official SANYO LED-46XR10FH user guide](http://yourpdfguides.com/dref/3241859)
<http://yourpdfguides.com/dref/3241859>