



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO PDP-42XR9DA. You'll find the answers to all your questions on the SANYO PDP-42XR9DA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SANYO PDP-42XR9DA
User guide SANYO PDP-42XR9DA
Operating instructions SANYO PDP-42XR9DA
Instructions for use SANYO PDP-42XR9DA
Instruction manual SANYO PDP-42XR9DA

The SANYO logo in a bold, black, sans-serif font.

INSTRUCTION MANUAL

PDP-42XR9DA

PDP TV

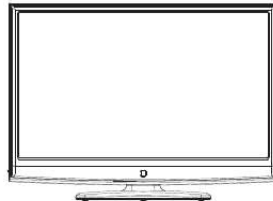

Before connecting, operating or adjusting this product, please read the manual completely.
Please keep this manual for future reference.



[You're reading an excerpt. Click here to read official SANYO PDP-42XR9DA user guide](http://yourpdfguides.com/dref/3241885)
<http://yourpdfguides.com/dref/3241885>

Manual abstract:

! Ensuring the television is not overhanging the edge of the supporting furniture. ! Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support. ! Not standing the televisions on cloth or other materials placed between the television and supporting furniture. ! Educating children about the dangers of climbing on furniture to reach the television or its controls. Table of Contents Important Safety Precautions.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....1 Important Notice....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....3 Preparations....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....

.....
.....
.....

...4 Identification of Controls

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..6 Connections.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

9 Basic Operations.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
....13 Memorizing the Channels .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....16 Channel and Program Selection.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

20 Picture Adjustment

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....21 *Sound Adjustment*.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..22 *System Setup*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.24 *Rating and Lock Setup*

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....30 Screen setup for D-SUB (PC) Mode .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..31 Hotel Mode Setup ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...32 Troubleshooting.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

Never attempt to move the TV unless the AC power cord has been disconnected. 17. Lightning---Unplug this apparatus during lightning storms or when unused for long periods of time. For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges. 18. Do not use this apparatus near water---for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. Do not use immediately after moving from a low temperature to high temperature environment, as this causes condensation, which may result in fire, electric shock, or other hazards. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. 19.

Clean only with dry cloth---Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 20. Ventilation---Do not block any ventilation openings. Install in accordance with the manufacturer instructions. The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product.



[You're reading an excerpt. Click here to read official SANYO PDP-42XR9DA user guide](http://yourpdfguides.com/dref/3241885)
<http://yourpdfguides.com/dref/3241885>

Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.

21.Heat sources---Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
22.Panel protection---The display panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects.

Be careful not to be injured by broken glass pieces in case the display panel breaks. 23.Pixel defect---The display panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

Warning: For continued safety, apparatus with class I construction shall be connected to a mains socket outlet with a protective earthing connection. 2 Important Notice About Temperature Do not use in hot and cold rooms (locations) ! When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal. ! Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the screen to malfunction. ! Storage temperature: 0°C to +50°C ! Working temperature: 5°C to +40°C About After-Image The extended use of fixed image program material can cause a permanent after-image on the screen. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible screen deterioration can be limited by observing the following steps: A. Reduce the brightness/contrast setting to a minimum viewing level. B.

Do not display the fixed image for extended periods of time. C. Turn the power off when not in actual use. Important Information Regarding Use of Video Games, Computers, Capustrated. Note < should be operated only from the type of power source indicated on the marking label. This product < the AC cord from power outlet when not using for a long period of time. Always unplug < This illustration is for reference only. The AC plug may be different on different models. 5 Identification of Controls Main Unit (front view/side view) Power Switch 1 2 3 4 5 6 1. Indicator/Remote Sensor 2.

CH+/Press these two buttons to directly change ation of the external equipment may be different depending on your model. Loose connectors can result in image or color problems. Make sure that all connectors are securely inserted into their terminals. Refer to the operating manual of the external device as well. When connecting an external device, turn the power off to avoid any issues.

Connecting a Camcorder Camcorder "PlayStation" TV Side or AV cable Cables are often color-coded to connectors. Connect red to red, white to white, etc. Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and camcorder. To playback Camcorder 1. Turn on your TV, then press SOURCE button.

The Input Source menu opens. 2. Press 5 AV, then press OK to confirm. or6 to select 3. Turn on your camcorder and set it to output mode. (For details, refer to your camcorder user manual.) 4. Insert the tape into the camcorder and press Play button. Note The operations of the camcorder may be different and is dependant on your model. Please read the user manual of your camcorder to confirm operation.

9 Connections (Continued) Connecting Component Video TV Side Cables are often color-coded to connectors. Connect red to red, white to white, etc. Component video cable Audio cable DVD Player To connect a device using component video: Connect the Component Video cable between the Y, Cb/Pb, Cr/Pr input jacks on the unit and Y, Cb/Pb, Cr/Pr output jacks on the device . Connect the Audio cable between the AUDIO input jacks on the unit and AUDIO output jacks on the device. To play component video from an external device: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 Component1/Component2 correspondingly, then press OK to confirm. or6 to select 3.

Turn on your external device and set it to the correct mode. See the device's user guide for more information. Connecting a Computer TV Side D-Sub cable (analog RGB) Audio cable (stereo mini plugs) To monitor port (15-pin D-Sub) To audio output jack How to connect: Connect a D-Sub cable between the D-SUB jack on the computer and the D-SUB input jack on the unit. Connect an Audio cable between the AUDIO output on the computer and AUDIO input jack on the unit. To play video from a computer 1.

Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press5 D-SUB, then press OK to confirm. or6 to select 3.

Turn on your computer, and adjust the display properties as required. 10 Connections (Continued) Connecting an HDMI device TV Side Equipment with HDMI output HDMI cable How to connect a device using HDMI Connection: Connect the HDMI cable between the HDMI interface on the unit and HDMI output on the device. To play from the device using HDMI: 1. Turn on your TV, then press SOURCE button. The Input Source menu opens. 2. Press 5 HDMI1/HDMI2/HDMI3 correspondingly, then press OK to confirm. or6 to select 3. Turn on your device and set it to the correct mode. See the device's user guide for more information.

Note If the external device has DVI output only, use a DVI to HDMI adapter cable to connect to the HDMI terminal. Connect the audio cable to the D-SUB AUDIO IN jack on the TV rear. Connecting a VCR (for Recording) TV Side VCR for Recording S-VIDEO AV cable Cables are often color-coded to connectors. Connect red to red, white to white, etc. How to connect: Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and VCR. To record program 1. Turn on your TV, select a program you wish to record. 2. Turn on your VCR, insert a videotape for recording. 3.

Press the Record button to begin recording. Note ! Only analog TV programs, and AV input sources can be output through the AV output jacks. 11 Connections (Continued) Connecting Digital Coaxial Audio TV Side S/PDIF IN (Coaxial) Audio Processor Coaxial audio cable or For a full Home Theater sound experience, you must connect your Hi-Fi or Audio processor to the S/PDIF OUT(Coaxial) terminal on the TV side. HIFi System Note The S/PDIF OUT jack is available only when a digital TV channel is received. Connecting Headphones Insert the plug of the headphone into the TV's Headphone jack.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241885)

[PDP-42XR9DA user guide](http://yourpdfguides.com/dref/3241885)

<http://yourpdfguides.com/dref/3241885>

When using headphones, adjust the headphone volume so as to avoid excessive levels, as hearing damage may result. TV Left Side Headphones 12 Basic Operations Main Menu Overview List of main menus to help you with operations PICTURE menu SOUND menu Picture Sound Time Option Lock Channel Picture Sound Time Option Lock Channel Picture Mode Contrast Brightness Color Sharpness Tint Prev Page Select User 75 45 50 50 0 Next Page Move Menu Sound Mode Treble Bass Balance Auto Volume Spatial User 50 50 0 Off Off Exit Select Move Menu Exit TIME menu Picture Sound Time Option Lock Channel OPTION menu Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Off Off Off VIC GMT+10 Allow Update System Update Time Hearing Impaired SPDIF Audio Preference On 03:00 On Auto Dolby Digital Select Move Menu Exit Select Move Menu Exit LOCK menu Picture Sound Time Option Lock Channel Picture CHANNEL menu Sound Time Option Lock Channel Lock Tuning Set Password Block Program Parental Guidance Restore Factory Default Off Auto Tuning DTV Manual Tuning ATV Manual Tuning No Block Programme Edit Select Move Menu Exit Select Move Menu Exit To navigate through the OSD main menu 1 2 3 4 With the power on, press MENU and the main menu screen displays. Press 3 menu. Press 6 menu. or 4 to select to access the Within the menu, press 5 ,6 ,3 through the options or adjust or 4 navigate an option. Press OK to confirm a selection or enter a sub-menu. Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. Or you may wait for a few seconds and the on-screen menu will disappear from the screen automatically. Note = items may be different when the unit works in different mode, and menu items that are not selectable are grayed out. Some menu = menu has more than one page, please use 5 through. The Picture or 6 to scroll = The illustrations and on-screen displays in this manual are for explanation purpose (some are enlarged, others cropped) and may vary slightly from the actual ones. 13 Basic Operations (Continued) Turning On/Off the Power Turning On Insert the power cord into the wall outlet. Press the Power Switch on the unit to power on. If the unit is in standby mode, press SOURCE on the unit or Power button on the remote control to turn on the unit, and you will be ready to use its features.

Turning Off With the power on, press the Power button on the remote control to turn off the unit, and put the unit in standby mode. To cut off the power completely, press the Power Switch directly. First Time Setup The first time you use the TV, you need to set up the TV. 1 Make sure that: ! You have installed the batteries in the remote control. ! You have connected the TV to an antenna or cable TV outlet. ! You have connected the power cord. Energy Save Mode To use this TV for displaying in a store, please select [Store/Dynamic]. [Standard/Energy Save] mode is recommended for normal home use. Standard/Energy Save Store/Dynamic OK 2 3 4 Press POWER to turn on the TV. After a few seconds the Energy Save Mode screen opens.

Press 3 or 4 Standard/Energy Save or to select Store/Dynamic. Press OK to confirm the selection. Navigate Confirm Installation Guide Now the Installation Guide screen will display. Highlight Auto Tuning item, and press OK to access. Language Auto Tuning English OK Start Exit Exit 5 Press 3 or 4 Start item, and then Press OK to to highlight begin the auto channel search.

Installation Guide Australia Country Selection English Language Auto Tuning Start Cancel Exit Note = The Language and Country Selection items is defaulted and cannot be adjusted. OK Start Exit 14 Basic Operations (Continued) Selecting the Input Signal Source 1 2 Press SOURCE button. Press 6 the input source. Options include: or 5 to select ! ! ! ! ! ! ! ! DTV -- Watch the DTV signal. ATV -- Watch the ATV signal.

AV -- Watch the signal from the AV input terminals. Component 1 -- Watch the signal from the COMPONENT 1 input terminals. Component 2 -- Watch the signal from the COMPONENT 2 input terminals. D-SUB -- Watch the signal from the D-SUB input jack. HDMI 1 -- Watch the signal from the HDMI 1 input jack. HDMI 2 -- Watch the signal from the HDMI 2 input jack. HDMI 3 -- Watch the signal from the HDMI 3 input jack. Input Source DTV ATV AV Component 1 Component 2 D-SUB HDMI 1 HDMI 2 HDMI 3 Move Select 3 Press 3 confirm the selection. ,4 or OK to Displaying the Information Banner Press the INFO button to display the information banner. The information banner displays current status information such as the channel number and signal source.

Depending on the mode, different information is displayed. In DTV mode, more information will be displayed. Below is an example banner in DTV mode. 2 ABC TV Sydney DTV SD MPEG British Isles: A Natural History Fri, Feb 27 2008 11:05 English Subtitle 576i Teletext Reserved for future use Alan Titchmarsh continues his epic journey around the British Isles and discovers why they are so diverse. 11:08 12:00 Next In DTV mode, the information banner may contain: ! Channel number and name. ! Current time. ! Current program name, start and end play times. ! Next program name and start and end play times. ! TV or Radio. ! Audio mode, audio track.

! Signal strength for current channel. ! Signal resolution. ! Subtitle, teletext. Note = OSD is only served as an example, and it is in DTV mode. The above = banner content varies, depending on the broadcaster and your settings.

Information 15 Memorizing the Channels When you turn on the TV for the first time, you should perform an auto channel search to set up stations on your TV. Note: Be sure to select the proper input source (ATV/DTV) before operation. Auto Channel Search You should perform an auto channel search to search for all channels available and stores them in memory. And before you start Auto Tuning, it is necessary to select a country firstly. 1 2 3 4 5 Press MENU and the main menu screen displays.

Press 3 Channel menu, press 6 menu. or 4 to select to access the Highlight Auto Tuning item, and press 4 or OK to access. Picture Sound Time Option Lock Channel Auto Tuning DTV Manual Tuning Selection Country ATV Manual Tuning Programme Edit Start Cancel Australia Now a confirmation box appears on the screen. Press 3 or 4 to highlight Start item, and then press OK to begin the auto channel search. (If you want to cancel, press 4 to select Cancel item, and use OK to confirm.) Then the TV begins memorizing all ATV/DTV channels available in your area. @@Note Select Move Menu Exit Channel Tuning 2 %... @@@@ Press 3 the proper audio system.

Press RED button or 4 to select to save.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241885)

[PDP-42XR9DA user guide](http://yourpdfguides.com/dref/3241885)

<http://yourpdfguides.com/dref/3241885>

Press MENU to return to previous menu. @@Press 3 Channel menu, press 6 menu. @@Then a name symbol appears alongside. Use 6 character to input, use 3 the cursor. @@After finishing inputting, press OK to confirm. The maximum length of label is 5 characters. Repeat the above steps to set up more channel labels. @@@@! @@@@@@@@If the program list has more than one page, you can press 6 the page, or 5 to scroll Repeat the above steps to set more favorite programs.

To exit, press EXIT button. @@@@@@@@Press EXIT to quit the list. @@@@Press YELLOW button and a move symbol appears alongside the selected channel in the list, then use 6 the channel or 5 to move upward or downward to a desired new position. Press YELLOW button again to finish the sorting.

Repeat the above steps for each channel you wish to move.

TV 1 S-03 2 C-42 3 S-04 4 C-04 MOVE DEL NAME MOVE SKIP Fav.List Note = Edit menu has more than one page, you may press 5 the page upward or downward. If the Programme or 6 to scroll = DTV channels is automatically assigned and cannot be changed by user. The order of the = no MOVE item in DTV mode. There will be To delete channels This function allows you to delete your unwanted channels.

Programme Edit TV TV TV 1 2 3 Select the channel you want to delete in the Programme Edit menu. Press RED button and a delete symbol appears alongside the selected channel in the list. Press RED button again to finish the delete. Repeat the above steps for more channels you want to delete. TV 1 S-03 2 C-42 3 S-04 4 C-04 DEL DEL NAME MOVE SKIP Fav.List Note = Edit menu has more than one page, you may press 5 the page upward or downward. If the Programme or 6 to scroll = The deleted channels cannot be found unless you perform a channel search again. 19 Channel and Program Selection Please note: your new TV is capable of receiving both radio and TV broadcasts. And for TV reception, your new TV is capable of receiving both traditional analog channels and digital channels. When watching digital TV program and you want to listen to radio program, simply press TV/Radio button to switch.

To return to TV program, press TV/Radio button again. (When watching analog TV program, the TV/Radio button does not work.) The TV allows channel and program selection in the following ways: Method 1-- Using CH Press the CH CH or CH Note = By using CH or CH or CH to cycle among all available channels. The skipped channels can not be selected by button. or CH, you can not select analog channels in DTV mode, or digital channels in ATV mode.

Method 2-- Using RECALL button Press RECALL to switch to the previously tuned channel. Press RECALL again to switch back to the currently tuned channel. Note = will not work if no channel has been changed after TV is turned on. RECALL Method 3-- Using 0 9 and OK button Press the 0 9 number buttons to input a channel number, then wait for some seconds or press OK to go directly to that channel. When selecting, the TV will indicate the channel through the information banner.

Note = 9 number buttons, you can not select analog channels in DTV mode, or digital channels in ATV mode. By using 0 = When in Radio mode, you can press TV/Radio button to switch to TV mode. = one-digit or two-digit channel number, you can press OK to go directly to the channel without waiting. If you input Method 4-- Using channel list Press LIST button to display the channel list. Use 5 a channel and then press or 6 to select OK button.

Note = If the channel list has more than one page, you may press 5 the page upward or or 6 to scroll downward. TV TV TV TV Channel List 1 S-03 2 C-42 3 S-04 4 C-04 Move OK Select Favourite List Method 5-- Using favorite channel list After you have created the favorite channel list, you can press FAV.LIST button to display the favorite channel list. Use 5 a channel and then press OK button. or 6 to select Note = You can directly press FAV+/FAV button to cycle among the favorite channels.

TV TV TV TV 1 S-03 2 C-42 3 S-04 4 C-04 Move OK Select 20 Picture Adjustment Customizing the Picture 1 2 3 4 Press MENU and the main menu screen displays. Press 3 Picture menu, press 6 menu. or 4 to select to access the Within the menu, press 5 through the page upward or downward, or 6 to scroll and press 5 navigate through the options or adjust an option. ,6 ,3 ,4 to Press MENU to return to previous menu. Press EXIT to exit the menu screen directly.

Picture Sound Time Option Lock Channel Picture Sound Time Option Lock Channel Picture Mode Contrast Brightness Color Sharpness Tint Prev Page Select User 75 45 50 50 0 Next Page Move Menu Color Temperature Aspect Ratio Noise Reduction Screen Cool 16:9 Off Prev Page Exit Select Next Page Move Menu Exit Option Picture Mode Description Selects a desired picture mode. You can select from Standard, Dynamic, Mild and User. Standard: Select for a standard picture. Dynamic: Select for a bright and vivid picture. Mild: Select for a finely detailed picture.

@@@@Adjusts color saturation. @@Note: The Tint item is only for NTSC system. Color Temperature Selects one of three automatic color adjustments.

@@You can select from Warm, Cool and Normal. @@You can select from 16:9, Zoom1, Zoom2, Auto and 4:3. 16:9: Displays a 16:9 picture. Zoom1: Enlarges the picture to fill the full screen. @@Auto: Displays picture automatically in proper ratio. 4:3: Displays a 4:3 picture. @@@@@@@@@@@@@@or 4 to select to access the Within the menu, press 5 or 6 to navigate through the options, press 3 an option.

or 4 to adjust Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. Description Sound Mode Treble Bass Balance Auto Volume Spatial User 50 50 0 Off Off Select Move Menu Exit Option Sound Mode Selects a desired sound mode. You can select from Standard, Music, Movie, Sports and User. Standard: Select for normal programs.

Music: Select for a music program. Movie: Select for a movie program. Sports: Select for a sports program. User: The sound quality you set. Note: To quickly change the sound mode, press the S.

MODE button repeatedly. Treble Bass Balance Auto Volume Adjusts Treble (high sounds). Adjusts Bass (low sounds) Adjusts volume balance (left and right volumes). Select On to equalize overall volume levels across all channels. Select Off to turn off the auto volume control. Select On to turn on the surround sound effect. The benefits of surround sound are enormous. You can be completely enveloped in sound, just as if you were at a concert hall or cinema. Select Off to turn off surround sound. Spatial 22 Sound Adjustment (Continued) Stereo/Bilingual Selection (for analog channels) You can quickly select sound multiplex mode by using the STEREO button on the remote control.

NICAM Broadcast Selection This enables the selection of the reception mode when receiving a NICAM signal.



[You're reading an excerpt. Click here to read official SANYO](#)

[PDP-42XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241885>

To let you enjoy NICAM broadcasting, this TV set receives NICAM system stereo, bilingual, and monaural broadcasts. Stereo When the TV set is receiving a stereo broadcast, press the STEREO button to select Stereo or Mono. When Mono is selected, the TV sound is output monaurally. Bilingual When the TV set is receiving a bilingual program, press the STEREO button to select NICAM DUAL A or NICAM DUAL B. IGR (German stereo system) Broadcasts This enables the selection of the reception mode when receiving an IGR signal. To let you enjoy IGR broadcasting, this TV set receives IGR system stereo and bilingual broadcasts. Stereo When the TV set is receiving a stereo broadcast, press the STEREO button to select Stereo or Mono. When Mono is selected, the TV sound is output monaurally. Bilingual When the TV set is receiving bilingual program, press the STEREO button to select DUAL A or DUAL B.

Audio Track Selection (for digital channels) The digital-TV transmission system is capable of simultaneous transmission of many audio tracks (for example, simultaneous translations of the program into foreign languages, or different commentators for sport events). You can press STEREO button to select the audio track. Note = The availability of these additional "multi-tracks" depends upon the broadcaster. 23 System Setup System Setup You may change system settings such as Hearing impaired, SPDIF Audio Preference, etc. by making use of Option menu.

, 1 2 3 4 Press MENU and the main menu screen displays. Press 3 Option menu, press 6 menu. or 4 to select to access the Within the menu, press 5 navigate through the options ,6 ,3 ,4 to or adjust an option. Press MENU to return to previous menu. Press EXIT to exit the menu screen directly.

Select Move Menu Picture Sound Time Option Lock Channel Allow Update System Update Time Hearing Impaired SPDIF Audio Preference On 03:00 On Auto Dolby Digital Exit Option Allow Update Description Press 3 On to allow system update. /4 to select Select Off to turn off the function. Note: You should first set this item to On before performing system update time function. Press 4 or OK to display the System Update Time screen, then set On time. When the TV is in standby mode, the TV will automatically turn on at the preset time and detect OTA, then start system update. Press 3 On to display the subtitles (if available) for the hearing impaired. /4 to select Select Off to turn off the function. Selects the digital audio output mode for S/PDIF. You can select Auto or PCM. Auto: Output audio signal by the rule: If current audio track is in Dolby Digital format, then Dolby Digital format will be selected.

If current audio track is in MPEG, then PCM format will be selected. PCM: Output audio signal by PCM format. System Update Time Hearing Impaired (Only for digital programs) SPDIF (Only for digital programs) Note: To select Auto is recommended. Audio Preference (Only for digital programs) Selects the audio track to output. You can select MPEG or Dolby Digital. MPEG: If the program has MPEG and Dolby Digital tracks, select MPEG to output MPEG track in preference. Dolby Digital: If the program has MPEG and Dolby Digital tracks, select Dolby Digital to output Dolby Digital track in preference. 24

Rating and Lock Setup Password Setup The Password setup sub-menu is used to set a new system password or to change an existing system password. By default, the system password is 0000 and you may change it. To access Parental Guidance, to lock or unlock channels, to view locked channels, etc. , the system password is required. To create a new password Picture Sound Time Option Lock Channel 1 2 3 4 5 Press MENU and the main menu screen displays. Press 3 /4 menu, press 6 menu. to select Lock to access the Now a password is required to input. Use number buttons to input the correct password (the default password is 0000).

Lock Tuning Set Password Block Program Off Please enter Password English--Off No Block Parental Guidance Restore Factory Default Press 5 Set Password item, and then press 4 or 6 to select or OK button to access its submenu. Use the number buttons to input a new password (4- digit). Picture Select Move Menu Exit Sound Time Option Lock Channel Input the new password again. Now the new password has been created successfully. Lock Tuning Set Password Block Program Off Please enter Password New English- - Confirm Parental Guidance ---Off No Block Note ! Be sure to write down your password and retain it for future use.

If you do forget the password, the unit provides a super password "2580". Please DO NOT let your children know the super password. Restore Factory Default Select Move Menu Exit Block Program Setup The Block Program function blocks any channels that you do not want to watch or that you do not want your children to watch. Picture Sound Time Option Lock Channel 1 2 3 4 5 Navigate to the Lock menu and input the correct password to access. Use 5 or 6 to highlight Block Program item, press 4 or OK to access. Now the Block Program screen opens. Use 5 the or 6 to select channel you want to lock, then press GREEN button to set lock to the channel. A lock symbol appears alongside the locked channel. Repeat the above steps for each program you wish to lock. Press MENU to return to previous menu.

Press EXIT to exit the menu screen directly. Then the Block Program comes into effect for the Locked channel. Note Lock Tuning Set Password Block Program Parental Guidance Restore Factory Default Off No Block Select Move Menu Exit Block Program TV TV TV 20 S-48 21 S-51 22 S-56 OK LOCK ! To view a locked channel, just input the password. ! To cancel channel lock, use password to enter into the Lock menu, and call up Block Program screen, then use GREEN button to unlock the channel, and the lock symbol will disappear. 25 Rating and Lock Setup (Continued) Parental Guidance Setup (DTV only)

Parental Guidance blocks programs according to their classification so that children can not view certain programs. Picture Sound Time Option Lock Channel Lock Tuning Set Password Block Program Off 1 2 3 Navigate to the Lock menu and input the correct password to access. Press 5 or 6 Parental Guidance item. to highlight the Parental Guidance Restore Factory Default No Block Select Move Menu Exit Use 3 or 4 your desired to select rating. Use the "Block All" setting to completely block all viewing. The menu can still be accessed to unblock all programs.

G (General Audiences): Content not offensive to most viewers. PG (Parental Guidance Suggested): Content is such that parents may not want their children to view the program. M (Mature Audience): Suitable for mature audience. MA (Mature Adult Audience): May contain mature themes, profane language, graphic violence, and sexual situations.



[You're reading an excerpt. Click here to read official SANYO](http://yourpdfguides.com/dref/3241885)

[PDP-42XR9DA user guide](http://yourpdfguides.com/dref/3241885)

<http://yourpdfguides.com/dref/3241885>

AV (Adult Audience): Strong violence.

Block All Block G and above Block PG and above Block M and above Block MA and above Block AV and above Block R and above No Block 4 Press MENU to return to previous menu. Press EXIT to exit the menu screen directly. R (Restricted viewing): Not for children under age 17. Strong elements of sex and/or violence. Lock Tuning Setup Making use of Lock Tuning you can protect some TV settings from being accidentally changed.

1 2 3 Navigate to the Lock menu and input the correct password to access. Now the Lock Tuning item will be highlighted automatically. Use 3 or turn off the Lock Tuning. or4 to turn on Once you turn on Lock Tuning, all items in Channel Menu can not be accessed by the user without the correct password. To cancel, use password to enter into Lock Menu and set Lock Tuning item to OFF. Picture Sound Time Option Lock Channel Lock Tuning Set Password Block Program Parental Guidance Restore Factory Default Off No Block Select Move Menu Exit Restoring Factory Default Running this function to reset all settings to its original factory condition. 1 2 3 Navigate to the Lock menu and input the correct password to access. Picture Sound Time Option Lock Channel Lock Tuning Press 5 the Restore Factory Default item, press 4 or6 to select Set Password Block Program or OK to activate the function. Parental Guidance Are you sure? OffOff English Yes No No Block Now the screen will display a dialog box for you to confirm your operation. Use 3 between YES or NO item, and or4 to toggle press OK to confirm your operation.

Note Restore Factory Default Select Move Menu Exit ! This function will clear most of your customized settings. So make sure you do want to reset all settings to its original factory condition before you perform this operation. 26 Timer Setup Time Zone Selection To obtain local time, you should first set local time zone. and it depends on your local station whether has broadcast time zone information. 1 2 3 Press MENU and the main menu screen displays. Press 3 Time menu, press 6 or4 to select to access. Press 5 Time Zone item, and then press or6 to select select the appropriate one. Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer 3 Auto Sleep or4 to Time Zone 28/Sep /2008 15:30 Off Off Off Off VIC GMT+10 Current Time Setup Make use of this function can set the current time for the TV. Select Move MENU Exit 1 2 3 Navigate to the Time menu, press 6 to access. Press 5 Clock item, Press4 or6 to select or OK to access the submenu.

Within the menu, use 5 or6 Date, Month, Year, to highlight the Hour or Minute item, and use 3 the values. or4 to adjust When finished, use 5 or6 to select Close and press OK to confirm the setting. Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off 28 Date Off Sep Month Year Off 2008 15 Hour Off 30 Minute GMT+10 VIC Close Note ! Before setting Off timer and On timer, please set the Clock for the TV. Select Move MENU Exit On Timer Setup With On Timer function On, the TV will automatically turn on at the preset time. 1 2 3 4 5 Navigate to the Time menu, press 6 to access.

Press 5 On Time item, Press 4 or6 to select or OK to access the submenu. Now the Activate item will be highlighted automatically, press 3 On . (If you want to cancel setting, please choose or4 to select Off) Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep 28/Sep /2008 15:30 Off Activate On Off 00 Hour Off 00 Minute 00 Volume Off DTV Mode GMT+10 VIC 22 ABC TV Close Move MENU Press 5 Hour or Minute item, and press 3 Time Zone or6 to select or4 to adjust the value. After setting On Timer, you can press 5 navigate ,6 ,3 or4 to through the following three options and adjust the options . Description Sets desired volume for the On program.

Selects one source to be viewed through On timer. Selects a broadcasting program for On timer. Select Exit Option Volume Mode Program Number 6 7 When finished, use 5 Close item and press OK to confirm the setting. or6 to select Press to switch the TV to standby mode. At the preset time, the TV will auto turn on and broadcast the preset program at the preset volume. 27 Timer Setup (Continued) Off Timer Setup With Off Timer function On, the TV will automatically turn off at the preset time. 1 2 3 4 Navigate to the Time menu, press 6 to access. Press 5 Off Time item, press 4 or6 to select or OK to access the submenu.

Now the Activate item will be highlighted automatically, press 3 On . (If you want to cancel setting, please choose Off) or4 to select Picture Sound Time Option Lock Channel Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Activate Off On 00 Hour Off 00 Minute Off VIC GMT+10 Close Press 5 Hour or Minute item, and press 3 or6 to select or4 to adjust the value.

When finished, use 5 Close and press OK to confirm or6 to select the setting. Note Select Move MENU Exit ! Once you have set On timer or Off timer function, the unit will perform it everyday at the preset time. Sleep Timer Setup Sleep timer lets you select the amount of time before your TV turns itself off automatically. This setting is cleared when the TV is turned off. Picture Sound Time Option Lock Channel 1 2 3 Navigate to the Time menu , press 6 to access. Press 5 Sleep Timer item. or6 to select Press 3 the amount of the time; to turn off the timer, or4 to select please select Off. Note Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Off Off Off VIC GMT+10 Select Move MENU Exit ! You may directly press SLEEP button on the remote control to set sleep timer. ! After you have set sleep timer, when the last 30 seconds have come up, the Power Off screen will appear to remind you after how many seconds the TV will power off. You can press any button to quit.

Auto Sleep Setup When there is no signal input for a certain time, the unit will turn off automatically. Picture Sound Time Option Lock Channel 1 2 3 Navigate to the Time menu, press 6 to access. Press 5 Auto Sleep item. or6 to select Press 3 On or Off. or4 to select Clock Off Time On Time Sleep Timer Auto Sleep Time Zone 28/Sep /2008 15:30 Off Off Off On VIC GMT+10 Select Move MENU Exit 28 EPG Operation EPG The Electronic Programme Guide (EPG) makes it possible for users to see details about the programme they are watching, other programmes and even a schedule of the next 7 days.

The information available includes the number and name of the channel, the name and type of programme, the start and end time, and a summary. Thus viewers can easily select the programmes they want to see. Operation 1 2 Press the EPG button to open the EPG (Electronic Program Guide).



[You're reading an excerpt. Click here to read official SANYO](#)

[PDP-42XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241885>

In the EPG window (as shown on the right), several channels' current and upcoming program's information will be displayed. Press YELLOW button to highlight the date bar, use 3 the proper date, and then or4 to select press YELLOW button again to exit.

Use 5 navigate among the channels ,6 ,3 or4 to and program events, and press INFO button to get more detailed information (if available) about the programme you choose. If you want to switch between TV and Radio programmes, please press TV/Radio. PROGRAMME GUIDE 28 Jul 2008 15:03 DTV 7 7

Digital 70 7 HD Digital 71 7 Digital 1 72 7 Digital 2 73 7 Digital 3 15:00 BLUE HEELERS BLUE HEELERS BLUE HEELERS BLUE HEELERS BLUE HEELERS DTV 72 7 Digital 2 15:00 - 16:00 BLUE HEELERS 28 Jul 16:00 No information No information No information No information No information

EXIT Info TV/Radio OK DATE 3 Press OK to tune to the channel you have selected. To clear the EPG window, press EXIT button or EPG button. Note ! The EPG will only work when you are receiving digital channels. ! To enable EPG to work properly, it is suggested to set the appropriate time zone. 29 Teletext &

Subtitle Teletext What Is Teletext? Your System receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing.

News, weather and sports information, stock exchange prices and programme previews are among the many services available. To Turn On/Off Teletext

Select a TV channel providing the Teletext program. Press TTX button to display the teletext.

Press TTX button again to switch back to TV screen. Teletext control button list !5 /6 button Used to scroll page upward or downward. ! 0 9 button Directly select any page by using 0 9. ! Colored buttons (RED/GREEN/YELLOW/BLUE) Colored areas are displayed at the bottom of the screen. The 4 colored buttons are used to access the items or corresponding pages. ! @@This button is used to stop or resume sub-page acquisition. ! @@Press the button again to hide the information. ! @@@@Mix button Press the button to display the Teletext on the screen with transparent background while viewing the TV program simultaneously. ! Update button Press the button to view the updated teletext page. Subtitle When watching digital programs, press Subtitle button to display the subtitle.

! 2 If the program has subtitle, simply press Subtitle button to display subtitle. Press Subtitle again to cancel the subtitle. When watching analog programs, press this button to display the teletext subpage. 30 Screen Setup for D-SUB(PC) Mode Before adjusting the screen, make sure that you select the correct source (D-SUB). Screen Setup 1 2 3 4 5 Press MENU and the main menu screen displays.

Press 3 the Picture menu, press 6 menu. or4 to select to access the Within the menu, press 5 through the page upward or downward until you select the Screen or 6 to scroll item, then press 4 or OK to access. Press 5 navigate through the options or adjust an option. To confirm, press OK. ,6 ,3 ,4 to Press MENU to return to previous menu.

@@Vertical Pos. @@@@Moves the image on the screen left or right. Moves the image on the screen up or down. Adjust the horizontal width of the image on the screen. @@The Input Source menu opens. Press number buttons: [1, 4, 7] to access the Hotel Mode screen. Within the menu, press 5 navigate through the options ,6 ,3 ,4 to or adjust an option. Press OK to save the setting. Press MENU or EXIT to exit the menu screen directly. Hotel Mode Channel Preset Lock Volume Max AV Lock Panel Lock Press < OK > to save Off 100 Off Off Option Channel Preset Lock Description Press 3 On to lock the Channel menu and Lock Tuning item in Lock menu.

/4 to select Select Off to release. Press 3 maximum volume (30 -100) for the unit. /4 to set the Press 3 On to lock the input source of the unit to AV. /4 to select Select Off to return to normal operation. Note: When the item is set to On, the Channel menu and Lock Tuning item will be grayed out and unselectable.

Volume Max AV Lock Note: If AV Lock is set to On, options except AV in the Input Source menu will be grayed out and unselectable. Panel Lock Press 3 On or Off. /4 to select When the Panel Lock is set to On, buttons on the control panel on the main unit are not active. To restore, please set it to Off. Note ! When you press keys:[1, 4, 7] to call up Hotel Mode screen, please make sure to finish the inputting when the Input Source menu is still visible.

32 Troubleshooting If, after reading these operating instructions, you have additional questions related to the use of your television, please call the services center in your local area. Before calling service, please check the symptoms and follow suggested solutions. Remote Control Problem Remote control does not operate Possible Solutions ! The batteries could be weak. Replace the batteries. ! Check the orientation of the batteries.

! Make sure the power cord is plugged in. Video and Audio Problem No picture (screen not lit), No sound Possible Solutions ! Make sure the power cord is plugged in. ! Press POWER on the TV or on the remote control. ! Try another channel; it could be station trouble. ! Select a proper picture mode. ! Adjust the brightness in the video setting. ! Check the antenna connections. ! Adjust the color saturation in the video setting. ! Check the antenna connections. ! Try another channel; it could be station trouble. ! Adjust the antenna. ! Move the TV away from noise sources such as cars, neon signs, or hair dryers. ! Using a highly directional outdoor antenna or a cable may solve the problem. ! The sound may be muted. Press MUTE again to cancel.

! Make sure the stereo mode is set to stereo or mono. ! Communication problems may occur if infrared communication equipment (e.g., infrared cordless headphones) is used near the TV. Move the infrared communication equipment away from the TV until the noise is eliminated. Dark, poor or no picture (Screen lit), good sound No color/dark picture/color is not correct Only snow and noise appear on the screen Dotted lines or stripes Double images Good picture, no sound Audio noise 33 Troubleshooting General Problem One or some channels can't be displayed Possible Solutions ! These channels may be locked. Please unlock them (see <Rating and Lock Setup> section). ! These channels may be set skipped in the channel list. You may set it to not skipped or select them with 0-9 number buttons. Lost password Some items can't be accessed TV cabinet creaks ! You may use the super password (2580).

! If a setting option appears in gray, this indicates that the settings option is unavailable in current input mode. ! When the TV is in use, there is a natural rise in temperature, causing the cabinet to expand or contract and may be accompanied by a slight creaking noise. This is not a malfunction. Some settings (such as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.

as volume setting, etc.



[You're reading an excerpt. Click here to read official SANYO](#)

[PDP-42XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241885>

)may not be memorized when the TV loses power or you press main Power Switch to turn off the TV.

Control buttons do not operate ! After you make some settings or adjustments, and within 30 seconds you turn off the TV by main Power Switch or the TV loses power, then the settings you have made within 30 seconds may not be memorized. But you can use Power button to switch the TV to standby mode before cutting off the power, then the settings can be memorized. ! Disconnect the power cord and wait for a few seconds. Then re-plug the power cord and turn on the unit again. Note If your problem is not solved, turn your unit off and then on again.

Cautions: Never attempt to repair a defective TV yourself. 34 Specifications Type: Display Size diagonal: Power Supply: Power Consumption: Dimensions(mm): Unit Weight(kg): TV System: PDP TV 42" (106cm) AC220-240V 50/60Hz 250W 1045 (W) x 763(H) x 326(D) 31 Analogue: CCIR(PAL-B/G, NTSC(AV)) Digital: DVB-T(2K/8K OFDM) Note ! Design and specifications are subject to change without notice. 35 5944035300 Ver. 1.0 .



[You're reading an excerpt. Click here to read official SANYO](#)

[PDP-42XR9DA user guide](#)

<http://yourpdfguides.com/dref/3241885>