




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO PLC-XU106. You'll find the answers to all your questions on the SANYO PLC-XU106 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO PLC-XU106
User guide SANYO PLC-XU106
Operating instructions SANYO PLC-XU106
Instructions for use SANYO PLC-XU106
Instruction manual SANYO PLC-XU106

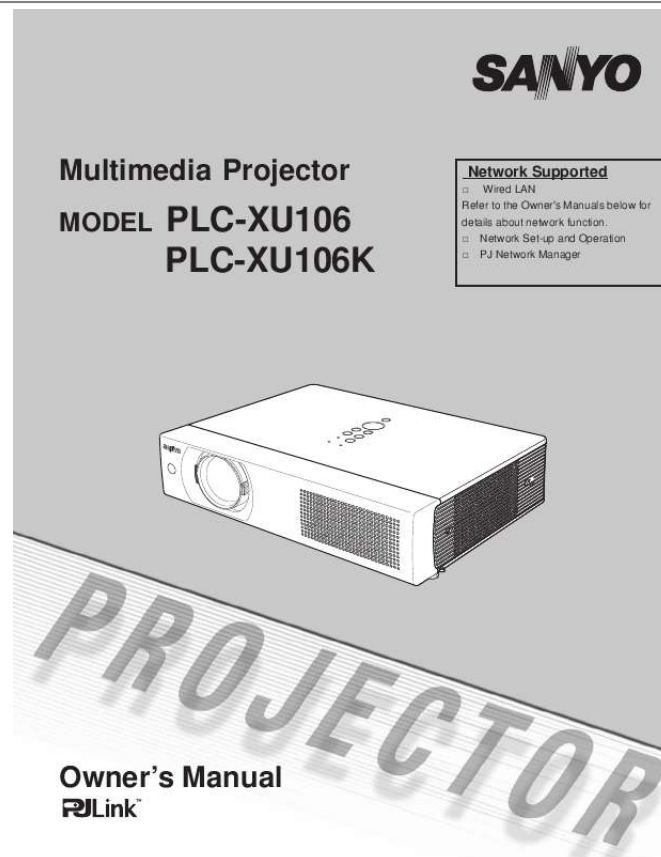

[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>

Manual abstract:

20,55-56). *Helpful Maintenance Functions* Lamp and filter maintenance functions provide for better and proper maintenance of the projector. Capable of 360-degree Projection This projector is capable of 360-degree projection. *Simple Computer System Setting* The projector has the Multi-scans system to conform to almost all computer output signals quickly (p.31). Upto WUXGA resolution can be accepted. *LAN Network Function* This projector is loaded with the Wired LAN network function. You can operate and manage the projector via network. For details, refer to the owner's manual "Network Set-up and Operation." *Useful Functions for Presentations* *Auto Setup Function* This function enables Input search, Auto Keystone correction and Auto PC adjustment by simply pressing the AUTO SETUP button on the top control (p.

47). -The digital zoom function allows you to focus on the crucial information during a presentation (p.38). -Blackboards* can be used as a projection screen. *The board color is limited to Green (pp.

35,42). *Colorboard Function* At the time of simple projection on the colored wall, you can get the close color image to the color image projected on a white screen by selecting the similar color to the wall color from the preset four colors. *Lamp Control* Brightness of the projection lamp can be selected (pp.27,54). *Quick Termination Power Management* The Power management function reduces power consumption and maintains the lamp life (p.

52). *The AC power cord* can be unplugged immediately after turning off the projector without waiting for the termination of the cooling fan rotation (p.21). *Logo Function* The Logo function allows you to customize the screen logo (pp.49-51). You can capture an image for the screen logo and use it for the starting-up display or between presentations. *Closed Caption* This is a printed version of the program sound or other information displayed on the screen. You can turn on the feature and switch the channels (p.53). With the "Horizontal and vertical keystone correction function" and "Corner keystone correction function" of this projector, you can correct the keystone distortion even when projecting from the diagonal to the screen (pp.

25,48). *Corner Correction* *Multilanguage Menu Display* Operation menu is available in 17 languages; English, German, French, Italian, Spanish, Portuguese, Dutch, Swedish, Finnish, Polish, Hungarian, Romanian, Russian, Chinese, Korean, Japanese and Thai (p.46). *Security Function* The Security function helps you to ensure security of the projector. With the Key lock function, you can Note: -The On-Screen Menu and figures in this manual may differ slightly from the product. -The contents of this manual are subject to change without notice. *Table of Contents Features and Design . . .*

.....
.....
..... Table of Contents

.....
.....
..... 3 To the Owner . . .

.....
.....
..... 4 Safety Instructions . .

..... 5 Air Circulation Moving the Projector Installing the Projector in Proper Directions 6 6 7 Computer System Selection Auto PC adjustment Manual PC adjustment Image Mode Selection Image Adjustment Screen Size Adjustment Input Source Selection (Video, S-video) Input Source Selection (Component, RGB Scart 21-pin) Video System Selection Image Mode Selection Image Adjustment Screen Size Adjustment Setting Input Source Information Display WARNING indicator Cleaning the Filters Resetting the Filter Counter Attaching the Lens Cap Cleaning the Projection Lens Cleaning the Projector Cabinet Lamp Replacement Resetting the Lamp Counter Troubleshooting Menu Tree Indicators and Projector Condition Compatible Computer Specifications Technical Specifications Optional Parts P-Link Notice Configurations of Terminals PIN Code Number Memo Dimensions 31 32 33 35 36 37 39 40 41 42 43 45 46 59 60 61 61 62 62 62 63 64 65 69 71 72 73 74 75 76 77 78 Video Input

.....
.....
..... 39 Compliance

.....
.....
..... 8 Part Names and Functions . . .

.....
.....
..... 9 Front Back Bottom Rear Terminal Top Control Remote Control Remote Control Battery Installation Remote Control Operating Range Remote Control Code Positioning the Projector Adjustable Feet Connecting to a Computer Connecting to Video Equipment Connecting to Component Video Equipment Connecting the AC Power Cord Turning On the Projector Turning Off the Projector How to Operate the On-Screen Menu Menu Bar Zoom and Focus Adjustment Auto Setup Function Keystone Correction Sound Adjustment Remote Control Operation Input Source Selection (Computer 1: RGB) Input Source Selection (Computer 2: RGB) 9 9 9 10 11 12 13 13 14 14 15 16 17 18 19 21 22 23 24 24 25 26 27 29 30 Setting . . .

.....
.....
..... 46 Information . . .

.....59 Maintenance and Cleaning . . .

.....
.....

60 Installation

.....
.....

. .14 Basic Operation . . .

.....

.....19 Appendix .

.....
.....
.....

.....65 Computer Input

.....
.....

.....9 Trademarks Each name of corporations or products in this book is either a registered trademark or a trademark of its respective corporation. 3 To the Owner Before installing and operating this projector, read this manual thoroughly.

This projector provides many convenient features and functions. Operating the projector properly enables you to manage those features and maintain in good condition for many years to come. Improper operation may result in not only shortening the product-life, but also malfunctions, fire hazard, or other accidents. If your projector seem to operate improperly, read this manual again, check operations and cable connections and try the solutions in the "Troubleshooting" section in the back of this manual. If the problem still persists, contact the dealer where you purchased the projector or the service center. Safety Precaution WARNING: THIS APPARATUS MUST BE EARTHED . TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE . CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) . NO USER-SERVICEABLE PARTS INSIDE EXCEPT LAMP REPLACEMENT . REFER SERVICING TO QUALIFIED SERVICE PERSONNEL .

This projector produces intense light from the projection T lens. Do not stare directly into the lens, otherwise eye damage could result. Be especially careful that children do not stare directly into the beam. Install the projector in a proper position. Otherwise it may result in fire hazard. Allowing the proper amount of space on the top, sides, A and rear of the projector cabinet is critical for proper air circulation and cooling of the unit. The dimension shown here indicate the minimum space required. If the projector is to be built into a compartment or similarly enclosed, these minimum distances must be maintained. Do not cover the ventilation slot on the projector. Heat build-up can reduce the service life of your projector, and can also be dangerous.



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)
<http://yourpdfguides.com/dref/3241928>

SIDE and TOP 0.7"(20cm) REAR THIS SYMBOL INDICATES THAT DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITH THIS UNIT. THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE OWNER'S MANUAL WITH THIS UNIT. 1.5"(50cm) 3"(1m) 3"(1m) FORE USERS The symbol mark and recycling systems described below apply to EU countries and do not apply to countries in other areas of the world. Your product is designed and manufactured with high quality materials and components which can be recycled and/or reused. The symbol mark means that electrical and electronic equipment, batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste. Note: If a chemical symbol is printed beneath the symbol mark, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows: Hg: mercury, Cd: cadmium, Pb: lead. In the European Union there are separate collection systems for used electrical and electronic equipment, batteries and accumulators. Please, dispose of them correctly at your local community waste collection/recycling centre.

Please, help us to conserve the environment we live in! If the projector is unused for an extended time, unplug it from the power outlet. Do not project the same image for a long time. The afterimage may remain on the LCD panels by the characteristic of panel. 50cm 1m 1m **CAUTION DO NOT SET THE PROJECTOR IN GREASY, WET, OR SMOKY CONDITIONS SUCH AS IN A KITCHEN TO PREVENT A BREAKDOWN OR A DISASTER. IF THE PROJECTOR COMES IN CONTACT WITH OIL OR CHEMICALS, IT MAY BECOME DETERIORATED. CAUTION**

Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer/Data Processing Equipment, ANSI/NFPA 75. **READ AND KEEP THIS OWNER'S MANUAL FOR LATER USE.** 4 Safety Instructions All the safety and operating instructions should be read before the product is operated. Read all of the instructions given here and retain them for later use. Unplug this projector from AC power supply before cleaning.

Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. Follow all warnings and instructions marked on the projector. For added protection to the projector during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage due to lightning and power line surges.

Do not install the projector near the ventilation duct of air-conditioning equipment. This projector should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized dealer or local power company.

Do not overload wall outlets and extension cords as this can result in fire or electric shock. Do not allow anything to rest on the power cord.

Do not locate this projector where the cord may be damaged by persons walking on it. Do not attempt to service this projector yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Unplug this projector from wall outlet and refer servicing to qualified service personnel under the following conditions:

a. When the power cord or plug is damaged or frayed. b. If liquid has been spilled into the projector. c. If the projector has been exposed to rain or water. d.

If the projector does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the projector to normal operation. e. If the projector has been dropped or the cabinet has been damaged. f. When the projector exhibits a distinct change in performance - this indicates a need for service. When replacement parts are required, be sure the service technician has used replacement parts specified

by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or injury to persons. Upon completion of any service or repairs to this projector, ask the service technician to perform routine safety checks to determine that the projector is in safe operating condition. **NOTE FOR CUSTOMERS IN THE US Hg LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.**

Do not expose this unit to rain or use near water... for example, in a wet basement, near a swimming pool, etc..

Do not use attachments not recommended by the manufacturer as they may cause hazards. Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious injury to a child or adult, and serious damage to the projector. Use only with a cart or stand recommended by the manufacturer, or sold with the projector.

Wall or shelf mounting should follow the manufacturer's instructions, a Precautions Avoid positioning the projector as described below when installing. 10°

Do not roll the projector more than 10 degrees from side to side. 10° Do not put the projector on either side to project an image. 10° 10°

In upward projection, do not tilt the projector over 10 degrees right and left. In downward projection, do not tilt the projector over 10 degrees right and left. 10° 10° Compliance Federal Communications Commission Notice Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
a. reorient or relocate the receiving antenna.

b. increase the separation between the equipment and receiver. c. connect the equipment into an outlet on a circuit different from that to which the receiver is connected. d. consult the dealer or an experienced radio/TV technician for help. e. Use of shielded cables is required to comply with class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the instructions. If

such changes or modifications should be made, you could be required to stop operation of the equipment. Model Number : PLC-XU106 Trade Name : Sanyo

Responsible party : SANYO NORTH AMERICA CORPORATION Address : 21605 Plummer Street, Chatsworth, California 91311 Telephone No. : (818) 998-7322 AC Power Cord Requirement The AC Power Cords supplied with this projector meet the requirement for use in the country you purchased it. AC Power Cord for the United States and Canada: AC Power Cord used in the United States and Canada is listed by the Underwriters

Laboratories (UL) and certified by the Canadian Standard Association (CSA).



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>

AC Power Cord has a grounding-type AC line plug.

This is a safety feature to be sure that the plug will fit into the power outlet. Do not try to defeat this safety feature. Should you be unable to insert the plug into the outlet, contact your electrician. GROUND AC Power Cord for the United Kingdom:

This cord is already fitted with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced, an ASTA approved BS1362 fuse must be used of the same rating, marked thus .

If the fuse cover is detachable, never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug (i.e. red or orange). Fuse covers are available from the Parts Department indicated in your User Instructions.

If the plugs supplied is not suitable for your socket outlet, it should be cut off and destroyed. The end of the flexible cord should be suitably prepared and the correct plug fitted.

WARNING : A PLUG WITH BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED IN A LIVE SOCKET OUTLET .

The Wires in this mains lead are coloured in accordance with the following code: Green-and-yellow Earth Blue

. . . . Neutral Brown

. . . Live As the colour of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows: The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured green or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. WARNING: THIS APPARATUS MUST BE EARTHED . ASA THE SOCKET-OUTLET SHOULD BE INSTALLED NEAR THE EQUIPMENT AND EASILY ACCESSIBLE . 8 Part Names and Functions Front Infrared Remote Receiver Focus Ring Projection Lens Zoom Lever Lens Cap (See page 62 for attaching.) CAUTION Do not turn on a projector with lens cap attached.

High temperature from light beam may damage lens cap and result in fire hazard. Top Controls and Indicators Air Intake Vent Exhaust vent Back CAUTION Hot air is exhausted from the exhaust vent. Do not put heat-sensitive objects near this side. Speaker Air Intake Vent (back and bottom) Terminals and Connectors Power Cord Connector LAN Connection Terminal Lamp Cover Filters Adjustable Feet Bottom Note: LAN Connection Terminal is for the Network function. Refer to the owner's manual of "Network Set-up and Operation". Kensington Security Slot This slot is for a Kensington lock used to deter theft of the projector. *Kensington is a registered trademark of ACCO Brands Corporation. 9 Part Names and Functions Rear Terminal CONTROL PORT When the projector is controlled by a computer, connect to this jack with serial control cable. COMPUTER IN 1 / COMPONENT IN Connect output signal from a computer, RGB scart 21-pin video output or component video output to this terminal (pp.15,17).

MONITOR OUT This terminal can be used to output the incoming RGB signal from COMPUTER IN 1/COMPONENT IN terminal or COMPUTER IN 2 to the other monitor (pp.15,17). COMPUTER IN Connect computer output to this terminal (p.15). LAN Connection Terminal Connect the LAN cable (refer to the owner's manual of "Network Set-up and Operation"). S-VIDEO IN Connect the S-VIDEO output signal from video equipment to this jack (p.16). AUDIO OUT (VARIABLE) Connect an external audio amplifier to this jack (pp.15-17). This terminal outputs sound from AUDIO IN terminal (or).

COMPUTER 1 (COMPONENT) / COMPUTER AUDIO IN Connect the audio output (stereo) from a computer or video equipment connected to or to this jack (pp.15,17). AUDIO IN Connect the audio output signal from video equipment connected to or to this jack. For a mono audio signal (a single audio jack), connect to the L(MONO) jack (p.16).

VIDEO IN Connect the composite video output signal to this jack (p.16). 10 Part Names and Functions Top Control LAMP REPLACE indicator WARNING indicator Lights yellow when the projection lamp reaches its life end (pp.57,63). condition. Blinks red when the internal temperature of the ON/STAND-By button projector exceeds the operating range (pp.60,71). Turn the projector on or off (pp.19-21). POWER indicator INPUT button Lights red when the projector is in stand-by mode. Select an input source (pp.29-30,39-40). Lights green during operations. - Blinks green in the Power management mode (p.52).

KEYSTONE button Correct Standard (for Vertical/Horizontal AUTO SETUP button adjustment) or Corner keystone distortion (pp.25, ExecutethesettingofAutosetup(includes 48). Input search, Auto PC adj. and Auto Keystone functions) in the setting menu. (pp.24,47). POINT (VOLUME +/-) buttons - Select an item or adjust the value in the On-Screen MENU button Menu (p.22). Open or close the On-Screen Menu (p.22).

Panthe image in the Digital zoom +/- mode (p.38). Adjust the volume level (Point buttons) (p.26). SELECT button Executetheselecteditem(p.22). Expand or compress the image in the Digital zoom mode (p.38). 11 Part Names and Functions Remote Control ON/STAND-By button Turn the projector on or off. (pp.

19-21) AUTO SET button ExecutethesettingofAutosetup(includesInputsearchfunction,AutoPCadj.functionandAutoKeystonefunction). (pp.24,47) COMPUTER 1 / buttons Select the COMPUTER 1 or COMPUTER 2 input source. (pp.29-30,40) VIDEO button Select the VIDEO input source. (p.39) S-VIDEO button Select the S-VIDEO input source. (p.39) Point buttons Select an item or adjust the value in the On-Screen Menu.

(p.22) Panthe image in the Digital zoom +/- mode. (p.38) SCREEN button Select a screen mode. (pp.28,37-38,45) MENU button Open or close the On-Screen Menu. (p.22) FREEZE button Freeze the picture on the screen. (p.27) NO SHOW button Temporarily turn off the image on the screen.

(p.28) D . ZOOM buttons Zoom in and out the images. (pp.27,38) VOLUME +/- buttons Adjust the volume level.

(p.26) Note: To ensure safe operation, please observe the following precautions: Do not bend, drop, or expose the remote control to moisture or heat. - For cleaning, use soft dry cloth. Do not apply benzene, thinner, spray, or any chemical material. MUTE button Mute the sound.

(p.26) IMAGE button Select the image mode. (pp.28,35,42) P-TIMER button Operate the P-timer function. (p.28) LAMP button Select a lamp mode. (pp.27,54) INFO . button Operate the information function. (p.

59) KEYSTONE button Correct Standard (for Vertical/Horizontal adjustment) or Corner keystone distortion (pp.25,48). SELECT button - Executetheselecteditem.(p.22) Expand or compress the image in Digital zoom mode. (p.38) COMPONENT button Select the COMPONENT input source. (p.40) 1 Part Names and Functions Remote Control Battery Installation 1 Open the battery compartment lid. Install new batteries into the compartment. 3 Replace the compartment lid. Two AAA size batteries For correct polarity (+ and), be sure battery terminals are in contact with pins in compartment. To ensure safe operation, please observe the following precautions: Use two (2) AAA or LR03 type alkaline batteries. Always replace batteries in sets.



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)
<http://yourpdfguides.com/dref/3241928>

Do not use a new battery with a used battery.

Avoid contact with water or liquid. Do not expose the remote control to moisture or heat. Do not drop the remote control.

If the battery has leaked on the remote control, carefully wipe the case clean and install new batteries. Risk of an explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions or your local disposal rule or guidelines. Remote Control Operating Range Point the remote control toward the projector (Infrared Remote Receiver) when pressing the buttons. Maximum operating range for the remote control is about 16.4'(5 m) and 60 degrees in front of the projector. 16.4' (5m) 30° 30° Remote control Remote Control Code The 2 different remote control codes (Code 1-Code 2) are assigned to this projector. Switching the remote control codes prevents interference from other remote controls when several projectors or video equipment next to each other are operated at the same time. Change the remote control code for the projector first before changing that for the remote control. See "Remote control" in the Setting Menu on page 54. Press and hold the MENU and IMAGE buttons for more than five seconds to switch between the Code 1 and Code 2.

The initial code is set to Code 1. While pressing the MENU button, press the IMAGE button more than five seconds to switch between the codes. MENU button IMAGE button 13 Installation Positioning the Projector For projector positioning, see the figures below. The projector should be set perpendicular to the plane of the screen.

Note: The brightness in the room has a great influence on picture quality. It is recommended to limit ambient lighting in order to obtain the best image.

All measurements are approximate and may vary from the actual sizes. A B 9 1 37.4' (11.4 m) 23.

6' (7.2 m) 15.7' (4.8 m) 11.8' (3.

6 m) 7.9' (2.4 m) 3.0' (0.9 m) 100" 40" 95" 64" B 150" 126" 200" 300" Max.

Zoom 300" Min. Zoom 189" A Screen Size (W x H) mm 4 : 3 aspect ratio 40" 813 x 610 4.9' (1.5m) 3.0' (0.9m) 100" 2032 x 1524 12.5' (3.8 m) 7.9' (2.4 m) 150" 3048 x 2286 18.

7' (5.7 m) 11.8' (3.6 m) 200" 4064 x 3048 24.9' (7.6 m) 15.7' (4.8 m) 300" 6096 x 4572 37.4' (11.4m) 23.

6' (7.2 m) Zoom (min) Zoom (max) Adjustable Feet Projection angle can be adjusted up to 8.9 degrees with the adjustable feet.

Lift the front of the projector and press the feet lock latches on both sides of the projector. Release the feet lock latches to lock the adjustable feet and rotate the adjustable feet to a proper height, and tilt.

Keystone distortion can be adjusted automatically with the Auto setup function or manually by using the remote control or the menu operation (pp.24-25,47-48).

Adjustable Feet Feet Lock Latches 14 Installation Connecting to a Computer Cables used for connection -VGA cables (MiniD-sub15pin)* -Audiocables (*One cable is supplied; other cables are not supplied with the projector.) Audio Output Monitor Output Monitor Input Monitor Output External Audio Equipment VGA cable Audiocable (stereo) VGA cable VGA cable Audio Input COMPUTER IN1/ MONITOR COMPUTER COMPONENT IN2 OUT Audiocable (stereo) AUDIO OUT (stereo) COMPUTER IN 1 (COMPONENT) /COMPUTER IN 2 AUDIO IN Note: -Inputs sound to the COMPUTER 1 (COMPONENT)/COMPUTER 2 AUDIO IN terminal when using the COMPUTER IN1/ COMPONENT IN terminal or the COMPUTER IN 2 as input. -When the AUDIO OUT is plugged-in, the projector's built-in speaker is not available.

Unplug the power cords of both the projector and external equipment from the AC outlet before connecting cables. 15 Installation Connecting to Video Equipment Cables used for connection -Video and Audiocable (RCA x3) -S-video cable -Audiocable (Cables are not supplied with the projector.)

External Audio Equipment Video and Audio Output (Video) (L) (R) Audio Input S-video Output Video and audiocable Audiocable (stereo) S-video cable VIDEO AUDIO IN AUDIO OUT (stereo) S-VIDEO IN Note: -When the AUDIO OUT is plugged-in, the projector's built-in speaker is not available. Unplug the power cords of both the projector and external equipment from the AC outlet before connecting cables. 16 Installation Connecting to Component Video Equipment Cables used for connection -Audiocables -Scart-VGA cable -Component cable -Component-VGA cable (Cables are not supplied with this projector.) RGB Scart 21 pin Output Component Video Output (Y, Pb/Cb, Pr/Cr) Audio Output Component cable Scart-VGA cable Component VGA cable Audiocable (stereo)

External Audio Equipment COMPUTER IN1/COMPONENT IN COMPUTER IN1 (COMPONENT) AUDIO IN Audio Input Audiocable (stereo) AUDIO OUT (stereo) Note: -When the AUDIO OUT is plugged-in, the projector's built-in speaker is not available. -See page 74 for ordering optional cables. Unplug the power cords of both the projector and external equipment from the AC outlet before connecting cables. 1 Installation Connecting the AC Power Cord This projector uses nominal input voltages of 100-120 V or 200-240 VAC and it automatically selects the correct input voltage. It is designed to work with single-phase power systems having a grounded neutral conductor.

To reduce the risk of electrical shock, do not plug into any other type of power system. If you are not sure of the type of power being supplied, consult your authorized dealer or service station. Connect the projector with all peripheral equipment before turning the projector on. Connect the AC power cord (supplied) to the projector. CAUTION The AC outlet must be near this equipment and must be easily accessible. Note:

Unplug the AC power cord when the projector is not in use. When this projector is connected to an outlet with the AC power cord, it is in Stand-by mode and consumes a little electric power. NOTE ON THE POWER CORD AC power cord must meet requirement of the country where you use the projector.

Confirm the AC plug type with the chart below and proper AC power cord must be used. If supplied AC power cord does not match your AC outlet, contact your sales dealer.

Projector side For the U.S.A. and Canada Ground AC outlet side For Continental Europe For the U.K.

Top power cord connector on your projector. To the AC outlet. (10 V AC) To the AC outlet. (00 - 40 V AC) To the AC outlet. (00 - 40 V AC) 18 Basic Operation Turning On the Projector 1 3 Complete peripheral connections (with a computer, VCR, etc.)

) before returning on the projector. Connect the projector's AC power cord into an AC outlet. The POWER indicator lights red. Open the lens cap (see pages 9, 62).

Press the ON/STAND-BY button on the top control or on the remote control. The POWER indicator lights green and the cooling fans start to operate. The preparation display appears on the screen and the countdown starts. After the countdown, the input source that was selected the last time and the lamp control status icon (see page 54) appear on the screen. If there is no signal input when start on the projector, or the current signal is missed while operating the projector, the Video/PC selection window will be displayed on the screen, please move the pointer to input source desired by pressing the Point buttons and press the SELECT button.



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>

And then follow the input signal guidance window to correct the signal and connection.

If the projector is locked with a PIN code, PIN code input dialog box will appear. Enter the PIN code as instructed on the next page. 16
The preparation display will disappear after 30 seconds. Selected Input Source and Lamp Control Video 4 5 Lamp control status
(See page 54 for Lamp control status.) Note: The Filter warning and Lamp replacement icons may appear on the screen depending on the usage state of the projector. Video
/ PC selection window Project Video Project Computer Cancel Input signal guidance window No signal Current Input setting: Video Is signal processed
correctly? Is cable connected properly? Video / PC selection window Project Video Project Computer Cancel Note:
· When the Logo select function is set to Off, the logo will not be shown on the screen. (p.49) · When Countdown off or Off is selected in the Display
function, the countdown will not be shown on the screen. (p.48) · During the countdown period, all operations are invalid.
· When the Input search function is set to On, the input signal will be searched automatically. (p.47) · When Off is selected in the Display function, the Video / PC
selection window and the input signal guidance window are not shown on the screen. (p.48) Input signal guidance window No signal Current Input setting: RGB Is
signal processed correctly? Is cable connected properly? 19 Basic Operation Enter a PIN code Use the Point buttons to enter a number.
Press the Point button to fix the number and move the red frame pointer to the next box. The number changes to . If you fixed an incorrect number, use the
Point button to move the pointer to the number you want to correct, and then enter the correct number. Repeat this step to complete entering a four-digit number.
After entering the four-digit number, move the pointer to Set.
Press the SELECT button so that you can start to operate the projector. If you entered an incorrect PIN code, PIN code and the number () will turn red for a
moment. Enter the correct PIN code all over again. PIN Code Input Dialog Box After the OK icon disappears, you can operate the projector. What is PIN code? PIN
(Personal Identification Number) code is a security code that allows the person who knows it to operate the projector. Setting a PIN code prevents
unauthorized use of the projector. A PIN code consists of a four-digit number. Refer to the PIN code lock function in the Setting Menu on pages 55-56 for
locking operation of the projector with your PIN code. CAUTION ON HANDLING PIN CODE If you forget your PIN code, the projector cannot longer be started. Take
a special care in setting a new PIN code; write down the number in a column on page 77 of this manual and keep it on hand.

Should the PIN code be missing or forgotten, consult your dealer or service center. Note: · If the PIN code number is not entered within three minutes after the PIN
code dialog box appeared, the projector will be turned off automatically. · The "1234" is set as the initial PIN code at the factory. 0 Basic Operation Turning Off the
Projector 1 Press the ON/STAND-BY button on the top control or on the remote control, and Power off? appears on the screen. Press the ON/STAND-BY button
again to turn off the projector. The POWER indicator starts to blink red, and the cooling fans keep running. (You can select the level
of fans' quietness and speed. See "Fan" on page 57.) At this time, you can unplug the AC power cord even if the fans are still running. When the projector has cooled down
enough, the POWER indicator stops blinking and you can turn on the projector.

Power off? disappears after 4 seconds. 3 TO MAINTAIN THE LIFE OF THE LAMP, ONCE YOU TURN THE PROJECTOR ON, WAIT AT LEAST FIVE
MINUTES BEFORE TURNING IT OFF. DO NOT OPERATE THE PROJECTOR CONTINUOUSLY WITHOUT REST. CONTINUOUS USE MAY RESULT IN
SHORTENING THE LAMP LIFE. TURN OFF THE PROJECTOR AND LET STAND FOR ABOUT AN HOUR IN EVERY 24 HOURS.

Note: · When the On start function is set to On, the projector will be turned on automatically by connecting the AC power cord to an AC outlet. (p.53)
· The running speed of cooling fans is changed according to the temperature inside the projector. · Do not put the projector in a case before the projector is cooled enough.
· If the WARNING indicator blinks or lights red, see "WARNING indicator" on page 60.
· While the POWER indicator is blinking, the lamp is being cooled down and the projector cannot be turned on. Wait until the POWER indicator stops blinking to turn on
the projector again. · The fan rotation will terminate directly if the AC power cord is unplugged immediately after the projector is turned off. · The projector can
be turned on after the POWER indicator turns red. The waiting time to restart will be shortened when the normal power-off processing for fan cooling is
completed, compared with the time the AC power cord is immediately unplugged after the power off. 1 Basic Operation How to Operate the On-Screen Menu
The projector can be adjusted or set via the On-Screen Menu. The menus have a hierarchical structure, with a main menu that is divided into submenus,
which are further divided into other submenus. For each adjustment and setting procedure, refer to respective sections in this manual. Top Control MENU
button POINT buttons (arrowhead) 1 Press the MENU button on the top control or the remote control to display the On-Screen Menu. Use the Point buttons to
highlight and select a main menu item.

Press the Point or the SELECT button to access the submenu items. (The selected item is highlighted in ORANGE.) SELECT button Remote Control POINT
buttons (arrowhead) SELECT button 3 4 5 Use the Point button to select the desired submenu item and press the SELECT button to set or access the selected item.
Use the Point button to adjust the setting or switch between each option and press the SELECT button to activate it and return to the submenu.
Press the Point button to return to the main menu. Press the MENU button to exit the On-Screen Menu. MENU button On-Screen Menu Point or SELECT button
The currently set item is checkmarked. The selected item is highlighted in ORANGE. Basic Operation Menu Bar
For detailed functions of each menu, see "Menu Tree" on pages 69-70. Main Menu Input Sub-Menu Used to select an input source from Computer 1, Computer, Video or S-

video.
(pp.29-30,39-40) PC adjust Select Auto PC adj., Fine sync, Total dots, Horizontal, Vertical, Clamp, Display area Hand Display area Vio adjust
the parameter to match with the PC input signal format. (pp.32-34) Image select
For computer source, used to select an image mode from among Dynamic, Standard, Real, Blackboard (Green), Color board and Image 1 - 4.
(p.35) For Video source, used to select an image mode from among Dynamic, Standard, Cinema, Blackboard (Green), Color board and Image 1 - 4. (p.42) Image adjust
For computer source, used to adjust computer image [Contrast, Brightness, Color temp., white balance (R/G/B), Sharpness and Gamma].
(pp.36-37) For Video source, used to adjust picture image [Contrast, Brightness, Color, Tint, Color temp., white balance (R/G/B), Sharpness, Gamma, Noise reduction
and Progressive]. (pp.43-44) Screen For computer source, used to adjust size of the image [Normal, True, wide, Full, Custom and Digital zoom +/].



[You're reading an excerpt. Click here to read official SANYO PLC-](http://yourpdfguides.com/dref/3241928)

[XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>

(pp.37-38) For Videosource, used to set size of image [Normal, wide and Custom]. (p.45) Sound Used to adjust the volume or mute the sound. (p.

26) Setting Used to set the projector's operating configurations. (pp.46-58) Information Display the input source information: Input, H-sync freq., V-sync freq., Screen, Language, Lamp status, Lamp counter, Power management, Key lock, PIN code lock and Remote control. (p.59) Network See owner's manual of "Network Set-up and Operation". Guide The key operation is displayed. 3 Basic Operation Zoom and Focus Adjustment

Rotate the Zoom Lever to zoom in and out. Rotate the Focus Ring to adjust the focus of the image.

Zoom Lever Focus Ring Auto Setup Function Auto setup function is provided to automatically execute the setting of Auto setup (includes Input search, Auto PC adj. and Auto keystone functions) in the Setting Menu by just pressing the AUTOSETUP button on the top control or the AUTOSET button on the remote control. Refert to page 47 for the setting of the Auto setup function. Top Control AUTO SETUP button Note: Auto Keystone corrects vertical distortion only; it does not correct horizontal distortion. Auto Keystone cannot work when Ceiling feature is set to On in the Setting Menu. (p.52) Perfect correction of the image distortion cannot be ensured with the Auto setup function. If the distortion cannot be corrected properly by pressing the AUTOSETUP or AUTO SET button, adjust manually by pressing the KEYSTONE button on the top control or on the remote control or selecting Keystone in the Setting Menu. (p.48) Fine sync, Total dots, Horizontal and Vertical position of some computers cannot be fully adjusted with the Auto PC adjustment function.

When the image is not provided properly with this operation, manual adjustments are required. (pp.33-34) Remote Control AUTO SET button 4 Basic Operation Keystone Correction If a projected picture still has keystone distortion after pressing the AUTOSETUP button on the top control or the AUTOSET button on the remote control, correct the image manually as follows: Press the KEYSTONE button on the top control or on the remote control to switch the Standard (for Vertical/ Horizontal)/ Corner adjustment. The Standard or Corner adjustment dialog box appears. Use the Point buttons to correct the Standard or Corner distortion. The Standard or Corner adjustment can be stored (see page 48). Top Control AUTO SETUP button KEYSTONE button POINT buttons Remote Control AUTO SET button Standard POINT buttons Reduce the lower width with the Point button. Reduce the upper width with the Point button. KEYSTONE button Note: The white arrows indicate that there is no correction. A red arrow indicates the direction of correction.

An arrow disappears at the maximum correction. If you press and hold the KEYSTONE button for more than 3 seconds while the Standard or Corner dialog box is being displayed, the Standard or Corner correction will be released. The Corner pattern can be set to Off, Red, white or Blue in the Corner pattern function. See "Keystone" on page 48. The adjustable range is limited depending on the input signal. Standard and Corner functions cannot be adjusted at the same time. If one of the functions is adjusted, and then the other one will be reset automatically. The corner keystone function may be canceled when you set the Auto keystone function to Auto or Manual. To avoid this, it is recommended to set the Auto keystone function to Off while the corner keystone function is activated. Reduce the right part with Point button. Corner Press the KEYSTONE button on the top control or on the remote control to switch Corner adjustment, press the SELECT button on the remote control to select the corner you want to adjust. Reduce the top left corner part with the Point buttons. Reduce the top right corner part with the Point buttons. The top left corner adjustment as an example: Press the Point button Keystone Keystone Press the SELECT button Keystone Keystone Press the SELECT button Press the SELECT button Keystone Press the SELECT button Keystone Keystone Press the Point button Reduce the bottom left corner part with the Point buttons.

Reduce the bottom right corner part with the Point buttons. 5 Basic Operation Sound Adjustment Direct Operation Volume Press the VOLUME +/- buttons on the top control or on the remote control to adjust the volume. The volume dialog box appears on the screen for a few seconds. Top Control VOLUME +/- buttons Mute Press the MUTE button on the remote control to select On to temporarily turn off the sound. To turn the sound back on, press the MUTE button again to select Off for press the VOLUME +/- buttons.

The Mute function is also effective for the AUDIO OUT jack. Remote Control VOLUME +/- button MUTE button VOLUME - button Menu Operation 1 Press the MENU button to display the On-Screen Menu. Use the Point buttons to select Sound. Press the Point or the SELECT button to access the submenu items. Use the Point buttons to select the desired submenu item and press the SELECT button to access the selected item. Volume Dialog Box Approximate level of the volume. Volume Press the Point button to turn up the volume; press the Point button to turn down the volume. Mute Press the SELECT button to switch the Mute function On/ Off. When the sound is turned off, On is displayed. Press the VOLUME +/- buttons again to turn the sound back on.

Press the MUTE button to set the Mute function On or Off. The dialog box disappears after 4 seconds. Sound Menu 6 Basic Operation Remote Control Operation Using the remote control for some frequently used operations is advisable. Just pressing one of the buttons enables you to make the desired operation quickly without calling up the On-Screen Menu. COMPUTER 1/, VIDEO, S-VIDEO and COMPONENT buttons Press the COMPUTER 1/, VIDEO, S-VIDEO and COMPONENT buttons on the remote control to select the input source. See pages 29-30, 39-40 for details. Remote Control COMPUTER 1/ buttons S-VIDEO button FREEZE button Press the FREEZE button on the remote control to freeze the picture on the screen. To cancel the Freeze function, press the FREEZE button again or press any other button. VIDEO button COMPONENT button POINT buttons INFO . button LAMP button Display the input source information: Input, H-sync freq., V-sync freq., Screen, Language, Lamp status, Lamp counter, Power management, Key lock, PIN code lock and Remote control. (p.59) FREEZE button D .

ZOOM buttons D . ZOOM buttons Press the D.ZOOM buttons on the remote control to enter to the Digital zoom +/- mode. See page 38 for details. Note: See the next page for the description of other LAMP button Press the LAMP button on the remote control to select the lamp mode for changing the brightness on the screen.

buttons. High.....

Brighter than the Normal mode. Normal..... Normal brightness. Eco ..

.....

.... Lower brightness reduces the lamp power .

consumption and extends the lamp life. Basic Operation NO SHOW button Press the NOSHOW button on the remote control to blackout the image. To restore to normal, press the NOSHOW button again or press any other button. The screen changes each time you press the NOSHOW button as follows. black out normal black out normal No show disappears after 4 seconds. P-TIMER button Press the P-TIMER button on the remote control.



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](#)

The P-Timer display 00:00 appears on the screen and the countdown starts (00:00:59:59). To stop the countdown, press the P-TIMER button. To cancel the P-Timer function, press the P-TIMER button again. P-Timer display Remote Control IMAGE button Press the IMAGE button on the remote control to select a desired image mode of the screen.

See pages 35, 42 for details. SCREEN button P-TIMER button NO SHOW button IMAGE button SCREEN button Select the screen size (See pages 37-38, 45 for details). Note: See the previous page for the description of other buttons. 8 Computer Input Input Source Selection (Computer 1: RGB) Direct Operation Choose Computer 1 (RGB) by pressing the INPUT button on the top control or press the COMPUTER 1 button on the remote control. Before using INPUT button, correct input source should be selected through Menu operation as described below. Remote Control COMPUTER 1 button Computer 1 (RGB) Top Control INPUT button Computer 1 (RGB) / (Component) / (Scart) Computer (RGB) Video S-video Computer I (Scart) Menu Operation Input Menu 1 3 Press the MENU button to display the On-Screen Menu. Use the Point button to select Input and then press the Point or the SELECT button. Use the Point button to select Computer 1. When Computer 1 is selected, press the Point to access the submenu items. Use the Point buttons to select the RGB input source and then press the SELECT button.

Auto Auto Computer 1 Note: When the Input Search function is set to On 1 or On in the Auto setup function, the input signal will be searched automatically (p.47). 9 Computer Input Input Source Selection (Computer : RGB) Direct Operation Choose Computer (RGB) by pressing the INPUT button on the top control or press the COMPUTER 2 button on the remote control. Remote Control COMPUTER button Computer (RGB)

Top Control INPUT button Computer 1 (RGB) / (Component) / (Scart) Computer (RGB) Video S-video Menu Operation 1 Press the MENU button to display the On-Screen Menu. Press the Point buttons, move the highlight to Input and then press the Point or the SELECT button.

Use the Point buttons to select Computer and then press the SELECT button. Input Menu 3 When Computer is selected, analog RGB input source will be selected directly. Auto Auto Note: When the Input Search function is set to On 1 or On in the Auto setup function, the input signal will be searched automatically (p.47). 30 Computer Input Computer System Selection This projector automatically tunes to various types of computers with its Multi-scans system and Auto PC adjustment.

If a computer is selected as a signal source, this projector automatically detects the signal format and tunes to project a proper image without any additional settings. (Signal formats provided in this projector are shown on pages 72.)

One of the following messages may appear when: Auto The projector cannot recognize the connected signal conforming to the provided PC Systems. Auto is displayed on the System Menu box and the Auto PC adjustment function works to display proper images. If the image is not projected properly, a manual adjustment is required. (pp.33-34) There is no signal input from the computer. Check the connection between your computer and the projector. (See "Troubleshooting" on page 66.) The preset system is manually adjusted in the PC adjust Menu.

The adjusted data can be stored in Mode 1-5. (pp.33-34) PC Systems provided in this projector is chosen. The projector chooses a proper system provided in the projector and displays it. PC System Menu ----- Mode 1 The PC System Menu Selected system is displayed. SVGA 1 *Mode 1 and SVGA 1 are examples.

Selecting Computer System Manually PC system can also be selected manually. Customized Mode (15) set in the PC adjust Menu (pp.33-34). 1 3 Press the MENU button to display the On-Screen Menu.

Use the Point buttons to select Input and then press the Point or the SELECT button. Use the Point buttons to select System and then press the Point or the SELECT button. Use the Point buttons to select the desired system and then press the SELECT button. PC System Menu Systems in this dialog box can be selected. 31 Computer Input Auto PC adjustment Auto PC adjustment function is provided to automatically adjust Fine sync, Total dots, Horizontal, Vertical, Clamp, Display area Hand Display area V position to conform to your computer.

Menu Operation Auto PC adj . PC adjust Menu 1 Press the MENU button to display the On-Screen Menu. Use the Point buttons to select PC adjust and then press the Point or the SELECT button. Use the Point buttons to select Auto PC adj . and then press the SELECT button.

To store adjustment parameters The adjusted parameters from the Auto PC adjustment can be stored in the projector. Once the parameters are stored, the setting can be done just by selecting a Mode (15) in the PC System Menu (see page 31). See also "Store" on page 34. Use Point buttons to select Auto PC adj . and press the SELECT button. Please wait . . . appears while the Auto PC adjustment is in process. Note: Fine sync, Total dots, Horizontal and Vertical position of some computers cannot be fully adjusted with the Auto PC adjustment function.

When the image is not provided properly with this operation, manual adjustments are required (pp.33-34). The Auto PC adjustment cannot be operated when 480i, 55i, 480p, 55p, Op, 1035i or 1080i is selected in the PC System Menu (p.31). 3 Computer Input Manual PC adjustment Some computers employ special signal formats which may not be tuned by Multi-scans system of this projector.

Manual PC adjustment enables you to precisely adjust several parameters to match those signal formats. The projector has five independent memory areas to store those parameters manually adjusted. It allows you to recall the setting for a specific computer. 1 Press the MENU button to display the On-Screen Menu. Use the Point buttons to select PC adjust and then press the Point or the SELECT button.

Use the Point buttons to select the desired item and then press the SELECT button to display the adjustment dialog box. Use the Point buttons to adjust the setting value. PC adjust Menu Fine sync Use the Point buttons to adjust the value, eliminating a flicker from the image displayed (from 0 to 31). Total dots Use the Point buttons to adjust the number of total dots in one horizontal period to match your PC image. Horizontal Use the Point buttons to adjust the horizontal picture position.

Vertical Use the Point buttons to adjust the vertical picture position. Clamp Use the Point buttons to adjust the clamp level. When the image has dark bars, try this adjustment. Display area H Use the Point buttons to adjust the horizontal area displayed by this projector. Display area V Use the Point buttons to adjust the vertical area displayed by this projector.

33 Computer Input Mode free Menu Reset To reset the adjusted data, select Reset and press the SELECT button. A confirmation box appears and then select yes. All adjustments will return to their previous figures. Mode free To clear the stored data, select Mode free and then press the Point or the SELECT button.

Move the highlight to the Mode that you want to clear and then press the SELECT button. This Mode has stored parameters. Store To store the adjusted data, select Store and then press the Point or the SELECT button. Move the highlight to one of the Modes 1 to 5 in which you want to store, and then press the SELECT button. Values of Total dots, Horizontal, Vertical, Display area H, and Display area V.



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>

Blackboard (Green) For the image projected on a blackboard. This mode helps enhance the image projected on a blackboard. This is mainly effective on a green colored board, not truly effective on a black colored board. Colorboard Press the Point button at Colorboard, and then use the Point button to switch the desired item and then press the SELECT button. At the time of simple projection on the colored wall, you can get the close color image to the color image projected on a white screen by selecting the similar color to the wall color from the preset four colors. Image 1-4 For viewing with the user preset image mode in the Image adjust Menu (see pages 43-44).



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>

This Image memory is provided in each computer, component, S-video and Video input source. Image select Menu 4 Video Input Image Adjustment 1 Press the MENU button to display the On-Screen Menu. Use the Point button to select the Image adjust and then press the Point or the SELECT button.

Use the Point buttons to select the desired item and then press the SELECT button to display the adjustment dialog box.

Use the Point buttons to adjust the setting value. Image adjust Menu Contrast Press the Point button to decrease the contrast; press the Point button to increase the contrast (from 0 to 63). Selected Image mode Brightness Press the Point button to decrease the brightness; press the Point button to increase the brightness (from 0 to 63). Color Press the Point button to decrease the intensity of the color; press the Point button to increase the intensity of the color (from 0 to 63). Tint Press the Point button to adjust the tint value to get a proper color balance (from 0 to 63).

Color temp . Use the Point buttons to select the desired Color temp. level (XLow, Low, Mid, or High). white balance (Red)

Press the Point button to lighten red tone; press the Point button to deepen red tone (from 0 to 63). Use the Point button to adjust the setting value.

white balance (Green) Press the Point button to lighten green tone; press the Point button to deepen green tone (from 0 to 63). white balance (Blue) Press the Point button to lighten blue tone; press the Point button to deepen blue tone (from 0 to 63). Note: ·When the white balance

Red, Green, or Blue is adjusted, the Color temp. level will change to User. ·Tint cannot be selected when the video system is PAL, SECAM, PAL-M, or PAL-N (p.41).

·When Blackboard (Green) or Color board is selected in Image select Menu, Color temp. will change to Blackboard or Color board. 43 Video Input Sharpness Press the Point button to decrease the sharpness of the image; press the Point button to increase the sharpness of the image (from 0 to 15). Gamma Use the Point buttons to adjust the gamma value to obtain a better balance of contrast (from 0 to 15).

Noise reduction Noise interference on the screen can be reduced. Select one of the following options to get smoother images. Off.....

. Disabled. L 1...

.....

. Lower reduction. L

. Higher reduction. Progressive An interlaced video signal can be displayed in progressive mode. Select one of the following options. Off.....

... Disabled. L 1.

.....

... For an active picture. L

... For a still picture. Film.....

. For watching a film. With this function, the projector reproduces pictures faithfully to the original film quality. Reset To reset the adjusted data, select Reset and press the SELECT button. A confirmation box appears and then select yes.

All adjustments will return to their previous figures. Store To store the adjusted data, select Store and press the Point button or the SELECT button. Use the Point buttons Store Menu to select one from Image 1 to 4 and press the SELECT button. A confirmation box appears and then select yes. Stored data can be called up by selecting an Image (1-4) in the Image Mode Selection on page 42.

Note: Noise reduction and Progressive cannot be selected when 480p, 55p, 0p, 1035i or 1080i is selected (p.41). A confirmation box appears and then select yes.

44 Video Input Screen Size Adjustment This projector has the picture screen resize function, which enables you to customize the image size. 1

Press the MENU button to display the On-Screen Menu. Use the Point button to select Screen and then press the Point or the SELECT button.

Use the Point buttons to select the desired item and then press the SELECT button. Screen Menu Normal Provide the image at the 4:3 normal video aspect ratio. wide Provide the image at the 16:9 wide screen ratio. Custom Adjust the screen scale and position manually with this function.

Press the Point button at Custom and the Custom adjustment menu is displayed on the screen, you can use the Point buttons to choose the item you want to adjust. Scale H/V.....

. Adjust the Horizontal/Vertical screen scale. H&V...

.....

.....

. When set to On, the aspect ratio is fixed. The Scale V appears dimmed and becomes unavailable. Adjust the Scale H, then the screen scale is automatically modified based on the aspect ratio. Position H/V.... Adjust the Horizontal/Vertical screen position. Common.

.....

.....

Save the adjusted scale or position to all the inputs. Press the SELECT button at Common to display a confirmation box. To save the scale or position, press the SELECT button at yes, When Custom is selected, the saved scale or position is used. Reset

..... Reset the all adjusted values.

Press . the SELECT button at Reset to display a confirmation box. To reset, press the SELECT button at "Yes". Note: ·When no signal is detected, Normal is set automatically and the Aspect adjustment menu disappears. ·The adjustable range for Scale H/V and Position H/V is limited depending on the input signal.

·wide cannot be operated when 0p, 1035i, or 1080i is selected in the AV System Menu (p.41). ·The corner pattern mode is disable when in Custom mode. 45 Setting Setting This projector has a Setting Menu that allows you to set up the other various functions described below. Setting Menu Language Menu position Auto setup Keystone Background Display Logo Ceiling Rear Power management On start Closed caption Standby mode On On Off Off CC1 Eco 1/2 Blue On English 1 3 Press the MENU button to display the On-Screen Menu.

Press the Point buttons to select the Setting and press the Point or the SELECT button to access the sub menu items. Use the Point buttons to select the desired item and then press the Point or the SELECT button to access the selected item. Use the Point buttons to select the desired item and then press the SELECT button. Language The language used in the On-Screen Menu is available in English, German, French, Italian, Spanish, Portuguese,

Dutch, Swedish, Finnish, Polish, Hungarian, Romanian, Russian, Chinese, Korean, Japanese, and Thai. Language Menu position Auto setup Keystone Background Display Logo Ceiling Rear Power management On start Closed caption Standby mode On On Off Off CC1 Eco 1/2 Blue On English Menu position This function is used to change the position of the On-Screen Menu. Select Menu position and press the SELECT button.

The Menu position changes each time you press the SELECT button as follows. the top left the top right the center the bottom left the bottom right the top left ...

.. 46 Setting Auto setup This function enables Input search, Auto Keystone correction and Auto PC adjustment by pressing the AUTO SETUP button on the top

control or the AUTO SET button on the remote control. Settings for those functions can be altered as follows: Input search This function detects the input signal automatically. When a signal is found, the search will stop. Use the Point button to select one of the following options. Off...

.....

Input search will not work. On 1...

...Input search works under the following situation. When pressing the AUTO SETUP button on the top control. When pressing the AUTO SET button on the remote control. On

...Input search works under the following situation. When turning on the projector by pressing the ON/STAND-BY button on the top control or the remote control. When pressing the AUTO SET button on the remote control. When pressing the AUTO SETUP button on the top control. When the current input signal is cutoff. *If the No show or Freeze function is active, cancel it to activate the Input search. It is also unavailable when OnScreenMenu is displayed.*



[You're reading an excerpt. Click here to read official SANYO PLC-XU106 user guide](http://yourpdfguides.com/dref/3241928)

<http://yourpdfguides.com/dref/3241928>