



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO RM-5750. You'll find the answers to all your questions on the SANYO RM-5750 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO RM-5750
User guide SANYO RM-5750
Operating instructions SANYO RM-5750
Instructions for use SANYO RM-5750
Instruction manual SANYO RM-5750

SANYO

INSTRUCTION MANUAL

RM-5750

AM/FM Digital Alarm Clock Radio



[You're reading an excerpt. Click here to read official SANYO RM-5750 user guide](http://yourpdfguides.com/dref/3241971)
<http://yourpdfguides.com/dref/3241971>

Manual abstract:

The rating label is located on the bottom of the unit. Do not play your earphone at a high volume level. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce the volume or discontinue use. To keep the cabinet clean, wipe off dust and stains with a soft damp cloth. DO NOT USE A SOLUTION CONTAINING BENZOL OR PETROLEUM PRODUCTS. Do not install this equipment in a confined space, such as a book case or built in cabinet. 1) 1. 2. 3.

4. 5. 6. 7. 8.

9. 10. 11. 12. 13.

14. 15. NOTE: If the time display is blinking when the mains returns after a failure, the back-up battery is exhausted and must be replaced. BATTERY BACK-UP SYSTEM This unit incorporates a battery back-up system which protects the clock, sleep timer and wake-up alarm functions from the mains failure with the battery installed. The time display will be resumed when the mains return. Reset the time if the display time is incorrect. The RADIO AUX/ON/OFF switch is mounted on the secondary side. Set the RADIO AUX/ON/OFF switch to OFF. . 2.

3. Release the TIME button. 4 LISTENING TO THE RADIO 1. 2. 3. 4. 5. Set the RADIO AUX/ON/OFF switch to ON. Set the BAND switch to AM or FM. Turn the TUNING control to tune in a station.

Adjust the VOLUME control as desired. To turn the radio off, set the RADIO AUX/ON/OFF switch to OFF. For FM reception, a short wire aerial is provided. 2. 3.

Set the RADIO AUX/ON/OFF switch to OFF. Release the ALARM button. 2. 3. If you want to alarm with the radio, tune in the station and adjust the volume level first.

Set the alarm time. (See "ALARM TIME SETTING".) Set the ALARM BUZZ/RADIO/OFF switch to ALARM-RADIO or ALARM-BUZZER. ALARM-RADIO: Alarm by the radio ALARM-BUZZER: Alarm by the buzzer. The ALARM indicator lights. The alarm timer will function every day unless it is released. . To turn off the alarm immediately, press ALARM STOP button. To temporarily silence the alarm buzzer or radio, press SNOOZE. This silences the alarm for about 9 minutes.

You can repeat this cycle as many times as you like. 2. Set the RADIO AUX/ON/OFF switch to OFF. Push the SLEEP button. "0:59" (59 minutes) appears. The radio turns on and will turn off automatically after 59 minutes. To select the desired time, while holding the SLEEP button down, push the HOUR (once) or MINUTE button repeatedly to select the sleep time (up to 1 hour and 59 minutes). If the SLEEP button is pushed while in operation, it returns to "0:59" as above. AUX IN FUNCTION 1. Set the RADIO AUX/ON/OFF switch to AUX.

2. Simple connected the plug to AUX. IN socket in the back of the radio. 3. .



[You're reading an excerpt. Click here to read official SANYO](#)

[RM-5750 user guide](#)

<http://yourpdfguides.com/dref/3241971>