



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO RMT-U110. You'll find the answers to all your questions on the SANYO RMT-U110 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO RMT-U110 User guide SANYO RMT-U110 Operating instructions SANYO RMT-U110 Instructions for use SANYO RMT-U110 Instruction manual SANYO RMT-U110

To The Owner


Welcome to the World of Sanyo

Thank you for purchasing a Sanyo "Moonlight" Multimedia Remote Control. You made an excellent choice for *Performance, Reliability, Value, and Styling.*

BEFORE YOU BEGIN Installing The Batteries

- Step 1. To remove the battery cover, press the tab and tilt cover upward.
- Step 2. Install two "AA" batteries as shown. Be sure to match the / signs on the batteries with the / marks inside the case.

Note: Do Not mix new and used batteries or mix different types of batteries together.

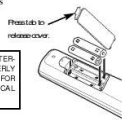

IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

PROGRAMMING THE REMOTE CONTROL

1. Find your VCR, TV, Cable Box, and DVD brand codes in the charts on pages 3 through 7.
 2. Press and hold the VCR, TV, or AUX mode key while entering the three-digit code number.
 3. Perform Step 2 for each piece of equipment you have. After entering a code number check the Power and Channel operations. If these functions operate properly, programming is complete. If not, try reprogramming the remote control using another code, if available.
- After programming is confirmed, enter your codes in the spaces provided below and on the back of your multimedia remote control.


VCR CODE

TV CODE

OPERATING KEYS FUNCTIONS CHART

KEYS	TV MODE	VCR MODE	DVD MODE	CABLE BOX MODE
NUMBERS (0-9)	Use to Select Channels	Use to Select Channels	No Function	Use to Select Channels
PAUSE	Selects TV Video Mode	Selects TV VCR Mode	Selects TV Video Mode	Selects TV Video Mode
REDL	Selects Previous Channel	Selects Previous Channel	Selects Repeat Function	No Function
MRU	Displays Menu or OSD	No Function	No Function	No Function
CHNNL +/- (LR)	Next Higher Channel	Next Lower Channel	Next or Skip Forward	Next Higher Channel
CHNNL +/- (RN)	Next Lower Channel	Next Higher Channel	Previous or Skip Reverse	Next Lower Channel
VOLUME +/-	Adjusts TV Sound	Adjusts TV Sound	Adjusts TV Sound	Adjusts TV Sound
PLAY (▶)	Selects VCR Play Mode	Selects VCR Play Mode	Selects DVD Play Mode	Selects VCR Play Mode
STOP (■)	Selects VCR Stop	Selects VCR Stop	Selects DVD Stop	Selects VCR Stop
FAST FORWARD (⏩)	Operates VCR	Operates VCR	Operates DVD	Operates VCR
REWIND (⏪)	Operates VCR	Operates VCR	Operates DVD	Operates VCR
FREEZE (■)	Selects VCR Freeze Mode	Selects VCR Freeze Mode	No Function	Selects VCR Freeze Mode
PAUSE ()	Selects VCR Pause Mode	Selects VCR Pause Mode	Selects DVD Pause Mode	Selects VCR Pause Mode
FEET	Operates Sanyo TV ONLY	No Function	No Function	No Function
OFF/ON	Operates Sanyo TV ONLY	No Function	No Function	No Function
SLEEP	Operates Sanyo TV ONLY	No Function	No Function	No Function
SCROLL	Operates Sanyo TV ONLY	No Function	No Function	No Function

 THE FOLLOWING KEYS OPERATE THE REMOTE CONTROL ONLY WITH MULTIMEDIA REMOTE CONTROL. REFER TO THE "KEYS" SECTION OF THIS USER GUIDE FOR THE FUNCTIONS OF THESE KEYS.



The keys on this remote control operate functions similar to those of your original remote controls. Refer to your original owner's manuals for specific key and features operation.

Television Codes

Akima	130, 137, 138, 152, 100, 129
Awa	100, 139
American Action	101, 102, 109, 110, 120, 122
Am	103
ACC	101, 109, 111
Audiovox	151, 154, 100, 105
Avram	103
Bayesian	103
Beaumarck	106, 114
Bior	101
Bill & Howell	114, 115, 129, 137
Blackford	103
Blonson	119, 152, 101, 102, 115, 117
Broadwood	101
Candle	132, 136, 144, 101, 103, 106, 111, 115, 117, 120, 121
Casidy	113
Carver	113
Conard	144
Conrad	151
Citizen	144, 109, 111, 121
Conrad	144
Corac	103
Crab	103, 105, 117, 120
Crownline	109
Crowley	113, 115
Coam	132, 103, 111, 117, 120, 129

Television Codes (Cont.)

Curie Mahan	132, 137, 144, 151, 155, 102, 105, 109, 111, 113, 115, 120, 124
CDC	103
Dawson	150, 151, 154, 101, 102, 107, 109, 111, 121, 132, 136, 139
Dayton	101, 111, 132, 136
Dumont	101, 114
Electroland	110
Electrolume	101, 132
Emerson	104, 142, 150, 152, 154, 132, 134, 148, 101, 102, 103, 105, 111, 112, 116, 117, 120, 128, 129
Envision	109
Fisher	109
Finn	104, 103, 105
Fujiwara	103
GE	118, 124, 125, 126, 138, 150, 151, 155, 132, 128, 148, 101, 103, 107, 111, 120, 123
Gibraltar	101, 109, 114
GoldStar	132, 133, 138, 144, 148, 101, 102, 106, 100, 111, 114
Gradiente	121, 144
Grundy	103
Halmak	148
Hammann / Kardon	113
Harvard	103
Hitech	141, 146, 132, 135, 136, 137, 144, 102, 111, 123, 124, 129
Infinity	113
Intex	114
JBL	113, 133
JCB	110
JVC	121, 120, 123
KED	103
Kenwood	127, 101, 102, 109, 104
KIV	140, 132, 102, 103, 105, 109, 111
LO	144
Logik	114, 137
Luxman	144
LVI	131, 136, 144, 148, 100, 101, 102, 104, 113, 115, 124
Magnasonic	131, 136, 101, 102, 113, 129, 129
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 109, 111, 112, 117, 121, 123, 129
Majestic	137
Morantz	109, 113
Magnon	148
Memorex	137, 144, 148, 152, 100, 122
MGA	148, 101, 109, 122
Midland	111, 114, 124
Mitsubishi	122, 132, 148, 101, 102, 109, 111
MTC	136, 144, 101, 109, 120, 128, 144
MultiTech	103
NAD	131, 148
NEC	134, 144, 102, 109, 111, 112
Naitech	100
Niko	109, 148
Onix	103
Optonica	147
Orion	142, 152, 116, 128
Parasonic	139, 138, 136, 105, 107, 112, 123, 134
Penny	131, 132, 138, 144, 105, 101, 102, 109, 111, 120, 123, 124
Philco	113, 115, 145, 142, 133, 136, 152, 101, 102, 109, 111, 112, 121, 129
Philips	113, 115, 145, 152, 133, 142, 100, 111, 121, 129
Pioneer	135, 107, 148, 111, 112
Proscan	124, 125, 126, 138, 102
Proton	132, 148, 101, 102, 111, 117, 124
Portland	101, 111
Pulsar	101, 111, 114, 136
Q&R	139, 135, 147, 107, 112, 123
Radio Shack	100, 101, 103, 105, 107, 109, 111, 115, 122, 124, 130, 132, 144, 147, 148
RCA	118, 104, 126, 106, 138, 132, 135, 155, 101, 102, 103, 107, 108, 111, 123
Raelis	144, 147, 148, 100, 101, 102, 109, 111
Ranco	103, 109, 111
Ranco	153, 109, 114
Ranpo	107, 111, 135
Samsung	120, 143, 132, 144, 148, 101, 102, 105, 109, 111, 121, 129
Sanyo	100
Sanyo	152
Sanyo	151
Sanyo	150
Sanyo	101
Scott	131, 132, 148, 101, 103, 120
SGS	111, 115, 116, 124, 130
Sears	131, 138, 144, 148, 100, 101, 102, 104, 113, 115, 124
Sanyo	103
Sanyo	130, 132, 134, 147, 110, 111, 129
Sanyo	149
Sony	110, 132
Signature	130, 137
Simpson	149
Sony	110, 132
Soundesign	103, 148
Starline	104
Starline	101, 103
Starline	103
Supreme	110
Sylvania	133, 136, 145, 101, 102, 109, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Sony	145
Taung	107
Teknas	125, 112, 123
Techwood	144
Tekna	132, 136, 137, 144, 101, 103, 105, 106, 111, 113, 117, 122
Stalunen	144
Television	111
Television	111
TMC	144
Vector Research	109
Victor	121
Adelson	113
Vidtech	141, 148, 101, 102
Wards	137, 144, 145, 147, 148, 101, 102, 109, 111, 113, 114, 115, 117, 120, 121, 124, 129
W. Westinghouse	151, 152, 154, 100, 103, 116
Yamaha	124, 136, 101, 109, 112, 117
Zenith	114, 137, 136, 152, 106



You're reading an excerpt. Click here to read official SANYO RMT-U110 user guide

<http://yourpdfguides.com/dref/3335602>

Manual abstract:

@@MUTE Operates TV ONLY--Press once to turn off the volume. Press again to restore. DISPLAY Operates TV ONLY--Press to display the TV channel number on the screen. The keys on this remote control operate functions similar to those of your original remote controls. @@132, 137, 144, 151, 155,

.....
.....
.....

.... 102, 105, 109, 111, 113,

.....
.....
.....

.... 115, 120, 124 CXC

.....
.....

..... 103 Daewoo ..

.....
.....

. 150, 151, 154, 101, 102,

.....
.....

. 107, 109, 111, 121, 132,

.....
.....

. 136, 139 Daytron

.....
.....

.... 101, 111, 132, 136 Dumont

.....
.....

.. 101, 114 Electroband

.... 110 Electrohome

.... 101, 132 Emerson .

.....
.....

104, 142, 150, 152, 154,

.....
.....
.....

132, 134, 148, 101, 102,

.....
.....
.....

103, 105, 111, 112, 116,

.....
.....
.....

117, 120, 128, 129 Envision.....

.....
.....

... 109 Fisher ..

.....
.....

..... 100 Funai ..

.....
.....
.....

104, 103, 105 Futuretech
.... 103 GE .
.....
.....
.....
118, 124, 125, 126, 138,
.....
.....
.....
150, 151, 155, 132, 135,
.....
.....
.....
148, 101, 103, 107, 111,
.....
.....
.....
120, 123 Gibraltar
.....
..... 101, 109, 114 GoldStar....
.....
.....
.... 132, 133, 138, 144, 148, .
.....
.....
.....
.... 101, 102, 106, 109, 111, .
.....
.....
.....
.... 114 Gradiente.
.....
.....
.....
121, 144 Grunpy
.....
... 103 Hallmark ..
.....
.....
.... 148 Harman / Kardon.... 113 Harvard ..
.....
.....
..... 103 Hitachi
.....
.....
.....
. 141, 146, 132, 135, 136,
.....
.....
.....
.....
. 137, 144, 102, 111, 123,
.....
.....
.....
.....
.....
. 124, 129 Infinity
.....
.....
..... 113 Inteq

.....
.....
.....
..... 114 JBL ..

.....
.....
.....
.....
.. 113, 133 JCB

.....
.....
.....
.....
. 110 JVC

.....
.....
.....
.....
121, 120, 123 KEC

.....
.....
.....
.....
..... 103 Kenwood

.....
.....
.....
.....
127, 101, 102, 109, 134 KTV

.....
.....
.....
.....
.... 140, 132, 102, 103, 105, .

.....
.....
.....
.....
.... 109, 111 LG .

.....
.....
.....
.....
144 Logik

.....
.....
.....
.....
.. 114, 137 Luxman

.....
.....
.....
.....
144 LXI.....

.....
.....
.....
.....
. 131, 138, 144, 148, 100,

.....
.....
.....
.....
. 101, 102, 104, 113, 115,

.....
.....
.....
.....
. 124 Magnasonic....
..... 131, 136, 101, 102, 113, ..

.....
.....
.....
.....
..... 129 Magnavox ..

.....
.....
.....
.....
.. 113, 115, 145, 149, 132, ...

.....
.....
.. 133, 135, 101, 102, 104, ...
.....
.....

.....
.. 109, 111, 112, 117, 121, ...
.....
.....

.....
.. 123, 129 Majestic...
.....
.....

137 Marantz

.....
... 109, 113 Megatron..
.....

.... 148 Memorex

.....
.....
137, 144, 148, 152, 100,

.....
.....
.....
122 MGA

.....
.. 148, 101, 109, 122 Midland ...
.....
.....

111, 114, 124 Mistubishi

.... 122, 132, 133, 148, 101, .
.....
.....

.....
.... 102, 109, 111 MTC.
.....
.....

..... 136, 144, 101, 109, 120, ..
.....
.....
.....

..... 136, 144 Multitech ..
.....
.....

.... 103 NAD.....

.....
.....
... 131, 148 NEC ..
.....

.....
.. 134, 144, 102, 109, 111, ...
.....
.....

.....
.. 112 Newtech ...

.....
..... 100 Nikko ..

.....
.....
.....
109, 148 Onwa

.....
.. 103 Optonica ...

.....
..... 147 Orion ..

.....
.....
.....
142, 152, 116, 128 Panasonic

.... 139, 135, 136, 105, 107,

.....
.....
.....

.... 112, 123, 124 Penny

.....
.....
.... 131, 132, 138, 144, 155,

.....
.....
.....
.... 101, 102, 109, 111, 120,

.....
.....
.....
.... 123, 124 Philco

.....
.... 113, 115, 145, 132, 133, .

.....
.....

.....
.... 136, 152, 101, 102, 109, .

.....
.....

.....
.... 111, 112, 117, 121, 129 Philips .

.....
.....

.... 113, 115, 145, 132, 133,

.....
.....
.....

.... 102, 109, 111, 121, 129 Pilot.....

.....
.....

..... 101, 109, 111 Pioneer ..

.....
.....

. 135, 107, 108, 111, 112 Proscan
.....
.... 124, 125, 126, 138, 102 Proton
.....
.....
.... 132, 148, 101, 102, 111,
.....
.....
.... 117, 124 Portland.....
.....
.. 101, 111 Pulsar ...
.....
.....
.. 101, 111, 114, 136 Quasar.....
.....
.....
.. 139, 135, 147, 107, 112,
.....
.....
.. 123 Radio Shack
.....
.. 100, 101, 103, 105, 107,
.....
.....
.....
.. 109, 111, 115, 122, 124,
.....
.....
.....
.. 130, 132, 144, 147, 148 RCA
.....
.....
..... 118, 124, 125, 126, 138,
.....
.....
.....
..... 132, 135, 155, 101, 102,
.....
.....
.....
..... 103, 107, 108, 111, 120 Realistic....
.....
.....
.... 144, 147, 148, 100, 101, .
.....
.....
.....
.... 103, 109, 111 Runco .
.....
.....
.....
.... 153, 109, 114 Sampo.....
.....
.....
.....
.... 107, 111, 135 Samsung

.....
120, 143, 132, 144, 148,

.....
.....

.....
101, 102, 105, 109, 111,

.....
.....

.....
121, 129 Samsux

.....
..... 111 Sansui ..

.....
.....
... 152 Sansei ..

.....
..... 151 Sanyo ..

.....
.....
..... 100 Scimitsu ..

.....
... 101 Scotch .

.....
.....

... 148 Scott

.....
.....
..... 131, 132, 148, 101, 103,

.....
.....
.....
..... 105, 111, 115, 116, 124,

.....
.....
.....
..... 128 Sears

.....
.....
.....
... 131, 138, 144, 148, 100, ..

.....
.....
.....
... 101, 102, 104, 113, 115, ..

.....
.....
.....
... 124 Semivox ..

.....
..... 103 Semp.....

.....
.....

.....
..... 131 Sharp....

.....
.....

.....
... 130, 132, 134, 147, 110, ..
.....
.....
.....
... 111, 129 Shogun ..
.....
..... 101 Signature....
.....
.....
.. 130, 137 Simpson

..... 149 Sony ..
.....
.....
.....

110, 132 Soundesign

.. 103, 148 Squarview ...
.....
..... 104 SSS

.....
.....
.....

101, 103 Starlite.....

.....
103 Supreme

.....
..... 110 Sylvania....

.....
... 133, 136, 145, 101, 102, .
.....
.....

.....
... 109, 111, 112, 113, 115, .
.....
.....

.....
... 117, 121 Symphonic .
.....
..... 104, 105 Tandy....

.....
.....
... 145 Tatung ..
.....

..... 107 Technics ..
.....
.....

... 135, 112, 123 Techwood

..... 144 Teknika ..
.....
.....

..... 132, 136, 137, 144, 101,
.....
.....
.....

..... 103, 105, 109, 111, 113,

.....

.....

.....

..... 117, 122 Telefunken

.....

144 Toshiba

.....

..... 131, 130, 120, 121 Totevision ..

.....

.. 111 TMK...

.....

.....

..... 144, 148 Vector Research

109 Victor.....

.....

.....

.. 121 Vidikron.....

.....

.....

113 Vidtech

..... 141, 148, 101, 102 Wards ..

.....

.....

..... 137, 144, 145, 147, 148, ..

.....

.....

.....

..... 101, 102, 109, 111, 113, ..

.....

.....

.....

..... 114, 115, 117, 120, 121, ..

.....

.....

.....

..... 124, 129 W. Westinghouse .

. 151, 152, 154, 100, 103,

.....

.....

.....

. 116 Yamaha

.....

.... 134, 136, 101, 109, 112, .

.....

.....

.....

.... 117 Zenith .

.....

..... @@To remove the battery cover, press the tab and tilt cover upward.

Step 2. Install two "AA" batteries as shown. Be sure to match the + / signs on the batteries with the + / marks inside the case. Note: Do Not mix new and used batteries or mix different types of batteries Press tab to together. IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS.

FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY. release cover. PROGRAMMING THE REMOTE

*CONTROL 1. Find your VCR, TV, Cable Box, 3. @@Note: The most common code for each brand is listed first.
equipment you have. After entering a code number check the Power and Channel operations. If these functions operate properly, programming is complete.
@@@@@130, 137, 138, 152, 100,*

.....
.....
.....
... 103, 114, 115, 124, 128,

.....
.....
.....
... 129 Aiwa

.....
.....
.....
100, 139 Akai

.....
.....
.....
. 101, 102, 109, 110, 120, 122 America Action
.. 103 Anam...

.....
.....
.....
..... 103 AOC .
.....
.....

... 101, 109, 111 Audiovox

.....
.... 151, 154, 103, 105 Baysonic .
.....

..... 103 Beaumark

.....
.... 109, 114 Belcor .
.....

..... 101 Bell & Howell.

.....
.... 114, 115, 129, 137 Bradford .
.....

..... 103 Broksonic

.....
.....
.....
. 119, 152, 101, 102, 115, 116 Brokwood

..... 101 Candle

.....
.....
.....
..... 132, 136, 144, 101, 103,

.....
.....
.....
..... 109, 111, 115, 117, 120,

.....
.....
.....
..... 121 Carver

.....
.....
.....
113 Celebrity

.....
.....
. 110 Ceneral
.....
.....
. 151 Citizen

.....
. 144, 109, 111, 121 Concerto
.....
..... 144 Contec ...

.....
.....
.. 103 Craig ...
.....

..... 103, 105, 117, 120 Cranivale .
.....
.....
..... 109 Crosley

.....
... 113, 115 Crown ..
.....
.....

... 132, 103, 111, 117 The mode key will flash 5 times if the code was accepted. The VCR and TV modes will accept only each mode's specific code type. If you enter an invalid code, the mode key will light, but it will not flash, repeat Step 2. The AUX mode will VCR CODE accept all code types, but only one TV CODE at a time. 2 DVD CODE CABLE BOX CODE 3 4 5 VCR Codes Admiral ...

.....
.....
..... 234, 239, 243, 247, 224,

.....
.....
.....
..... 229, 222, 215 Adventura

..... 228 Aiko .
.....
.....
.....

... 240, 205 Aiwa
.....
.....
..... 228, 217 Akai

.....
.....
.... 209, 215 America Action .
..... 205 America High.....

..... 232 Bell & Howell.....
.....
203 Broksonic
..... 234, 243, 247, 227, 204 Candle .

.....
.....
.... 233, 240, 222, 223, 204, .
.....

.....
.....
.... 205, 208, 211, 216, 217 Canon .

.....
..... 232, 216 CCE .
.....
.....
.....
... 240, 205 Cinerall
.....
.....
... 240, 205 Citizen
.....
.....
... 233, 240, 222, 205, 211, ..
.....
.....
.....
... 216, 217 Craig ..
.....
.....
..... 223, 202, 219 Craver
.....
.....
..... 204 Curtis Mathes
... 232, 236, 238, 222, 228,
.....
.....
.....
... 208, 209, 211, 216, 217 Daewoo
.....
.....
... 205, 240, 211 Daytron
.....
..... 240, 205 Denon .
.....
.....
..... 221 Dynatech .
.....
.....
228 Emerex
.....
... 214 Emerson
.....
..... 234, 236, 240, .
..... 238, 226 Tatung
.....
.....
.....
... 226, 209 Teac....
.....
.....
228, 209, 214, 217 Technics
.....
..... 232 Teknika
.....
.....
.... 232, 223, 228, 216, 217 Toshiba .
.....
.....

.... ood

.....

... 519 Sony ..

.....

.....

506 Technics

.....

..... 501 Theta Digital

.....

..... 511 Toshiba

.....

.....

.... 502, 526 Yamaha

.....

.. 501, 509 Zenith ...

.....

.....

.. 514, 502 90-DAY LIMITED WARRANTY THIS LIMITED WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA AND PUERTO RICO, HOWEVER, EXCLUDING ITS OTHER TERRITORIES AND PROTECTORATES.

@@@@@@@The defective remote control will be exchanged for the same model, or a replacement model of equal or greater value, if necessary.

Replacement model will be contingent on availability and at the sole discretion of Sanyo Manufacturing Corporation. @@@@3333 Sanyo Road, Forrest City, AR 72335 (EFFECTIVE: January 1, 2000) 6 7 8 Printed in U.S.A.: SMC, Mar. 2002 Service Code: 610 300 0077 Part Number: 1JC6P1P0095C- .



[You're reading an excerpt. Click here to read official SANYO RMT-U110 user guide](#)

<http://yourpdfguides.com/dref/3335602>