



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO RMT-U200. You'll find the answers to all your questions on the SANYO RMT-U200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SANYO RMT-U200 User guide SANYO RMT-U200 Operating instructions SANYO RMT-U200 Instructions for use SANYO RMT-U200 Instruction manual SANYO RMT-U200

### TO THE OWNER

#### Welcome to the World of Sanyo

Thank you for purchasing the Sanyo "Starlight" Universal Remote Control. You made an excellent choice for Performance, Reliability, Value, and Styling.

The RMT-U200 can replace four separate remote controls. This greatly simplifies the operation of your home entertainment system. This remote control can operate Video Cassette Recorders, Televisions, Cable Converter Boxes, and Satellite Receivers. Simply program it according to the directions in this owner's manual. Then press the proper function key (VCR, TV, CABLE, or SAT/AUX) to set the remote control to operate each product. The SAT/AUX mode can be programmed to operate a Satellite Receiver or another VCR, Television, or Cable Box.

The RMT-U200 remote control is ergonomically friendly. It offers large Channel, Volume, Power, and Light keys that glow-in-the-dark. It has Function keys that light and a keypad that lights when the Light key or other related key is pressed. The keypad remains lit for a few seconds after releasing the Light key. This allows easy use in a dimly lighted room.

Because the associated mode key lights when you press any operating key (channel, volume, number etc.), you always know which component is being controlled. Just observe the mode keys. The one that lights is the answer.

The RMT-U200 universal remote control comes with keys that are preset to operate your Video Cassette Recorder, regardless of the mode you have selected.


The Caption, V-Guide, and Rec keys have reduced heights to lessen accidental activation.

### BEFORE YOU BEGIN

#### Install The Batteries

Step 1. Remove the battery cover by pressing the tab and tilting the cover upward.

Step 2. Install two "AA" batteries as shown. Be sure to match the + / - signs on the batteries with the + / - marks inside the case.

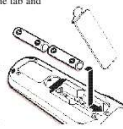

Note: Do not mix new and used batteries or mix different types of batteries together.


**IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.**

### OPERATING KEYS DESCRIPTIONS

- Mode Keys**—Use these keys to program the remote control and to select the operating mode (VCR, TV, Cable or Satellite/Auxiliary).
- VideoTV+VCR Key**—In the TV and Satellite modes, this key selects the program source to display on the screen (TV signal or signal from equipment connected to the A/V jacks). In the VCR mode, this key functions as a VCR's TV/VCR key. This key has no function in the Cable mode.
- Number Keys**—Use these keys to directly select channels on your VCR, TV, Cable Converter Box, or Satellite Receiver.
- Caption Key**—Press to select the caption mode: OFF, Caption1, Caption2, Text1, Text2 or Quickcap on a Sanyo TV.
- V-Guide Key**—Press this key to access the TV Parental Guidelines setup menu on a Sanyo TV. It has no function in other modes.
- Menu/Guide Key**—Use this key along with the  $\uparrow/\downarrow$  and  $\leftarrow/\rightarrow$  keys to adjust the features of a Sanyo TV. Use it to display the Satellite Guide in the SAT/AUX mode.
- Channel ( $\uparrow/\downarrow$ ) and Volume ( $\leftarrow/\rightarrow$ ) Keys**—In the VCR, TV, and Cable Box modes, press to scan through the channels or to adjust the volume. In the SAT/AUX mode, these keys move the cursor.
- Mute Key**—Press once to turn off the volume. Press again to restore the volume.
- VCR Keys**—These keys control the VCR's Fast Forward (FF), Rewind (REW), Play, Record, Stop, Tracking, and Pause functions.
- Reset Key**—Press this key twice to restore factory settings on a Sanyo TV. It has no function in other modes.
- Sleep Key**—Use this key and the 0 (zero) key to set the Sleep Timer on a Sanyo TV. Press Sleep then 0 to set the amount of time delay. The TV will shut down automatically.
- Enter Key**—Satellite operation only.
- Recall Key**—Press to switch between two channels. This key has no function in the Cable mode.
- Display Key**—Press to display the TV channel number on the screen.
- Light Key**—Press to backlight the keypad. Keys will remain lit for a few seconds after releasing the key.

### OPERATING KEYS LOCATIONS

The keys on this remote control operate functions similar to those of your original remote controls.

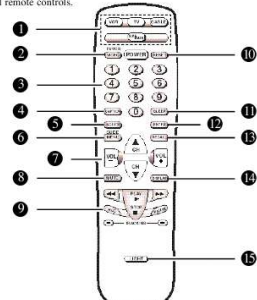

### PROGRAMMING THE REMOTE CONTROL

- Find your equipment's brand codes in the charts on pages 5, 6, and 7.  
Note: Larger code numbers may represent more recent models. Therefore, if you have late model equipment, we recommend that you try the largest number first.
- Press and hold the VCR, TV, CABLE, or SAT/AUX mode key while entering the three-digit code number. The Mode key will flash 5 times if the code was accepted. The VCR, TV and CABLE modes will accept only each mode's specific code type. If you enter an invalid code, the Mode key will light, but it will not flash, repeat Step 2. The SAT/AUX mode will accept all code types.
- Perform Step 2 for each piece of equipment you have (VCR, TV, Cable Converter Box, and/or Satellite Receiver). After entering a code number check the Power and Channel operation. If these functions operate properly, programming is complete. If not, by reprogramming using another code, if available.  
After programming is confirmed, enter your programming in the spaces provided below and on the back of the remote control.

VCR CODE

TV CODE

CABLE BOX CODE

SAT/AUX CODE

### VCR Codes Chart

BRAND NAME	CODE NO.	BRAND NAME	CODE NO.
ADMIRAL	239	MITSUBISHI	210,223,231,244
AIO	205,240	MTC	217,219,228
AIWA	217	MULTITECH	217,228
AKAI	215	NEC	206,208,215,217,223
BELL & HOWELL	203	OPTIMUS	228,238
BROOKSING	204,227,234,243	ORION	208,223,229,245
CANILE	204,205,208,211,215, 217,222,223,233,240	OSION	205,206,210,211
216,232		PANASONIC	227,234,243
CANON	205,240	202,211,216,219,223	
CCE	205,240	232,235,245	
CINERAL	205,240	PENTAX	221,228
CITIZEN	205,211,215,217,222	PHILCO	204,216,217,228,232
233,240		PHILIPS	204,211,216,222
CRAIG	202,219,223	PIONEER	207,242
CURTIS MATHES	208,211,215,217,222	PROSCAN	235,241
232,235,238		PROTON	219
205,211,240		PULPAR	205,208,216,217
DAYTRON	205,240	233,240	
DAVIDSON	203,204,205,206,210	QUANAR	216,223,232,235,245
211,217,223,227,234		RADIO SHACK	223,245
235,240,243,247		RCA	201,207,208,210,216
FISHER	201,202,203,211	221,222,232,236,241	
FUNAI	217,228,233	REALISTIC	200,202,206,216,217
208,212,215,222		223,229,232	
GE	205,240	SAMSUNG	208,217,222,233
GOLDSTAR	208,216,219,221,223	SANSUI	219
225,238		SANYO	200,201,202,203
208,212,215,219		SCOTT	211,223,227,234
242,249		SEARS	200,201,202,203,211
HITACHI	209,217,221,222	216,217,221,223	
230,246		SHARP	224,229,239
JBL	237	SHINTOM	219
J.C.PENNEY	208,216,219,221,223	SIGNATURE 2000	200,217,239
JVC	203,209,220,221	SOMY	214,218,225,227
225,226		SYLVANIA	204,216,217,228,232
KEC	205,240	SYMPHONIC	202,217,216,228,233
KENWOOD	201,203,228,238	TAUNG	229
219,235		TEAC	217
LOXIC	217,228	TEKONKA	216,217,223
LXI	204,211,215,217,219	TOMAS	217
MAGNAVOX	220,232	TOSHIBA	202,205,210,211,240
205,219,223,240		WARD	202,204,208,211
MATSUSHITA	215	217,223,224,229	
MEMOREX	200,202,203,215	WHITE WESTINGHOUSE	205,240
221,223,224,245		YAMAHA	225,238
		ZENITH	216,222,233,225,228

### Satellite Receiver Codes Chart

BRAND NAME	CODE NO.	BRAND NAME	CODE NO.	BRAND NAME	CODE NO.
ALPHA STAR	411	HUGHES	407	SONY	420
CHARRARAL	408,414,424	JANETL	404	SUN CHOICE	426
COLOSAR	404,412,416	LEIBOLD	423,427	SUN	402
EXPRESSALL	417,422	JVC	423	TOSHIBA	409,422
422		MAGNAVOX	424,430	UNION	401,406
FILITSU	404	MEMOREX	423,430	409,412	
GE	419	PANASONIC	423,430	429,430	
GENIUMENTS	403,405	PHILIPS	423,430	VIEWSTAR	418
415,420		PHILIPS	411,425,427	VIDEO ROLL	404
427,430		PROSCAN	413,426	ZENITH	404,434
487,421		RCA	413,423		
422					

\*Use Power key on Receiver.



You're reading an excerpt. Click here to read official SANYO RMT-U200 user guide  
<http://yourpdfguides.com/dref/3335606>



.....  
.....  
.....  
..... 205,211,240 DAYTRON ..

.....  
.....  
.....  
..... 205,240 EMERSON .....

.. 203,204,205,206,210 .....

.....  
.....  
.....  
..... 211,217,223,227,234 ...

.....  
.....  
.....  
..... 236,240,243,247 FISHER .....

. 201,202,203,211 FUNAI .....

.....  
.....  
.....  
..... 217,228,233 GE .....

.....  
.....  
.....  
..... 208,212,216,222 .....

.....  
.....  
.....  
..... 232,236,246 GOLDSTAR ...

.....  
.....  
.....  
..... 206,208,215,217,223 ...

.....  
.....  
.....  
..... 226,238 GO VIDEO ....

... 208,212,213,219 .....

.....  
.....  
.....  
..... 248,249 HITACHI ....

.....  
.....  
.....  
..... 209,217,221,222 ....

.....  
.....  
.....  
..... 230,246 JBL .....

..... 237 J.C.PENNY .

.....

208,216,219,221,223 JVC .....

.....

.....

.. 203,209,220,221 ...

.....

.....

.....

. 225,226 KEC ....

.....

.....

.... 205,240 KENWOOD .

.....

.....

201,203,226,238 LOGIK .....

.....

.....

... 219,235 LXI .....

.....

.....

.....

. 217,228 MAGNAVOX .....

..... 204,211,216,217,219 .....

.....

.....

.....

..... 220,232 MAGNASONIC .

.....

.....

205,219,223,240 MATSUSHITA .....

.. 216 MEMOREX .....

.....

.. 200,202,203,215 ...

.....

.....

.....

.....

. 221,223,224,245 MITSUBISHI .....

.....

210,223,231,244 MTC .....

.....

.....

.....

. 217,219,228 MULTITECH ....

.....

.....

. 217,228 NEC .....

.....

.....

.....

... 206,208,215,217,223 .....

.....  
.....  
.....

.. 226,238 OPTIMUS ...

.....  
.....

..... 208,223,229,245 ORION .....

.....  
.....  
.....

... 205, 206,210,211 .....

.....  
.....  
.....

.. 227,234,243 PANASONIC ...

.....  
.....

. 202,211,216,219,223 .....

.....  
.....  
.....

..... 232,236,245 PENTAX .

.....  
.....  
.....

..... 221,238 PHILCO .....

.....  
.....  
.....

. 204,216,217,228,232 PHILIPS .....

.....  
.....

..... 204,211,216,232 PIONEER ...

.....  
.....  
.....

207,242 PROSCAN .....

.. 236,241 PROTON ...

.....  
.....

..... 219 PULSAR ...

.....  
.....  
.....

.. 205, 208,216,217 .....

.....  
.....  
.....

. 233,240 QUASAR ....

.....  
.....  
..... 216,223,232,236,245 RADIO SHACK ....  
.....  
.....  
. 223,245 RCA .....

.....  
.....  
.....  
... 201,207,208,210,216 .....

.....  
.....  
.....  
.....  
.. 221,222,232,236,241 REALISTIC .....

.....  
.....  
... 200,202,208,216,217 .....

.....  
.....  
.....  
.....  
.. 223,229,232 SAMSUNG .....

.....  
.....  
... 208,217,222,233 SANSUI .....

.....  
.....  
.... 219 SANYO .  
.....

.....  
.....  
. 200,201,202,203 SCOTT ....  
.....

.....  
.... 211,223,227,234 SEARS .  
.....  
.....

.....  
. 200,201,202,203,211 ,....  
.....  
.....

.....  
.....  
... 216,217,221,223 SHARP ..  
.....

.....  
.....  
224,229,239 SHINTOM .....

.....  
.....  
..... 219 SIGNATURE 2000 ..  
.....  
... 200,217,239 SONY ..  
.....

.....  
 .. 214,218,226,237 SYLVANIA ...  
 .....  
 ..... 204,216,217,228,232 SYMPHONIC .  
 .....  
 ..... 202,217,226,228,233 TATUNG ...  
 .....  
 .. 226 TEAC .....  
 .....  
 .. 217 TEKNIKA .....  
 .....  
 . 216,217,223 TOMAS ....  
 .....  
 ... 217 TOSHIBA ..  
 .....  
 ..... 202,205,210,211,240 WARDS ...  
 .....  
 ... 202,204,208,211 .....  
 .....  
 .. 217,223,224,229 WHITE WESTINGHOUSE...  
 205,240 YAMAHA .....  
 .....  
 ..... 226,238 ZENITH .  
 .....  
 .....

..... @@Vi deo/TV-VCR Key--In the TV and Satellite modes, this key selects the program source to display on the screen (TV signal or signal from equipment connected to the A/V jacks). In the VCR mode, this key functions as a VCR's TV/VCR key. This key has no function in the Cable mode. Number Keys--Use these keys to directly select channels on your VCR, TV, Cable Converter Box, or Satellite Receiver.

Caption Key--Press to select the caption mode: OFF, Caption1, Caption2, Text1, Text2 or Quikcap on a Sanyo TV. V-Guide Key--Press this key to access the TV Parental Guidelines setup menu on a Sanyo TV. It has no function in other modes. Menu/Guide Key--Use this key along with the / and / keys to adjust the features of a Sanyo TV. Use it to display the Satellite Guide in the SAT/AUX mode.

Channel ( / ) and Volume ( / ) Keys--In the VCR, TV, and Cable Box modes, press to scan through the channels or to adjust the volume. In the SAT/AUX mode, these keys move the cursor. Mute Key--Press once to turn off the volume. Press again to restore the volume. @@@@It has no function in other modes. @@Press Sleep then 0 to set the amount of time delay. The TV will shut down automatically. Enter Key--Satellite operation only. Recall Key--Press to switch between two channels. This key has no function in the Cable mode. Display Key--Press to display the TV channel number on the screen. Light Key--Press to backlight the keypad. Keys will remain lit for a few seconds after releasing the key. 3 BEFORE YOU BEGIN Install The Batteries Step 1. @@Step 2.

Install two "AA" batteries as shown. Be sure to match the / signs on the batteries with the e / marks inside the case. Note: Do Not mix new and used batteries or mix different types of batteries together. IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY. . . . . 3 4 5 6 7 8 9 10 11 12 13 14 15 . . . . . 1 2 3 4 6 5 7 8 9 PROGRAMMING THE REMOTE CONTROL 1. Find your

equipment's brand codes in the charts on pages 5, 6, and 7. Note: Larger code numbers may represent more recent models. @@@@After entering a code number check the Power and Channel operation. If these functions operate properly, programming is complete. If not, try reprogramming using another code, if available. @@@@The Mode key will flash 5 times if the code was accepted. @@@@The SAT/AUX mode will accept all code types. 4 Satellite Receiver Codes Chart BRAND NAME CODE NO. ALPHA STAR .

.....  
... 431 CHAPARRAL.....

..... 408,414,424 ECHOSTAR ....

.....  
.....  
410,413\*,416 .....

.....  
.....  
.....  
.. 417\*,432 EXPRESSVU .....

... 432 FUJITSU .....

.....  
.....  
.. 404 GE.....

.....  
.....  
.....  
419 GEN.INSTRUMENTS .. 403\*,405 .....

.....  
.....  
.....  
..... 415,425 .....

.....  
.....  
.....  
..... 427,435 HITACHI ...

.....  
.....  
407,421 HTS.....

.....  
.....  
.....  
. 432 BRAND NAME CODE NO. HUGHES ...

.....  
.....  
407 JANEIL .....

.....  
.....  
404 JERROLD .....

..... 425,427 JVC....

.....  
.....  
.....  
.. 432 MAGNAVOX .....

.... 429,430 MEMOREX .

.....  
..... 430 PANASONIC ..

.....  
400,428 PHILIPS .....

.....  
..... 429,430 PRIMESTAR ..



.....  
411,425,427 PROSCAN.....

.....  
..... 419,426 RCA ....

.....  
.....  
.....  
419,423 .....

.....  
.....  
.....  
.. 426,433 BRAND NAME CODE NO. SONY .....

.....  
.....  
420 STAR CHOICE.....

..... 435 STS .....

.....  
.....  
.... 402 TOSHIBA .

.....  
.....  
..... 405,422 UNIDEN .....

.....  
.....  
... 401,406 .....

.....  
.....  
.....  
..... 409,412 .....

.....  
.....  
.....  
..... 429,430 VIEWSTAR ...

.....  
.....  
. 418 VIDEO PALL ....

.....  
.....  
... 404 ZENITH.....

.....  
.....  
... @@BRAND NAME ..

.....  
.....  
...CODE NO. NIKKO .....

.....  
.....  
.....  
..148 OPTONICA .....

.....  
.....  
..147 ORION..

.....  
.....  
128,142 PANASONIC .....

.....  
.....  
.....105,107,112,123 ..

.....  
.....

.....  
.....  
....124,135,136,139 PENNY .....

.....  
.....  
.....  
155 PHILCO .....

.....  
.....  
....101,102,109,111 .....

.....  
.....  
.....  
.....  
112,115,117,121 .....

.....  
.....  
.....  
.....129,133,136,145 PHILIPS ....

.....  
.....  
.....  
115,121,133 PIONEER .....

.....  
.....  
..107,108,111,112 PROSCAN .....

.....  
..124,138 PROTON ...

.....  
.....  
.....101,102,111,117 ....

.....  
..124,132,148 PULSAR ...

.....  
.....101,111,136 QUASAR ....

.....  
.....  
.....  
107,112,123,135 .....

.....139,147 RADIO SHACK ....

.....  
...100,103,105,107,115 ..

.....  
.....  
.....  
....124,130,132,144 .....

.....  
.....  
.....  
.....

147,148 RCA .....

.....  
.....  
.....

103,107,108,111 .....

.....  
.....  
.....

.....118,120,124,125 ....

.....  
.....  
.....

.....  
..126,132,138,155 REALISTIC ...

.....  
.....

..144,147,148 RUNCO .....

.....  
.....  
.....153 SAMPO ..

.....  
.....  
.....

..107,109,111,135 SAMSUNG .....

.....  
.....101,109,111,120,121 ...  
.....  
.....

.....  
.....

..129,132,143,144,148 SANSEI ..

.....  
.....

.....151 SANYO .

.....  
.....

.....100 SCOTCH .....

.....  
.....

....148 SCOTT .....

.....  
.....  
.....

101,103,105,111 .....

.....  
.....  
.....

.....115,116,124,128 ....

.....  
.....  
.....

.....  
..131,132,148 SEARS ...

.....  
.....

.....100,101,115,124 ..

.....  
.....  
.....

.....  
...144,148 SHARP .

.....  
.....

.....  
110,129,130,132 .....

.....  
.....

.....  
.....  
.134,147 SIGNATURE 2000 ....

.....130,137 SIMPSON .....

.....  
.....

.149 SONY ....

.....  
.....

.....  
...110,13304,306,309,312,313 .

.....  
.....

.....  
.....

.....  
.....  
314,318,322,324 AIM .....

.....  
.....

.....  
.....  
321 ARCHER .....

.....  
.....

..... 334 CONTEC .

.....  
.....

..... 302,305,307,308 ..

.....  
.....  
.....

.....  
..... 311,318,320,324 CPI .

.....  
.....

.....  
.....

. 319 DIAMOND ....

.....

..... 320 EAGLE ....

.....  
.....  
.....

.. 313 EMERSON .....

.....  
.....

.... 334 GEN. INSTRUMENTS .... 303,309,311,322,323 GOODMIND.

.....

.... 334 HAMLIN .

.....

... 320,330 JERROLD ..

.....  
.....

..... 303,308,309,311 .....

.....  
.....  
.....

. 313,319,322,323 MAGNAVOX ....

.....  
..... 301,322 MEMOREX .

.....

.... 313,314,332 MOVIE TIME .

.....

..... 306,310,314 NORTHCOAST .....

.... 316 NSC .

.....

.... 305,306,314 OAK .

.....

.... 305,318,320 PANASONIC .

.....

..... 302,307,317 PARAGON ...

.....  
.....  
..... 313,314 PHILIPS ...

.....

. 313,314,325,329 PIONEER .....

.....

... 312,317,333 PROSCAN ..

.....  
.....

... 328 RADIO SHACK.....

.....

... 334 RCA .

.....

.....

.....

... 328 REGAL .

.....

.....

.....

320 REMBRANT .....

.....

... 305 SAMSUNG .....

.....

.....

... 310,312 yo Road, Forrest City, AR 72335 (EFFECTIVE: January 1, 2000) Printed in U.



[You're reading an excerpt. Click here to read official SANYO RMT-U200 user guide](#)

<http://yourpdfguides.com/dref/3335606>