



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO RMT-U220. You'll find the answers to all your questions on the SANYO RMT-U220 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SANYO RMT-U220 User guide SANYO RMT-U220 Operating instructions SANYO RMT-U220 Instructions for use SANYO RMT-U220 Instruction manual SANYO RMT-U220

### TO THE OWNER

#### Welcome to the World of Sanyo

Thank you for purchasing a Sanyo® *Starlight* Multimedia Remote Control. You made an excellent choice for *Performance, Reliability, Value, and Styling.*

#### BEFORE YOU BEGIN

##### Installing The Batteries

Step 1. Remove the battery cover by pressing the tab and tilting the cover upward.


Step 2. Install two "AA" batteries as shown. Be sure to match the (+) (-) signs on the batteries with the (+) (-) marks inside the case.

Note: Do Not mix new and used batteries or mix different types of batteries together.



**IMPORTANT NOTE:** SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTRY SOLID WASTE AUTHORITY.

#### PROGRAMMING THE REMOTE CONTROL

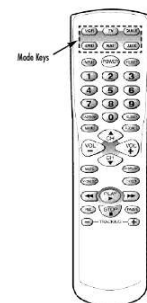

1. Find your VCR, TV, DVD, Satellite, and Cable Box brand codes in the charts on pages 4 - 7. Note: The most common code for each brand is listed first.

2. Press and hold the VCR, TV, DVD, Satellite, Cable Box or AUX mode key while entering the three-digit code number. The mode key will flash 5 times if the code was accepted. The VCR, TV, DVD, Satellite, and Cable Box modes will accept only each mode's specific code type. The AUX mode will accept all code types, but only one at a time. If you enter an invalid code, the mode key will light, but it will not flash, repeat Step 2.

#### OPERATING KEYS FUNCTIONS CHART

KEYS	TV MODE	VCR MODE	DVD MODE	SATELLITE MODE	CABLE BOX MODE
<b>NUMBER KEYS (0-9)</b>	Use to Select Channels	Use to Select Channels	No Function	Use to Select Channels	Use to Select Channels
<b>INPUT</b>	Selects TV Video Mode	Selects TV VCR mode	Selects TV Video Mode	Selects TV Video Mode	Selects TV Video Mode
<b>ENTER</b>	No Function	No Function	No Function	Makes Selection	No Function
<b>RECALL</b>	Selects Previous Channel	Selects Previous Channel	Selects Repeat Function	Selects Previous Channel	No Function
<b>MENU / GUIDE</b>	Displays Menu or OSD	No Function	No Function	Displays Guide Screen	No Function
<b>CHANNEL &lt;-&gt; (L/R)</b>	Next Higher Channel	Next Higher Channel	Next or Skip Forward	Moves Cursor Up	Next Higher Channel
<b>CHANNEL &lt;-&gt; (D/U)</b>	Next Lower Channel	Next Lower Channel	Previous or Skip Reverse	Moves Cursor Down	Next Lower Channel
<b>VOLUME &lt;-&gt; (V)</b>	Adjusts TV Sound	Adjusts TV Sound	Adjusts TV Sound	Moves Cursor Left/Right	Adjusts TV Sound
<b>PLAY (▶)</b>	Selects VCR Play Mode	Selects VCR Play Mode	Selects DVD Play Mode	Selects VCR Play Mode	Selects VCR Play Mode
<b>STOP (■)</b>	Selects VCR Stop	Selects VCR Stop	Selects DVD Stop	Selects VCR Stop	Selects VCR Stop
<b>FAST FORWARD (▶▶)</b>	Operates VCR	Operates VCR	Operates DVD	Operates VCR	Operates VCR
<b>REWIND (◀◀)</b>	Operates VCR	Operates VCR	Operates DVD	Operates VCR	Operates VCR
<b>RECORD (REC)</b>	Selects VCR Record Mode	Selects VCR Record Mode	No Function	Selects VCR Record Mode	Selects VCR Record Mode
<b>PAUSE</b>	Selects VCR Pause Mode	Selects VCR Pause Mode	Selects DVD Pause Mode	Selects VCR Pause Mode	Selects VCR Pause Mode
<b>TRACKING +/-</b>	Adjusts VCR Head Tracking	Adjusts VCR Head Tracking	SBI Frame Skip Fwd/Rev	Adjusts VCR Head Tracking	Adjusts VCR Head Tracking
<b>MUTE</b>	Operates TV ONLY	No Function	No Function	No Function	No Function
<b>DISPLAY</b>	Operates Sanyo TV ONLY	No Function	No Function	No Function	No Function
<b>RESET</b>	Operates Sanyo TV ONLY	No Function	No Function	No Function	No Function
<b>CAPTION</b>	Operates Sanyo TV ONLY	No Function	No Function	No Function	No Function
<b>SLEEP</b>	Operates Sanyo TV ONLY	No Function	No Function	No Function	No Function
<b>TV/GUIDE</b>	Operates Sanyo TV ONLY	No Function	No Function	No Function	No Function
<b>MODE KEYS</b>	Press these keys (VCR, TV, DVD, Satellite, Cable Box, and AUX) when programming the remote control and to choose an operating mode.				

The keys on this remote control operate functions similar to those of your original remote controls. Refer to your original owner's manuals for specific key and features operation.

#### VCR CODE

TV CODE

DVD CODE

SATELLITE CODE

CABLE BOX CODE

AUX

Use Device Here

#### Television Codes

Admiral	130, 137, 138, 152, 100, 103, 114, 115, 124, 125, 129
Aiwa	100, 139
America Action	103
Airtel	101, 102, 109, 110, 120, 122
AOC	101, 109, 111
Audover	151, 154, 103, 105
Daewoo	103
Diamond	109, 114
Silber	101
Sil & Howell	114, 115, 129, 137
Starbird	103
Brookstone	119, 152, 101, 102, 115, 116
Brookstone	101
Candle	152, 136, 144, 101, 103, 109, 111, 115, 117, 120, 121
Cenar	115
Celebrity	110

#### Television Codes (Continued)

General	131
Genie	144, 109, 111, 121
Genstar	144
Conair	103
Coast	103, 105, 117, 120
Coastline	109
Coskey	113, 115
Crown	132, 103, 111, 117
Crown	132, 137, 144, 151, 155, 102, 105, 109, 111
CXC	113, 115, 120, 124
Daewoo	150, 151, 154, 101, 102, 107, 109, 111, 121, 152, 105, 109
Daytron	101, 111, 132, 136
Danmar	101, 114
Electroland	110
Electrohome	101, 102
Empson	104, 142, 150, 152, 154, 132, 134, 148, 101, 102, 103, 105, 111, 112, 116, 117, 120, 128, 129
Envision	109
Fisher	109
Firetech	103
GE	118, 124, 125, 126, 136, 150, 151, 155, 130, 135, 148, 101, 103, 107, 111, 120, 123
Globstar	101, 109, 114
GoldStar	132, 153, 138, 144, 148, 101, 102, 105, 109, 111, 114
Gradiente	121, 144
Grandy	103
Harman / Kardon	113
Harner	150
Hirsch	141, 146, 132, 135, 136, 137, 144, 102, 111, 153, 104, 129
Infinity	113
Insignia	114
JBL	113, 133
JVC	110
JVC	121, 120, 123
KDC	109
Kenwood	127, 101, 102, 109, 134
KTV	140, 152, 102, 103, 105, 109, 111
LG	110
Logik	114, 137
Luxman	144
LXI	131, 138, 144, 148, 100, 101, 102, 104, 113, 115, 124
Magnasonic	115, 124
Magnavox	131, 135, 101, 102, 113, 129
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 109, 111, 112, 117, 121, 123, 129
Majestic	127
Meltronic	109, 113
Megatron	148
Meltronix	127, 144, 148, 152, 100, 122
MCA	148, 101, 109, 122
Midland	111, 114, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 109, 111
MTC	138, 144, 101, 109, 120, 136, 144
Multich	103
NAD	131, 148
NEC	134, 144, 102, 109, 111, 112
Neosch	100
Niko	109, 148
Onice	103
Optonica	147
Orion	142, 152, 116, 128

Panasonic	139, 130, 136, 106, 107, 112, 123, 124
Philco	131, 132, 133, 144, 155, 101, 102, 109, 111, 120, 122, 124
Philco	113, 115, 145, 132, 133, 136, 152, 101, 102, 109, 111, 112, 117, 121, 129
Philips	113, 132, 145, 132, 132, 102, 109, 111, 121, 129
Pilot	129
Pioneer	101, 109, 111
Proscan	137, 108, 111, 112
Proton	132, 146, 101, 109, 111, 117, 124
Portland	101, 111
Radior	101, 111, 114, 136
RCA	139, 130, 147, 107, 112, 120
RCA	100, 109, 103, 105, 107, 108, 111, 115, 122, 102, 105, 101, 106, 111, 120
RCA	124, 130, 132, 144, 147, 148
Realistic	118, 124, 125, 126, 133, 132, 135, 153, 101, 102, 105, 101, 106, 111, 120
Realistic	144, 147, 148, 100, 101, 103, 109, 111
Riano	153, 108, 114
Sampo	107, 111, 133
Sanyo	125, 142, 132, 144, 148, 101, 102, 105, 109, 111, 121, 129
Sanyo	111
Sansai	152
Sansai	151
Sanyo	109
Sanyo	101
Sanyo	148
Scott	131, 132, 148, 101, 103, 105, 111, 115, 116, 124, 128
Seans	131, 138, 144, 148, 100, 101, 102, 104, 113, 115, 124
Semtron	103
Simp	131
Sharp	139, 132, 134, 147, 110, 111, 129
Shogren	101
Sigaram	130, 137
Simpson	140
Sony	110, 132
Soundesign	103, 148
Sparview	104
SSS	101, 103
Starlite	103
Suprema	103
Sylvania	133, 138, 145, 101, 102, 109, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Tandy	145
Telstar	107
Technics	135, 112, 123
Techwood	144
Teknka	132, 136, 137, 144, 101, 103, 105, 109, 111, 112, 117, 122
Telefunken	144
Toshiba	131, 130, 125, 121
Toshiba	111
TAMC	144, 148
Vector Research	109
Victor	121
Vidson	113
Vidson	141, 148, 101, 102
Wards	127, 144, 145, 147, 148, 101, 102, 109, 111, 113, 114, 115, 117, 122, 121, 124, 129
W. Washington	151, 152, 154, 100, 103, 116
Yamaha	134, 135, 101, 109, 112, 137
Zenith	114, 137, 136, 152, 106



You're reading an excerpt. [Click here to read official SANYO RMT-U220 user guide](http://yourpdfguides.com/dref/3297389)



. 119, 152, 101, 102, 115, 116 Brokwood....  
.....  
..... 101 Candle ...  
.....  
.....  
.. 132, 136, 144, 101, 103, 109, 111, 115, 117, ...  
.....  
.....  
.....  
120, 121 Carver.....  
.....  
..... 113 Celebrity ...  
.....  
.....  
..... 110 Cinal ...  
.....  
.....  
.....  
151 Citizen .....  
.....  
..... 144, 109, 111, 121 Concerto.....  
.....  
.....  
... 144 Contec .....  
.....  
.....  
... 103 Craig..  
.....  
.....  
..... 103, 105, 117, 120 Cranivale ...  
.....  
.....  
... 109 Crosley .....  
.....  
.....  
... 113, 115 Crown..  
.....  
.....  
..... 132, 103, 111, 117 Curtis Mathes.....  
.....  
132, 137, 144, 151, 155, 102, 105, 109, 111, .....  
.....  
.....  
... 113, 115, 120, 124 CXC ..  
.....  
.....  
..... 103 Daewoo ...  
.....  
.....  
..... 150, 151, 154, 101, 102, 107, 109, 111, 121, .....  
.....  
.....  
.....  
... 132, 136, 139 Daytron .....  
.....  
.....  
..... 101, 111, 132, 136 Dumont ....  
.....

..... 101, 114 Electroband .

.....  
. 110 Electrohome ....

.....  
... 101, 132 Emerson.....

.....  
. 104, 142, 150, 152, 154, 132, 134, 148, 101, ....

.....  
..... 102, 103, 105, 111, 112, 116, 117, 120, 128, .

.....  
..... 129 Envision ...

.....  
..... 109 Fisher .....

.....  
.. 100 Funai ...

..... 104, 103, 105 Futuretech .

.....  
... 103 GE .....

.....  
... 118, 124, 125, 126, 138, 150, 151, 155, 132, .

.....  
.. 135, 148, 101, 103, 107, 111, 120, 123 Gibraltar ...

.....  
..... 101, 109, 114 GoldStar .....

.....  
... 132, 133, 138, 144, 148, 101, 102, 106, .....

.....  
. 109, 111, 114 Gradiente .....

..... 121, 144 Grunpy ...

.....  
..... 103 Hallmark...

.....  
148 Harman / Kardon .... 113 Harvard .

.....  
..... 103 Hitachi ...

.....  
..... @@123, 124, 129 Infinity ...

.....  
.....  
.. 113 Inteq...  
.....

.....  
. 114 JBL....  
.....  
.....

..... 113, 133 JCB...  
.....  
.....  
.....

... 110 JVC.....  
.....  
.....  
..... 121, 120, 123 KEC .

.....  
.....  
.....  
... 103 Kenwood .....

..... 127, 101, 102, 109, 134 KTV .  
.....  
.....  
.....

... 140, 132, 102, 103, 105, 109, 111 LG .....

.....  
.....  
.....  
..... 144 Logik .

.....  
.....  
.....  
..... 144 LXI .  
.....  
.....

..... @@115, 124 Magnasonic .....

.. 131, 136, 101, 102, 113, 129 Magnavox...  
.....  
... @@104, 109, 111, 112, 117, 121, 123, 129 Majestic .....

.....  
.....  
.....  
..... 137 Marantz .....

..... 109, 113 Megatron .  
.....  
.....  
..... 148 Memorex .....

.....  
. 137, 144, 148, 152, 100, 122 MGA ....  
.....  
.....  
..... 148, 101, 109, 122 Midland .....

.....  
... 111, 114, 124 Mitsubishi .....

..... 122, 132, 133, 148, 101, 102, 109, 111 MTC ...  
.....  
.....  
.....

. 136, 144, 101, 109, 120, 136, 144 Multitech .....

.....  
.. 103 NAD ...  
.....  
.....  
.....

. 131, 148 NEC ....  
.....  
.....

..... 134, 144, 102, 109, 111, 112 Newtech .....

.....  
.....  
... 100 Nikko .....

.....  
.....  
109, 148 Onwa .....

.....  
.....  
..... 103 Optonica...  
.....  
.....  
..... 147 Orion .....

.....  
.....  
.. 142, 152, 116, 128 Panasonic...  
.....

... 139, 135, 136, 105, 107, 112, 123, 124 Penny .....

.....  
.....  
..... @@120, 123, 124 Philco .....

.....  
.....  
.. 113, 115, 145, 132, 133, 136, 152, 101, ...  
.....  
.....  
.....

102, 109, 111, 112, 117, 121, 129 Philips .....

.....  
..... @@129 Pilot .....

.....  
.....  
..... 101, 109, 111 Pioneer.

.....  
.....  
.... 135, 107, 108, 111, 112 Proscan .  
.....

..... 124, 125, 126, 138, 102 Proton ...  
.....  
.....

..... 132, 148, 101, 102, 111, 117, 124 Portland ...

.....  
.....  
101, 111 Pulsar .....

..... 101, 111, 114, 136 Quasar ...  
.....  
..... 139, 135, 147, 107, 112, 123 Radio Shack ...

..... @@124, 130, 132, 144, 147, 148 RCA .  
.....  
.....

... @@102, 103, 107, 108, 111, 120 Realistic .....

. 144, 147, 148, 100, 101, 103, 109, 111 Runco.....

.....  
... 153, 109, 114 Sampo ..  
.....  
.....

... 107, 111, 135 Samsung .....

... @@111, 121, 129 Samsux .  
.....

..... 111 Sansui ...  
.....  
.....

..... 152 Sansei ...

.....  
.....  
.. 151 Sanyo ...  
.....

..... 100 Scimitsu .  
.....  
.....

..... 101 Scotch ...

.....  
.....  
.. 148 Scott...  
.....

.....  
.. @@124, 128 Sears ....  
.....  
.....

... @@115, 124 Semivox .....

.....  
.....  
. 103 Semp .....

.....  
... 131 Sharp ..  
.....  
.....

..... 130, 132, 134, 147, 110, 111, 129 Shogun.....

.....  
.....  
.....  
..... 101 Signature .....

.....  
.....  
.....  
..... 130, 137 Simpson .....

.....  
.....  
.....  
..... 149 Sony.

.....  
.....  
.....  
..... 110, 132 Soundesign .....

..... 103, 148 Squarview .....

.....  
..... 104 SSS .  
.....

.....  
.....  
.....  
..... 101, 103 Starlite ..

.....  
.....  
.....  
..... 103 Supreme.....

.....  
.....  
.....  
..... 110 Sylvania .....

..... @115, 117, 121 Symphonic .

.....  
.....  
.....  
..... 104, 105 Tandy .....

.....  
.....  
.....  
..... 145 Tatung .....

..... 107 Technics .....

.....  
.....  
.....  
..... 135, 112, 123 Techwood.....

..... 144 Teknika .

..... @113, 117, 122 Telefunken .

.....  
.....  
.....  
..... 144 Toshiba..

.....  
.....  
.....  
..... 131, 130, 120, 121 Totevision.....

.....  
..... 111 TMK .  
.....

.....  
.....  
.....  
..... 144, 148 Vector Research ..

..... 109 Victor .  
.....

.....  
.....  
.....  
..... 121 Vidikron .....



..... 113 Vidtech .

.....

.....

.... 141, 148, 101, 102 Wards.

.....

.....

. @@113, 114, 115, 117, 120, 121, 124, 129 W. Westinghouse ...

. 151, 152, 154, 100, 103, 116 Yamaha ....

.....

.... 134, 136, 101, 109, 112, 117 Zenith .....

.....

.....

..... @@234, 239, 243, 247, 224, ....

.....

.....

.....

..... 229, 222, 215 Adventura.....

..... 228 Aiko.

.....

.....

.....

.. 240, 205 Aiwa .....

.....

.....

.... 228, 217 Akai .....

.....

.....

.. 209, 215 America Action...

... 205 America High .....

. 232 Bell & Howell ....., 203 Broksonic.

.....

.....

... 234, 243, 247, 227, 204 Candle .....

.....

.. 233, 240, 222, 223, 204, ...

.....

.....

.....

. 205, 208, 211, 216, 217 Canon....

.....

.....

. 232, 216 CCE .....

.....

.....

.... 240, 205 Cinal.....

.....

... 240, 205 Citizen ..

.....

.....

.. 233, 240, 222, 205, 211, .....

.....

.....

.....

. 216, 217 Craig .....  
.....  
.....  
.. 223, 202, 219 Craver .....  
.....  
. 204 Curtis Mathes....  
.... 232, 236, 238, 222, 228, .  
.....  
.....  
.....  
... 208, 209, 211, 216, 217 Daewoo..  
.....  
..... 205, 240, 211 Daytron .....  
.....  
.....  
.. 240, 205 Denon .....  
.....  
.....  
. 221 Dynatech ....  
.....  
..... 228 Emerex....  
.....  
.... 214 Emerson.  
.....  
.....  
234, 236, 240, 243, 247, .....  
.....  
.....  
..... 223, 227, 228, 203, 204, .  
.....  
.....  
.....  
..... 205, 206, 210, 211, 217 Fisher..  
.....  
.....  
.....  
... 200, 201, 202, 203, 211 Fuji ..  
.....  
.....  
.....  
.. 232 Funai ...  
.....  
.....  
... 228, 233, 217 Garrard.....  
.....  
.....  
. 228 GE .....  
.....  
.....  
. 222, 246, 232, 236, 239, .



[You're reading an excerpt. Click here to read official SANYO RMT-U220 user guide](http://yourpdfguides.com/dref/3297389)  
<http://yourpdfguides.com/dref/3297389>



... 309 Hytex.....	
.....	
.....	
..... 318 Jerrold.....	
.....	
.....	
303, 308, 309, 311, 313, .....	
.....	
.....	
.....	
319, 320, 321, 322, 323, .....	
.....	
.....	
.....	
300 Magnavox .....	
..... 325, 329, 301, 313, 314, .	
.....	
.....	
.....	
..... 322 Memorex.	
.....	
.....	
332, 313, 314 Movie Time .....	
..... 306, 310, 314 Northcoast ...	
.....	
316 NSC.....	
.....	
.....	
... 305, 306, 314 Oak.....	
.....	
.....	
..... 305, 318, 320 Paragon.	
.....	
.....	
.. 313, 314 Panasonic ...	
.....	
. 302, 307, 317, 324 Philips .....	
.....	
.....	
. 325, 329, 301, 313, 314, .....	
.....	
.....	
.....	
. 322 Pioneer.....	
s . . . . .	
.....	
.. 7 DVD Codes . . .	
.....	
.....	
.....	
. . . . 7 Operating Tips and Troubleshooting Hints .	
.....	
.....	
. 8 Warranty . . . . .	

.....  
.....  
.....  
. 8 DVD Codes Apex .....  
.....  
.....  
.... 523, 525 Denon .....  
.....  
.... 501, 520 Emerson.  
.....  
.....  
. 521, 524 Fisher .....  
.....  
.....  
.. 500 GE .....  
.....  
.....  
... 504 Harman / Kardon..  
.. 513 JVC .....  
.....  
.....  
. 510, 515 Kenwood ....  
.....  
.....  
.. 507 Magnavox .....  
.....  
.....  
. 508, 502 Marantz ....  
.....  
.....  
.... 508 Mitsubishi .....  
.....  
.....  
... 503 Onkyo..  
.....  
.....  
..... 502, 516 Optimus .  
.....  
.....  
..... 511 Orion ....  
.....  
.....  
.....  
... 526 Oritron..  
.....  
.....  
..... 522 Panasonic ..  
.....  
.....  
.. 501, 518 Philips .....  
.....  
.....  
.. 508, 502 Pioneer..  
.....  
.....  
.....  
. 511, 505, 518 Proscan.....  
.....  
.....  
.... 504 RCA.  
.....  
.....  
.....  
... 504 Samsung..  
.....  
.....

..... 512 Sanyo.

.....

.....

.....

500, 526 Sharp .....

.....

. 517 Sherwood....

.....

..... 519 Sony....

.....

.....

.... 506 Technics .

.....

..... 501 Theta Digital ....

.....

.. 511 Toshiba...

.....

..... 502, 526 Yamaha ....

.....

.....

.... 501, 509 Zenith.....

.....

.....

*@@@FOR 90 DAYS from the date of purchase, Sanyo Manufacturing Corporation will replace any defective unit without charge to the original purchaser. To ensure proper warranty exchange, keep the original sales receipt for evidence of purchase. Return the defective remote control along with the receipt to the retailer. The defective remote control will be exchanged for the same model, or a replacement model of equal or greater value, if necessary.*

*@@@@@3333 Sanyo Road, Forrest City, AR 72335 (EFFECTIVE: January 1, 2002) 6 7 8 Printed in U.*

*S.A.: SMC, June 2 00 2 Service Code: 610 300 4631 Part Number: 1JC6P1P0121A- .*



**You're reading an excerpt. Click here to read official SANYO RMT-U220 user guide**

**<http://yourpdfguides.com/dref/3297389>**