

Manual abstract:

You made an excellent choice for Performance, Reliability, Value, and Styling. KEYS FUNCTIONS CHART AND PROGRAMMING CODES KEYS MODE KEYS INPUT POWER RESET NUMBER KEYS (0-9) CAPTION MENU SLEEP RECALL CHANNEL L (UP) CHANNEL M (Down) VOLUME - (Down) VOLUME + (UP) MUTE DISPLAY V-GUIDE ENTER REWIND () PLAY () FAST FORWARD() RECORD (REC) STOP (I) PAUSE TRACKING -/+ M M M OPERATING KEYS LOCATIONS, QUICKTIPS AND PROGRAMMING CODES SATELLITE MODE DVD PLAYER MODE VCR TV CABLE DVD SAT AUX TV MODE VCR MODE CABLE BOX MODE QuickTips 1) The CHANNEL (L/M) and VOLUME (-/+) keys become CURSOR keys when the MENU key is pressed. This operating state remains active for 10 seconds after pressing the MENU key or either of the CHANNEL or VOLUME keys. After 10 seconds, these keys will revert to normal channel and volume operation. BEFORE YOU BEGIN Installing The Batteries Step 1. Remove the battery cover by pressing the tab and tilting the cover upward. Step 2. Install two "AA" batteries as shown. Be sure to match the + / signs on the batteries with the + / marks inside the case. @@@@Press and hold the VCR, TV, CABLE, DVD, SAT (Satellite), or AUX (Auxiliary) mode key while entering a three-digit code number. Then release the mode key. @@If you entered an invalid code, the mode key will not flash. Check the code number and repeat Step 2. @@@@After entering each code number check the unit's operation by pressing the Power and/or Channel keys. If these keys operate your equipment, you have probably entered the correct code number for that device.

If not, follow Steps 1 and 2 and enter another code, if available. After you have programmed the remote control and confirmed its operation, enter your codes in the spaces provided below for easy reference. VCR CODE TV CODE CABLE BOX CODE SATELLITE CODE DVD CODE AUX Code List Device Here Press these keys (VCR, TV, CABLE, DVD, SAT [Satellite], and AUX) when programming the remote control and to choose an operating mode. Selects TV/Video Mode Selects TV/VCR mode No Function Selects TV/DSS Mode No Function Turns Unit On/Off Turns Unit On/Off Turns Unit On/Off Turns Unit On/Off Turns Unit On/Off Operates Sanyo TV ONLY No Function No Function No Function No Function Use to Select Channels Use to Select Channels Use to Select Channels Use to Select Channels No Function Operates Sanyo TV ONLY No Function No Function No Function Accesses Audio Options Displays Setup Menu Displays Setup Menu Displays Setup Menu Displays Setup Menu Displays Setup Menu Activates TV auto shutoff No Function No Function No Function No Function Selects Previous Channel Selects Previous Channel Selects Previous Channel Selects Previous Channel Selects Repeat Function Channel/Cursor* Up Channel/Cursor* Up Channel/Cursor* Up Channel/Cursor* Up Next/Cursor* Up Channel/Cursor* Down Channel/Cursor* Down Channel/Cursor* Down Channel/Cursor* Down Previous/Cursor* Down Audio Down/Cursor* Left Audio Down/Cursor* Left Audio Down/Cursor* Left Audio Down/Cursor* Left Audio Down/Cursor* Left Audio Up/Cursor* Right Audio Up/Cursor* Right Audio Up/Cursor* Right Audio Up/Cursor* Right Audio Up/Cursor* Right Switches TV Sound Off/On Switches TV Sound Off/On Switches TV Sound Off/On Switches TV Sound Off/On Switches TV Sound Off/On Shows/Clears Displays No Function No Function No Function Zoom Function Operates Sanyo TV ONLY No Function No Function No Function No Function Function Makes Selection Makes Selection Makes Selection Operates VCR/DVD Operates VCR Operates VCR/DVD Operates VCR/DVD Operates VCR/DVD Operates DVD Selects VCR/DVD Play Mode Selects VCR/DVD Play Mode Selects VCR/DVD Play Mode Selects VCR/DVD Play Mode Selects VCR/DVD Play Mode Operates VCR/DVD Operates DVD No Function Selects VCR Record Mode No Function No Function No Function Selects VCR/DVD Stop Selects VCR Stop Selects VCR/DVD Stop Selects VCR/DVD Stop Selects DVD Stop VCR/DVD Pause Mode Selects VCR Pause Mode VCR/DVD Pause Mode VCR/DVD Pause Mode Selects DVD Pause Mode Adjusts VCR Head Tracking Adjusts VCR Head Tracking Adjusts VCR Head Tracking Adjusts VCR Head Tracking Still Frame Step Fwd/Rev Crosley..

.....
..... 113, 115 Crown

.....
.....
.... 132, 103, 111, 117, 127, 134, 101 Curtis Mathes

.. 132, 137, 144, 151, 155, 101, 102, 105, 109, 111, 113,

.....
.....
.... 115, 118, 120, 124, 127, 128, 133, 134, 138, 143, 148 CXC

.....
.....
. 103 Daewoo

.. @@@132, 133, 134, 136, 139 Daytron

.....
... 101, 111, 127, 132, 134, 136 Dumont ..

.....
.... 101, 114, 134 Electroband

.... 110 Electrohome .

.....
.... 101, 111, 127, 132, 134 Emerson.....

.....
@@@@@143, 144, 148, 150, 152 Envision

.....
..... 102, 109, 133 Fisher....

.....
.....

. 100 Funai
..... 104, 119, 103, 105, 128 Futuretech
... 103 GE ..
.....
.. @@@@101, 102, 109, 111, 114, 127, 133, 134 GoldStar...
.....
..... @@114, 127, 134, 155 Gradiente..
.....
.. 121, 144, 148 Grunpy ...
.....
..... 103 Hallmark ..
.....
.. 148, 144 Harman/Kardon...
. 113, 115 Harvard
.....

.. @@Please refer to (*) work when the menu is the chart for a generic displayed (after pressing the description of the keys and MENU key). their functions. Refer to 4) The AUX mode can be your original operating programmed to operate a manuals for specific feature VCR, TV, DVD, Cable Box, operation. or Satellite Receiver, but only one device at a time. MENU RECALL Television Codes Admiral

.....
.....
.. 130, 137, 138, 152, 100, 103, 105, 113, 114, 115,

.....
.... 118, 124, 128, 129, 155 Aiwa .
.....
.....
.... 100, 139 Akai.....
.....
.....
..... 143, 120, 101, 102, 109, 110, 111, 122, 127, 133, 134 America Action

.. 103 Anam.....
.....
.....
.. 103 AOC

.....
.... 101, 102, 109, 111, 127, 133, 134 Apex .
.....
.....

.... 157 Audiovox

... 151, 154, 103, 105, 128 Baysonic ..
.....

.. 103 Beaumark

.... 102, 109, 114, 133 Belcor .
.....
.....

.. 101, 111, 127, 134 Bell & Howell

113, 114, 115, 129, 137 Bradford
.....
.... 103 Broksonic

..... 119, 152, 101, 102, 104, 109, 111, 113, 115, 116, ..
.....

.....
.....
127, 133, 134 Brokwood
.. 101, 111, 127, 134 Candle ...
.....
.....
132, 136, 144, 101, 102, 103, 109, 111, 113, 115,
.....
.....
.. 117, 120, 121, 127, 133, 134, 143, 148 Carver
.....
113, 115 Celebrity
.....
.... 110 Cinerel
.....
.. 151 Citizen ...
.....
.....
144, 101, 102, 109, 111, 121, 127, 133, 134, 148 Concerto.....
.....
. 144, 148 Contec
.....
.... 103 Craig
.....
.....
.... 103, 105, 117, 120, 128, 143 Cranivale
.....
..... 109, 102, 133 Realistic ..
.....
.....
.... 144, 147, 148, 100, 101, 103, 109, 111,
.....
.....
.....
.. 127, 134. 133 CH Runco
.....
.....
. 153, 102, 109, 114, 133 2) Some equipment manuSampo
.....
.....
..... 107, 111, 127, 134, 135, 101 Samsung .
.....
.....
... @@@@111, 127, 134, 101 CURSOR keys to navigate Sansui ..
.....
.....
.. 142, 152 PLAY through their menu sys-tems. Sansei
.....
.....
151 If after pressing the MENU STOP Sanyo
.....
..... 100 key the CHANNEL and VOLUME TRACKING Scimitsu ..
.....
.....
.... 101, 111, 127, 134 ON/OFF Scotch
.....
.....
.. 148, 144 keys do not move the cursor, Scott ...
.....
.....

.. @@ 118, 124, 127, 128, 134, 144 them again. If the menu Sears

.....

.....

... @@@@ 103 Semp

.....

... 131 seconds before pressing the Sharp..

.....

.....

... 130, 132, 134, 147, 110, 111, 129, 127, 101 CHANNEL and VOLUME keys. Shogun

.....

.....

101, 111, 127, 134 Signature

.... 130, 137 Simpson

.....

.....

149 Hitachi

..... @@@@ 110, 132 ..

.....

.....

.....

118, 123, 124, 127, 129, 133, 134, 148

.....

.....

.. 133, 134, 143, 148 Soundesign

.. 103, 148, 144 Infinity.....

.....

.....

113, 115 Multitech

.... 103 Squarview

.....

. 104, 119 Inteq

.....

..... 114 NAD....

.....

.....

..... 131, 148, 144 SSS ..

.....

.....

.....

101, 103, 111, 127, 134 JBL

.....

.. 102, 109, 113, 115, 133 NEC ...

.....

.....

.... @@ 103 JCB

.....

.....

..... 110 Newtech....

.....

.. 100 Supreme ...

.....

..... 110 JVC

.....

.....
... 121, 120, 123, 143 Nikko.



[You're reading an excerpt. Click here to read official SANYO RMT-U230 user guide](#)

<http://yourpdfguides.com/dref/3297392>

.
.....
..... 102, 109, 133, 144, 148 Sylvania..
.....
.....
.... @@103 Onwa

.....
.... 103 .
.....
.....

.....
.. 113, 115, 117, 121, 127, 134 Kenwood ...
.....
..... 127, 101, 102, 109, 133, 134, 111 Optonica

.....
147 Symphonic

.....
.. 104, 119, 105, 128 KTV

.....
.... @@142, 152, 105, 116, 128 Tandy.
.....
.....

.... 145

.....
.....
..... 133, 134 Panasonic....

.....
@@107 LG

.....
.....
.... @@@@135, 112, 123

.....
.....
..... 114, 127, 134, 155

.....
.....
... 120, 123, 124, 127, 133, 134, 143, 148 Techwood ..

.....
.....
.. 144, 148 Logik

.....
.....
.. 114, 137 Philco.....

.....
.. @@@@144, 148 ...

.....
.....
.... 111, 112, 117, 121, 127, 129, 134

.....
.....
.....

.. @@@@144, 148

.....
.....
.... 115, 118, 124, 127, 133, 134, 155, 119

.....
.....
. 129, 127, 134 Toshiba
.....
.. 131, 130, 120, 121, 143 Magnasonic
.. 131, 136, 101, 102, 109, 111, 113, 115, 127, 129, Pilot...
.....
.....
.... 101, 102, 109, 111, 127, 133, 134 Totevision.....
.....
... 111, 127, 134, 101 ..
.....
.....
133, 134 Pioneer
.....
..... 135, 107, 108, 111, 112, 127, 134, 101 TMK
.....
.....
... 144, 148 Magnavox ..
.....
113, 115, 145, 149, 132, 133, 135, 101, 102, 104, Proscan
.....
. 126, 156, 118, 124, 125, 138, 102, 109, 133, 155 Vector Research
102, 109, 133
.....
.. 109, 111, 112, 117, 119, 121, 123, 127,emorex ...
.....
..... 227, 232, 239, 243, 245, 223,
.....
.....
.....
.... 224, 228, 229, 230, 221, 200,
.....
.....
.....
.. 201, 202, 203, 206, 215 Minolta
.....
..... 221, 230 Mitsubishi..
.....
.....
.. 231, 239, 244, 224, 226, 229, 210, 223 Motorola
.....
..... 232, 239, 229, 224 MTC
.....
.....
..... 228, 235, 217, 219 Multitech ..
.....
.....
.. 228, 217 NEC ...
.....
.....
.... 238, 208, 223, 226, 201, 203, 206, 209,
.....
.....
.....
.. 215, 217, 248 Olympus

.....
. 232 *Optimus*
.....
.. 239, 245, 248, 223, 224, 229,

.....
.....
.....
201, 203, 208 *Orion*

.....
.....
243, 227, 234, 240, 205, 206, 210, 211 *Panasonic*.....

.... 245, 232, 235, 236, 223, 202,

.....
.....
.....
.. 211, 216, 219 *Penny*

.....
.....
230, 232, 235, 248, 221, 223,

.....
.....
.....
... 208, 211, 216, 219 *Pentax* ..

.....
.....
.....
..... 238, 221, 230 *Philco*....

.....
.....
.....
..... 204, 232, 243, 228, 216, 217 *Philips*

.....
.....
.....
.... 204, 232, 228, 211, 216, 217 *Pioneer* .

.....
.....
.....
242, 204, 207, 220, 225 *Proscan*

.....
. 222, 241, 246, 230, 236, 221, 226 *Proton*

.....
.....
.....
.... 219, 235, *Pulsar*

.....
.....
.....
.. 233, 240, 248, 205, 208, 216, 217 *Quarter*

.....
.....
.....
..... 200 *Quartz* ..

.....
.....
.....
..... 200 *Quasar*....

.....
.....
.....
.... 245, 232, 236, 223, 216 *Radio Shack* .

.....
.....
.....
.... 228, 245, 223 *RCA*

.....
.....
.....
. 222, 241, 246, 248, 230, 232,

.....
.....
.....
.... 236, 239, 224, 226, 229, 221, .

.....

.....
.....
.. 201, 203, 207, 208, 210, 216 Realistic ...
.....
..... 232, 239, 240, 248, 223, 224, 228, 229, ..
.....
.....
.....
..... 200, 201, 202, 203, 206, 208, 216, 217 Samsung
.....
248, 208, 233, 211, 217, 222 SamxpressVU
.....
.. 432 Fujitsu
.....
404 GE
.....
.....
.... 426, 436, 437, 423 Gen. Instruments .. 425, 427, 415, 435, 405 Hitachi ...
.....
.....
..... 407, 421 HTS
.....
.....
.. 432 Hughes ...
.....
... 407 Janeil.....
.....
.....
... 404 Jerrold
.....
.....
. 425, 427 JVC
.....
.....
... 432 Magnavox
.....
429, 430 Memorex
..... 430 Next Level .
.....
.....
. 415 Optimus
.....
..... 430 Panasonic...
.....
.....
. 428, 400 Philips
.....
..... 429, 430 Primestar .
.....
.....
... 425, 427 Proscan ..
.....
.....
..... 426, 436, 437, 423 Radio Shack .
.....
..... 415 RCA .
.....
.....
.....
.....

. 426, 436, 437, 423 Sony

.....

.....

. 420 Star Choice.....

... 415, 435 Toshiba

.....

.... 422, 405 Uniden.

.....

..... 429, 430, 406, 409, 412 Video Pall...

.....

.....

. 404 Viewstar.....

..... 418 Zenith ...

.....

.....

..... 434, 404 OPERATING TIPS AND TROUBLESHOOTING HINTS To operate each device (VCR, TV, Cable Box, DVD Player, or Satellite Receiver), you must first program the remote control; then press the proper mode key (VCR, TV, CABLE, DVD, SAT, or AUX) to select an operating mode. The VCR, TV, and DVD modes are preprogrammed with Sanyo codes. Some manufacturers use many different codes. @@@@Some models may operate only partially.

@@@@Weak batteries may leak and damage the remote control.

@@@@@ This remote control cannot add keys or features to your equipment. Your equipment's manufacturer must have originally provided them. When switching from the VCR or DVD mode, the VCR/DVD specific control keys will continue to operate the last device (mode) selected. For example, when switching from DVD to TV mode, the VCR/DVD control keys will continue to function as DVD keys. If the remote control fails to operate any of your equipment replace the batteries. Be sure batteries are installed correctly. Model RMT-U230 6-Function Backlit Multimedia Remote Control Owner's Manual

TABLE OF VCR TV CABLE DVD SAT AUX INPUT POWER RESET 1 4 7 CAPTION MENU 2 5 8 0 CH 3 6 9 SLEEP RECALL CONTENTS DVD Codes

Akai....

.....

.....

..... 529 Apex ..

.....

.....

... 525, 527, 528, 523 Daewoo ..

.....

.... 529 Denon

.....

.....

.. 501, 520 Emerson.....

..... 521, 524, 527 Fisher..

.....

.....

..... 500 GE ..

.....

.....

.....

.. 504 Harman/Kardon.... 513 Hitachi

.....

.... 530 JVC .

.....

.....

..... 515, 510 Kenwood

.....

.....

507 Koss.....

.....

.. 522 Magnavox ...

.....

.... 508, 502 Marantz

.....
508 Mitsubishi.....
....
.... 503 Onkyo
.....
.. 516, 502 Optimus ...
....
..... 511 Orion ..
.....
....
... 526 Oritron..
.....
..... 522 Panasonic....
....
....
501, 518 Philips
..... 508, 502 Pioneer ..
....
....
.... 511, 505, 518 Proscan
.....
504 RCA
....
.....
.. 504 Samsung
....
. 512 Sanyo
.....
.... 500, 526 Sharp.....
....
....
.... 531, 517 Sherwood.....
..... 519 Sony ..
....
....
..... 506 Sylvania..
.....
.... 524 Symphonic .
....
..... 524 Technics
.....
.. 501 Theta Digital ...
....
511 Toshiba
..... 502, 526 Yamaha
....
....
.. 501, 509 Zenith
.....
521, 514, 502 To The Owner
.....
.....
. 2 Installing Batteries

.....
.....
..... 2 Programming The Remote Control ...
..... 2 Keys Functions Chart
.....
.....
.. 34 TV Codes
.....
.....
... 35 Operating Keys Location ..
.....
..... 4 QuickTips
.....
.....
.....
..45 VCR Codes
.....
.....
..... 6 Cable Converter Box Codes .
.....
.....
... 7 Satellite Receiver Codes ..
.....
.....
7 DVD Codes
.....
.....
..... 7 Operating Tips and Troubleshooting Hints ...
.....
.....
..... 8 Warranty .
.....
.....
.....

... @@@@ @@@@ @@@@ Replacement model will be contingent on availability and at the sole discretion of Sanyo Manufacturing Corporation.
For 90 days from the date of purchase, Sanyo Manufacturing Corporation warrants this product to be free from defects in material and workmanship under normal use and conditions. Should replacement be necessary under this warranty for any reason due to manufacturing defect or malfunction during the first 90 days from date of original purchase, Sanyo Manufacturing Corporation will provide a new remote control via exchange at the retailer at no charge. This warranty expresses specific contractual rights; retail purchasers may have additional statutory rights which vary from state to state. Cable Box Codes ABC ..

.....
.....
312, 304, 306, 308, 309, 311,
.....
.....
..... 313, 314, 318, 319, 321, 322, ..
.....
.....
.....
..... 323, 324, 327, 329 AIM
.....
.....
..... 321 Archer ..
.....
.....
.....
. 334 Bell & Howell
.... 313, 314, 329 Contec

.....
.. 305, 302, 307, 308, 309, 311, ...

.....
.....

.....
318, 319, 320, 322, 323, 324, 327 Sanyo Manufacturing Corp. 3333 Sanyo Road, Forrest City, AR 72335 (EFFECTIVE: January 1, 2002) Printed in U.S.A.:
SMC, March 2003 Service Code: 610 306 8541 Part Number: 1JC6P1P0136A- Satellite Codes AlphaStar.

.....
..... 431 Echostar ..

.....
.... 432, 410, 416 THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY OR FITNESS
FOR A PARTICULAR PURPOSE.

6 7 8 .



[You're reading an excerpt. Click here to read official SANYO RMT-
U230 user guide](http://yourpdfguides.com/dref/3297392)

<http://yourpdfguides.com/dref/3297392>