



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SANYO VPC-GH3. You'll find the answers to all your questions on the SANYO VPC-GH3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SANYO VPC-GH3
User guide SANYO VPC-GH3
Operating instructions SANYO VPC-GH3
Instructions for use SANYO VPC-GH3
Instruction manual SANYO VPC-GH3

SANYO

INSTRUCTION MANUAL

VPC-GH3EX
VPC-GH3GX
VPC-GH3PX
VPC-GH3TA
VPC-GH4

Dual Camera

Xacti 



Important note

This manual explains how to safely operate the VPC-GH3EX, VPC-GH3GX, VPC-GH3PX, VPC-GH3TA and VPC-GH4. Any information regarding only one of these products will be labeled as such.

Please read these instructions carefully before using the camera.
Make sure to read and understand the separate booklet "SAFETY MANUAL".
Keep this manual in a safe place for later reference.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>

Manual abstract:

@@@ To use the various camera features Please read the sections on "NORMAL" and "OPTION SETTINGS" in this manual. To connect the camera to a computer or view images on a TV, please read the section on "OTHER DEVICES AND CONNECTIONS" in this manual. To use additional features Visit the Sanyo website to learn how to adjust the camera settings for various shooting scenes. There you'll also find information about the software for playing back data recorded with your camera and for burning (recording) DVDs (page 153). You may find the answers to questions or problems concerning camera operation in the sections "COMMONLY ASKED QUESTIONS" (page 163) and "TROUBLESHOOTING" (page 171). Symbols used in this manual HINT CAUTION (page xx) Points giving some extended instructions or special points to pay attention to. Points that require special attention. Refer to the page indicated for detailed information. i English SHOOT, PLAY BACK AND SAVE Preparing the camera 1 Insert the battery pack. 3 Insert the battery pack. 2 Open 1 Push out Battery cover 4 Close the battery cover. About saving your recorded data h If you wish to use an SD Memory Card, refer to page 25 to install the card in the camera. h An SD Memory Card is not included with your camera. Please purchase a commercially sold card. h This camera has an internal memory, so you can shoot and record without an SD Memory Card installed.

English ii Shooting 1 Press the ON/OFF button for at least 1 second to turn the camera on. h If the screen to set the date and time appears, press the MENU button 2 times to cancel it. For how to set the date and time, see page 33. Record. To record a video clip: h Press the [] button to begin recording a video clip.

h Press the [] button again to end the recording. To take a photo: h Press the [] button. h A still image is captured. MENU button 2 ON/OFF button [] button [] button 10M-S 15 Full-HD 00:00:17 iii English Before capturing those important shots, be sure to first take a test shot to confirm that your camera is set up and ready to go i Sanyo declines any claim for compensation for recorded contents etc. in case of photographing or recording failure due to a chance camera or card flaw. Playback 1 2 Press the REC/PLAY button. h The display changes to the Playback Screen. Select the image to play back. h Use the arrow keys to move the orange frame to the image you wish to play back. h The image information for the framed image is shown in the bottom part of the monitor.

REC/PLAY button SET button Arrow keys Full-HD Orange frame 6.5MB OK 100-0006 00:00:05 Remaining battery power indication English iv 3 Press the SET button. <To return to the recording mode> h Press the REC/PLAY button. When you are finished using the camera... Press the ON/OFF button for at least 1 second to turn the camera off. v English Copy data from your camera to the computer Connect your camera to a computer, and copy the desired data to the computer. 1 Turn on the computer, and use the supplied dedicated USB interface cable to connect your camera to the computer. h Connect the cable between the camera's USB/AV terminal and the computer's USB connector.

Turn on the camera (page 30). h The USB Connection Screen appears on the camera's monitor. 2 USB CONNECTION COMPUTER PRINTER CANCEL CANCEL SET To USB/AV terminal OK To USB connector Supplied dedicated USB interface cable English vi 3 Select "COMPUTER", and press the SET button. h The screen to select the USB CONNECTION computer connection mode CARD READER appears. MTP SCREEN CAPTURE PC CAMERA CANCEL OK 4 Select "CARD READER", and press the SET button.

h The message [Found New Hardware] appears in the task tray, showing that the camera is recognized as a drive. h The card is recognized (mounted) as a disk, and the [XACTI (E:)] icon appears in the [My Computer] window. h The drive name (E:) may be different on your computer. <If the access menu (page 155) appears> h Click on [Exit] to cancel the access menu. Select an action.

h If the [XACTI (E:)] window appears automatically, select the desired procedure from the window. Copy files from the camera to a computer. 5 6 vii English Dismounting the camera CAUTION i To disconnect your camera, be sure to follow the procedure below. Failure to follow this procedure may cause faulty operation of your computer or corrupt the files in your camera. 1 2 Left-click on the icon for safely removing hardware in the task tray. h A list appears showing the devices connected to the computer's USB connector. Left-click on the camera drive (E:). h The camera can now be disconnected. h The drive name (E:) may be different on your computer. No software is included with this camera.

Please visit our website to obtain the available software. English viii CONTENTS HOW TO READ THIS MANUAL

.....

.....

.....

.....

.....

.....

.....

.. i QUICK SEARCH BY OPERATION

.....

.....

.....

.....

.....

.....

..... 6 CHECKING THE INCLUDED ACCESSORIES ..

.....

.....

.....

.....

.... 11 How to use the accessories

.....

.....

.....
.....
.....
.....
.....

.. 13 ABOUT THE CARD

.....
.....

.....
.....
.....

.....
.....

.... 15 Media cards that can be used with this camera .

.....

.....
.....

.. 15 What "card" means in this manual ...

.....

.....
.....
.....
.....

..... 15 GETTING THE MOST OUT OF YOUR CAMERA

.....
.....

..... 16 High-quality images with "Full High Definition"*

.....
.....
.....

.... 16 Includes SIMPLE mode for quick-and-easy operation

.....
.....

.. 17 Image stabilizer for sharp pictures

.....
.....
.....
.....

17 Capture clear images of the targeted subject

.....
.....

. 18 Eye-Fi smart

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 18 SYSTEM MAP

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 19 SETUP PARTS NAMES ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

20 CHARGING THE BATTERY PACK

.....
.....
.....
.....

... 22 Charging the battery pack ..

.....
.....

.....
.....
.....
.....

.... 23 INSTALLING THE CARD .

.....
.....

.....
.....
.....
.....

.....
.....
.....

... 25 INSTALLING THE BATTERY PACK

.....
.....

.....
.....

.....
.....
27 About the temperature alert icon \.....
.....

.....
.....
..... 29 TURNING THE CAMERA ON AND OFF ...
.....

.....
.....
.. 30 Turning on the camera ...
.....

.....
.....
... 30 Turning off the camera ..
.....

.....
.....
.... 30 Turning on the camera when the power save (sleep) mode is active
.....

.....
.....
.. 31 DATE AND TIME SETTING
.....

.....
.....
..... 33 SWITCHING BETWEEN THE RECORDING MODE AND PLAYBACK MODE ...
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 36 SWITCHING THE OPERATING MODE

.....
.....
.....

.....
.....

.. 37 Switching between the SIMPLE and NORMAL modes ...

.....

... 37 Accessing/exiting the SIMPLE/NORMAL Mode Menu Screen 38 Overview of the SIMPLE Mode Setting Screen ..

.....
.....
.....

..... 43 Overview of the NORMAL Mode Setting Screen

.....
.....
.....

.. 47 1 English SIMPLE SHOOTING BEFORE TAKING PICTURES

.....
.....
.....

.....
.....
.....

...55 For best results

.....
.....
.....

.....
.....
.....

.....
.....
.....

.55 Using the autofocus

.....
.....
.....
.....
.....

.....
.....
.....

..56 Select the recording size

.....
.....
.....

.....
.....
.....
.....

.....59 Select the focus setting

.....
.....
.....
.....
.....
.....
.....

60 Hints for taking pictures

.....
.....

.....
.....
.....
.....

.....
.....

61 VIDEO CLIP RECORDING

.....

.....
.....
.....
.....

.....
.....
.....

..62 SHOOTING SINGLE SHOTS

.....
.....
.....
.....

.....
.....
.....

.....63 Using the flash

.....
.....
.....
.....

.....
.....
.....

.....
.....
...66 SHOOT A STILL IMAGE WHILE RECORDING A VIDEO CLIP .

.....
...68 MACRO-PHOTOGRAPHY (ZOOM)

.....
.....
..70 PLAYBACK PLAYING BACK VIDEO CLIPS AND STILL IMAGES ...

.....
...72 How to save one frame from a video clip as a still image ..

.....
.....75 SLIDESHOW PLAYBACK

.....
.....
....76 PLAYBACK VOLUME

.....
.....
....77 DELETING FILES .

.....
78 Delete single/delete all/delete folder

.....
.....
.....78 Delete selected

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
...79 PLAYBACK MODES ..
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

81 21-image display playback

.....
.....
.....

.....
.....
.....
.....

81 Selecting the playback folder

.....
.....
.....

.....
.....
.....

.....82 Magnifying (zooming in) the image

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
...83 English 2 NORMAL SHOOTING RECORDING MENU 1 ..
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 84 Video setting

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
. 89 Filter setting

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 89 Self-timer setting

.....
.....
.....

.....
.....
.....
.....

.....
.....

... 90 RECORDING MENU 2 ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

. 91 Motion compensation (image stabilizer) setting

.....
.....

..... 91 Focus range setting .

.....
.....
.....
.....

.....
.....
.....
.....

..... 92 Focus mode setting .

.....

.....
.....

.....
.....
.....

.....
.....

.... 93 Light-measuring mode setting .

.....
.....
.....
.....

.....

... 93 ISO sensitivity setting ..

.....
.....
.....
.....

.....
.....

94 RECORDING MENU 3

.....
.....
.....
.....
.....
.....

... 95 White balance setting

.....
.....
.....
.....
.....

.....

95 Subject chaser settings

.....
.....
.....
.....

.....
.....

96 High sensitivity mode setting

.....

.....
.....
.....
.....

. 99 Digital zoom setting

.....
.....

.....
.....
.....
.....

.....
.....
.....

. 99 Exposure compensation

.....
.....
.....
.....

.....
.....
.....

.. 100 Storage folder setting

.....
.....
.....
.....

.....
.....
.....

..... 101 PLAYBACK PLAYBACK MENU 1 ..

.....
.....
.....
.....

.....
.....
.....
.....

. 102 Slideshow settings

.....
.....

.....
.....
.....
.....

.....
.....
.....

. 102 File protect setting

.....

.....
.....
.....

.....
.....
.....
.....

. 103 Resize

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

105 Rotate

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 105 PLAYBACK MENU 2 .

.....
.....
.....
.....

.....
.....
.....
.....

.. 106 Correcting the image ...

.....
.....

.....
.....
.....
.....

.....
.....

.. 185 Battery life ...

.....

.....
.....
.....

.....
.....
.....
.....

.....
185 Possible No. of Images/Possible Shooting Time/ Possible Recording Time

.....
.....
.....
.....
.....

..... 186 Concerning the multi-indicator

.....
.....
.....

.....
.....
.....

..... 187 Supplied battery pack charger ..

.....
.....
.....
.....

.....
.....
.....

188 Supplied Li-ion battery pack

.....
.....
.....
.....

.....
.....
.....

188 Others

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.... 189 Before capturing those important shots, be sure to first take a test shot to confirm that your camera is set up and ready to go .

.....
.....
.....
.....
.....

.....
.....
.....
.....

. 190 About the MPEG-4 Standard license

.....
.....
.....

... 190 HINTS FOR TAKING PICTURES ..

.....
.....

.....
.....
.....

..... 191 5 English QUICK SEARCH BY OPERATION Your camera has an abundance of convenient features and functions. From creating precisely the photo you want, to viewing images using various techniques, you can locate the exact operation for your purposes in the following table. Shooting/recording Basic operation Getting started shooting/recording · "VIDEO CLIP RECORDING" on page 62 · "SHOOTING SINGLE SHOTS" on page 63 · "Sequential shots" on page 88 · "Audio recording" on page 84 Convenient functions Log the date and time of your photos · "DATE AND TIME SETTING" on page 33 Additional functions For more accurate focus · "How to use the manual focus" (manual focus) on page 92 Zoom in on the subject · "MACROPHOTOGRAPHY (ZOOM)" on page 70 Set the focus to a narrow range · "Focus mode setting" on page 93 Close-up photography · "Focus range" (super macro mode) on pages 44 and 50 · "Select the focus setting" (super macro mode) on page 60 Reduce noise when recording · "NOISE REDUCTION setting" on page 125 Optimize the photo quality · "Select the recording size" on pages 44 and 59.

· "Video setting" on pages 48 and 84 · "Still image setting" on pages 48 and 88 Set the camera's color/contrast characteristics · "Image quality setting" on page 125 Capture fast-moving subjects · "Scene select" (sports mode) on page 48 Suppress camera shake effect · "Motion compensation (image stabilizer) setting" on pages 50 and 91 English 6 Shooting/recording Basic operation Convenient functions Additional functions Shoot in dark conditions · "Exposure compensation" on page 100 · "Using the flash" on pages 44, 48 and 66 · "Scene select setting" (night view portrait mode/fireworks mode/lamp mode) on pages 48 and 89 Increase the camera's sensitivity · "ISO sensitivity setting" on pages 50 and 94 · "High sensitivity mode setting" on pages 52 and 99 Photographing people · "Scene select setting" (portrait mode/night view portrait mode) on pages 48 and 89 · "Filter setting" (cosmetic filter) on pages 48 and 89 Capture sharp images · "Face chaser setting" on pages 52 and 97 · "Color chaser setting" on pages 52 and 96 Simplified operation for shooting/playback · "SWITCHING BETWEEN THE RECORDING MODE AND PLAYBACK MODE" on page 36 Photographing landscapes · "Scene select" (landscape mode) on page 48 Take a self-photo · "Self-timer setting" on pages 48 and 90 Make images lighter or darker · "Exposure compensation" on page 100 · "High sensitivity mode setting" pages 52 and 99 Measure the brightness of a specific area · "Light-measuring mode setting" on pages 50 and 93 Adjust the camera's sensitivity · "ISO sensitivity setting" pages 50 and 94 Change the color of the images · "Filter setting" (monochrome filter/sepia filter) on pages 48 and 89 Make white appear natural · "White balance setting" on pages 52 and 95 7 English Playback Basic operation Getting started viewing images · "PLAYING BACK VIDEO CLIPS AND STILL IMAGES" on page 72 Convenient functions Adjust the speaker volume · "PLAYBACK VOLUME" pages 53 and 77 Additional functions Change the angle of view · "Rotate" on pages 53 and 105 Search for image/ audio files · "21-image display playback" on page 81 · "Selecting the playback folder" on pages 54 and 82 Reduce the photo size · "Resize" on pages 53 and 105 Magnify an image · "Magnifying (zooming in) the image" on page 83 · "Audio playback" on page 86 Adjust the speaker volume · "PLAYBACK VOLUME" on pages 53 and 77 Continuous playback · "SLIDESHOW PLAYBACK" on pages 46, 76 and 102 Adjust the monitor brightness · "Adjusting the monitor brightness" on page 64 · "BRIGHTNESS setting" on page 125 Playback on a TV · "PLAYING BACK ON A TV" on page 158 Set the TV system · "TV output setting" on pages 127 and 131 English 8 File managing/processing Basic operation Convenient functions Additional functions Search for image/audio files · "21-image display playback" on page 81 · "Selecting the playback folder" on pages 54 and 82 Delete files · "DELETING FILES" on pages 46, 53 and 78 Protect files from accidental erasure · "File protect setting" on pages 53 and 103 Format a card · "Formatting (initializing)" on pages 127 and 137 Delete a part of a video clip and join video clips · "Editing video clips" on pages 54 and 107 Specify the number of prints, index print, and date imprint · "Printing instructions" on pages 54 and 116 View the settings that were in effect when the image/audio files were recorded · "FILE INFO DISPLAY" on page 120 9 English Using with a computer Basic operation Convenient functions Additional functions Use the camera as a card reader · "SETTING THE CONNECTION MODE" on page 143 · "USING AS A CARD READER" on page 146 Copy files from your camera to a computer · "Copy data from your camera to the computer" on page vi Playback · "About video clip files recorded with this camera" on page 150 Using as a webcam · "USING AS A PC CAMERA" on page 152 Record an image of the computer screen · "SCREEN CAPTURE" on page 162 English 10 CHECKING THE INCLUDED ACCESSORIES i Li-ion battery pack: 1 i Lithium-ion battery pack charger and power cord: 1 i Dedicated USB interface cable (page 143): 1 i Dedicated AV interface cable (page 157): 1 i Handstrap (page 13): 1 *To prevent from dropping the camera, be sure to attach the handstrap.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)
<http://yourpdfguides.com/dref/3242200>

i Lens cap (page 14): 1 11 English i GUIDE FOR BASIC OPERATION (VPC-GH3EX, VPC-GH3GX, VPC-GH3PX, VPC-GH3TA only) i SAFETY MANUAL (safety precautions booklet) Please read this booklet carefully before using the camera. i QUICK GUIDE i Obtaining the PDF instruction manual and cautions English 12 How to use the accessories k Handstrap 13 English k Lens cap <To remove> 1 Push in 2 Pull * Attach as shown in the illustration. English 14 ABOUT THE CARD Media cards that can be used with this camera The type of card that can be inserted into and used with this camera is: i SD Memory Card i SDHC Memory Card i SDXC Memory Card What "card" means in this manual i In this manual, SD Memory Cards, SDHC Memory Cards and SDXC Memory Cards that can be used in this dual camera are referred to as "card". 15 English GETTING THE MOST OUT OF YOUR CAMERA Your dual camera can record video clips in Full High Definition*.

It includes an operation mode that lets even novice shutterbugs record and play back without getting flustered, as well as software with which you can easily create your original DVDs. High-quality images with "Full High Definition*" (pages 48 and 59) Your camera can capture full high definition (full HD) 1920 × 1080-pixel video clips. Also, the H.264/MPEG-4 AVC standard is used for formatting video files. You get both compact file size and high picture quality in one highperformance camera.

* "Full High Definition" by SANYO Dual Camera signifies recording at a resolution of 1920 pixels horizontally × 1080 pixels vertically. English 16 Includes SIMPLE mode for quick-and-easy operation (page 37) Select from two recording/playback modes: the "SIMPLE mode" for users new to the camera, and the "NORMAL mode" for full use of all the camera's many features and functions. Example: Select video and photo size SN OK <SIMPLE Mode Recording Menu> RECORDING MENU 1 1 VIDEO 2 3 PHOTO SCENE SELECT 1 FILTER 2 FLASH 3 SELF-TIMER OK Full-HD 10M-S <NORMAL Mode Recording Menu> Image stabilizer for sharp pictures (pages 50 and 91) Your camera can compensate for the camera shake that results in blurry images when you try to capture a fast-moving subject or when you zoom in on a subject. 17 English Capture clear images of the targeted subject (pages 52 and 96) Both the color chaser feature to target a specific color, and the face chaser feature to capture clear face shots, are provided. Eye-Fi smart By inserting a commercially sold Eye-Fi card (SD card with wireless LAN) in your camera, you can easily upload photos to your computer, a sharing site, etc. automatically via a Wi-Fi network. Also, you can transfer video files if your Eye-Fi card has a video upload function. Instructions for the Eye-Fi transfer feature can be found at the following website: <http://sanyo.com/xacti/english/> English 18 SYSTEM MAP You can connect the camera to various devices to expand its capabilities. Internet Computer Dedicated USB interface cable Printer Dedicated AV interface cable TV Commercially available card i Card reader i DPOF-compatible printer i Photo shop 19 English SETUP SETUP PARTS NAMES Front Sub-REC buttons [R] button Video recording button 1 Insert your hand in the handstrap from the top of the camera.

2 Enfold the camera in the palm of your hand to grip it. 3 Use your thumb to operate the [O] and [R] buttons above the lens. SETUP [O] button Photo shooting button Zoom switch Monitor unit Lens Flash Stereo microphone * The tripod mounting hole is on the bottom. English 20 Rear [] button Photo shooting button [] button Video recording button Monitor Multi-indicator ZOOM RANGE button Card slot cover DC IN terminal cover Strap holder Battery cover Arrow keys MENU button REC/PLAY button ON/OFF button SET button Arrow keys 21 English CHARGING THE BATTERY PACK Please charge the supplied battery pack before using it. 1 Connect the supplied power cord to the socket on the battery pack charger. h Insert the connector straight and securely. Battery pack charger SETUP Power cord 2 Insert the battery pack in the battery charger. h Insert it in the direction indicated by the [o] mark on the battery pack. Battery pack charger Battery pack [o] mark CHARGE indicator 3 To power outlet Plug the power plug into a power outlet (AC 100 V to 240 V). h Charging begins.

h The CHARGE indicator is lit during charging. When the CHARGE indicator turns off, unplug the power cord from the power outlet, and remove the battery pack from the charger. 4 HINT i Charging takes approximately 120 min. English 22 Charging the battery pack Be sure to fully charge the supplied or separately sold battery pack before using it in your camera. For charging the battery pack, use the supplied charger.

Charge the battery pack if it is being used for the first time, and recharge it whenever the remaining charge is low. Does the battery pack feel hot? i During charging, the charger and battery pack will be warm. This is normal and does not indicate a malfunction. If there is interference to your TV or radio during charging..

. i Move the battery pack and charger further away from the TV or radio. Ambient temperature during charging i It is recommended that the ambient temperature during charging be between about 10 °C and 35 °C (50 °F and 95 °F). Due to the characteristics of the battery pack, at temperatures below 0 °C (32 °F), it may not be possible to sufficiently charge it. i When the battery pack temperature is high, the safety function may be activated and halt charging.

Charge a battery pack in the following cases i A battery pack which has not been used for a long time i Newly purchased battery pack FOR AMERICAN USERS: i Use a UL Listed, 1.8 to 3 m (6 to 10 ft.), Type SPT-2 or NiSPT-2, AWG No.18 power supply cord, rated for 125 V 7 A, with a non-polarized NEMA 1-15P plug rated for 125 V 15 A. 23 English About the CHARGE indicator The CHARGE indicator shows the status of the battery pack and the charger.

Please refer to the following table if the indicator flashes abnormally. CHARGE indicator Not lit Not connected properly i To recharge the battery pack, the power cord of the charger must be connected to a power outlet, and the plug at the other end inserted in the charger's power socket (page 22). i The battery pack is not installed, or it is not installed correctly (page 22). Charging finished Charging Problem with the battery pack or battery pack charger i Immediately remove the battery pack from the charger. i Do not use an abnormal battery pack. (The usable life of the battery pack has probably expired.) SETUP Lit Flashing CAUTION Do not charge the battery pack immediately after the camera has been in continuous use for a long time i The battery pack becomes hot when the camera is used continuously for a long time.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>

If you attempt to charge the battery pack in this state, the safety function may be activated and it may not be possible to charge the battery pack. Wait until the battery pack has cooled down before attempting to charge it. English 24 INSTALLING THE CARD Be sure to format a newly purchased card or one that was used in another device before using it in your camera (pages 127 and 137).

If an unformatted card is used, the card itself may become unusable. 3 Close the card slot cover. 1 Open the card slot cover. 2 Insert the card. <When removing the card. ...> h To remove the card, press it in, and then release. The card will protrude slightly, and you can then pull it out. 2 Pull it out 1 Push the card in 25 English CAUTION Do not attempt to forcibly remove the card i Doing so may damage the card or the stored files.

If the multi-indicator is flashing red... i Never remove the card when the multi-indicator is flashing red, as doing so may result in loss of files stored in the card. HINT Shooting without a card installed i When a card is installed, images are recorded to and played back from the card. When no card is installed, images are recorded to and played back from the camera's internal memory. When the camera is turned on with no card installed, the internal memory icon is shown on the monitor to let you know that the images you capture will be saved to the camera's internal memory. SETUP English 26 INSTALLING THE BATTERY PACK Please charge the supplied battery pack before using it. 3 Insert the battery pack 2 Open 1 Push out Battery cover 4 Close the battery cover. 27 English CAUTION Does the battery pack appear swollen? i The lithium-ion battery used in this camera may expand slightly when stored in a hot environment or repeatedly used, but this is not a safety hazard.

However, a battery that is difficult to insert because it has become swollen may then be impossible to extract from the battery compartment. In this case, please discontinue its use and replace it with a new battery. Do not use the battery with the outer covering or label removed i Doing so may result in malfunction. SETUP HINT About the internal backup battery i This camera's internal battery serves to maintain the date and time settings, as well as the shooting settings. The backup battery will be fully charged when the battery pack is kept in the camera continuously for about 2 days. In the fully charged state, the backup battery will maintain the camera settings for about 7 days. When not using the camera for a long time, remove the battery pack i A small amount of power is still used even if the camera is turned off, and it is therefore recommended that the battery pack be removed from the camera if it is not going to be used for a long time. Note that when the battery pack is removed for a long period, the time and date settings may be cleared. Before using your camera again, be sure to confirm that the camera settings are correct. To prolong the life of the battery pack i Although the battery pack is an expendable item, you can maximize the life of the battery by heeding the following suggestions.

h Do not leave the battery under the hot summer sun or exposed to other high-temperature environments. h Do not continually recharge the battery when it is already fully charged. After fully charging it once, for example, use it for a while to partially discharge it before recharging it again. h When the battery is not to be used for a long time, if possible store the partially charged (not fully charged) battery in a cool environment. English 28 About the temperature alert icon \ During camera use, if the temperature of the battery or inside the camera (excluding the battery) rises, a temperature alert icon \ will appear as described below.

k When the battery or internal camera (excluding battery) temperature rises during use h During camera use, if the temperature of the battery or inside the camera (excluding the battery) rises, a \ icon lights on the monitor. It is still possible to record and play back even when the \ icon is lit; however it is advised that you discontinue use as soon as possible and turn the camera off. h If the temperature rises further, the \ icon will start to flash, and the camera will turn off automatically. The camera cannot be turned on until the temperature has dropped (or as long as the \ icon remains flashing). Please wait until the temperature has dropped before resuming use.

h During video recording, a countdown indicator will show the time starting about 15 seconds before shutdown. When the indicator shows 0 seconds, recording stops. h If the camera is turned off while the temperature is high (that is, while the \ icon is flashing), it cannot be turned on again until the temperature has dropped (or as long as the \ icon remains flashing). 29 English TURNING THE CAMERA ON AND OFF Turning on the camera 1 Open the monitor unit, and press the ON/OFF button for at least 1 second. h If you briefly press the ON/OFF button, once, the camera will switch to the power save mode. h If you press the REC/PLAY button for at least 1 second, the camera turns on in the playback mode. SETUP REC/PLAY button ON/OFF button Monitor unit Turning off the camera 1 Press the ON/OFF button for at least 1 second. h The camera turns off. English 30 Turning on the camera when the power save (sleep) mode is active In order to preserve battery pack power, the power save (sleep) function will automatically turn off the camera after about 1 minute of no use during shooting, or about 5 minutes of no use during playback (factory-preset setting). i When the power save mode is active, you can restore the power by any of the following methods: h Press the ON/OFF button.

h Press the [] button. h Open the monitor unit. i After the power save mode has been active for about 1 hour, the camera will switch to the standby mode. In this case, you can restore the power by pressing the ON/OFF button, or by closing and then opening the monitor unit. i When the AC adaptor (optional) is connected, the power save mode will become active about 5 minutes after the camera is turned on (factory preset setting). i The user can specify the time elapsed before the power save mode is activated (page 127). i When the camera is connected to a computer or printer, the power save mode becomes active after about 12 hours. 31 English HINT To immediately activate the power save mode i Press the ON/OFF button briefly to activate the power save function. About the standby mode i To turn off the camera only briefly, you can close the monitor unit to put the camera in the standby mode. The standby mode uses almost no power.

When the monitor unit is opened again, the camera turns on immediately and you are ready to shoot or view images without any delay. CAUTION If the K icon appears... i When a picture is taken, the date and time it was captured are recorded with it.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>

If the date and time settings have not been completed (page 33), the date and time cannot be recorded with the captured images. For this reason, immediately after the camera is turned on, the "Set date and time" reminder briefly appears, after which the K icon is shown on the Recording Screen. To have the date and time recorded with the images, please complete this setting before capturing images. SETUP English 32 DATE AND TIME SETTING The camera will record the date and time an image or audio recording is taken so that you can display them during playback. Therefore, before capturing images, make sure the correct date and time are set.

h To correct the date and time setting, please see under HINT on page 35. Example: To set the clock to 7:30 p.m. on December 24, 2010 1 Turn on the camera (page 30), and press the SET button. h The Clock Set Screen appears. h Follow the procedures below to enable or disable the date display during playback, to set the display format for the date, and to set the date and time. h To display the Recording or Playback Screen, press the MENU button 2 times. Set the date. 1 Select "DATE". 2 Press the SET button.

h The Set Date Screen appears. 3 Set the date to "2010/12/24". h The date is set in the following order: Set the year Set the month Set the day. h Press [G] or [H] to select year, month or day. Press [I] or [J] to increase or decrease the number. 4 Press the SET button. CLOCK SET DATE TIME DISP 2010/07/01 00:00 D/M/Y OK 2 CLOCK SET DATE 2010/12/24 OK 33 English 3 Set the clock. 1 Select "TIME". 2 Press the SET button. h The Set Time Screen appears. 3 Set the time to "19:30". h The time is set in the following order: Set the hour Set the minute. h A 24-hour clock is used for the time display. 4 Press the SET button. Set the order in which the date is displayed during playback.

1 Select "DISP". 2 Press the SET button. h The Set Date Format Screen appears. 3 Press [I] or [J]. h Press [I] to change the displayed date order as follows: CLOCK SET TIME 19:30 OK SETUP 4 CLOCK SET DISP D/M/Y OK D/M/YY/M/DM/D/Y Press [J] to change it in the reverse order.

4 Press the SET button. English 34 5 Press the MENU button. h The date and time setting is completed. h To display the Recording or Playback Screen, press the MENU button. HINT i Under normal conditions, while the battery pack is being replaced, an internal battery will maintain the date and time settings. However, there is a small chance the settings may be lost (the backup will last for about 7 days). It is recommended to check that the date and time settings are still correct after replacing the battery pack and before shooting or recording of any type (follow step 1). To correct the date and time settings 1 Turn on the camera. 2 Display the Option Setting Menu 1 (page 121). 3 Select "CLOCK SET" and press the SET button.

h The screen to set the date and time appears. h The current date and time settings are shown. 4 Select the line you wish to change, and make the correction. 35 English SWITCHING BETWEEN THE RECORDING MODE AND PLAYBACK MODE Switch between the recording mode (for recording) and the playback mode (for viewing your recorded images). 1 2 Turn on the camera (page 30). SETUP Press the REC/PLAY button. h The mode changes. h The mode changes each time the REC/PLAY button is pressed. 7126 10M-S 001:00:12 SD Full-HD <Example of the recording mode> REC/PLAY button SD 2010.12.24 18:41 100-0006 2010.12.24 18:41 6.5MB 00:00:05 Full-HD 6.5MB OK 100-0006 00:00:05 <Example of the playback mode> English 36 SWITCHING THE OPERATING MODE The "SIMPLE mode" comprises only those functions that are most often used and necessary to operate the camera, while the "NORMAL mode" enables full use of all the camera's many functions.

Select the mode that is suitable for your purposes. Switching between the SIMPLE and NORMAL modes 1 2 3 Turn on the camera (page 30). h The previous mode is active. Press the MENU button. h The Menu Screen for the active mode appears.

Select the operating mode icon, and press the SET button. h Switch from the SIMPLE mode to the NORMAL mode, or from the NORMAL mode to the SIMPLE mode. h Press the MENU button to cancel the Menu Screen. SN Switch to detailed normal menu OK Operating mode icon <SIMPLE Mode Menu Screen> 1 2 3 1 2 3 Press SET button to switch to simple Menu OK SN Operating mode icon <NORMAL Mode Menu Screen> 37 English Accessing/exiting the SIMPLE/NORMAL Mode Menu Screen 1 2 3 Set the camera to the recording or playback mode (page 36). Select the desired operating mode (page 37).

SETUP If the Menu Screen is not displayed, press the MENU button. h The Menu Screen appears. h To cancel the Menu Screen, press the MENU button. SN Switch to detailed normal menu OK MENU button <Example: SIMPLE Mode Recording Menu> 1 2 3 1 2 3 Press SET button to switch to simple Menu OK SN <Example: NORMAL Mode Recording Menu> English 38 Using the SIMPLE Mode Menu 4 Press [I] or [J] to select the item you wish to change, and press the SET button. h The Setting Screen for the selected item appears.

Select an item to change Description of selected item Press [I] Select video and photo size SN OK Press [J] Press SET To keep in HDTV size 10M 2M HDTV size 10M [4:3] OK <Setting Screen> 39 English Using the NORMAL Mode Menu 4 Press [I] or [J] to select a tab. h The Menu Screen for the selected tab appears. Tab Press [I] RECORDING MENU 1 1 VIDEO 2 3 PHOTO SCENE SELECT 1 FILTER 2 FLASH 3 SELF-TIMER SN OK SETUP Full-HD 10M-S Press [J] 5 Press [H]. Press [H] RECORDING MENU 1 1 VIDEO 2 3 PHOTO SCENE SELECT 1 FILTER 2 FLASH 3 SELF-TIMER OK Full-HD 10M-S English 40 6 Press [I] or [J] to select the item you wish to change, and press the SET button. h The Setting Screen for the selected item appears. h To return to the Menu Screen, press the MENU button. Select an item to change Press [I] 1 VIDEO 2 PHOTO 3 RECORDING MENU 1 Full-HD 10M-S SCENE SELECT 1 FILTER 2 FLASH 3 SELF-TIMER OK Applicable mode Press [J] Press SET 12M 11M 10M-H 10M-S 7.5M 2M 4000x3000 4480x2520[16:9] 3648x2736 3648x2736 3648x2056[16:9] 1920x1080[16:9] SET OK <Setting Screen> 41 English HINT About the applicable mode indicator i This indicator shows the shooting mode(s) for which the selected setting is effective. : This setting is effective during still image shooting. : This setting is effective during video clip recording.

: This setting is effective during still image shooting and video clip recording. SETUP English 42 Overview of the SIMPLE Mode Setting Screen SIMPLE Mode Recording Menu Select video and photo size 1 2 3 4 SN OK 5 43 English 1 Recording size (page 59) h Select the video clip size to record.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>

q : The video clip size is 1920 × 1080 pixels, recorded at 60 fields/sec. The captured still image size is 3648 × 2736 pixels (4:3 aspect ratio). & 3 Flash (page 66) h Specify how the flash will operate.

9: The camera detects the subject brightness and uses the flash only when necessary. -: The flash operates with every image captured regardless of the conditions. -: The flash does not operate even in dark situations. 4 SETUP : The video clip size is 640 × 480 pixels, recorded at 30 frames/sec. The captured still image size is 1600 × 1200 pixels (4:3 aspect ratio).

S N (page 37) h Set to the NORMAL mode. 5 Remaining battery power indication (page 140) 2 Focus range (page 60) h Select the focus range that corresponds to the distance to the subject. 7: The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal). 8: The camera focuses on a subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).

English 44 SIMPLE Mode Playback Menu 4 1 2 3 SN Start slideshow OK 5 45 English 1 Slideshow (page 76) h Specify the slideshow settings and play the slideshow. 2 Playback volume (page 77) h Adjust the volume for video clip and audio file playback. 3 Delete (page 78) h Delete files. 4 S N (page 37) h Set to the NORMAL mode. 5 Remaining battery power indication (page 140) SETUP English 46 Overview of the NORMAL Mode Setting Screen NORMAL Mode Recording Menu <Tab 1> RECORDING MENU 1 1 VIDEO 2 3 PHOTO SCENE SELECT 1 FILTER 2 FLASH 3 SELF-TIMER OK Full-HD 10M-S 1 2 3 4 5 6 7 47 English 1 Video clip settings (page 84) <HD mode> !: Record at 1920 × 1080 pixels, 60 fields/s (60i). Y: Record at 1920 × 1080 pixels, 30 fps (30p). ": Record at 1280 × 720 pixels, 60 fps (60p). &: Record at 1280 × 720 pixels, 30 fps (30p). <SD mode>): Record at 640 × 480 pixels, 30 fps. <: Make an audio recording.

2 Still image settings (page 88) <Single-shot> I: Image size is 4000 × 3000 pixels. -: Image size is 4480 × 2520 pixels (16:9 aspect ratio). o: Image size is 3648 × 2736 pixels (low compression). p: Image size is 3648 × 2736 pixels (normal compression). N: Image size is 3648 × 2056 pixels (16:9 aspect ratio). +: Image size is 1920 × 1080 pixels (16:9 aspect ratio). G: Image size is 1600 × 1200 pixels. -: Image size is 1280 × 720 pixels (16:9 aspect ratio). [: Image size is 640 × 480 pixels. <Sequential shots> m: 3648 × 2736-pixel sequential shots.

t: 1600 × 1200-pixel sequential shots. 3 Scene select (page 89) =: Full auto setting a: Sports mode >: Portrait mode +: Landscape mode /: Night view portrait mode k: Snow & beach mode +: Fireworks mode Q: Lamp mode 4 Filter (page 89) &: No filter %: Cosmetic filter W: Monochrome filter ,: Sepia filter 5 Flash k: The camera will detect the subject brightness and use the flash only when necessary. m: The flash will operate with every image captured regardless of the conditions. l: The flash will not operate even in dark situations. 6 Self-timer (page 90) N: Self-timer is off. y: Shooting begins 2 seconds after the [] or [] button is pressed. x: Shooting begins 10 seconds after the [] or [] button is pressed. 7 Remaining battery power indication (page 140) SETUP English 48 <Tab 2> 1 RECORDING MENU 2 VIDEO STABILIZER 2 PHOTO STABILIZER 3 FOCUS 1 FOCUS MODE 2 EXP MEASURE 3 ISO OK 1 2 3 4 5 6 7 49 English 1 Video stabilizer (page 91) h Compensate for camera shake during video clip recording. \: Record with image stabilizer on.]: Record without image stabilizer.

2 Photo stabilizer (page 91) h Compensate for camera shake during still image shooting. \: Shoot with image stabilizer on.]: Shoot without image stabilizer. 3

Focus range (page 92) h Select the focus range that corresponds to the distance to the subject. *: The camera automatically focuses on the subject with a range of 50 cm (19.69 in.) to infinity (normal). -: The focus can be set manually. +: The camera focuses on the subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro). 4 Focus area (page 93) B: 9-point range finder focus C: Spot focus 5 Light-measuring mode (page 93) X: Multi-section light measuring W: Center-weighted light measuring Y: Spot light-measuring 6 ISO sensitivity (page 94) =: Sensitivity is set automatically *: Sets sensitivity to ISO 50 u: Sets sensitivity to ISO 100 v: Sets sensitivity to ISO 200 w: Sets sensitivity to ISO 400 6: Sets sensitivity to ISO 800 -: Sets sensitivity to ISO 1600

h The indicated ISO value is the standard output sensitivity. 7 Remaining battery power indication (page 140) SETUP English 50 <Tab 3> 1 RECORDING MENU 3 2 WHITE BALANCE 3 TARGET A SUBJECT HIGH SENSITIVITY 1 DIGITAL ZOOM 2 REC FOLDER 3 1 2 3 4 5 6 OK 51 English 1 White balance (page 95) >: White balance is automatically adjusted depending on the ambient lighting (auto).

r: For shooting in sunny conditions (fair). o: For shooting in overcast conditions (cloudy). p: For shooting under fluorescent lighting (fluorescent). q: For shooting under incandescent lighting (incandescent). ^: For setting the most accurate white balance (one push).

2 Subject chaser (page 96) Automatically target a specific color with the color chaser function, or capture sharp face shots with the face chaser function. -: Enable face chaser. (: Enable color chaser.): Disable face chaser and color chaser. 3 High sensitivity mode (page 99) 1: Increased sensitivity. 2: Normal sensitivity. 4 Digital zoom (page 70) Q: Enable the digital zoom. B: Disable the digital zoom. 5 Rec folder setting (page 101) 6 Remaining battery power indication (page 140) SETUP English 52 NORMAL Mode Playback Menu <Tab 1> 1 2 PLAYBACK MENU 1 SLIDESHOW PLAY VOLUME PROTECT 1

DELETE 2 ROTATE 3 RESIZE OK 1 2 3 4 5 6 7 1 Slideshow (page 102) h Specify the slideshow settings and play the slideshow. 2 Playback volume (page 77) h Adjust the volume for video clip and audio file playback.

3 Protect (page 103) h File protect setting (delete prohibited) 4 Delete (page 78) h Delete files. 5 Rotate (page 105) h Rotate a still image. 6 Resize (page 105) h Reduce the resolution of a still image. 7 Remaining battery power indication (page 140) 53 English <Tab 2> 1 2 1 2 3 PLAYBACK MENU 2 EDIT PHOTO EDIT VIDEO PRINT INSTRUCTIONS SELECT FOLDER COPY OK 1 2 3 4 5 6 SETUP 1 Edit photo (page 106) h Repair the "red-eye" caused by the flash, or enhance the contrast (still images only). 2 Video clip edit (page 107) h Edit video clips. 3 Printing instructions (page 116) h Specify the printing instructions (DPOF settings). 4 Select folder (page 82) h Select a folder to play back. 5 Copy h Copy files from the card to the internal memory, or vice versa. 6 Remaining battery power indication (page 140) English 54 SIMPLE SHOOTING SIMPLE/SHOOTING BEFORE TAKING PICTURES For best results Hold the camera securely, keeping your elbows close to your body and making sure the camera is stable.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>

Correct hold Incorrect hold <Holding the camera> A finger is blocking the lens or flash.

Example 1: 1 Insert your hand in the handstrap. 2 Enfold the camera in the palm of your hand to grip it. 3 Use your index finger to operate the zoom switch, and your thumb to operate the other controls. Example 2: 1 Insert your hand in the handstrap from the top of the camera. 2 Enfold the camera in the palm of your hand to grip it.

3 Use your thumb to operate the [O] and [R] buttons above the lens. <Caution> i Due to the characteristics of the camera, the outer surface may become warm during use, but this does not indicate a malfunction. i If the camera starts to feel uncomfortably hot during use, you might temporarily discontinue use until it cools down, or try holding it in your other hand for a while. Please use a tripod or other support when using the camera for a long time. 55 English Using the autofocus The autofocus will work in almost all situations; however, there are certain conditions that may cause the autofocus function to not work properly.

If the autofocus function is not working properly, set the focus range to capture images (page 60). k Conditions that may cause incorrect focus The following examples are some of the situations where the autofocus function may not work. SIMPLE/SHOOTING i Subjects with low contrast, very bright subjects at the center of the image or dark subjects or locations Use the focus-lock function to lock the focus on an object with contrast at the same distance as the desired subject. i Subjects without vertical lines Use the focus-lock function to lock the focus while framing the subject vertically, then re-orient the camera to compose a horizontally framed image. English 56 The following examples are some of the situations where the autofocus function may work, but not as desired. i When both near and far objects are present Use the focus-lock function to lock the focus on an object at the same distance as the desired subject, then reposition the camera to compose the picture. i Fast-moving subjects Use the focus-lock function to lock the focus on an object at the same distance as the desired subject, then reposition the camera to compose the picture. 57 English HINT i Still images can be rotated when they are played back (pages 53 and 105). i When the [] button is pressed halfway, the image in the monitor may waver vertically. This is the result of internal image processing and is not a malfunction.

This wavering is not recorded and will not affect your images in any way. i When the optical zoom is used or when the autofocus is operating, the image may appear to waver, but this is not a malfunction. SIMPLE/SHOOTING English 58 Select the recording size The larger the image size (number of pixels), the better the image quality will be, but the file size will also be larger. Select the image quality that is correct for the intended purpose. 1 Display the SIMPLE Mode Recording Menu (page 38), select the recording size setting, and press the SET button. To keep in HDTV size 10M 2M HDTV size 10M [4:3] OK q: The video clip size is 1920 × 1080 pixels, recorded at 60 fields/sec. & 2 The captured still image size is 3648 × 2736 pixels (4:3 aspect ratio). : The video clip size is 640 × 480 pixels, recorded at 30 frames/sec. The captured still image size is 1600 × 1200 pixels (4:3 aspect ratio). Select the desired recording size, and press the SET button.

h This completes the recording size setting. 59 English Select the focus range corresponding to the distance between the camera and the subject. 1 Display the SIMPLE Mode Recording Menu (page 38), select the focus setting, and press the SET button. SIMPLE/SHOOTING All ranges Automatic focus (people, landscape, etc.) OK 7: The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal). 8: The camera focuses on a subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro). 2 Select the desired focus range, and press the SET button. h This completes the focus range setting. English 60 Hints for taking pictures Muting the operation sounds i The audio guidance that sounds when you operate the camera can be muted (page 123). Where are the image and audio files saved? i All the image and sound files are recorded on the card installed in the camera, or in the camera's internal memory. Taking pictures in backlight conditions... i When taking pictures with the light coming from behind the subject, due to the characteristics of the lens, ghost patterns (flare phenomenon) may appear in the captured image.

In this situation, it is recommended that you avoid taking pictures with the subject lit from behind. While the image files are being recorded... i While the multi-indicator is flashing red, the image files are being written to the memory, during which time it is not possible to capture another image. Another image can be captured after the flashing red indicator turns off. However, even when the multi-indicator is flashing red, depending on the camera's internal memory remaining capacity, in some cases the next image can be captured about 2 seconds after shooting. 61 English VIDEO CLIP RECORDING 1 2 Turn on the camera (page 30), and set it to the recording mode (page 36). Press the [] button. h Recording begins.

h It is not necessary to keep the [] button pressed while recording. h When the remaining recording time available for the currently recording clip becomes little, a countdown of the remaining recording time appears on the display. End the recording. h Press the [] button again to stop recording. [] button SIMPLE/SHOOTING Recording time 3 2M REC 00:00:09 REC00:00:09 55 Full-HD Available recording time remaining English 62 SHOOTING SINGLE SHOTS Capture a still image (single-shot).

1 2 Turn on the camera (page 30), and set it to the recording mode (page 36). Press the [] button. 1 Press the [] button halfway. h The autofocus operates, and the image is focused (focus lock). 2 Continue to gently press the [] button all the way.

h The shutter releases and the image is captured. h You can view the captured image on the monitor by keeping the [] button depressed when you capture the image. 1 2 [] button 10M-S Target mark 63 English HINT Adjusting the monitor brightness i While the Recording Screen is active, you can quickly access the screen for adjusting the brightness of the monitor by pressing the MENU button for at least 1 second. What is the camera focusing on? Target mark i A target mark & on the monitor shows the area the camera is 10M-S focusing on. i The camera automatically determines the correct focus by measuring from 9 different focus points within the shooting area. If the target mark is at a position that is F3.5 1/2 different from the point you wish to focus on, you can refocus, for Camera shake icon example, by changing the shooting Shutter speed angle.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>

Aperture *i* The large target mark appears when the camera focuses on a wide area in the center of the screen. The focus and exposure can be locked (in the NORMAL mode) *i* By assigning an operation shortcut to an arrow key (pages 125 and 128), you can set the autofocus or the exposure to a fixed setting. When the exposure setting is fixed, the P icon appears on the monitor; when the autofocus setting is fixed, the p icon appears on the monitor.

i When the focus range (pages 48 and 89) setting or scene select setting is changed, the focus lock is released. The shutter speed and aperture are displayed (in the NORMAL mode) *i* The shutter speed and aperture settings are shown on the Recording Screen. You can use them as a reference when shooting. SIMPLE/SHOOTING English 64 If the camera shake icon > appears... (in the NORMAL mode) *i* During still image shooting, if the shutter speed is slow and the possibility that the image may be blurred due to camera shake becomes high, the camera shake icon may appear on the monitor. In this case, use a tripod to stabilize the camera when shooting, or set the flash operation mode to automatic (pages 44 and 66). *i* When shooting with the scene select function set to the fireworks + mode, the camera shake icon always appears, but this is normal. Does it seem to take a long time to save images? *i* When shooting in dimly lit conditions, it may take some time to save the data to the card.

65 English Using the flash The flash is not only used for photographing under dark conditions, but is also convenient for example when the subject is in shadow or lit from behind. The flash is available only when shooting single-shot still images. 1 Display the SIMPLE Mode Recording Menu (page 38), select the flash setting, and press the SET button. h The screen to select the flash operation appears. SIMPLE/SHOOTING Auto flash Flash operates automatically OK 9: The camera detects the subject brightness and uses the flash only when necessary. :: The flash operates with every image captured regardless of the conditions. :: The flash does not operate even in dark situations. 2 3 Select the desired flash operation, and press the SET button. h This completes the flash operation setting. Press the [] button to take the picture.

English 66 CAUTION Do not touch the flash unit when shooting *i* The flash unit becomes very hot and may cause a burn. Avoid touching the flash unit when shooting. HINT *i* The flash cannot be used during video clip recording. *i* By assigning an operation shortcut to an arrow key (pages 125 and 128), you can change the flash mode from the Recording Screen (NORMAL mode). 67 English SHOOT A STILL IMAGE WHILE RECORDING A VIDEO CLIP You can capture a still image (a single-shot) while recording a video clip. 1 2 3 Turn on the camera (page 30), and set it to the recording mode (page 36). [Press the [] button. [] button] button SIMPLE/SHOOTING When you see a scene you'd like to capture as a still image, press the [] button. Press the [] button to end the video clip recording. 4 2M Full-HD REC 00:00:09 REC 00:00:09 English 68 HINT *i* When shooting a still image while recording a video clip, the flash does not operate.

i The photo stabilizer (pages 50 and 91) is inoperative. *i* When the remaining video recording time becomes approximately 50 seconds, it will no longer be possible to capture a still image while recording a video clip. The exact remaining recording time at which this occurs will differ depending on the subject and on the recording size (page 59), as well as on the video clip recording mode (page 84). If you intend to capture a still image while recording a video clip, it is suggested that you take note of the remaining video recording time. About the recording size of still images *i* The size of a still image captured during video clip recording depends on the video clip recording size. Video clip recording size setting !Y "&) h It is not possible to capture sequential shots. Still image recording size + , [69 English MACRO-PHOTOGRAPHY (ZOOM) Your camera has two zoom functions: optical zoom and digital zoom. 1 2 Point the camera lens at the subject. Push the zoom switch toward [T/] or [W/P] to compose the desired image. [T/]: Zoom in on the subject.

[W/P]: Zoom out. h When the zoom switch is pushed, the zoom bar appears on the monitor. h When the optical zoom factor is at maximum, zooming stops temporarily. When the zoom switch is pushed toward the [T/] side again, the mode changes to the digital zoom mode and zooming continues. Take the picture.

For video clip recording, see page 62. For shooting single shots, see page 63. For shooting sequential shots, see page 88. Zoom switch [T/] [W/P] SIMPLE/SHOOTING ZOOM RANGE button Zoom bar 3 When both optical and digital zoom are enabled Optical zoom Digital zoom (yellow) When optical zoom only is enabled Pointer English 70 HINT When the ZOOM RANGE button is pressed..

. *i* The magnification is approximately doubled (double-range zoom). Press the button again to return to normal magnification. *i* The icon is shown on the Recording Screen during normal magnification, and a icon on the double-range zoom Recording Screen. *i* During video clip recording, the zoom range does not change even when the ZOOM RANGE button is pressed. 71 English PLAYBACK SIMPLE/PLAYBACK PLAYING BACK VIDEO CLIPS AND STILL IMAGES 1 2 Set the camera to the playback mode (page 36). SIMPLE/PLAYBACK Select the image to play back. h Use the arrow keys to move the orange frame to the file you wish to play back. h The image information for the framed image is shown at the bottom of the screen. Press the SET button.

h The image you selected in step 2 is displayed fullscreen. h If a video clip was selected, playback begins. <To return to the screen to select playback files> Press [J]. SD Orange frame 3 2010. 12.24 18:41 Full-HD 6.5MB 100-0006 00:00:05 OK SET button English 72 Video clip playback operation To do this... Normal forward playback Stop playback Pause To play back one image at a time (singleframe step) Slow playback Forward playback Reverse playback Forward playback Reverse playback Forward playback To accelerate playback Reverse playback Return to normal playback speed Adjusting the volume Do this Press the SET button.

During playback, press [J]. During playback, press the SET button or press [I]. During accelerated playback, press [I]. After pausing playback, press [H]. After pausing playback, press and hold [H]. After pausing playback, press and hold [G]. During forward playback, press [H]. h The playback speed changes each time [H] is pressed, as follows: Normal playback 2× 5× 10× 15× Press [G] to resume normal playback speed. During forward playback, press [G]. h The playback speed changes each time [G] is pressed, as follows: 15× 10× 5× 2× Press [H] to resume normal playback speed.



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)
<http://yourpdfguides.com/dref/3242200>

Press the **SET** button. Louder: During playback, push the zoom switch toward the **[T]** side. Softer: During playback, push the zoom switch toward the **[W]** side. 73 English **HINT** If the **a** appears on the playback Screen... i The **a** icon appears when playing back a file that was saved in segments (page 85). **SIMPLE/PLAYBACK** English 74 How to save one frame from a video clip as a still image 1 2 Play back the video clip. Pause the playback at the point you wish to "snap" a photo.

Press the **[]** button. h The screen to select the aspect ratio of the still image appears. Select the desired aspect ratio, and press the **[]** button. Note, however, that if the video clip aspect ratio is 4:3, you cannot select 16:9. **HINT** The file size for a video clip is very large i Therefore, be aware that if the video clip is uploaded to a computer to be played back, the computer may not be able to play back the video fast enough, making it appear jerky. (The video will always be displayed properly on the camera monitor or a television.) i Depending on the card, recording may end even before the possible recording time indicated.

Display the video clip playback point i During video clip playback, press the **MENU** button for at least 1 second to display a bar showing the current playback point in the video clip. i Press the **MENU** button for about 1 second to cancel the bar. **CAUTION** During video clip playback, the sound of a motor is audible.

.. i During recording, the sound of the optical zoom movement or autofocus movement was recorded. This is not a malfunction. If no audio is heard.

.. i The audio is not played back when the video clip is played back in the frame-by-frame, slow-motion, fast playback or reverse playback mode. 75 English **SLIDESHOW PLAYBACK** You can play back files in succession with the "slideshow playback" feature. 1 Display the **SIMPLE Mode Playback Menu** (page 38), select the slideshow setting, and press the **SET** button.

=: Play back all files. 3: Play back video clips and audio files. c: Play back still image files. **SLIDESHOW ALL VIDEO PHOTO START SIMPLE/PLAYBACK**

2 Select the type of file to play back, and press the **SET** button. h Slideshow playback begins. h To stop slideshow playback, press the **SET** button or **MENU** button. **HINT** About the slideshow settings i The slideshow settings can be changed from the **NORMAL Mode Playback Menu** (page 102). English 76 **PLAYBACK VOLUME** Adjust the playback volume for video clips and audio files. 1 Display the **SIMPLE Mode Playback Menu** (page 38), select the playback volume setting, and press the **SET** button. h The volume control bar appears.

PLAY VOLUME 4 2 Press **[G]** or **[H]** to set the volume, and press the **SET** button. h The playback volume is set, and the display returns to the **SIMPLE Mode Playback Menu**. **VOLUME SETTING** **HINT** The volume can be adjusted during playback i During video clip or audio file playback, if you push the zoom switch toward **[T/]** or **[W/P]**, the volume control bar will appear, allowing you to adjust the volume. 77 English **DELETING FILES** You can delete files if you no longer need them. You can delete single files, selected files or all the files at one time. Delete single/delete all/delete folder 1 Display the **SIMPLE Mode**

DELETE Playback Menu (page 38), select the delete setting, and press the **DELETE SINGLE SET** button. **DELETE SELECTED DELETE SINGLE: DELETE ALL** Deletes one file at a time. **DELETE FOLDER DELETE SELECTED: DELETES** the selected files **OK** (page 79). **DELETE ALL: DELETES** all files. **DELETE FOLDER: DELETES** the folder and all the files in the folder.

SIMPLE/PLAYBACK 2 Select the desired delete mode, and press the **SET** button. h The Delete Confirmation Screen appears. <**DELETE SINGLE**> h Press **[G]** or **[H]** to select the file you wish to delete. h There is no confirmation screen when deleting single files. Please make sure that the displayed image is one you wish to delete.

<**DELETE ALL**> h Press **[G]** or **[H]** to confirm the files to delete. <**DELETE FOLDER**> h Press **[I]** or **[J]** to select the folder you wish to delete. English 78 3 Select "**DELETE**", and press the **SET** button. <**DELETE SINGLE**> h The currently displayed file is deleted. h To delete other files, select the files, select "**DELETE**" and press the **SET** button.

<**DELETE ALL, DELETE FOLDER**> h The Delete Confirmation Screen again appears. To delete the files, select "**DELETE**" and press the **SET** button. Then select "**YES**" and press the **SET** button, and the files will be deleted. When file delete is completed, "No image" is shown. Delete selected Delete selected files.

1 2 Display the **SIMPLE Mode Playback Menu** (page 38), select the delete setting, and press the **SET** button. Select "**DELETE SELECTED**", and press the **SET** button. h The screen to select files to delete appears. 2010. 12.

25 14:25 Full-HD 37.6MB OK **DELETE** 100-0006 00:00:25 SD 3 Select an image you wish to delete. h Use the arrow keys to move the orange frame to the file you wish to delete. 79 English 4 Press the **SET** button. h The selected file is marked with the delete icon **[]**. h Up to 100 files can be selected. h To cancel a delete selection and remove the delete icon from a file, move the orange frame to the marked file and press the **SET** button. Press the **[]** or **[]** button. h The Confirm Delete Screen appears. 5 6 **SIMPLE/PLAYBACK** Select "**YES**", and press the **SET** button.

h The selected files are deleted. **HINT** In the **NORMAL** mode i When you select "**DELETE**" from the **NORMAL Mode Playback Menu** and press the **SET** button, the Delete Screen appears. **CAUTION** i Files that are protected from accidental delete cannot be deleted. To delete protected files, set the protect setting for the files to off (pages 53 and 103), and then follow the file delete procedure. English 80 **PLAYBACK MODES** 21-image display playback 1 2 3 Display the image you wish to play back.

Push the zoom switch toward the **[W/P]** side. h The 21-image display appears. Select the image to play back. h Use the arrow keys to move the orange frame to the desired image, and press the **SET** button. h Pushing the zoom switch toward the **[T/]** side will show the 8-image display.

h If the zoom switch is pushed toward the **[W/P]** side while the 21-image display is shown, the display changes to the screen to select the playback folder (page 82). h It is not possible to perform the file delete or file protect settings on the 21-image display. Zoom switch **[W/P]** **SET** button 2010.12.26 14:25 100-0021 81 English Selecting the playback folder If the card contains multiple folders, you can select from which folder you would like to play back. 1 2 Display the Playback Screen. Push the zoom switch toward the **[W/P]** side twice. h The screen to select the playback folder appears. h If the zoom switch is pushed toward the **[T/]** side, the camera changes to the 21-image display (page 81).



[You're reading an excerpt. Click here to read official SANYO VPC-GH3 user guide](http://yourpdfguides.com/dref/3242200)

<http://yourpdfguides.com/dref/3242200>