



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SENNHEISER RS 4200 II. You'll find the answers to all your questions on the SENNHEISER RS 4200 II in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SENNHEISER RS 4200 II**  
**User guide SENNHEISER RS 4200 II**  
**Operating instructions SENNHEISER RS 4200 II**  
**Instructions for use SENNHEISER RS 4200 II**  
**Instruction manual SENNHEISER RS 4200 II**



[You're reading an excerpt. Click here to read official SENNHEISER RS 4200 II user guide](http://yourpdfguides.com/dref/3992845)  
<http://yourpdfguides.com/dref/3992845>

**Manual abstract:**

.....  
.....  
.....  
.....

.....  
... 2 Delivery includes ..

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.... 5 RS 4200-2 II product variant .

.....  
.....  
.....  
.....

... 5 Operating controls .....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 6 Receiver ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 6 Transmitter ....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
6 LED indications .....

.....  
.....

.....  
.....  
.....  
.....

... 6 Connection possibilities ..

.....  
.....  
.....  
.....

. 6 Putting the system into operation ....

.....  
.....

.. 7 Setting up the transmitter ...

.....  
.....  
.....  
.....

..... 7 Connecting the transmitter to the sound source .....

.... 7 Connecting the transmitter to the mains .

.....  
.....

..... @@@@ @@@@.....

.....  
.....  
.....  
.....  
.....  
.....

.... 16 Specifications .....

.....  
.....  
.....  
.....  
.....

.... 17 Manufacturer Declarations .

.....  
.....  
.....  
.....  
.....

Always maintain a distance of at least 3.94" (10 cm) between the ends of the earbows with the ear pads and the cardiac pacemaker or implanted defibrillator. In order to prevent accidents: Ensure that the mains unit is readily operable, easily accessible and properly plugged into the wall socket. Unplug the mains plug from the wall socket to disconnect the product from the mains during lightning storms or when unused for long periods of time. Do not wear the product in an environment that requires your special attention (e.g.

in traffic). To reduce the risk of fire or electric shock, do not use the product near water and do not expose it to rain or moisture. @@Switch off the product after use to conserve battery power. @@Do not place the product on delicate surfaces. @@@@Use only a dry and soft cloth to clean the product.

@@@@@In extreme cases, they may even present . . . a heat hazard, a fire hazard, an explosion hazard, a smoke or gas hazard. Sennheiser does not accept any liability for damage arising from abuse or misuse. RS 4200 II \ 3 Important safety instructions Keep away from children. When not using the product for extended periods of time, remove the rechargeable batteries from the product. Only use rechargeable batteries specified by Sennheiser.

Immediately remove rechargeable batteries from an obviously defective product. Dispose of rechargeable batteries at special collection points or return it to your specialist dealer. Only charge the rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F. Do not mutilate or dismantle.

Do not expose to moisture. Only charge the rechargeable batteries with the appropriate Sennheiser chargers. Pack/store charged batteries so that the terminals cannot contact each other danger of shorting out/fire hazard. @@Do not continue to use defective rechargeable batteries. Do not heat above 70°C/158°F, e.g.

@@@@@TV). @@as this can decrease the transmitter's range. @@@@Check the connection possibilities of your sound source (e.g. @@@@This improves the quality of wireless sound transmission. If necessary, check the menu setting of your TV. With most TVs, the headphone socket is located at the front or sides. Depending on the socket, you may have to use the adapter F. @@@@Connect the connection cable E to the SCART adapter H. Plug in the SCART adapter H to the SCART socket on your TV.

@@Connect the microphone to the blue socket AUDIO 5 on the transmitter. @@@@Plug the mains connector into a wall socket. Align the antenna 9 vertically. When not using the transmitter for extended periods of time (e.g.

@@In this case, however, the receiver's rechargeable battery will not be recharged. RS 4200 II \ 9 Putting the system into operation Inserting and removing the receiver's rechargeable battery The receiver is delivered with the battery inserted. Insert the battery into the compartment 2 as shown on the left. Make sure that the battery is inserted correctly. To remove the battery, use the finger catch projection to pull the battery out of the receiver.

2 Before using the rechargeable battery for the first time, charge it until the LED C lights up green (see "Storing and charging the receiver" on page 13). This can take a maximum of 3 hours. Inserting a spare rechargeable battery into the transmitter's charging compartment You can charge a spare battery (not included) in the charging compartment A at the side of the transmitter. This spare battery is not required for operating the receiver Do not store your receiver on a glass dummy head, chair armrest, or similar for long periods of time as this can reduce the contact pressure of the earbows. Furthermore, with the earbows pulled apart, the receiver remains switched on. After use, place the receiver into the transmitter's charging compartment 0 as shown on the left, without exerting too much pressure. @@green: The rechargeable battery is fully charged. @@This can take a maximum of 3 hours. With a fully charged battery, the operating time is approx. 9 hours.

@@The intelligent battery charging technology prevents overcharging. @@@@@@Keep all liquids far away from the devices. Before cleaning, disconnect the transmitter from the mains. Only use a slightly damp cloth to clean the devices. Do not use any cleansing agents or solvents. Cleaning the ear pads For reasons of hygiene, the ear pads should be replaced from time to time. Please order the ear pads from your Sennheiser dealer. Carefully remove the ear pads from the receiver. Clean the ear pads with warm soapy water and rinse thoroughly. Dry the ear pads before putting them back on the receiver.

0 RS 4200 II \ 15 If a problem occurs... If a problem occurs..

. Check if the problem you face is listed in the table below: Problem Possible cause Page 7 ff 7 ff 9 11 11 12 10 You cannot hear Are all jack plugs connected anything correctly? Is the transmitter connected to the sound source? Is the transmitter connected to the mains? Is the volume of the sound source sufficient?

Is the green operation indication lit? Is the volume of the receiver sufficient? Is the rechargeable battery fully charged and inserted properly into the receiver? The sound is subject to interference Is the receiver still within the transmitter's range? Is interference being received from an external source in close proximity? Is the "Speech intelligibility" button backlit in yellow? Is the volume of the headphone socket on the sound source sufficient? 7 12 The speech intelligibility is reduced 13 11 You hear the Is the balance adjusted correctly? @@@@70 dB(A) Power supply for transmitter 9 VDC/300 mA via NT09-3A mains unit Power supply for NT09-3A mains unit Energy efficiency of the mains unit Weight Dimensions 125 dB (SPL) via BA 300 rechargeable battery (3.7 V / 150 mAh) approx. 9 hrs approx.

50 g approx. 200 x 135 x 20 mm 100200 V~/5060 Hz/ max. 100 mA level V, standby power consumption < 0.3 W approx. 150 g approx. @@KG gives a warranty of 24 months on this product. @@@@This will help to protect the environment in which we all live. @@Please dispose of them as special waste or return them to your specialist dealer.



[You're reading an excerpt. Click here to read official SENNHEISER RS 4200 II user guide](http://yourpdfguides.com/dref/3992845)  
<http://yourpdfguides.com/dref/3992845>

*In order to protect the environment, only dispose of ex-hausted batteries. CE Declaration of Conformity · R&TTE Directive (1999/5/EC) · EMC Directive (2004/108/EC) · Low Voltage Directive (2006/95/EC) · EuP Directive (2005/32/EC) The declaration is available at [www.sennheiser.com](http://www.sennheiser.com).*

*sennheiser.com. Before putting the product into operation, please observe the respective country-specific regulations! 18 \ RS 4200 II Sennheiser electronic GmbH & Co. KG Am Labor 1, 30900 Wedemark, Germany [www.sennheiser.com](http://www.sennheiser.com) Printed in China, Publ. 04/11, 545186/A01 .*



**[You're reading an excerpt. Click here to read official SENNHEISER  
RS 4200 II user guide](#)**

<http://yourpdfguides.com/dref/3992845>