



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP AM-300/400. You'll find the answers to all your questions on the SHARP AM-300/400 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP AM-300/400
User guide SHARP AM-300/400
Operating instructions SHARP AM-300/400
Instructions for use SHARP AM-300/400
Instruction manual SHARP AM-300/400

SHARP
AM-300/400
QUICK SETUP GUIDE

For detailed instructions on setting up and using the AM-300/400, see the online guide on the CD-ROM.
To open the guide, double-click the **Manual** folder on the CD-ROM, double-click **English**, and then double-click **Online Manual.pdf**.
Note: Acrobat Reader 5.00 or higher is required to view the manual. To install Acrobat Reader 5.00, double-click **Acrobat Reader - English**, and then **run50setup.exe** on the CD-ROM.
All company names and product names appearing in this setup guide are the trademarks of their respective owners.

English

1. Make sure you have the following items. If any are missing, contact your dealer or retailer.
Note: The shape of the line cord plug varies by country. An adapter (not shown) is provided in some countries.
Telephone line, Toner cartridge, Drum cartridge, Output tray, Document feeder tray, Output, CD-ROM
2. Attach the trays.
When the tray stops, lift the tray and swing it up.
3. Important: Pull the scanner release lever and you to release the scanner lock.
Caution: Be sure to release the scanner lock before plugging in the power cord.
4. Plug the power cord into a standard earthed power outlet.
Note: The power outlet must be installed near the equipment and must be easily accessible.
Note: The shape of the line cord plug varies by country.
5. AM-400 only: Connect the phone line cord to the TEL LINE jack and a wall jack.
Note: The shape of the line cord plug varies by country.
Note: The shape of the line cord plug varies by country.

6. Install the toner cartridge and drum cartridge.

1. Press **1** to open the side cover **1** and then the front cover **2**.
2. Remove the drum cartridge from its packaging.
Caution: Do not touch the rollers and under the side cover after the machine has been in operation, as it may become very hot.
3. Insert the drum cartridge, sliding along the guides until it clicks into place.
Press on the arrow mark to make sure the cartridge clicks into place.
4. Close the front cover **3** and then the side cover **4**.
5. Press **1** to select "YES" and then press **2**. (This resets the toner cartridge counter.)
Display: TONER EXHAUSTED
YES, 2 INK
6. Remove the toner cartridge from its packaging. Shake the cartridge side to side four or five times to distribute the toner evenly within the cartridge.
Grasp the handle to push the cartridge in.
7. Reset the drum cartridge counter:
a. Press **1** and then **2**.
b. Press **3** and then **4**.
c. Press **5** repeatedly to exit.

7. Load paper.

1. Remove the output tray.
2. Insert a stack of paper into the tray print side up.
The stack should not be higher than this line.
3. Squeeze the sides of the paper guide and slide it to the slot for the length of paper loaded.
4. Replace the output tray.

8. AM-400 only: Set the date and time that appear in the fax mode display.

1. In the date and time display of fax mode (press **1** if needed to select fax mode), press **2**.
2. Enter a two-digit number for the day ("0" to "31").
Example: the 05: **0** **5**
3. Enter a two-digit number for the month.
Example: February: **0** **2**
4. Enter the year (four digits).
Example: 2003: **2** **0** **0** **3**
5. Enter a two-digit number for the hour (00 to 23) and a two-digit number for the minute (00 to 59).
Example: 0:25: **0** **0** **2** **5**
6. Press **3**.
7. Press **4** repeatedly to exit.

PRINTED IN THAILAND (TCA0157)B1K02



[You're reading an excerpt. Click here to read official SHARP AM-300/400 user guide](http://yourpdfguides.com/dref/1290479)
<http://yourpdfguides.com/dref/1290479>

Manual abstract:

To open the guide, double-click the Manual folder on the CD-ROM, double-click English, and then doubleclick Online Manual.pdf. (Note: Acrobat Reader 5.05 or higher is required to view the manual. To install Version 5.05, double-click Acrobat Reader, English, and then ar505enu.exe on the CD-ROM.) All company names and product names appearing in this setup guide are the trademarks of their respective owners. 1 Make sure you have the following items. If any are missing, contact your dealer or retailer.

Note: The shape of the line cord plug varies by country. An adapter (not shown) is provided in some countries. Telephone line Toner cartridge cord (AM-400 only) 2 Attach the trays. Drum cartridge Output tray Document feeder tray Setup Guide CD-ROM When the tray stops, lift the end slightly and push in. 3

Important: Pull the scanner release toward you to release the scanner lock.

Caution: Be sure to release the scanner lock before plugging in the power cord. 4 Plug the power cord into a standard, earthed power outlet. Note: The power outlet must be installed near the equipment and must be easily accessible. 5 AM-400 only: Connect the phone line cord to the TEL. LINE jack and a wall jack.

Italy: Use the provided adapter to connect the line cord to the wall socket. Note: The shape of the power plug varies by country Note: The shape of the line cord plug varies by country. TEL. LINE TEL. SET 6 Install the toner cartridge and drum cartridge. 1. Press . Open the side cover and then the front cover . 1
2. Remove the drum cartridge from its packaging.

3. Insert the drum cartridge, sliding it along the guides. 4. Remove the toner cartridge from its packaging. Shake the cartridge side to side four or five times to distribute the toner evenly within the cartridge. 3 2 Caution! Do not touch the fusing unit under the side cover after the machine has been in operation, as it may become very hot. Grasp this handle to push the cartridge in. 5. @@ Close the front cover and then the side cover . 7. Press then press to select "YES" and 8.

Reset the drum cartridge counter: a. Press A MENU . @@ b. Press c. @@ 1.

Remove the output tray. 2. @@ In the date and time display of fax mode (press FAX if needed to select fax MENU 5. Enter a two-digit number for the hour (00 to 23) and a two-digit number for the minute (00 to 59). Example: 9:25 6.

Press 7. Press ENTER mode), press , , . 2. Enter a two-digit number for the day ("01" to "31"). Example: the 5th . repeatedly to exit. 3. Squeeze the sides of the paper guide and slide it to the slot for the length of paper loaded. 4. Replace the output tray.

To clear a mistake press Example: February Z . 3. Enter a 2-digit number for the month. 4. Enter the year (four digits) Example: PRINTED IN THAILAND (TCADH3785XHZZ) English 9 . Install the software on your computer. (The software allows the machine to be used as a printer and scanner.) Note: A USB 2.0 or 1.1 cable is required to connect the machine to your computer. Please purchase this separately.

1. Make sure that a USB cable is not connected to the machine and your computer. (The cable will be connected in Step 11.) If a cable is connected and a Plug and Play window appears, close the window and disconnect the cable. If you installed the MFP drivers using a Custom installation and did not install Sharpdesk, the following window will appear.

Click OK and go to Step 11. Windows® Me: This completes the installation of the software. Note: In the power management settings in the Control Panel, System stand by must be set to Never. 2. Insert the Sharp CD-ROM into your computer's CD-ROM drive.

3. Windows® XP: Click the start button, click My Computer, and double-click the CD-ROM icon. @@ 4. Double-click the setup icon () in the CDROM window. 5. @@ 6. Follow the on-screen instructions. 9. The following window will appear. @@ In Windows® XP, the Found New Hardware Wizard will appear.

@@ @@ Select No, not this time and click Next. 10. The Search Setup Wizard will appear. @@ @@ @@ 14. @@ @@ 12. @@ Windows® 2000: This completes the installation of the software. @@ This will complete the installation of the software. 7. @@ 8. @@ @@ @@ @@ Windows® 2000 3.

The SHARP AM-300/400 Properties appear. Click on the Events tab. 4. Select SC1 from the Select an event list. 5.

@@ Click Apply. 1. Click the Start button, point to Settings, and select Control Panel. 2. In the Control Panel, double-click Scanners and Cameras.

3. Select SHARP AM-300/400 and click Properties. 4. Click the Events tab in the SHARP AM-300/400 Properties. 5. Select SC1 from the Scanner events list. 6. @@ Click the start button, click Control Panel, and double-click Scanners and Cameras. If Scanners and Cameras does not appear in Windows Me, click view all Control Panel options. 2.

Right-click the SHARP AM-300/400 icon and select Properties. If other applications appear in the list, make sure that none are selected. 6. Repeat Steps 4 and 5 for each of events SC2 through SC6. When finished, click the OK button. AM-400 only: This is a facsimile product operating in German, Austrian, Swiss, French, Italian, Swedish, Finnish, Norwegian, Danish, Spanish, Portuguese, Greek, Hungarian, Dutch and Belgian analogue public switched telephone networks which follow the TBR21 Standard. Dies ist ein Faxprodukt für den Betrieb in deutschen, österreichischen, schweizerischen, französischen, finnischen, norwegischen, dänischen, spanischen, portugiesischen, griechischen, ungarischen, niederländischen und belgischen öffentlichen, analogen Telefonnetzen, die den TBR21-Standard verwenden. Ce télécopieur fonctionne sur les réseaux téléphoniques publiques commutés et analogiques allemand, autrichien, suisse, français, italien, suédois, finnois, norvégien, danois, espagnol, portugais, grec, hongrois, hollandais et belge qui respectent la norme TBR21. Questo apparecchio facsimile funziona sulle reti telefoniche commutate pubbliche tedesche, svizzere, austriache, francesi, italiane, svedesi, finlandesi, norvegesi, danesi, spagnole, portoghesi, greche, ungheresi, olandesi e belghe che seguono lo standard TBR21. Detta är en faxmaskin som fungerar tillsammans med tyska, österrikiska, schweiziska, franska, italienska, svenska, finska, norska, danska, spanska, portugisiska, grekiska, ungerska, holländska och belgiska analoga kopplade telefonnätverk som följer TBR21-standarden.

Tämä on faksilaite, joka toimii analogisissa julkisissa yleisissä valinnaisissa verkoissa, jotka noudattavat TBR21 standardia, seuraavissa maissa: Saksa, Itävalta, Sveitsi, Ranska, Italia, Ruotsi, Suomi, Norja, Tanska, Espanja, Portugali, Kreikka, Unkari, Alankomaat ja Belgia. Dette er et faksprodukt som kan brukes i offentlige telenett som følger TBR21-standarden i følgende land: Tyskland, Østerrike, Sveits, Frankrike, Italia, Sverige, Finland, Norge, Danmark, Spania, Portugal, Hellas, Ungarn, Nederland og Belgia.



[You're reading an excerpt. Click here to read official SHARP](#)

[AM-300/400 user guide](#)

<http://yourpdfguides.com/dref/1290479>

Dette er et faxprodukt, der fungerer i tyske, østrigske, schweiziske, franske, italienske, svenske, finske, norske, danske, spanske, portugisiske, græske, ungarske, hollandske og belgiske analoge offentlig tilsluttede telefonnetværker, som følger TBR21 Standarden. Este producto es un fax que funciona en las redes telefónicas públicas conmutadas (RTPC) analógicas de Alemania, Austria, Suiza, Francia, Italia, Suecia, Finlandia, Noruega, Dinamarca, España, Portugal, Grecia, Hungría, Países Bajos y Bélgica y que cumple la norma TBR21. @@@@ Click the Apply button.

8. Repeat Steps 5 through 7 for each of events SC2 through SC6. When finished, click the OK button. The Declaration of Conformity can be viewed at the following URL address. Die Konformitätserklärung kann unter folgender URL-Adresse eingesehen werden.

Vous pouvez consulter la Déclaration de conformité sur Internet, à l'adresse ci-dessous. La Dichiarazione di conformità può essere consultata all indirizzo URL riportato di seguito. Överensstämmelsedeklarationen finns att läsa på följande URL-adress. Yhdenmukaisuusvakuutus on.



[You're reading an excerpt. Click here to read official SHARP](#)

[AM-300/400 user guide](#)

<http://yourpdfguides.com/dref/1290479>