




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP AR-5316. You'll find the answers to all your questions on the SHARP AR-5316 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP AR-5316
User guide SHARP AR-5316
Operating instructions SHARP AR-5316
Instructions for use SHARP AR-5316
Instruction manual SHARP AR-5316



MODEL

- AR-5316
- AR-5320
- AR-5316 X
- AR-5320 X

DIGITAL MULTIFUNCTIONAL SYSTEM
SOFTWARE SETUP GUIDE

	Page
• INTRODUCTION	2
• BEFORE INSTALLATION	3
• INSTALLING THE PRINTER DRIVER	4
• CONNECTING TO A COMPUTER	8
• CONFIGURING THE PRINTER DRIVER	9
• HOW TO USE THE ONLINE MANUAL	10
• TROUBLESHOOTING	11



[You're reading an excerpt. Click here to read official SHARP AR-5316 user guide](http://yourpdfguides.com/dref/2423035)
<http://yourpdfguides.com/dref/2423035>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 2 BEFORE INSTALLATION

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 3 G HARDWARE AND SOFTWARE REQUIREMENTS ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 3 G INSTALLATION ENVIRONMENT AND INSTALLATION PROCEDURE..

.....
.....
.....

.....
.....
.....

..... 3 INSTALLING THE PRINTER DRIVER

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 4 G INSTALLATION IN WINDOWS XP (USB/PARALLEL CABLE) ..

.....
.....
.....

.....
.....
.....
.....

..... 4 G INSTALLATION IN WINDOWS 98/Me/2000 (USB CABLE)

.....
.....

.....
.....
.....
.....

.. 5 G INSTALLATION IN WINDOWS 95/98/Me/NT 4.0/2000 (PARALLEL CABLE) ..

.....
.....

.....
.....
.....

..... 6 CONNECTING TO A COMPUTER ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 8 G CONNECTING A USB CABLE

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....

..... @@@@ @ @11 INTRODUCTION This manual explains how to install and configure the software that is required for the printer functions of the machine. The procedure for viewing the Online Manual is also explained. Note · The screen images in this manual are mainly for Windows XP.

With other versions of Windows, some screen images may be different from those in this manual. · The explanations in this manual are based on the North American version of the software. Versions for other countries and regions may vary slightly from the North American version. · Where "AR-XXXX" appears in this manual, please substitute the name of your model for "XXXX". For the name of your model, see "DIFFERENCES BETWEEN MODELS" in the Operation Manual. · This manual refers to the "SHARP Digital Multifunctional System AR-5316/5320 Software CD-ROM" simply as "CD-ROM". Trademark acknowledgments · Microsoft® Windows® operating system is a trademark or copyright of Microsoft Corporation in the U.S.A. and other countries. · Windows® 95, Windows® 98, Windows® Me, Windows NT® 4.0, Windows® 2000, and Windows® XP are trademarks or copyrights of Microsoft Corporation in the U.S.A. and other countries.

· Acrobat® Reader Copyright© 1987- 2002 Adobe Systems Incorporated. All rights reserved. Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated. · IBM and PC/AT are trademarks of International Business Machines Corporation. · All other trademarks and copyrights are the property of their respective owners.

The display screens, messages, and key names shown in the manual may differ from those on the actual machine due to product improvements and modifications. 2 BEFORE INSTALLATION HARDWARE AND SOFTWARE REQUIREMENTS Check the following hardware and software requirements before installing the software. Computer type Operating system*2 IBM PC/AT or compatible computer equipped with a USB 1.1*1 or bi-directional parallel interface (IEEE 1284) Windows 95, Windows 98, Windows Me, Windows NT Workstation 4.0 (Service Pack 5 or later)*3, Windows 2000 Professional*3, Windows XP Professional*3, Windows XP Home Edition*3 An environment on which any of the operating systems listed above can fully operate Other hardware requirements *1 Compatible with Windows 98, Windows Me, Windows 2000 Professional, Windows XP Professional or Windows XP Home Edition preinstalled models equipped with a USB interface as standard. *2 Printing is not available in MS-DOS mode. *3 Administrator's rights are required to install the software using the installer. INSTALLATION ENVIRONMENT AND INSTALLATION PROCEDURE Follow the appropriate installation procedure for your operating system and type of cable as indicated below. Operating system Windows XP Windows 98/Me/2000 Windows 95/98/Me/ NT 4.0/2000 Cable USB/Parallel USB Parallel Procedure to follow INSTALLATION IN WINDOWS XP (USB/PARALLEL CABLE) (p.

4) INSTALLATION IN WINDOWS 98/Me/2000 (USB CABLE) (p. 5) INSTALLATION IN WINDOWS 95/98/Me/NT 4.0/2000 (PARALLEL CABLE) (p. 6) 3 INSTALLING THE PRINTER DRIVER Note · In the following explanations it is assumed that the mouse is configured for right hand operation. · If an error message appears, follow the instructions on the screen to solve the problem.

@@(Normally the correct language is selected automatically.) message may appear more than once), click the "Yes" button. 5 6 Read the message in the "Welcome" window and then click the "Next" button. When you are asked how the printer is connected, select "Connected to this computer" and click the "Next" button. 9 When the finish screen appears, click the "OK" button.

Note After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer. 10 Make sure that the power of the machine is turned on, and then connect the USB cable. (p. 8) Windows will detect the machine and the Plug and Play screen will appear.

11 Follow the instructions in the Plug and Play screen that appears in your version of Windows to begin the installation. This completes the installation of the software. @ @9) 5 INSTALLING THE PRINTER DRIVER INSTALLATION IN WINDOWS 95/98/Me/NT 4.0/2000 (PARALLEL CABLE) 1 The USB or parallel cable must not be connected to the machine.

@ @If this happens, click the "Cancel" button to close the window and disconnect the cable. Note The cable will be connected in step 12. 7 When the interface selection screen appears, select "Parallel" and click the "Next" button. 2 3 4 Insert the CD-ROM into your CD-ROM drive. @ @Double-click the "setup" icon (). 8 Select the printer port and click the "Next" button. Select "LPT1" for the printer port. Note If the language selection screen appears after you double click the "setup" icon, select the language you wish to use and click the "Next" button. (Normally the correct language is selected automatically.) 5 Read the message in the "Welcome" window and then click the "Next" button.

If you are using Windows 95/NT 4.0, go to step 8. Note 6 When you are asked how the printer is connected, select "Connected to this computer" and click the "Next" button. If "LPT1" does not appear, another printer or peripheral device is using LPT1. In this case continue the installation, and after the installation is finished, change the port setting so that the machine can use LPT1. This procedure is explained in "Another printer is using the parallel port (when using a parallel cable)" on page 12. 9 When the model selection window appears, select model name of your machine and click the "Next" button. For the name of the model that you are using, see "DIFFERENCES BETWEEN MODELS" in the Operation Manual. 10 Click the "Yes" button. 6 INSTALLING THE PRINTER DRIVER 11 When the finish screen appears, click the "OK" button.

Note After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer. 12 Turn off the power of the machine and your computer, and connect the machine to your computer with the parallel cable.



[You're reading an excerpt. Click here to read official SHARP AR-5316 user guide](http://yourpdfguides.com/dref/2423035)
<http://yourpdfguides.com/dref/2423035>

(p. 8) After connecting th316_5320.

pdf" icon. The Online Manual will appear. · If you will be viewing the Online Manual repeatedly, you may find it convenient to copy this Online Manual file to your computer. · The Online Manual can be printed out using Acrobat Reader. SHARP recommends printing out the sections which you refer to regularly. · Refer to "Help" of Acrobat Reader for more details on how to use Acrobat Reader. Installing Acrobat Reader 1 2 Insert the CD-ROM into the CD-ROM drive. In Windows95/98/Me/NT4.0/2000, double-click "My Computer", and then double-click the CD-ROM icon. 3 Double-click the "Acrobat" folder, and then double-click the "ar500enu.exe" icon. Follow the on-screen instructions to install Acrobat Reader. 10 TROUBLESHOOTING If the software does not install correctly, check the following items on your computer. @@@@ Select the option "Warn" and then install the printer driver as explained in "INSTALLING THE PRINTER DRIVER". Two items should appear: your controller chipset type and Root Hub.

If these items appear, you can use the USB port. If the "Universal Serial Bus controllers" shows a yellow exclamation point or does not appear, you must check your computer manual for USB troubleshooting or contact your computer manufacturer. 4 Once you have verified that the USB port is enabled, install the software as explained in "INSTALLING THE PRINTER DRIVER". 11 TROUBLESHOOTING The Printer driver cannot be correctly installed by Plug and Play (Windows 2000/XP) In Windows 2000/XP, if the printer driver cannot be correctly installed by Plug and Play (for example, Plug and Play takes place without copying the required files for the printer driver installation), follow these steps to remove unneeded devices and then install the printer driver as explained in "INSTALLING THE PRINTER DRIVER" (p. 4). Another printer is using the parallel port (when using a parallel cable) If another printer is using the parallel port and printing is not possible using the machine, follow the steps below to change the port setting of the other printer driver, and make sure that the port of the printer driver for the machine is set to LPT1. 1 1 Click the "start" button, click "Control Panel", and then click "Performance and Maintenance". In Windows 2000, click the "Start" button, select "Settings", and then click "Control Panel". Click the "start" button, click "Control Panel", click "Printers and Other Hardware", and then click "Printers and Faxes". In Windows 95/98/Me/NT 4.

0/2000, click the "Start" button, select "Settings", and then click "Control Panel". 2 Click "System", click the "Hardware" tab, and click the "Device Manager" button. Note In Windows 2000, double-click the "System" icon, click the "Hardware" tab, and click the "Device Manager" button. 2 Click the icon of the printer driver for which you wish to change the port setting, and select "Properties" from the "File" menu. Click the "Ports" tab.

In Windows 95/98/Me, click the "Details" tab. 3 4 3 Click the devices". icon beside "Other Select "FILE:" in the "Print to the following port" list box, and click the "OK" button. If "SHARP AR-XXXX" appears, select and delete both of these items. Note If "Other devices" does not appear, close the "Device Manager" window.

5 6 7 4 Install the software as explained in "INSTALLING THE PRINTER DRIVER". Click the "SHARP AR-XXXX" printer driver icon and select "Properties" from the "File" menu. Click the "Ports" tab. In Windows 95/98/Me, click the "Details" tab. Select "LPT1" in the "Print to the following port" list box, and click the "OK" button. Note In the event that you need to use the other printer, repeat the above steps to set the port of the machine to "FILE:", and change the port setting of the other printer back to "LPT1". 12 AR-5316/AR-5320/AR-5316 X/AR-5320 X SHARP CORPORATION Printed on 100% post-consumer recycled paper PRINTED IN CHINA 2003M KS TINSE1209QSZZ.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/2423035)

[AR-5316 user guide](http://yourpdfguides.com/dref/2423035)

<http://yourpdfguides.com/dref/2423035>