



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP GX-M10(OR)/(RD). You'll find the answers to all your questions on the SHARP GX-M10(OR)/(RD) in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.







User manual SHARP GX-M10(OR)/(RD)
User guide SHARP GX-M10(OR)/(RD)
Operating instructions SHARP GX-M10(OR)/(RD)
Instructions for use SHARP GX-M10(OR)/(RD)
Instruction manual SHARP GX-M10(OR)/(RD)

SHARP
Quick Start Guide
MODEL
GX-M10H(OR)
GX-M10H(RD)
PORTABLE CD STEREO SYSTEM

If you require any advice or assistance regarding your Sharp product, please visit our website www.sharp.co.uk/customer-support.aspx
Customers without Internet access may telephone 0845 880 0513 during office hours (or (01) 676 0648 if telephoning from Ireland).

This Quick Start Guide will help you to correctly install and operate your system.
Illustration printed in this quick guide are for the model GX-M10H(OR)

Accessories

 AC power lead x 1	 Remote control x 1 (RNR03A2GRWS)	 Stand in Pod x 1
 "AA" size battery (UM/SUM-3, R6, HP-7 or similar) x 1	 Disk spacer x 1	 Carrying strap x 1

Placing the unit

To get the best display viewing angle, place the unit as below.

Position 1
- On the shelf / table.

Position 2
- On the floor / ground.

Remote control battery installation

Use an "AA" size batteries (UM/SUM-3, R6, HP-7 or similar).


- 1 Open the battery cover.
- 2 Insert the batteries as shown.
- 3 Close the cover.

Turn on your system

The first time the unit is plugged in with AC power, the unit will enter the demonstration mode.

- 1 Press the ONSTAND-BY button to turn the power on.

System connections

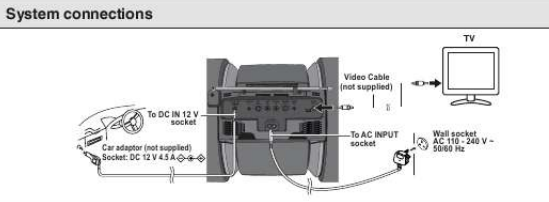

To DC IN 12 V socket
Car adaptor (not supplied)
Socket: DC 12 V 4.5 A

Video Cable (not supplied)

To AC INPUT socket
Wall socket
AC 110 - 240 V - 50/60 Hz

TV

TVSEPH16WZZ

124 R K1



[You're reading an excerpt. Click here to read official SHARP GX-M10\(OR\)/\(RD\) user guide](http://yourpdfguides.com/dref/4685772)
<http://yourpdfguides.com/dref/4685772>

Manual abstract:

Position 1 - On the shelf / table. Accessories M PORTABLE MUSIC BOO BOX GX-M10 Foot cushion 1 and 2 touching the surface. (RRMCGA292AWSA)
Position 2 - On the floor / ground. PORTABLE MUSIC BOOMBOX GX-M10 Foot cushion 2 and 3 touching the surface. Remote control battery installation (UM/SUM-3, R6, HP7 or similar) x 1 Use an "AA" size batteries (UM/SUM-3, R6, HP-7 or similar). Turn on your system The first time the unit is plugged in with AC power, the unit will enter the demonstration mode. 1 Open the battery cover. 1 Press the ON/STAND-BY button to turn the power on. 2 Insert the batteries as shown. PORTABLE MUSIC BOOMBOX GX-M10 TIMER REMOTE SENSOR 3 Close the cover.

Barcodesoft <http://www.barcodesoft.com> Barcode Symbology: Code 93; Font Facename: Code93M Data To Encode: TINSEA414AWZZ Point Size 8 : Point Size 10 : Point Size 12 : Point Size 14 : *TINSEA414AWZZTJ* Video Cable (not supplied) To DC IN 12 V socket Car adaptor (not supplied) Socket: DC 12 V 4.5 A To AC INPUT socket System connections TV *TINSEA414AWZZTJ* Wall socket AC 110 - 240 V ~ 50/60 Hz TINSEA414AWZZ *TINSEA414AWZZTJ* 12H R KI 1 *TINSEA414AWZZTJ* 1 Listening to the iPod, iPhone and iPad iPod, iPhone and iPad connection (USB only) iPod and iPhone connection (Dock only) Unplug all accessories from the iPod or iPhone before inserting it into the dock. Note: Do not use the docking station to connect your iPad. 1 Open the iPod door by pushing the iPod door open knob to the area marked ' '. Cautions: Close the iPod door if not in use. @@@@Press the iPod / button on the remote control or the main unit to select iPod function. Insert iPod or iPhone unit into the dock of main unit. "DOCK OK" will appear. Make sure to close the iPod door before playback. @@@@Connect a guitar/microphone to the correct input socket. Make sure that the cable has a 6.3 mm (1/4") diameter plug. @@Then, thread the cable through the bottom of the unit. @@@@Place the disc on the spindle, label side up. 4 5 Cable holder Thread the cables under the unit 6 Connect the cables to a guitar/microphone. Select a source. @@@@Make sure there is no playback from Audio In connection. Adjust the volume (GAIN) knob on the connected equipment.

5 6 Close the CD compartment. Press the CD / button to start playback. .



[You're reading an excerpt. Click here to read official SHARP GX-M10\(OR\)/\(RD\) user guide](http://yourpdfguides.com/dref/4685772)

<http://yourpdfguides.com/dref/4685772>