



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP LC-24LE240E. You'll find the answers to all your questions on the SHARP LC-24LE240E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP LC-24LE240E
User guide SHARP LC-24LE240E
Operating instructions SHARP LC-24LE240E
Instructions for use SHARP LC-24LE240E
Instruction manual SHARP LC-24LE240E

SHARP
LC-22LE240E
LCD COLOUR TELEVISION OPERATION MANUAL

SHARP
SHARP ELECTRONICS (Europe) GmbH
Sonninstraße 3, D-20097 Hamburg
SHARP CORPORATION
<http://www.sharp-eu.com>

PIN

HDMI
HIGH DEFINITION MULTIMEDIA INTERFACE

HD TV
1080p

DVB
Digital Video Broadcasting



[You're reading an excerpt. Click here to read official SHARP LC-24LE240E user guide](http://yourpdfguides.com/dref/4685800)
<http://yourpdfguides.com/dref/4685800>

Manual abstract:

.....
.....
.....

.. @@@@3 Important safety precautions ...

.....
.....

. @5 Package Contents

.....
.....
.....
.....

..... 7 Environmental Information

.....
.....
.....

... 7 Repair Information ..

.....
.....

..... 7 Remote Control Buttons .

.....
.....
.....
.....

8 LCD TV and Operating Buttons

.....
.....

9 Viewing the Connections - Back Connectors

.... 9 Viewing the Connections - Side Connectors .

..... 10 Power Connection ...

.....
.....
.....
.....

10 Aerial Connection

.....
.....
.....
.....

10 Using USB Inputs

.....
.....
.....

.....
.....
.....

11 Connecting to a DVD Player via HDMI

..... 12 Connecting to a DVD Player via Component Sockets (YPbPr) or Scart Cable ...

.....
.....
.....

.... 12 Connecting the LCD TV to a PC.....

.....
.....
.....

. 13 Using Side AV Connectors

.....
.....
.....

..... 13 Remote Control Handset

.....
.....
.....

.... 13 Inserting Batteries .

.....
.....
.....

..... 13 Switching On/Off.

.....
.....
.....

.....
.....
.....

13 To Switch the TV On

.....
.....
.....

. 13 To Switch the TV to Standby.....

.....
.....
.....

13 To Switch the TV Off

.....
.....
.....

.....
.....
.....

. 13 Input Selection

.....
.....
.....
.....
.....

..... @@ 14 Operation with the Buttons on the TV

.....
.....

14 Operation with the Remote Control

..... 14 Viewing Electronic Programme Guide (EPG) ..

.....
.....

15 Recording via EPG Screen

.....
.....
.....

. 15 Programme Options....

.....
.....
.....
.....

..... @@@@ 17 Auto Channel Scan (Retune) Menu Operation ..

.. @@ 18 Digital Aerial Manual Search.....

.....
.....

. 18 Digital Cable Manual Search*

.....
.....

..... 18 Analogue Manual Search ..

.....
.....
.....

. 18 Analogue Fine Tune.....

.....
.....

... 18 Managing Stations: Channel List ..

.....
.....

..... 19 Operating the Channel List .

.....
.....

19 Moving a Channel

.....
.....

.....
.....

..... 19 Deleting a Channel

.....
.....
.....
.....
..... 19 Renaming a Channel ..
.....
.....
.....
.....
.....
..... 19 Locking a Channel ..
.....
.....
.....
.....
..... 19 Managing Stations: Favourites
.....
.....
.....
.....
..... 20 Button Functions
.....
.....
.....
.....
.....
..... 20 Managing Stations: Sorting Channel List ..
.....
.....
..... 20 On-Screen Information
.....
.....
.....
.....
..... 20 Media Playback Using Media Browser ...
.....
..... 20 Timeshift Recording .
.....
.....
.....
.....
.....
..... 23 Instant Recording .
.....
.....
.....
.....
.....
..... 23 Watching Recorded Programmes
.....
.....
..... 24 Changing Image Size: Picture Formats
.....

.. 24 Configuring Picture Settings ...
.....
.....
.....
.....
25 Operating Picture Settings Menu Items
..... *25 Picture Settings Menu Items ...*
.....
.....
.....
..... *25 PC Picture Settings....*
.....
.....
.....
.....
..... *26 Configuring Sound Settings .*
.....
.....
.....
.....
... 26 Operating Sound Settings Menu Items ..
.....
..... *26 Sound Settings Menu Items....*
.....
.....
.....
..... *26 Configuring Your TV's Settings ...*
.....
.....
.....
..... *27 Operating Settings Menu Items*
.....
.....
..... *27 Settings Menu Items .*
.....
.....
.....
.....
.....
27 Using a Conditional Access Module
.....
.....
. 28 Viewing Conditional Access Menu ()*
..... *28 Configuring Language Preferences ...*
.....
.....
..... *28 Language Settings ..*
.....
.....
.....
.....
.....
.. 29 Parental Control...
.....

.....

.....

.....

.....

.....

... 29 Parental Settings Menu Operation

.....

.....

... 29 Timers

.....

.....

.....

.....

.....

.....

.....

.....

30 Setting Sleep Timer

.....

.....

.....

.....

.. 30 Setting Programme Timers ...

.....

.....

.....

... 30 Recording Configuration ..

.....

.....

.....

.....

.....

.. 30 Configuring Date/Time Settings

.....

.....

.....

31 Configuring Source Settings

.....

.....

.....

... 31 Configuring Other Settings

.....

.....

.....

..... 31 Operation ..

.....

.....

.....

.....

.....

.....

.....

..... 31 Other Features

.....
.....
.....
.....

.....
.....
..... 32 Teletext .
.....

.....
.....
.....
.....

.....
.....
.....
..... 33 Tips

.....
.....
.....
.....

.....
.....
.....
.....

..... 33 Appendix A: PC Input Typical Display Modes.....
.. 34 Appendix B: AV and HDMI Signal Compatibility (Input Signal Types)...

.....
.....
.....

..... 34 Appendix C: Supported DVI Resolutions..

.....
.. 35 Appendix D: Supported File Formats for USB Mode...

.....
.....
.....

.....
.....
.....

. 36 Appendix E: Software Upgrade

.....
.....
..... 37 Specifications .
.....

.....
.....
.....
.....

.....
..... 38 Digital Reception (DVB-C) .

.....
.....
.....
.....
.....
.....
38 Dimensional Drawings

.....
.....
.....
.....
.....
.....
.....
.. 39 End of life disposal

.....
.....
.....
.....
.....
.....
.....
.... 40 Installing the Stand .

.....
.....
.....
.....
.....
.....
.....
..... 41 Uninstalling the Stand....

.....
.....
.....
.....
.....
.....
.....
.... 42 Screw Dimensions .

..... 43 English - 1 - A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 1 15.03.2012 17:31:26 *SPECIAL NOTE FOR USERS IN THE U.K. The mains lead of this product is fitted with a non-rewireable (moulded) plug incorporating a 5A fuse. Should or and of the same rating the fuse need to be replaced, a BSI or ASTA approved BS 1362 fuse marked as above, which is also indicated on the pin face of the plug, must be used. Always refit the fuse cover after replacing the fuse.*

Never use the plug without the fuse cover fitted. In the unlikely event of the socket outlet in your home not being compatible with the plug supplied, cut off the mains plug and fit an appropriate type. DANGER: The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner. Under no circumstances should the cut-off plug be inserted elsewhere into a 5A socket outlet, as a serious electric shock may occur. To fit an appropriate plug to the mains lead, follow the instructions below: IMPORTANT: The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: • The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black.

• The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red. Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three pin plug. Before replacing the plug cover make sure that: • If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug. • The cord grip is clamped over the sheath of the mains lead, and not simply over the lead wires. IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN. English - 2 -

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 2 15.03.2012 17:31:27 Features • Remote controlled colour LCD TV. • Fully integrated Terrestrial digital-cable TV (DVBT-C- MPEG2) (DVB-T-C MPEG4).

• HDMI connectors for digital video and audio. This connection is also designed to accept high definition signals. • USB input. • Programme recording • Programme timeshifting • 1000 programmes (analogue+digital). • OSD menu system. • Integrated tuner DVB-T-C HD, MPEG 2 / MPEG 4 compatible. • Scart socket for external devices (such as video, video games, audio set, etc.). • Stereo sound system. (German+Nicam) • Teletext, fastext, TOP text. • Headphone connection. • Automatic programming system. • Forward or backward manual tuning. • Sleep timer / Child lock. • Automatic sound mute when no transmission.

• NTSC playback. • AVL (Automatic Volume Limiting). • Auto power down. • PLL (Frequency Search). • PC input.

• Plug&Play for Windows 98, ME, 2000, XP, Vista, Windows 7. • Game Mode Dear SHARP customer Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read Important safety precautions carefully before using this product. Introduction Please read the corresponding instructions of this handbook prior to the first usage of the device, even when the usage of electronic devices is familiar to you. Notice especially the chapter SAFETY PRECAUTIONS. Carefully keep the handbook as future reference. When selling the device or giving it away, absolutely give these direction for use. Thank you for choosing this product. This manual will guide you for the proper operation of your TV. Before operating the TV, please read this manual thoroughly.

Please do keep this manual in a safe place for future references. This device is intended to receive and display TV programs. The different connection options make an additional expansion of the reception and display sources possible (receiver, DVD player, DVD recorder, VCR, PC etc.). This device is only suitable for the operation in dry interiors. This appliance is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the device is not used as intended, or unauthorized modifications have been made.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC-24LE240E user guide](#)

<http://yourpdfguides.com/dref/4685800>

To operate your LCD TV in extreme ambient conditions may cause the damage of the device. Preparation For ventilation, leave a free space of at least 10 cm all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

Use this device in moderate climates. • The illustrations and the OSD in this operation manual are for explanation purposes and may vary slightly from the actual operations. • The examples used throughout this manual are based on the LC-22LE240E model. English - 3 - A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 3 15.

03.2012 17:31:28 Important safety precautions • Cleaning—Unplug the AC cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners. • Use a soft damp cloth to gently wipe the panel when it is dirty.

To protect the panel, do not use a chemical cloth to clean it. Chemicals may cause damage or cracks in the cabinet of the TV. • Water and moisture—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement. • Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock. • Stand—Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.

• When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart. • Ventilation—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings in an environmentally friendly manner. Find out about the legal regulations which apply in your area. • Do not try to recharge batteries, there is a danger of explosion. Replace batteries only with the same or equivalent type. This symbol on the product or on its packaging means that your elesit divx.com for more information and software tools to convert your files into DivX video. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX® Video-on-Demand (VOD) movies.

To obtain your registration code, locate the DivX® VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration. The Standby Off/On button doesn't separate this device completely from mains.

Moreover the device consumes power in the standby operation. In order to separate the device completely from mains, the mains plug has to be pulled from the mains socket. Because of that the device should be set up in a way, that an unobstructed access to mains socket is guaranteed, so that in case of emergency the mains plug can be pulled immediately. To exclude the danger of fire, the power cord should principally be separated from the mains socket prior to a longer period of non-usage, i.e.

during vacations. • "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC." DivX Certified® to play DivX® video, including premium content. English - 6

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 6 15.03.2012 17:31:29 Package Contents Environmental Information • This television is designed to consume less energy to save environment. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: LCD TV • You can use Power Save Mode setting, located in the Other Settings menu. If you set Power Save Mode as On, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum level.

Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode. Batteries: 2 X AAA • When the TV is not used, please switch off at the rear rocker switch to further reduce power consumption. • Disconnect the TV from the mains socket when it will not be used for prolonged periods. • When the TV is left in stand-by it consumes a small amount of power switching off at the rear rocker switch or disconnect the TV from the mains will make further energy savings. Note activating the "Power Save Mode" saves on an annual bases more energy than switching off the mains when the TV is not used, to save most energy it is highly recommended that "Power Save Mode" is switch on. Instruction Book Remote Control Quick Guide Repair Information Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV. Please contact your local dealer, where you have purchased this TV for further information. 1 X Video & Audio Connection Cable 1 X Component Video Connection Cable Note: You should check the accessories after purchasing. Make sure that each accessory is included.

As the manufacturer's specification supports communication on cable lengths shall be smaller than 3m. English - 7 -

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 7 15.03.2012 17:31:29 Remote Control Buttons 1.

Standby 2. Image size / Zooms videos (in Media Browser video mode) 3. Sleep Timer 4. Mono / Stereo - Dual I-II / Current Language (*) (in DVB channels) 5. Favourite Mode Selection (in DVB channels) 6.

Numeric buttons 7. Electronic programme guide (in DVB channels) 8. No function 9. Media Browser 10. Navigation buttons (Up/Down/Left/Right) 11. No function 12. Recordings Library 13. Programme Down / Page up - Programme Up / Page down 14. Mute 15. Programme recording 16.

Pause (in Media Browser mode) / Timeshift recording 17. Rapid reverse (in Media Browser mode) 18. Play (in Media Browser mode) 19. Red button 20. Green button / List Schedule (in EPG) / Tag / Untag All (in favourite list) / Play-Slideshow (in Media Browser) / Loop-Shuffle (in Media Browser) 21. Picture mode selection / Changes picture mode (in Media Browser video mode) 22. No function 23. Teletext / Mix (in TXT mode) 24. Subtitle on-off (in DVB channels) 25. Previous programme 26.

AV / Source selection 27. Menu on-off 28. Okay (Confirm) / Hold (in TXT mode) / Edit Channel List 29. Exit / Return / Index page (in TXT mode) 30. No function 31.

Info / Reveal (in TXT mode) 32. Volume Up / Down 33. No function 34. No function 35. Rapid advance (in Media Browser mode) 36. Stop (in Media Browser mode) 37.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/4685800)

[LC-24LE240E user guide](http://yourpdfguides.com/dref/4685800)

<http://yourpdfguides.com/dref/4685800>

Blue button / Edit Channel List / Filter (In Favourite List&EPG) 38. Yellow button / Timeline Schedule (in EPG) English - 8
A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 8 15.03.2012 17:31:34 LCD TV and
Operating Buttons FRONT and REAR VIEW Control buttons VIEW Control Buttons 1. Up direction 2. Down direction 3. Programme/Volume / AV / Standby-
On selection switch Note: You can move the switch, upward or downward to change the volume. If you want to change channels, press the middle of the switch
once (Position 3) and then move upward or downward.

If you press the middle of the switch once more, source OSD will be displayed. To select desired source, move the switch upward or downward and release. If
you press the middle of the switch and hold about a few seconds, the TV will switch to standby mode. Main menu OSD cannot be displayed via control
buttons. Viewing the Connections - Back Connectors 1. HDMI 1: HDMI Input HDMI Inputs are for connecting a device that has an HDMI socket. Your LCD
TV is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be
connected via the HDMI sockets or Component Socket. These sockets can accept either 720p or 1080i signals. No sound connection is needed for an HDMI to
HDMI connection.

2. RF Input connects to an aerial antenna system or a cable. Note that if you use a decoder or a media recorder, you should connect the aerial cable through
the device to the television with an appropriate antenna cable, as shown in the illustration in the following pages. 3. SCART input or output for external
devices.

Connect the SCART cable between SCART socket on TV and SCART socket on your external device (such as a decoder, a VCR or a DVD player). Note: If an
external device is connected via the SCART socket, the TV will automatically switch to AV mode. Note: S-VHS signal is supported via the scart socket
(optional). 4. PC Input is for connecting a personal computer to the TV set.

Connect the PC cable between the PC INPUT on the TV and the PC output on your PC. 5. SPDIF Coaxial Out outputs digital audio signals of the currently
watched source. Use an SPDIF coaxial cable to transfer audio signals to a device that has SPDIF input English - 9 -

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 9 15.03.2012 17:31:35 Viewing the
Connections - Side Connectors 1. CI Slot is used for inserting a CI card. A CI card allows you to view all the channels that you subscribe to. For more
information, see "Conditional Access" section.

2. USB Inputs. Note that programme recording feature is available via these USB inputs. You can connect external hard disk drives to this input. 3.
Component Video Input (YPbPr) is used for connecting component video. You can connect the component video and audio sockets with a device that has
component output. To do this, you must use the supplied component video connection cable for enabling connection. First, plug single jack of the cable to the
TV's YPbPr socket (side). Afterwards, insert your component cable's (not supplied) connectors into the plural part of the Component video connection cable.

Colours of the connected jacks should match. 4. Side audio-video connection input is used for connecting video and audio signals of external devices. To
make a video connection, you must use the supplied AV connection cable for enabling connection. First, plug singular jack of the cable to the TV's Side AV
socket.

Afterwards, insert your video cable's (not supplied) connector into the YELLOW input (located on the plural side) of the supplied AV connection cable.
Colours of the connected jacks should match. To enable audio connection, you must use RED and WHITE inputs of the side AV connection cable. Afterwards,
insert your device's audio cable's connectors into the RED and WHITE jack of the supplied side AV connection cable. Colours of the connected jacks should
match.

Note: You should use audio inputs of side AV connection cable (RED & WHITE) to enable sound connection when connecting a device to your TV by using
PC or COMPONENT VIDEO input. 5. Headphone jack is used for connecting an external headphone to the system. Connect to the HEADPHONE jack to
listen to the TV from headphones (optional). 6. Volume/ Programme/ Source and Standby-On switch 7. , switch is used for turning the TV on or off. Power
Connection IMPORTANT: The TV set is designed to operate on 220-240V AC, 50Hz. •After unpacking, allow the TV set to reach the ambient room
temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet.

Aerial Connection • Connect the aerial ,cable TV plug to the AERIAL INPUT socket located at the rear of the TV. English - 10 -
A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 10 15.03.2012 17:31:40 Using USB
Inputs USB Connection • You can connect a USB hard disk drive or USB memory stick to your TV by using the USB inputs of the TV. This feature allows you
to play files stored in a USB drive or record programmes. • 2.5" and 3.5" inch (hdd with external power supply) external hard disk drives are supported. • To
record a programme, you should first connect a USB disk to your TV while the TV is switched off.

You should then switch on the TV to enable recording feature. Otherwise, recording feature will not be available. • If one or more partitions of your hard
drive are exFAT formatted, none or less partitions might be visible, even if they are formatted with a different file system than exFat. IMPORTANT ! • You
may back up your files before making any connections to the TV set in order to avoid any possible data loss. Note that manufacturer will not be responsible
for any file damage or dataloss.

• It is possible that certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV.

IMPORTANT: The TV supports only FAT32 and NTFS disk formatting. However, NTFS format is not supported for recording features.

For recording, if you connect a USB disk with NTFS format, the TV will ask you to format the content. See the section, "Format Disk" in the following pages
for more information on disk formatting. Note that ALL the data stored on the USB disk will be lost and then the disk format will be converted to FAT32 in
such a case. USB Disk Connection • Plug your USB device to the USB input of the TV. Note: Plug or unplug your USB disk while the TV is switched off. Note:

If you are going to connect a USB hard disk drive to the TV set, USB connection cable used between the disk drive and the TV should have a USB logo and
should be as short as possible. Note: While formatting a USB hard disk that has 1TB (Tera Byte) or more file capacity, you can experience problems with the
formatting process. In such a case, you should format the disk with your personal computer and the formatted disk type should be FAT32.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/4685800)

[LC-24LE240E user guide](http://yourpdfguides.com/dref/4685800)

<http://yourpdfguides.com/dref/4685800>

SIDE VIEW USB MEMORY 5Vdc Max:500mA CAUTION ! • Quickly plugging and unplugging USB devices, is a very hazardous operation. Especially, do not repeatedly quickly plug and unplug the drive.

This may cause physical damage to the USB player and especially the USB device itself. • Do not pull out USB module while playing or recording a file. Programme Recording To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable recording feature. **IMPORTANT:** When using a new USB hard disk drive, it is recommended that you first format the disk using your TV's "Format Disk" option. • For using recording function, you should connect a USB disk or an external hard disk drive to the TV and connected USB disk should have at least 1 GB capacity and should have 2.0 speed compatibility. If the connected USB device does not support 2.0 speed, an error message will be displayed.

Note: Recorded programmes are saved into the connected USB disk.

If desired, you can store/copy recordings on a computer; however, these files will not be available to be played on a computer. You can play the recordings only via your TV. • For more information on recording programmes, see sections "Instant Recording", "Timeshifting", "Electronic Programme Guide", "Recordings Library" or "Recording Timers" in the following parts. • Recorded programmes are split into 4GB partitions. • Recorded programmes are stored in the following directory of the connected USB disk: \DVRRECS.

All recordings are indicated with a number. A text (txt) file is created for each recording. This text file includes information such as broadcaster, programme, and recording time. • Timeshifting may be stopped according to USB device write speed. If the USB device speed is not enough for video stream bitrate, timeshifting may be stopped and recording may fail.

If HD service bitrate is greater than 13 Mbp/sec. some freeze can be seen during timeshifting on both USB disk and on external HDD. English - 11 - A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 11 15.03.2012 17:31:45 • Recordings of HD programmes can occupy bigger size on the USB disk depending on the broadcast's resolution. For this reason it is recommended to use USB hard disk drives for recording HD programmes. • Do not plug out the USB/HDD during the recording. This may harm the connected USB/HDD. • Multipartition support is available.

Maximum two different partitions are supported. If the disk have more than two partitions, crash may occur. First partition of the usb disk is used for PVR ready features. It also must be formatted as primary partition to be used for PVR ready features. • Some stream packets may not be recorded because of signal problems, so sometimes video may freezes during playback. • Record, Play, Pause, Display (for PlayListDialog) keys could not be used when teletext is ON. If a recording starts from timer when teletext is ON, teletext is automatically turned off. Also teletext usage is disabled when there is ongoing recording or playback. • Radio record is not supported. • The TV can record programmes up to ten hours.

Connecting to a DVD Player via Component Sockets (YPbPr) or Scart Cable • Some DVD players are connected through COMPONENT SOCKETS (YPbPr). In this case, you must use the supplied Component video connection cable for enabling connection. First, plug single jack of the cable to the TV's YPbPr socket (side). Afterwards, insert your component cable's (not supplied) connectors into the socket part of the Component video connection cable (see illustration below). Colours of the connected jacks should match.

• To enable audio connection, use the VGA/Component Audio cable. First, plug single jack of the cable to the TV. Afterwards, insert your DVD player's audio cable's connectors into the socket part of the VGA/Component audio connection cable (see illustration below). Colours of the connected jacks should match.

Connecting to a DVD Player via HDMI Please refer to your DVD player's instruction book for additional information.

Power off both the TV and the device before making any connections. Note: Not all cables shown in the illustration are supplied. • If your DVD player has an HDMI socket, you can connect via HDMI for better video and audio quality. • When the connection is made, switch to YPbPr source. See, Input selection section. Note: To connect YPb Pr device, you should use supplied component (YPbPr) connection cable • You may also connect through the SCART input.

HDMI Cable (not supplied) External device • When you connect to DVD player as illustrated above, switch to the connected HDMI source. See, Input Selection section for more information on changing sources. Scart Cable (not supplied) External device • Note: These three methods of connection perform the same function but in different levels of quality. It is not necessary to connect by all three methods.

English - 12 A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 12 15.03.2012 17:31:45 Connecting the LCD TV to a PC For displaying your computer's screen image on your LCD TV, you can connect your computer to the TV set. Power off both computer and display before making any connections. Use 15-pin D-sub display cable to connect a PC to the LCD TV. When the connection is made, switch to PC source. See "Input selection" section. Set the resolution that suits your viewing requirements. Resolution information can be found in the appendix parts Remote Control Handset Inserting Batteries • Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.

• Insert two AAA/R3 or equivalent type batteries inside. Observe the correct polarity (+/-) when inserting batteries and replace the battery cover. . Note: Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries. Remote range is approximately 7m/23ft. Using Side AV Connectors You can connect a range of optional equipment to your LCD TV using side connectors of the TV. • For connecting a camcorder or camera , you should use AV socket (side). To do this, you must use the supplied video/audio connection cable. First, plug single jack of the cable to the TV's AV IN socket (side).

Afterwards, insert your camera cable's (not supplied) connectors into the plural part of the video/ audio connection cable. Colours of the connected jacks should match. See illustration below. • Afterwards, you should switch to Side AV source. See the section Input selection in the following sections for more information. Switching On/Off To Switch the TV On Connect the power cord to the 220-240V AC 50 Hz.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC-24LE240E user guide](#)

<http://yourpdfguides.com/dref/4685800>

• Switch the “ ” button on the bottom right hand side under the screen to position “1” so the TV will switch to standby mode. Then the standby LED lights up. • To switch on the TV from standby mode either: • Press the “ ” button, CH / CH button on the remote control. • Press the “ ” button. • The TV will then switch on.

Note: If you switch on your TV via CH / CH buttons on the remote control or on the TV set, the programme that you were watching last will be reselected. By either method the TV will switch on. or a numeric ” or +/- button on the TV. To Switch the TV to Standby • To listen the TV sound from headphones, you should connect headphones to your TV by using the HEADPHONE jack as illustrated above.. To switch the TV to low power stand by press the “ ” button on the remote control or right hand side of the TV. Note: When the TV is switched to standby mode, standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active. To Switch the TV Off • Switch the “ ” button on the bottom right hand side under the screen to position

2 as illustrated, to isolate the TV from the mains, the LED will go out. English - 13 -

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 13 15.

03.2012 17:31:46 • If the TV will not be used for a long period i.e. holidays, then unplug the power cord from the mains socket. Basic Operations You can operate your TV using both the remote control and onset buttons.

Standby Notifications If the TV switches off while in No Signal mode, the following on-screen message will be displayed on the next switch-on: Operation with the Buttons on the TV Volume Setting • You can use the control switch to change the volume of the TV. To increase volume, please move the switch upward. Move the switch downward to decrease the volume. A volume level scale (slider) will be displayed on the screen. Programme Selection When the Auto Tv Off timeout is reached, the following message will be displayed on the screen.

Select YES to shut down the TV. Select NO to cancel. The TV will switch off as well, if you do not make a selection on this screen. • First press the control switch once to change channel. You can move the switch upward to select the next programme or move it downward to select the previous programme.

Viewing Main Menu • The Main Menu screen cannot be displayed by using the control switch on the TV. AV Mode • Press the control switch consecutively until the source OSD is displayed on the screen. If the TV switches off owing to the auto power down feature, the following on-screen message will be displayed on the next switch-on: Operation with the Remote Control • The remote control of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV. Volume Setting Input Selection Once you have connected external systems to your TV, you can switch to different input sources.

Press “SOURCE” button on your remote control consecutively for directly changing sources. • Press “ V ” button to increase the volume. Press “V ” button to decrease the volume. A volume level scale (slider) will be displayed on the screen. Programme Selection (Previous or Next Programme) • Press “ CH ” button to select the previous programme. • Press “CH ” button to select the next programme. Programme Selection (Direct Access) • Press numeric buttons on the remote control to select programmes between 0 and 9. The TV will switch to the selected programme. To select programmes between, press the numeric buttons consecutively. When the pressing time is due for the second numeric button, only the first digit programme will be displayed.

Press directly the programme number to reselect single digit programmes. English - 14

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 14 15.03.2012 17:31:47 Viewing Electronic Programme Guide (EPG) You can view the electronic programme guide (EPG) to view information about available programmes.

To view the EPG menu please press EPG button on the remote control. • Press “ ”/“ ” buttons to navigate through channels. • Press “ ”/“ ” buttons to navigate through the programme list. • EPG menu displays available information on all channels. • Please note that event information is updated automatically.

If there are no event information data available for channels, EPG will be displayed with blanks. Green button (Next Time Slice): Displays the programmes of the next time slice. Yellow button (Prev Day): Displays the programmes of previous day. Blue button (Next day): Displays the programmes of the next day.

Numeric buttons (Jump): Jumps to the preferred channel directly via numeric buttons. OK (Options): views/records or sets timer for future programs. Text button (Filter): Views filtering options. INFO (Details): Displays the programmes in detail. (RECORD): the TV will start to record the selected programme.

You can press again to stop the recording.

Up/Down/Left/Right: Navigate. OK (Options): views/records or sets timer for future programs. INFO (Event Details): Displays the programmes in detail.

Green button: Programme schedule will be listed Yellow button: Display EPG data in accordance with timeline schedule Blue button (Filter): Views filtering options. (RECORD): the TV will start to record the selected programme. You can press again to stop the recording. Red button (Prev Day): Displays the programmes of previous day. Green button (Next day): Displays the programmes of the next day. Yellow button (Zoom): Expands programme information.

Blue button (Filter): Views filtering options.

INFO (Details): Displays the programmes in detail. Numeric buttons (Jump): Jumps to the preferred channel directly via numeric buttons. OK (Options): views/records or sets timer for future programs. Text (Search): Displays “Guide Search” menu. SUBTTL: Press SUBTITLE button to view Select Genre menu.

Using this feature, you can search the programme guide database in accordance with the genre. Info available in the programme guide will be searched and results matching your criteria will be listed. SWAP (Now) : Shows the current programme. Recording via EPG Screen IMPORTANT: To record a programme, you should first connect a USB disk to your TV while the TV is Red button (Prev Time Slice): Displays the switched off. You should then switch on the TV to

programmes of previous time slice.

enable recording feature. Otherwise, recording feature will not be available. English - 15 Up/Down/Left/Right: Navigate.

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 15 15.03.2012 17:31:47 (RECORD): the TV will start to record the selected programme.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC-24LE240E user guide](#)

<http://yourpdfguides.com/dref/4685800>

You can press again to stop the recording. Note: Switching to a different broadcast or source is not available during the recording. / : Page left / Page right.

First Time Installation IMPORTANT: Ensure that the aerial or cable is connected before switching on the TV for the first time installation. • When the TV is operated for the first time, installation wizard will guide you through the process. First, language selection screen will be displayed: Programme Options In EPG menu, press the OK button to enter the “Event Options” menu. Select Channel In EPG menu, using this option, you can switch to the selected channel.

Record / Delete Record Timer IMPORTANT: To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable recording feature. Otherwise, recording feature will not be available. • After you have selected a programme in EPG menu, press the OK button and Options screen will be displayed. Select “Record” option and press the OK button. After this operation, a recording becomes set to the selected programme.

• To cancel an already set recording, highlight that programme and press the OK button and select the option “Delete Rec. Timer”. The recording will be cancelled. Note: You cannot switch to any other channel or source while there is an active recording on the current channel. Set Timer / Delete Timer After you have selected a programme in EPG menu, press the OK button and Options screen will be displayed.

Select “Set Timer on Event” option and press OK button. You can set a timer for future programmes. To cancel an already set reminder, highlight that programme and press the OK button. Then select “Delete Timer” option. The timer will be cancelled.

Note: It is not possible to record or set timer for two or more individual events at the same time interval. • By pressing “ ” or “ ” button, select the country you want to set and press “ ” button to highlight Search Type option. Use “ ” to set the desired search type. Available search types are digital only, analog TV only and full. When set, press “ ” to select Teletext Language. Use “ ” to select the desired Teletext Language. • When set, press “ ” to select Teletext Language. Use “ ” or “ ” to select the desired Teletext Language. • Press “ ” button after setting Teletext Language option. Scan Encrypted will be then highlighted.

You can set Scan Encrypted as Yes if you want to scan coded stations. Afterwards select the desired Teletext Language. • You can activate Store Mode option by using left or right button. If the Store Mode is set to “enabled”, E-Pop option will be available in other settings English - 16

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 16 15.03.2012 17:31:47 • Use “ ” or “ ” buttons to select your language and press OK button to set selected language and continue. • After selecting the language, “Welcome!” screen will be displayed, requiring you to set Country, Search Type, Teletext Language, Store Mode and Scan Encrypted options. menu. If it is set to “disabled”, Store Mode will not be available after the First Time Installation.

Note: If Store Mode is enabled, some features may be affected. • Press OK button on the remote control to continue and the following message will be displayed on the screen: Note: You can press “MENU” button to cancel. • After all the available stations are stored, Channel List will be displayed on the screen. If you like the sort channels, according to the LCN, please select “Yes” and then press “OK”. To select the “Yes” or “No” option, highlight the item by using “ ” or “ ” buttons and press OK button.

Afterwards, the following OSD will be displayed on the screen: If you select CABLE option, the following screen will be displayed (This screen will not be available if you have selected the Country as Netherlands. Automatic Channel Scan will be displayed instead.): • Press OK button to quit channel list and watch TV. If you have selected the Country option as Netherlands in First Time Installation, only OK and LOCK options will be displayed. Installation Press “MENU” button on the remote control and select Installation by using “ ” or “ ” button.

Press OK button and the following menu screen will be displayed. You can select frequency ranges from this screen. For highlighting lines you see, use “ ” or “ ” button. You can enter the frequency range manually by using the numeric buttons on the remote control. Set Start and Stop Frequency as desired by using numeric buttons on the remote control. After this operation, you can set Search Step as 8000 KHz or 1000 KHz. If you select 1000 KHz, the TV will perform search process in a detailed way. Searching duration will thus increase accordingly. When finished, press OK button to start automatic search. If you select AERIAL option from the Search Type screen, the television will search for digital terrestrial TV broadcasts.

Select Automatic Channel Scan (Retune) by using “ ” button and press OK button. Automatic Channel Scan (Retune) options will be displayed. You can select options by using “ ” and OK buttons. Auto Channel Scan (Retune) Menu Operation Digital Aerial: Searches and stores aerial DVB stations. Digital Cable: Searches and stores cable DVB stations. English - 17 -

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 17 15.03.2012 17:31:48 Analogue: Searches and stores analogue stations. Digital Aerial & Analogue: Searches and stores both analogue and aerial DVB stations.

Digital Cable & Analogue: Searches and stores both analogue and cable DVB stations. • Whenever you select an automatic search type and press OK button, a confirmation screen will appear on the screen. To start installation process, select Yes, to cancel select No by using “ ” or “ ” and OK button. • After auto channel scan type is set and selected and confirmed, installation process will start and progress bar will move along.

Press “MENU” button to cancel process. In such a case, located channels are not stored. Digital Cable Manual Search* Manual Tuning HINT: This feature can be used for direct broadcast entry. @@ Manual Scan options screen will be displayed. @@ Manual search options will change accordingly.

@@@@@@ Enter the channel number or frequency using the numeric buttons. You can then press OK button to search. @@@@ Analogue fine tune screen will be displayed.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC-24LE240E user guide](#)

<http://yourpdfguides.com/dref/4685800>

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 18 15.03.2012 17:31:49 Managing Stations: Channel List The TV sorts all stored stations in the Channel List.

You can edit this channel list, set favourites or set active stations to be listed by using the Channel List options. • Press "MENU" button to view main menu. @@@@Select Move option in the channel list and press OK button. • Edit Number screen will be displayed. @@@@Select Yes if you want to move the channel and press OK. • Press OK button to process. @@@@Press OK button to continue. @@Select Edit Channel List to manage all stored channels. @@A warning screen will appear. Select YES to delete, select No to cancel. @@Press OK button to continue. @@@@• When finished, press OK button to save. @@@@• Use CH /CH buttons to move page up or down. • Press BLUE button to view filtering options. • Press "MENU" button to exit. Note: The channels listed are mixed at the channel list. @@@@The last available channel number is 999. @@@@Press OK button to continue. • You will be asked to enter parental control PIN. Default PIN is set as 0000. Enter the PIN number. @@@@• Press "MENU" button to view main menu. @@Press OK to view menu contents. • Select Favourites to manage favourite list. Use " / " and OK buttons to select Favourites. • You can set various channels as favourites so that only the favourite channels are navigated. On-Screen Information You can press "INFO" button to display on-screen information. Details of the station and current programme will be displayed on the information banner. The information banner gives information on the channel selected and the programmes on it. The name of the channel is displayed, along with its channel list number.

Hint: Not all channels broadcast the programme data. If the name and time of the programme are not available, then information banner will be displayed with blanks. If you have searched and stored Ziggo channels, BER value of the cable channels will be displayed in the info banner. If there are more than one videos available on a Ziggo channel, press YELLOW button to view video selection menu, while info banner is displayed on the screen. If the selected channel is locked, you must enter the correct four-digit numeric code to view the channel (default code is 0000). "Enter PIN" will be displayed on the screen. Note: If the Country option is set to France, you can use 4725 as the default code. • Select a channel by using " " or " " button. Press OK button to add selected channel to favourites list. Press OK button again to remove.

Button Functions • OK: Add/remove a station. • YELLOW: Tag/untag a channel. • GREEN: Tag/untag all channels. • BLUE: Displays filtering options. Managing Stations: Sorting Channel List You can select broadcasts to be listed in the channel list.

To display specific types of broadcast, you should use Active channel list setting. Select Active channel list from the Channel list menu by using " " or " " button. Press OK button to continue. Media Playback Using Media Browser If the USB stick is not recognized after power off/on or First Time Installation, first, plug the USB device out and power off/on the TV set. Plug the USB device in again.

To display Media Browser window, press either "MENU" button on the remote control and then select Media Browser by pressing " " or " " button. Press OK button to continue. Media Browser menu options will be displayed. Also, when you plug USB devices, media browser screen will be displayed automatically: You can select a broadcast type option from the list by using " / " and OK buttons. English - 20

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 20 15.03.2012 17:31:50 You can play music, picture and video files from the connected USB memory stick. Use " " or " " button to select Videos, Photos, Music, Recording Library or Settings. Viewing Videos via USB Yellow: Opens subtitle time correction menu Press SWAP button to switch back to previous menu.

Viewing Photos via USB When you select Videos from the main options, available video files will be filtered and listed on this screen. You can use " " or " " button to select a video file and press OK button to play a video. If you select a subtitle file and press OK button, you can select or deselect that subtitle file. @@Play This (OK button) : Plays the selected file. Up/Down: Navigate. @@@@RED button: Sorts files by name. YELLOW button: Toggles viewing style. GREEN button: Activates Loop/Shuffle functions. BLUE button: Changes media type. @@OK: Views the selected picture in full screen.

Up/Down: Navigate. Slideshow (all images. @@@@RED button: Sorts files by date. YELLOW button: Toggles viewing style. @@button): Stops the video playback.

button): Pause the video playback. button): Goes backward. button): Goes forward. Pause (button): Pauses the slideshow. button): Continues the slideshow. Continue (Subtitle/Audio (LANG. button): Sets subtitle/Audio. Jump (GREEN button): Jumps to time. @@Press again to disable both Loop and Shuffle. Press once more to enable only Shuffle. Press again to enable all. @@@@Rotate (Up/Down buttons): Rotates the image using up/down buttons. RETURN: Back to file list. @@@@YELLOW: Toggles viewing style. @@You should then switch on the TV to enable recording feature.

Otherwise, recording feature will not be available. To view the list of recordings, select "Recordings Library" and press the OK button. Recordings Library will then be displayed with available recordings. Playing Music via USB When you select Music from the main options, available audio files will be filtered and listed on this screen. Up/Down: Navigate. Play (button): Plays all media files starting with the selected one. Stop (Pause (button): Stops playback. button): Pauses the selected playback. All the recordings are kept in a list in the recordings library. RED button (Delete): Erases the selected recording. GREEN button (Edit): Makes changes on the selected recording. BLUE button (Sort): Changes the order of the recordings. You can select from a wide range of sorting options. OK button: Activates play options menu: • Play from start: Plays the recording from the beginning. • Resume: Recommences the recordings.

• Play from offset: Specifies a playing point. Note: Viewing main menu and menu items will not be available during the playback. (Resume): Recommences the recordings. INFO (Details): Displays the short extended programmes in detail. RED: Sorts files by Title,Artist or Album.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/4685800)

[LC-24LE240E user guide](http://yourpdfguides.com/dref/4685800)

<http://yourpdfguides.com/dref/4685800>

Loop/Shuffle (GREEN button): Press once to disable Loop. Press again to disable both Loop and Shuffle. Press once more to enable only Shuffle. Press again to enable all. You can follow the disabled functions with the change of the icons. Note: If you start the playback with the button and activate the symbol, the TV will play the next music/video file. The playback will proceed accordingly and when the end of the list is reached, it will be played again from the beginning (loop function). If you start the playback with the OK button and activate the symbol, the same music or video file will be played in a loop (repeat function). If you start the playback with or OK button and activate the symbol, music or video file will be played in a shuffle. or OK button and If you start the playback with activate , symbols, music or video file playback will continue randomly and the random playback will continue.

0..9 (Numeric buttons): The TV will jump to the file starting with the letter you input via the numeric buttons on your remote control. English - 22
A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 22 15.03.2012 17:31:51 Media Browser Settings See the section, "Recordings" for more information on setting Max. Timeshift. Note: Switching to a different broadcast or source; and viewing main menu are not available during the timeshifting. Lip Sync delay may occur during the timeshifting.

Standby button is ignored during the timeshifting. The TV will not switch to standby mode during the timeshifting. **Instant Recording** You can set your Media Browser preferences by using the Settings dialog. Press " " or " " button to highlight an item and use " " or " " button to set. **View Style:** Sets default browsing mode.

Music FF/FR Speed: Sets forwarding/advancing speed. **Slide Show Interval:** Sets slide show interval time. **Show Subtitle:** Sets subtitle enabling preference. **Subtitle Position:** Sets subtitle position as up or down. **Subtitle Font Size:** Sets subtitle font size (max).

54pt). DivX® Registration Code: Some DivX® Video-OnDemand files require registration code, this code can be used for this purpose. • **Record OSD** will then be displayed for a short time and the current event will be recorded. (RECORD) button on the remote • You can press control again to record the next event on the EPG. In this case, OSD will display the programmed events for recording. **IMPORTANT:** To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable recording feature. Otherwise, recording feature will not be available. (RECORD) button to start recording an • Press event instantly while watching a programme. The following OSD appears on the screen: Timeshift Recording **IMPORTANT:** To record a programme, you should first connect a USB disk to your TV while the TV is switched off.

You should then switch on the TV to enable recording feature. Otherwise, recording feature will not be available. • Press (PAUSE) button while watching a broadcast for switching to timeshifting mode. • In timeshifting mode, the programme is paused and simultaneously recorded to the connected USB disk (*). Press (PLAY) button again to watch the paused programme from the stopped moment. • This playback is performed in x1 playback speed. You will see the timeshift gap between the real and the timeshifted programme in the info bar. / (PREVIOUS/NEXT) buttons to move • Use forward or backward on timeshift playback. When the timeshift is reached, timeshifting mode will be quit and you will switch back to watching normal broadcast. • Press (STOP) button to quit timeshifting mode.

(*). Continuous time shift recording's duration depends on your connected USB disk's file size and defined Max. Timeshift in the Recordings Configuration menu. Press (STOP) button to cancel instant recording. The following OSD will be displayed: Select Yes by using " " or " " / OK buttons to cancel instant recording. Note: Switching to a different broadcast or source; and viewing Media Browser are not available during the recording.

English - 23 - A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.indd 23 15.03.2012 17:31:51
Watching Recorded Programmes In the main menu, use " " or " " buttons to select Media Browser. Highlight Recordings Library item by using " " or " " button and press OK button to enter.

Recordings Library will then be displayed. **IMPORTANT:** To view recordings library, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable recording feature. Otherwise, recording feature will not be available. **Changing Image Size: Picture Formats** • You can change the aspect ratio (image size) of the TV for viewing the picture in different zoom modes. • Press "SCREEN" button repeatedly to change the image size. Available zoom modes are listed below. Auto When AUTO is selected, the aspect ratio of the screen is adjusted by the information provided by the selected source (if available). The format being displayed in AUTO mode is completely independent of WSS information which could be included in the broadcast signal or the signal from an external device. Note: Auto mode only will be available in HDMI, YPbPr and DTV sources.

16:9 This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen. Select a recorded item from the list (if previously recorded) by using " " / " " button. Press OK button to view Play Options. Select an option by using " " / " " or OK buttons. Available playback options: • **Play from start:** Plays the recording from the beginning. • **Resume:** Recommences the recordings. • **Play from offset:** Specifies a playing point. Note: Viewing main menu and menu items will not be available during the playback. Press (STOP) button to stop a playback and return to return to Recordings Library. **Slow Forward (PAUSE)** button while watching If you press recorded programmes, slow forward feature will be available.

You can use button to slow forward. Pressing button consecutively will change slow forwarding speed. • For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the 16:9 mode to restore the picture to its original shape. **Subtitle** This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen. English - 24

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616.
indd 24 15.03.2012 17:31:52 Note: You can shift to screen up or down by pressing " " / " " buttons while picture zoom is selected as panaromic, 14:9 Zoom, Cinema or Subtitle. **Cinema** This zooms up the wide picture (16:9 aspect ratio) to the full screen.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/4685800)

[LC-24LE240E user guide](http://yourpdfguides.com/dref/4685800)

<http://yourpdfguides.com/dref/4685800>

14:9 This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.

Configuring Picture Settings You can use different picture settings in detail. Press "MENU" button and select the Picture icon by using " " or " " button. Press OK button to view Picture Settings menu. 14:9 Zoom This option zooms to the 14:9 picture. 4:3 Use to view a normal picture (4:3 aspect ratio) as this is its original size. Operating Picture Settings Menu Items • Press " " or " " button to highlight a menu item. • Use " " or " " button to set an item. • Press MENU button to exit. Picture Settings Menu Items Panoramic This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural. Mode: For your viewing requirements, you can set various screen modes.

The Picture mode can be set to one of these options: Cinema, Game, Dynamic and Natural. Contrast: Sets the lightness and darkness values of the screen. Brightness: Sets the brightness value for the screen. Sharpness: Sets the sharpness value for the objects displayed on the screen. Colour: Sets the colour value, adjusting the colors. The top and bottom of the picture are slightly cut off. Power Save Mode : Use " " or " " button to select Power Save Mode. Press " " or " " button to set Power Save Mode as Eco, Picture Off and Disabled. See the section, "Environmental Information" in this manual for further information on Power Save Mode. English - 25 - A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616. indd 25 15.03.2012 17:31:52 Backlight (optional): This setting controls the backlight level and it can be set to Auto, Maximum, Minimum and Medium. Note: Backlight can not be activate in VGA or Media Browser mode or while picture mode is set as Game. Noise Reduction: If the broadcast signal is weak and the picture is noisy, use Noise Reduction setting to reduce the noise amount.

Noise Reduction can be set to one of these options: Low, Medium, High or Off. Advanced Settings • Colour Temp: Sets the desired colour tone. Setting Cool option gives white colours a slight blue stress. For normal colours, select Normal option. Setting Warm option gives white colours a slight red stress. • Picture Zoom: Sets the picture size to Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3, Panoramic or Cinema. • HDMI True Black (optional): While watching from HDMI source, this feature will be visible in the Picture Settings menu. You can use this feature to enhance blackness in the picture. You can set this feature as "On" for activating HDMI True Black mode. • Film Mode (optional): Films are recorded at a different number of frames per second to normal television programmes. Press " " or " " buttons to select Film mode. Press " " or " " buttons to set this feature Auto or Off. Turn this feature to Auto when you are watching films to see the fast motion scenes clearly. • Colour Shift: Adjust the desired colour tone. Reset: Resets the picture settings to factory default settings.

While in VGA (PC) mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in PC mode. Autoposition: Automatically optimizes the display. Press OK to optimize. H Position: This item shifts the image horizontally to right hand side or left hand side of the screen. V Position: This item shifts the image vertically towards the top or bottom of the screen. Dot Clock: Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts. Phase: Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method. Configuring Sound Settings Sound settings can be configured according to your personal preferences. Press "MENU" button and select the first icon by using " " or " " button. Press OK button to view Sound Settings menu. PC Picture Settings For adjusting PC picture items, do the following: Press " " or " " button to select Picture icon. Picture menu appears on the screen. Contrast, Brightness, Colour, Colour Temp and Picture Zoom settings in this menu are identical to settings defined in TV picture menu under "Main Menu System".

Sound, Settings and Source settings are identical to the settings explained in main menu system. PC Position: Select this to display PC position menu items. Operating Sound Settings Menu Items • Press " " or " " button to highlight a menu item. • Use " " or " " button to set an item. • Press "MENU" button to exit.

Sound Settings Menu Items Volume: Adjusts volume level. English - 26

A01_MB62_[GB]_1910UK_IDTV_TC_PVR_BRONZE19_22942LED_ROCKER_ZIGGO_10075676_50200616. indd 26 15.03.2012 17:31:53 Equalizer: Press OK button to view equalizer submenu. Configuring Your TV's Settings Detailed settings can be configured to suit your personal preferences. Press "MENU" button and select Settings icon by using " " or " " button. Press OK button to view Settings menu. In equalizer menu, the preset can be changed to Music, Movie, Speech, Flat, Classic and User. Press the "MENU" button to return to the previous menu.

Note: Equalizer menu settings can be changed manually only when the Equalizer Mode is in User. Balance: This setting is used for emphasizing left or right speaker balance. Headphone: Sets headphone volume. Sound Mode: You can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode. AVL: Automatic Volume Limiting (AVL) function sets the sound to obtain fixed output level between programmes (For instance, volume level of advertisements tend to be louder than programmes). Headphone/Lineout: When you connect an external amplifier to your TV using the headphone jack, you can select this option as Lineout. If you have connected headphones to the TV, set this option as Headphone. Dynamic Bass: Dynamic Bass is used to increase bass effect of the TV set. Digital Out: Sets digital out audio type. Operating Settings Menu Items • Press " " or " " button to highlight a menu item. • Press OK button to select an item. • Press "MENU" button to exit. Settings Menu Items Conditional Access: Controls conditional access modules when available. Language: Configures language settings. Parental: Configures parental settings. Timers: Sets timers for selected programmes. Date/Time: Sets date and time.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC-24LE240E user guide](#)

<http://yourpdfguides.com/dref/4685800>