




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP LC24LE250VBK/VWH. You'll find the answers to all your questions on the SHARP LC24LE250VBK/VWH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP LC24LE250VBK/VWH
User guide SHARP LC24LE250VBK/VWH
Operating instructions SHARP LC24LE250VBK/VWH
Instructions for use SHARP LC24LE250VBK/VWH
Instruction manual SHARP LC24LE250VBK/VWH

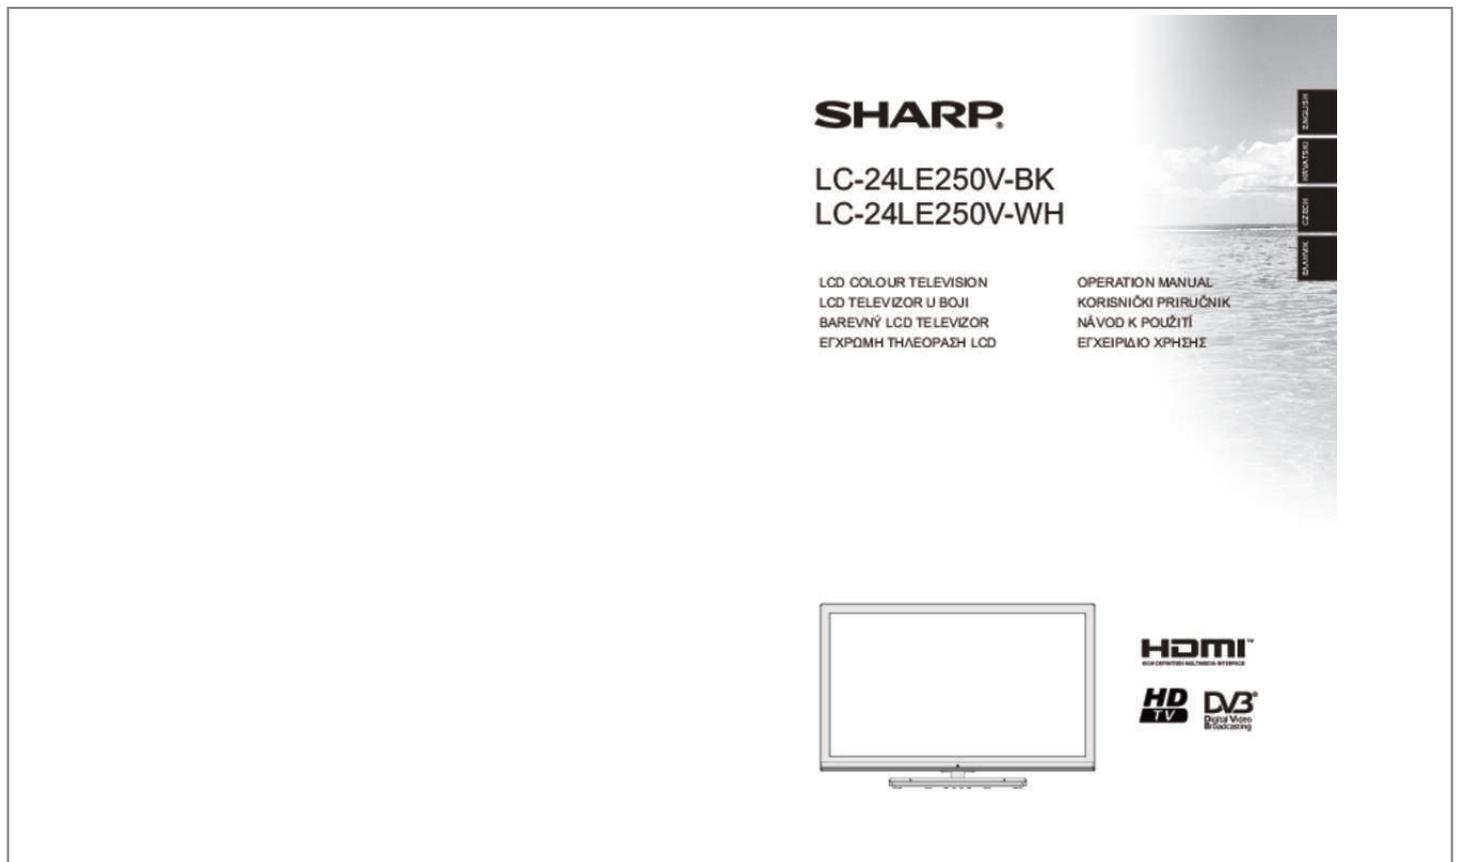

[You're reading an excerpt. Click here to read official SHARP LC24LE250VBK/VWH user guide](http://yourpdfguides.com/dref/5431976)
<http://yourpdfguides.com/dref/5431976>

Manual abstract:

.....
.....
.....
.....

.. @3 Important safety precautions ...

.....
.....

. @7 Package Contents

.....
.....

..... @8 TV Control button & Operation

.....
.....
.....

..... 8 Standby Notifications ...

.....
.....
.....

... 8 Inserting the Batteries into the Remote

. 8 Connect Power

.....
.....

..... 8 Antenna/Cable Connection.....

.....
.....
.....

.. 9 Notification ...

.....
.....

.... 9 Specification .

.....
.....

.....
.....
.....
.....

.....
.. 9 Viewing remote control ...

.....
.....
.....
.....

.. 10 Teletext

.....
.....
.....
.....

...10 Digital Teletext (for UK only)

.....
.....
.....
.....

..10 Viewing the Connections

.....
.....
.....
.....

.11 Switching On/Off.....

.....
.....
.....
.....

.. 12 To Switch the TV On

.....
.....
.....
.....

...12 To Switch the TV to Standby

.....
.....
.....
.....

.12 To Switch the TV Off

.....
.....
.....
.....

..12 First Time Installation..

.....
.....
.....
.....
.....

.....
..... 12 Aerial Installation

.....
.....
.....
.....

.....
.....12 Cable Installation

.....
.....
.....
.....

.....12 Media Playback via USB Input

.....
.....
.....

..... 12 Recording a Programme

.....
.....
.....
.....

..... 13 Timeshift Recording

.....
.....
.....

.....
.....
.....

13 Instant Recording

.....
.....
.....
.....

..... 13 Watching Recorded Programmes

.....
.....
.....

.. 13 Recording Configuration

.....
.....
.....

.....
..... 13 Quick Menu

.....
.....
.....
.....
.....

..... 14 TV Menu Features and Functions

.....
.....
.....

... 15 Picture Menu Contents

.....
.....
.....

15 Advanced Settings

.....
.....

...15 Sound Menu Contents

.....
.....
.....
.....

.16 Settings Menu Contents

.....
.....
.....

.....16 Other Settings: Displays other setting options of the TV set:

.....
.....
.....
.....
.....
.....
.....

..16 Install and Retune Menu Contents

.....
.....

.17 General TV Operation

.....
.....
.....
.....

... 18 Using the Channel List

.....
.....
.....

.... 18 Configuring Parental Settings .

.....
.....
.....
.....

18 Electronic Programme Guide (EPG)

.....

..... 18 Programme Options

.....
.....
.....
.....

.....
..18 Software upgrade search via user interface

..18 3 AM search and upgrade mode

.....
...18 Troubleshooting & Tips ..

.....
.....

.....
.....

.... 19 Tv will not turn on

.....
.....
.....

.....19 Poor picture .

.....
.....
.....

.....
.....
.....

...19 No picture

.....
.....
.....

.....
.....
.....

19 No sound

.....
.....
.....

.....
.....
.....

.....19 Remote control - does not operate ..

.....
.....

..19 Input sources - can not be selected ...

.....

....19 Recording unavailable

.....
.....
.....

.....
..19 USB is too slow

.....
.....

.....
.....

.....19 PC Input Typical Display Modes ..

.....
.....
.....

.... 20 Supported File Formats for USB Mode

.....
20 AV and HDMI Signal Compatibility

.....
.....

.. 20 Dimensional Drawings

.....
.....
.....

... 21 End of life disposal ..

.....
.....
.....
.....
.....

22 Installing the Stand

.....
.....
.....

. 23 Uninstalling the Stand

.....
.....
.....
.....

..... 24 Screw Dimensions ..

.....
.....
.....
.....
.....
.....

25 English - 1 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 1 28.01.2013 15:50:09 SPECIAL NOTE FOR USERS IN THE U.K.

The mains lead of this product is fitted with a non-rewireable (moulded) plug incorporating a 5A fuse. Should or and of the same rating the fuse need to be replaced, a BSI or ASTA approved BS 1362 fuse marked as above, which is also indicated on the pin face of the plug, must be used. Always refit the fuse cover after replacing the fuse. Never use the plug without the fuse cover fitted. In the unlikely event of the socket outlet in your home not being compatible with the plug supplied, cut off the mains plug and fit an appropriate type. DANGER: The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner. Under no circumstances should the cut-off plug be inserted elsewhere into a 5A socket outlet, as a serious electric shock may occur. To fit an appropriate plug to the mains lead, follow the instructions below: IMPORTANT: The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: • The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black. • The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red. Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three pin plug.

Before replacing the plug cover make sure that: • If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug. • The cord grip is clamped over the sheath of the mains lead, and not simply over the lead wires. IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN. English - 2 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 2 28.01.2013 15:50:09 Features • Remote controlled colour LCD TV. • Fully integrated digital/cable TV (DVB-T/C) • HDMI inputs are for connecting a device that has a HDMI socket. • USB input. • OSD menu system.

• Scart socket for external devices (such as DVD Players, PVR, video games, etc.) • Stereo sound system. • Teletext. • Headphone connection. • Automatic programming system.

• Manual tuning. • Automatic power down after up to six hours. • Sleep timer. • Child lock. • Automatic sound mute when no transmission.

• NTSC playback. • AVL (Automatic Volume Limiting). • PLL (Frequency Search). • PC input. • Plug&Play for Windows 98, ME, 2000, XP, Vista, Windows 7.

• Game Mode (Optional). • • • Dear SHARP customer Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read Important safety precautions carefully before using this product. Introduction Please read the corresponding instructions of this handbook prior to the first usage of the device, even when the usage of electronic devices is familiar to you. Please take notice of the chapter SAFETY PRECAUTIONS.

Carefully keep the handbook as future reference. When selling the device or giving it away, provide these direction for use. Thank you for choosing this product. This manual will guide you for the proper operation of your TV. Before operating the TV, please read this manual thoroughly. Please do keep this manual in a safe place for future references. This device is intended to receive and display TV programs. The different connection options make an additional expansion of the reception and display sources possible (receiver, DVD player, DVD recorder, VCR, PC etc.). This device is only suitable for the operation in dry interiors.

This appliance is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the device is not used as intended, or unauthorized modifications have been made. To operate your LCD TV in extreme ambient conditions may cause the damage of the device. • The illustrations and the OSD in this operation manual are for explanation purposes and may vary slightly from the actual operations. • The examples used throughout this manual are based on the LC-24LE250V model.

• English - 3 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 3 28.01.2013 15:50:10 Important safety precautions • Cleaning—Unplug the AC cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product.

Do not use liquid cleaners or aerosol cleaners. • Use a soft damp cloth to gently wipe the panel when it is dirty. To protect the panel, do not use a chemical cloth to clean it. Chemicals may cause damage or cracks in the cabinet of the TV. • Water and moisture—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement. • Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock. • Stand—Do not place the product on an unstable cart, stand, tripod or table.



[You're reading an excerpt. Click here to read official SHARP LC24LE250VBK/VWH user guide](http://yourpdfguides.com/dref/5431976)
<http://yourpdfguides.com/dref/5431976>

Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product.

When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.

- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.
- Ventilation—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
- The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or impact applied.

If the LCD panel is broken, be careful not to be injured by broken glass.

- Heat sources—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).
- To prevent fire, never place any type of candle or naked flames on the top or near the TV set.
- To prevent fire or shock hazard, do not place the AC cord under the TV set or other heavy items.
- Headphones—Do not set the volume at a high level. Hearing experts advise against extended listening at high volume levels.
- Do not display a still picture for a long time, as this could cause an afterimage to remain.
- There is power consumption always if main plug is connected.
- Servicing—Do not attempt to service the product yourself. Removing covers can expose you to high voltage and other dangerous conditions.

Request a qualified person to perform servicing. The LCD panel is a very high technology product, giving you fine picture details. Due to the very large number of pixels, occasionally a few non-active pixels may appear on the screen as a fixed point of blue, green or red. This is within product specifications and does not constitute a fault. Precautions when transporting the TV When transporting the TV, never carry it by holding onto the speakers. Be sure to always carry the TV by two people ice must be securely attached to the wall in accordance with the installation instructions when mounted to the wall (if the option is available). English - 5 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 5 28.01.2013 15:50:10 LCD Screen The LCD panel is a very high technology product with about a million thin film transistors, giving you fine picture details.

Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product. Warning! Do not leave your TV in standby or operating mode when you leave your house.

- "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."
- The DVB logo is the registered trademark of the Digital Video Broadcasting—DVB—project.

Electrical safety not in the hands of children Never let children use any electrical device unsupervised. Children cannot always recognise possible dangers. Batteries / accumulators can be life threatening when swallowed. Store batteries out of the reach of small children. In case of swallowing a battery medical aid has to be sought immediately.

Also keep the packaging foils away from children as there is danger of suffocation. Connection to a Television Distribution System (Cable TV etc.) from Tuner

Device connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing-and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11). Note:The HDMI connection between PC and TV may cause radio interference in which case it is recommended to use VGA(DSUB-15) connection. The Standby Off/On button doesn't separate this device completely from mains. Moreover the device consumes power in the standby operation. In order to separate the device completely from mains, the mains plug has to be pulled from the mains socket. Because of that the device should be set up in a way, that an unobstructed access to mains socket is guaranteed, so that in case of emergency the mains plug can be pulled immediately. To exclude the danger of fire, the power cord should principally be separated from the mains socket prior to a longer period of non-usage, i.

e. during vacations. English - 6 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 6 28.01.2013 15:50:11 Environmental Information This television is designed to consume less energy to save environment. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: You can use Power Save Mode setting, located in the Picture Settings menu. If you set Power Save Mode as Eco, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode.

Package Contents LED TV If Picture Off is selected, "Screen will be off in 15 seconds." message will be displayed on the screen. Select PROCEED and press OK to continue. The screen will be off in 15 seconds. If you disable Power Save Mode, Picture mode will be automatically set to Dynamic. When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce energy consumption. Disconnect power when going away for longer time. It is highly recommended to activate Power Save Mode setting to reduce your annual power consumption. And also it is recommended to disconnect the TV from the mains plug to save energy more when you do not use.

Please helps us to save environment by following these steps. Repair Information Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV. Please contact your local dealer, where you have purchased this TV for further information. Batteries: 2 X AAA Instruction Book Remote Control Quick Guide 1 X Video & Audio Connection Cable Note: You should check the accessories after purchasing.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/5431976)

[LC24LE250VBK/VWH user guide](http://yourpdfguides.com/dref/5431976)

<http://yourpdfguides.com/dref/5431976>

Make sure that each accessory is included. As the manufacturer's specification supports communication on cable lengths shall be smaller than 3m. English - 7 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 7 28.01.

2013 15:50:11 Viewing the TV To turn the TV off: Press the middle of the button down and hold it down for a few seconds, the TV will turn into standby mode. , switch is used for turning the TV on or off. Standby Notifications 1) If the TV does not receive any input signal (e.g. from an aerial or HDMI source) for 5 minutes, the TV will go into standby. When you next switch-on, the following message will be displayed: "Standby Cause No Signal" Press OK to continue. 2) If the TV has been left on and not been operated for a while, the TV will go into standby. When you next switch-on, the following message will be displayed. "Standby Cause No Operation" Press OK to continue. TV Control button & Operation Inserting the Batteries into the Remote Lift the cover on the back of the remote upward gently.

Install two AAA batteries. Make sure to match the + and - ends of the batteries in the battery compartment (observe the correct polarity) Replace the cover. 1. Up direction 2. Down direction 3. Programme/Volume / AV / Standby-On selection switch The Control button allows you to control the Volume/ Programme/ Source and Standby-On functions of the TV. To change volume: Increase the volume by pushing the button up. Decrease the volume by pushing the button down. To change channel: Press the middle of the button, the channel information banner will appear on screen. Scroll through the stored channels by pushing the button up or down To change source: Press the middle of the button twice, the source list will appear on screen.

Scroll through the available sources by pushing the button up or down. Connect Power IMPORTANT: The TV set is designed to operate on 220-240V AC, 50 Hz socket. After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet. English - 8 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB. indd 8 28.01.2013 15:50:12 Antenna/Cable Connection Connect the "aerial" or "cable TV" plug to AERIAL INPUT (ANT) socket located on the back of the TV. Aerial or Cable Specification TV Broadcasting Receiving Channels Number of Preset Channels Channel Indicator RF Aerial Input Operating Voltage PAL B/G D/K K VHF (BAND I/III) - UHF (BAND U) - HYPERBAND 10000 On Screen Display 75 Ohm (unbalanced) 220-240V AC, 50Hz. German+Nicom Stereo 2 x 2,5 VGA SPDIF Coax.

OUT HDMI2 227528 Audio Audio Output Power (WRMS.) (10% THD) Notification Manufactured under license from Dolby Laboratories. TRADEMARK ACKNOWLEDGMENT "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Power Consumption Weight TV Dimensions DxLxH (with foot) TV Dimensions DxLxH (without foot) 50 W 5,20 153 x 563 x 381 36 x 563 x 345 "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC." Operation temperature and operation humidity: 5°C up to 45°C, 85% humidity max Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead. Battery Products English - 9 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 9 28.01.

2013 15:50:12 Viewing remote control 1. 2. 3. 4. 5. 6. 7. 8. 9. Standby / On Channel list Volume up-down Menu on/off OK / Confirm Return / Back No Function My button 1 (*) My button 2 (**)

Coloured buttons (Red, Green, Yellow, Blue) 11. Mono-Stereo Dual I-II / Current language 12. Fast rewind (in media browser mode) 13. Pause (in media browser mode) / Timeshift recording 14. Programme recording 15. Play (in media browser mode) 16. Stop (in media browser mode) 17. Fast forward (in media browser mode) 18. Subtitle on-off / Subtitle (in media browser mode) 19. Image size 20.

Teletext - Mix 21. Media Browser 22. Electronic programme guide 23. Exit 24. Navigation buttons 25. Quick menu On-Off 26. Info / Reveal (in TXT mode) 27. Programme up/down 28. Mute 29. Previous programme / Now (in EPG mode) 30.

Numeric buttons 31. AV / Source NOTE: The Remote Control range is approximately 7m / 23ft. Using My button 1 (*) Press MY BUTTON 1 for five seconds when on a desired source, channel or link, until the "MY BUTTON IS SET" message is displayed on the screen. This confirms that the selected MY BUTTON is now associated with the selected function. Using My Button 2 (**) Press MY BUTTON 2 for five seconds when on a desired source, channel or link, until the "MY BUTTON IS SET" message is displayed on the screen. This confirms that the selected MY BUTTON is now associated with the selected function. Teletext Press " " button to enter. Press again to activate mix mode. Press once more to exit. Follow the instructions displayed on digital teletext screen. Digital Teletext (for UK only) Press " " button to view digital teletext information. Operate it with the coloured buttons, cursor buttons and the OK button. The operation method may differ depending on the contents of the digital teletext. Follow the instructions displayed on the digital teletext screen. When the " " button is pressed again, the TV returns to television broadcast.

English - 10 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 10 28.01.2013 15:50:13 Viewing the Connections Connector Type Scart Connection (back) VGA Connection (back) Cables Device SIDE AV PC/YPbPr Audio Connection (side) HDMI Connection (back) SPDIF Connection (back) Side Audio/Video Connection Cable (Supplied) PC Audio Cable (Not supplied) SIDE AV Side AV (Audio/Video) Connection (side) AV Connection Cable (supplied) HEADPHONE Headphone Connection (side) YPbPr Video Connection PC to YPbPr (back) USB Connection (side) CI Connection (side) PC to YPbPr Connection Cable (Not supplied) NOTE: When connecting a device via the YPbPr or Side AV input, you must use a connection cables to enable connection. See the illustrations above.

! To enable PC audio, you will need to use the SIDE AV CONNECTION cable's WHITE & RED inputs. @@@@! Insert or remove the CI module only when the TV is SWITCHED OFF. @@@@Then the standby LED lights up. @@@@ Press MENU button to quit channel list and watch TV. @@@@To continue, please select YES and press OK. To cancel operation, select NO and press OK.



[You're reading an excerpt. Click here to read official SHARP LC24LE250VBK/VWH user guide](http://yourpdfguides.com/dref/5431976)
<http://yourpdfguides.com/dref/5431976>

You can select frequency ranges from this screen. Enter the frequency range manually by using the numeric button. @@@@ Select the desired language and press OK. The First Time Installation (FTI) screen will be displayed next.

@@@ a confirmation screen will be displayed. Select YES to proceed. @@ Press OK button to continue. **IMPORTANT!** Back up your files before making any connections to the TV. @@ Certain types of USB devices (e.g. @@@@) Do not repeatedly quickly plug and unplug the drive. @@@@ You should then switch on the TV to enable the recording feature. To use the recording function, you need to connect a USB disk or an external hard disk drive to the TV and the connected USB disk should have at least 1 GB capacity and should have 2.0 speed compatibility.

If the connected USB device does not support 2.0 speed, an error message will be displayed. Note: Recorded programmes are saved into the connected USB disk. If desired, you can store/copy recordings onto a computer; however, these files will not be available to be played on a computer. You can play the recordings only via your TV.

Note: Lip Sync delay may occur during the timeshifting. Radio record is supported. The TV can record programmes up to ten hours. Recorded programmes are split into 4GB partitions. If the writing speed of the connected USB disk is not sufficient, the recording may fail and the timeshifting feature may not be available.

It is recommended to use USB hard disk drives for recording HD programmes. Do not plug out the USB/HDD during a recording. This may harm the connected USB/HDD. Multipartition support is available. The maximum of two different partitions are supported. The first partition of the USB disk is used for PVR ready features. It also must be formatted as the primary partition to be used for the PVR ready features. Some stream packets may not be recorded because of signal problems, so sometimes video may freeze during playback. Record, Play, Pause, Display (for PlaylistDialog) keys can not be used when teletext is ON. If a recording starts from timer when teletext is ON, teletext is automatically turned off.

Also teletext usage is disabled when there is an ongoing recording or playback. Timeshift Recording Press (PAUSE) button while watching a broadcast to activate timeshifting mode. In timeshifting mode, the programme is paused and simultaneously recorded to the connected USB disk. Press (PLAY) button again to resume the paused programme from where you stopped. Press the STOP button to stop timeshift recording and return to the live broadcast. Note: Timeshift cannot be used while in radio mode. Note : You cannot use the timeshift fast reverse feature before advancing the playback with the fast forward option.

Instant Recording Press (RECORD) button to start recording an event instantly while watching a programme. You can press (RECORD) button on the remote control again to record the next event on the EPG. In this case, an OSD will be displayed, indicating the programmed events for recording.

Press (STOP) button to cancel instant recording. Note: You can not switch broadcasts or view the Media Browser during the recording mode. While recording a programme or during the timeshifting, a warning message appears on the screen if your USB device speed is not sufficient. Watching Recorded Programmes Select the Recordings Library from the Media Browser menu. Select a recorded item from the list (if previously recorded).

Press the OK button to view the Play Options. Select an option then press OK button. Note: Viewing main menu and menu items will not be available during the playback. Press the (STOP) button to stop a playback and return to the Recordings Library. Slow Forward If you press (PAUSE) button while watching recorded programmes, the slow forward feature will be available.

You can use button to slow forward. Pressing button consecutively will change slow forwarding speed. Recording Configuration Select the Recording Configuration item in the Settings menu to configure the recording settings. Format Disk: You can use Format Disk feature for formatting the connected USB disk.

Your pin is required to use the Format Disk feature (default pin is 0000). **IMPORTANT:** Note that ALL the data stored on the USB disk will be lost and the disk format will be converted to FAT32 if you activate this feature. If your USB disk malfunctions, you can try formatting the USB disk. In most cases formatting the USB disk will restore normal operation; however, ALL the data stored on the USB disk will be lost in such a case. Note: If "USB is too slow" message is displayed on the screen while starting a recording, try restarting the recording. If you still get the same error, it is possible that your USB disk does not meet the speed requirements.

Try connecting another USB disk. English - 13 -

A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 13 28.01.2013 15:50:16 Media Browser Menu You can play photo, music, and movie files stored on a USB disk by connecting it to your TV. Connect a USB disk to one of the USB inputs located on the side of the TV. Pressing the MENU button while in the Media Browser mode will access the Picture, Sound and Settings menu options. Pressing the MENU button again will exit from this screen. You can set your Media Browser preferences by using the Settings Menu. Loop/Shuffle Mode Operation

Start playback with activate Start playback with OK and activate Start playback with OK/ activate and and TV plays next file and loop the list. the same file will be played in a loop (repeat). the file will be played in a shuffle. Quick Menu Quick Settings menu allows you to access some options quickly.

This menu includes Power Save Mode, Picture Mode, Equalizer Settings, Favourites and Sleep Timer options. Press Q.

MENU button on the remote control to view quick menu. See the following chapters for the details of the listed features. English - 14 -

A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 14 28.01.2013 15:50:17 TV Menu Features and Functions Picture Menu Contents Mode Contrast Brightness Sharpness Colour Power Save Mode Backlight (Optional)

Noise Reduction You can change the picture mode to suit your preference or requirements. Picture mode can be set to one of these options: Cinema, Game, Sport, Dynamic and Natural. Sets the lightness and darkness values of the screen. Sets the brightness value for the screen. Sets the sharpness value for the objects displayed on the screen. Sets the colour value, adjusting the colors. To set the Power Save Mode as Eco, Picture Off and Disabled. (When the Mode is Dynamic, Power Save mode is automatically set as disabled.) This setting controls the backlight level. The backlight function will be inactive if the Power Save Mode is set to Eco.

The backlight cannot be activated in VGA, Media Browser mode or while the picture mode is set to Game. If the broadcast signal is weak and the picture is noisy, use the Noise Reduction setting to reduce the amount of noise.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC24LE250VBK/VWH user guide](#)

<http://yourpdfguides.com/dref/5431976>

Advanced Settings Dyanmic Contrast Colour Temp Picture Zoom HDMI True Black Film Mode Skin Tone Colour Shift RGB Gain Reset Autoposition (in PC mode) H Position (in PC mode) V Position (in PC mode) Dot Clock (in PC mode) Phase (in PC mode) You can change the Dynamic Contrast ratio to desired value. Sets the desired colour tone. Sets the desired picture size from picture zoom menu. Note: Auto (Only available in Scart mode with SCART PIN8 high voltage/low voltage switching) While watching from HDMI source, this feature will be visible in the Picture Settings menu. You can use this feature to enhance blackness in the picture. Films are recorded at a different number of frames per second to normal television programmes. Turn this feature on when you are watching films to see the fast motion scenes clearly. Skin tone can be changed between -5 and 5.

Adjust the desired colour tone. You can configure the colour temperature values using the RGB Gain feature. Resets the picture settings to factory default settings.(Except Game Mode) Automatically optimizes the display. Press OK to optimize.

This item shifts the image horizontally to the right hand side or left hand side of the screen. This item shifts the image vertically towards the top or bottom of the screen. Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts. Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

While in VGA (PC) mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in PC mode.

English - 15 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 15 28.01.2013 15:50:17 Sound Menu Contents Volume Equalizer Balance Headphone Sound Mode AVL (Automatic Volume Limiting) Headphone/Lineout Dynamic Bass Surround Sound Digital Out Adjusts the volume level. Selects the equalizer mode. Custom settings can be made only when in user mode. This setting is used for emphasizing left or right speaker balance. Sets headphone volume.

You can select a sound mode. (If the selected channel supports). Function sets the sound to obtain fixed output level between programmes. When you connect an external amplifier to your TV using the headphone jack, you can select this option as Lineout. If you have connected headphones to the TV, set this option as Headphone. Enables or disables the Dynamic Bass. Surround sound mode can be changed as On or Off. Sets digital out audio type. Settings Menu Contents Conditional Access Language Controls conditional access modules when available. Confi gures language settings (may change depending on the country selected) P r e f e r r e d a n d c u r r e n t s e t t i n g s will be available.

Current settings can be changed only if the broadcaster supports. Enter correct password to change parental settings. You can easily adjust menu lock, maturity lock(may change depending on the country selected) and child lock in this menu. You can also set new pin number. (Default pin code 4725) Sets sleep timer to turn off the TV after a certain time.

Sets timers for selected programmes. (USB Record) Displays the recording configuration menu (Usb connection required) Sets date and time. Enables or disables selected source options. Parental Timers Recording Configuration Date/Time Sources Other Settings: Displays other setting options of the TV set: Menu Timeout Scan Encrypted Channels Blue Background Software Upgrade Application Version Hard of Hearing Changes timeout duration for menu screens. When this setting is on, the search process will locate the encrypted channels as well.

Activates or deactivates the blue background system when the signal is weak or absent. To ensure that your TV always has the most up to date firmware. Displays application version. Enables any special feature sent from the broadcaster. Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. You can use this feature, only if the broadcaster supports that additional narration track. Note: Audio description sound feature cannot be available in recording or time shifting mode.. Audio Description English - 16 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 16 28.

01.2013 15:50:17 Auto TV Off You can set the timeout value of auto off feature. When the timeout value is reached and the TV has not been operated for a selected time, the TV will go into standby mode. If the Standby Search is set to On, when the TV is in standby mode, available broadcasts will be searched. If the TV locates any new or missing broadcasts, a menu screen will be displayed, asking you whether or not to execute these changes. Channel list will be updated and changed after this process. If you are displaying the TV in a store, you can activate this mode. Whilst Store Mode is enabled, some items in the TV menu may not be available. This setting configures the power up mode preference. Standby Search (Optional) Store Mode Power Up Mode Install and Retune Menu Contents Automatic Channel Scan (Retune) (If available) Manual Channel Scan Network Channel Scan Analogue Fine Tune First Time Installation Clear Service List Displays automatic tuning options.

Digital Aerial: Searches and stores aerial DVB stations. Digital Cable: Searches and stores cable DVB stations. Analogue: Searches and stores analogue stations. Digital Aerial & Analogue: Searches and stores aerial DVB and analogue stations. Digital Cable & Analogue: Searches and stores cable DVB and analogue stations.

This feature can be used for direct broadcast entry. Searches for the linked channels in the broadcast system. You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored. Deletes all stored channels and settings, resets TV to factory settings.

(*) This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland. Use this setting to clear channels stored. English - 17 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 17 28.01.2013 15:50:17 General TV Operation Using the Channel List The TV sorts all stored stations in the Channel List. You can edit this channel list, set favourites or set active stations to be listed by using the Channel List options. Configuring Parental Settings To prohibit viewing of certain programmes, channels and menus can be locked by using the parental control system. Record / Delete Record Timer After you have selected a programme in the EPG menu, press the OK button. Select the Record option and press the OK button.

After this operation, a recording will be scheduled for the selected programme.



[You're reading an excerpt. Click here to read official SHARP LC24LE250VBK/VWH user guide](http://yourpdfguides.com/dref/5431976)
<http://yourpdfguides.com/dref/5431976>

To cancel an already set recording, highlight that programme and press the OK button and select the option Delete Rec. Timer. The recording will be cancelled. Set Timer / Delete Timer After you have selected a programme in the EPG menu, press the OK button. Select the Set Timer on Event option and press the OK button. You can set a timer for future programmes. To cancel an already set timer, highlight that programme and press the OK button. Then select "Delete Timer" option. The timer will be cancelled.

Note: It is not possible to record two channels at the same time. To display parental lock menu options, the PIN number should be entered. The factory default PIN number is 0000. After coding the correct PIN number, parental settings menu will be displayed. Menu Lock: Menu lock setting enables or disables the menu access.

Maturity Lock: When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, disables access to the broadcast. Child Lock: When Child Lock is set, the TV can only be controlled by the remote control. In this case the control panel buttons will not work. Set PIN: Defines a new PIN number. Note: If the Country option is set to France, you can use 4725 as the default code.

Software Upgrade Your TV is capable of finding and updating automatically via the Aerial signal. Software upgrade search via user interface Simply navigate on your main menu. Choose Settings and select Other Settings menu. In Other Settings menu navigate on to the Software for Upgrade item and press OK button to check for a new software upgrade. Note : Internet connection is needed. If an internet connection is not available, try to upgrade via broadcast. If a new upgrade is found, it starts to download the upgrade. Press OK to continue with the reboot operation. Electronic Programme Guide (EPG) Some, but not all channels send information about the current and next programmes. Press the GUIDE button to view the EPG menu.

Up/Down/Left/Right: Navigate EPG. OK: Displays programme options. INFO: Displays, in detailed, information on the programme selected. GREEN: Switches to List Schedule EPG. YELLOW: Switches to Timeline Schedule EPG. BLUE: Displays filtering options. (RECORD): The TV will start to record the selected programme. You can press again to stop the recording. IMPORTANT: Connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable the recording feature.

Note: Switching to a different broadcast or source is not available during a recording. 3 AM search and upgrade mode While the TV is connected to an aerial signal. If Automatic scanning in the Upgrade Options menu is enabled, the TV wakes up at 03:00 and searches broadcast channels for new software upgrades. If new software is found and downloaded successfully, the next time the TV powers up, it will have the new software version. Note: If the TV fails to come on after the upgrade unplug the TV for 2 minutes and plug in again.

Programme Options In EPG menu, press the OK button to enter the Event Options menu. Select Channel In EPG menu, using this option, you can switch to the selected channel. @@The batteries in the remote control may be exhausted. @@@@The picture quality may degrade when two devices are connected to the TV at the same time. In such a case, disconnect one of the devices.

No picture • No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more. Also make sure the correct input source has been selected. • Is the antenna connected properly? • Is the antenna cable damaged? • Are suitable plugs used to connect the antenna? • If you are in doubt, consult your dealer. No sound • Has the TV been set to mute? To cancel mute, press the " " button, or increase the volume level. • Sound is coming from only one speaker. Is the balance set to one extreme? See Sound Menu section. Remote control - does not operate • The batteries may be exhausted. Replace the batteries. Input sources - can not be selected • If you cannot select an input source, it is possible that no device is connected.

if not • Check the AV cables and connections if you have tried to connect a device. Recording unavailable To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable recording feature. If you cannot record, try switching off the TV and then re-inserting the USB device. USB is too slow If a "USB is too slow" message is displayed on the screen while starting a recording, try restarting the recording. If you still get the same error, it is possible that your USB disk does not meet the speed requirements. Try connecting another USB disk. English - 19 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 19 28.01.

2013 15:50:17 PC Input Typical Display Modes The following table is an illustration of some of the typical video display modes. Your TV may not support all resolutions. Your TV supports up to 1920x1080. Index 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 Resolution 640x350p 640x400p 1024x768 1280x768 1360x768 720x400 800x600 800x600 1024x768 1024x768 1280x768 1360x768 1280x1024 1280x960 1280x1024 1400x1050 1600x1200 1920x1080 Frequency 60 Hz 60 Hz 60 Hz 60 Hz 60 Hz 60 Hz 56 Hz 60 Hz 60 Hz 66 Hz 60 Hz AV and HDMI Signal Compatibility Source Supported Signals PAL 50/60 EXT (SCART) NTSC 60 RGB 50 RGB 60 Side AV PAL 50/60 NTSC 60 480I, 480P 576I, 576P PC/ YPbPr 720P 1080I 1080P 480I 480P 576I, 576P HDMI1 HDMI2 720P 1080I 1080P 60Hz 50Hz 50Hz,60Hz 50Hz,60Hz 50Hz,60Hz 50Hz,60Hz 60Hz 60Hz 50Hz 50Hz,60Hz 50Hz,60Hz 24Hz, 25Hz 30Hz, 50Hz, 60Hz O Available O O O O O O O O O O O O (X: Not Available, O: Available) In some cases a signal on the LCD TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.

). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment. Supported File Formats for USB Mode Media File Extension .mpg .mpeg .

dat .vob .mkv Format Video MPEG1,2 MPEG1,2 MPEG2 H.264, MPEG1,2,4 MPEG4, Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1/2, H.264 MPEG2, MPEG4 .

avi Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1/2, H.264 Baseline JPEG Progressive JPEG PCM MPEG 1 Layer 1 / 2 (MP3) 32Kbps ~ 320Kbps(Bit rate) 32KHz ~ 48KHz(Sampling rate) max WxH = 15360x8640 4147200bytes max WxH = 9600x6400 3840000bytes max WxH = 5760x4096 3840000bytes EAC3/ AC3 MAX 1920x1080 @ 30P 20Mbit/sec PCM/MP3 Audio MPEG Layer 1/2/3 MPEG2 Remarks (Maximum resolution/Bit rate etc.) Movie .mp4 Music Photo Subtitle .mp3 .

.jpg .jpeg . .bmp .sub .

srt English - 20 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 20 28.01.2013 15:50:17 Dimensional Drawings English - 21 -

A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.



[You're reading an excerpt. Click here to read official SHARP LC24LE250VBK/VWH user guide](#)
<http://yourpdfguides.com/dref/5431976>

indd 21 28.

01.2013 15:50:17 End of life disposal English - 22 -

A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 22 28.01.2013 15:50:18 Installing the Stand **IMPORTANT** Please read the following information carefully before attaching the stand to your new Sharp Television. Installing the Stand ! Before fitting the stand, ensure that the TV is unplugged from its power source. ! Place the Sharp Television (1) on a soft, stable and flat surface, facing down. ! Place the Stand (3) on the stand mounting pattern on the rear side of the TV. Ensure the Stand (3) is placed correctly and that you can see the screw holes on the back of the Sharp Television. ! Place the Stand Cover (2) on the Stand (3).

! Ensure the Stand Cover (3) is placed correctly and that you can see the screw holes on the back of the Sharp Television. ! DO NOT insert the screws before placing the plastic molding. ! Insert the four screws provided and tighten them gently until the stand is properly fitted. 1. Sharp Television 2. Stand Cover 3. Stand English - 23 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.indd 23 28.01.2013

15:50:18 Uninstalling the Stand English - 24 -

A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic IB.

indd 24 28.01.2013 15:50:18 Screw Dimensions Model D Ø4 L 30 Item Number 4 VESA Installation of the Screw To the wall LC-24LE250E M4 18 4 75 x 75 (W x H) To the product English - 25 - A01_[GB]_MB95S_4847UK_DVBT_C_24205LED_ROCKER_SILVER16_10081844-10083115_50232547_basic

IB.indd 25 28.01.

2013 15:50:19 LC-24LE250V-BK LC-24LE250V-WH LCD COLOUR TELEVISION LCD TELEVIZOR U BOJI BAREVNÝ LCD TELEVIZOR ΕΓΧΡΩΜΗ ΤΗΛΕΟΡΑΣΗ LCD OPERATION MANUAL KORISNIČKI PRIRUČNIK NÁVOD K POUŽITÍ ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ 50232547 ΕΛΛΗΝΙΚ CZECH HRVATSKI ENGLISH .



[You're reading an excerpt. Click here to read official SHARP](#)

[LC24LE250VBK/VWH user guide](#)

<http://yourpdfguides.com/dref/5431976>